

# Service Manual

**MINOLTA X-700**

**(2017-100/200)**



**MINOLTA**

# MINOLTA X-700 (2017-100)

(2017-200) ... Black



## Type of camera

Electronically controlled 35mm focal plane shutter  
single-lens reflex AE camera  
Photography system : Program AE, aperture priority  
AE, and manual photography.  
Standard lens : MD 50mm F1.2, MD 50mm F1.4,  
MD 50 F1.7  
Lens mount : Minolta SLR bayonet mount.  
Film used : J135 rolled film  
Size of image field : 24mm x 36mm

## Shutter

Electronically controlled focal plane shutter (Traveling horizontally)  
Shutter speed : 4 sec. to 1/1000 sec. (stepless) in auto (P and A modes),  
1, 1/2, 1/4 1/8, 1/15, 1/30, 1/60,  
1/125, 1/250, 1/500, 1/1000 sec. and B (bulb) in manual mode.  
Shutter dial : Click stop endless dial (with position P/A lock).  
Shutter release : Electromagnetic release, remote cord, wireless controller IR-1 can be mounted.  
Shutter release locks in case of battery voltage drop.  
Shutter button is provided with sensor switch. (Metering and displaying continuous for 15 sec. after touching the sensor switch.)  
With main switch at ON)), intermittent electronic alarm is given to warn against camera vibration when the shutter speed indicated in the viewfinder becomes less than 1/30 second.  
Self-timer : Electronic self-timer starts by using the shutter button. 10 second operation is indicated by LED blink and intermittent electronic alarm (with the main switch set at ON)). Shutter pre-operation notice is given. Self-timer operation can be cleared after its start.

## Synchro

Flash synchro : X contact, electroflash is synchronized at speeds lower than 1/60 second; flash bulb is at speeds lower than 1/15 second.  
Hot shoe : Direct contact (with electric shock prevention device), synchro auto control contact.  
Synchro terminal : JIS B type socket

## Film winding, rewinding

Film winding : Single-operation lever winding at an angle of 130° (preliminary angle : 30°) auto winding by motor 1 or auto winder G.  
Film counter : Auto resetting calculation.  
Film rewinding : Auto rewind and crank system; auto reset of rewind button.

## Viewfinder

Focusing screen : Center...Split, microprism  
Periphery...Acutematte  
Viewfinder vision : 95% (standard 24mm x 36mm image field)  
Magnification : 0.9 (50mm standard lens at ∞)  
Visibility : 1 diopt.  
Viewfinder indication : Shooting mode LED, shutter speed scale, shutter speed indication LED, shutter speed non-interlock alarm LED, exposure compensation indication, exposure compensating, LED, set aperture valash ready signal, FDC indication, faulty P mode indication.  
Mirror : Slide-up quick return

## Exposure control

Light-Metering system :  
TTL, center-weighted average metering.  
(Minolta direct metering, using auto electroflash 280PX/C1.E)  
Receiver element : Silicon photocell  
Auto exposure interlock range :  
EV1-18 (ASA100 F1.4 lens)  
Film speed scale : ASA/ISO 25-1600 (locked every 1/3 stage)  
Exposure Compensation :  
This is possible in the ±2EV range of the standard (locked every 1/2 stage)

**Power supply**

**Battery used** : Two 1.5V alkaline manganese batteries (JIS LR44/A76) or 1.55V silver oxide battery G-13 type (JIS SR44) or equivalent.

**Main switch** : Changeover type ON)), ON, OFF.

**Metering switch** : Shutter button sensor switch system. (Battery check)

**Back cover**

Back cover control lift and one-touch lock system, memo-holder with grip (film speed conversion), multi-function back compatibility.

**Others**

Film signal, preview button, battery case, eyepiece cap.

**Size & weight**

**Size** : 137mm(W) × 89mm(H) × 51.5mm(D)

**Weight (body only)** : 505g (less battery)

**Exclusive accessories**

- Multi-function back (Code No. 8744)
- Auto electro flash 280PX (Code No. 8808)

MINOLTA X-700 (2017-100)

Black (2017-100)

Film counter  
 Shutter release  
 Shutter button  
 Battery cover  
 Eyepiece cap  
 Memo holder  
 Multi-function back  
 Auto electro flash  
 Battery case  
 Film signal  
 Preview button  
 Shutter button sensor switch system  
 Changeover type ON)), ON, OFF  
 JIS LR44/A76  
 JIS SR44  
 1.5V alkaline manganese batteries  
 1.55V silver oxide battery G-13 type

Shutter release  
 Shutter button  
 Battery cover  
 Eyepiece cap  
 Memo holder  
 Multi-function back  
 Auto electro flash  
 Battery case  
 Film signal  
 Preview button  
 Shutter button sensor switch system  
 Changeover type ON)), ON, OFF  
 JIS LR44/A76  
 JIS SR44  
 1.5V alkaline manganese batteries  
 1.55V silver oxide battery G-13 type



# X-700 (2017-100.....Chrome model) 2017-200.....Black model) Parts List

- This Parts List based upon the existing models (as of Jan. 1983, 2017-200 Black model).
- Regarding those modified in the course of production, part No. on the exploded view of the Parts List is provided with ● or ◎.
  - : Modified in the course of production, and individually not interchangeable with previous type.  
(Some part is interchangeable)
  - ◎ : Discontinued in the course of production, newly added or temporarily used.
- Regarding those provided with ● or ◎, be sure to refer to the specified page (P. is provided under part No.)

~~~~~  
For the modification details, described on P. 21 or after.

~~~~~  
Read and understand the description on P. 21 before hand.

- This Parts List based upon X-700 (with AE lock) even though 2 types, AE lock/non AE lock, are on the market.  
For X-700 with non AE lock, described on P. 35~P. 40 as exclusive parts.
- For 2017-100 (Chrome model), described on P. 20 as exclusive parts.  
Parts other than on P. 20, refer to P. 1~P. 17 since those are common parts with 2017-200.  
In other hand, for wiring of flexible P.C. board set of 2017-100, refer to P. 39~P. 40 since AE lock is not provided.

- このパーツリストは、現在生産中（1983年1月現在）のモデル（2017-200.....Black model）を基本にまとめてあります。

- 生産途中で変更された部品には、パーツリスト展開図側の部品番号の頭に記号（●印又は◎印）を付けてあります。

●印：生産途中で変更され、その部品単独では旧タイプとの互換性がないもの  
(一部互換性がある場合もあります)

◎印：生産途中に廃止、新設、又は一時的に使用された部品を示す。

- ●印又は、◎印が付いている部品については、必ず指示されたページを参照して下さい。  
(部品番号の下に、P. と表示)

~~~~~  
部品の変更内容は、P. 21以降に記載してあります。P. 21の説明を理解の上で利用下さい。

- X-700には、AEロック機能無しと、AEロック機能付の2種類ありますが、このパーツリストは、AEロック機能付のX-700を基本にまとめてあります。

AEロック機能無しX-700については、P. 35~P. 40に専用部品表としてまとめてあります。

- 2017-100 (Chrome model) については、Page 20に専用部品表としてまとめています。

記載以外は、2017-200と共通ですので、Page 1~Page 17を参照して下さい。

尚、2017-100には、AEロック回路が無い為、フレキシブル基板セット、リード線の配線はそれぞれPage 39, Page 40を参照して下さい。



# I N D E X

| Part No.         | Page | Part No.         | Page | Part No.         | Page  |
|------------------|------|------------------|------|------------------|-------|
| ★ 2017-0103----- | 8,37 | 2017-0216-----   | 16   | 2017-0302-----   | 1     |
| 2017-0110-----   | 3    | 2017-0218-----   | 16   | 2017-0307-----   | 12    |
| 2017-0113-----   | 4,14 | 2017-0219-----   | 16   | 2017-0308-----   | 12    |
| ※ 2017-0119----- | 20   | 2017-0226-----   | 17   | 2017-0310-----   | 12    |
| 2017-0120-----   | 1    | 2017-0227-----   | 17   | 2017-0312-----   | 12    |
| ★ 2017-0130----- | 4,36 | 2017-0229-----   | 17   | 2017-0322-----   | 12    |
| ※ 2017-0131----- | 20   | 2017-0242-----   | 17   | 2017-0328-----   | 12    |
| 2017-0132-----   | 2    | 2017-0248-----   | 1    | 2017-0331-----   | 13    |
| ※ 2017-0139----- | 20   | 2017-0249-----   | 4    | 2017-0338-----   | 12    |
| 2017-0132-----   | 2    | ※ 2019-0251----- | 20   | 2017-0341-----   | 11    |
| 2006-0140-----   | 3    | 2017-0252-----   | 9    | 2017-0345-----   | 11    |
| 2017-0140-----   | 1    | 2017-0253-----   | 16   | 2017-0350-----   | 13    |
| 2017-0151-----   | 2    | 2017-0255-----   | 5    | 2017-0352-----   | 13    |
| 2017-0153-----   | 8    | 2017-0256-----   | 9    | 2019-0396-----   | 1     |
| 2017-0163-----   | 6    | 2017-0258-----   | 16   |                  |       |
| 2024-0166-----   | 4    | 2017-0259-----   | 1    | ★ 2017-0401----- | 15,39 |
| 2017-0175-----   | 6    | 2019-0260-----   | 1    | 2017-0404-----   | 15    |
|                  |      | 2017-0267-----   | 16   | 2017-0407-----   | 4     |
| 2017-0201-----   | 16   | 2017-0274-----   | 15   | 2017-0412-----   | 15    |
| 2017-0207-----   | 16   | 2017-0276-----   | 15   | 2017-0415-----   | 1     |
| 2017-0209-----   | 17   | 2017-0281-----   | 1    | ※ 2017-0416----- | 20    |
| 2017-0211-----   | 16   |                  |      | 2017-0417-----   | 1     |
| 2006-0215-----   | 17   | ※ 2017-0301----- | 20   | ★ 2017-0418----- | 8,37  |

※ mark shows exclusive part for Chrome model (2017-100).

★ mark shows exclusive part for both models, AE lock, non AE lock.

| Part No.        | Page | Part No.        | Page  | Part No.       | Page |
|-----------------|------|-----------------|-------|----------------|------|
| 2006-1108-----  | 3    | 2017-1346-----  | 1     | 2019-2068----- | 1    |
| 2017-1110-----  | 14   | ※2017-1349----- | 20    | 2019-2069----- | 1    |
| 2017-1111-----  | 14   | 2017-1350-----  | 14    | 2019-2070----- | 2    |
| 2006-1112-----  | 14   | ※2017-1351----- | 20    |                |      |
| 2006-1116-----  | 3    | 2017-1352-----  | 2     | 2017-2104----- | 17   |
| 2017-1117-----  | 3    | 2017-1354-----  | 1     | 2017-2105----- | 17   |
| 2006-1119-----  | 3    | ★2017-1365----- | 4, 38 | 2017-2108----- | 16   |
|                 |      |                 |       | 2006-2114----- | 17   |
| 2017-1202-----  | 3    | 2006-2008-----  | 15    | 2017-2123----- | 17   |
| 2017-1203-----  | 3    | 2017-2015-----  | 4     | 2017-2126----- | 17   |
| 2017-1204-----  | 3    | 2017-2016-----  | 15    | 2006-2130----- | 17   |
| 2017-1205-----  | 3    | 2006-2017-----  | 15    | 2017-2131----- | 17   |
|                 |      | 2017-2018-----  | 1     | 2017-2132----- | 17   |
| ※2017-1321----- | 20   | 2019-2020-----  | 1     | 2006-2143----- | 17   |
| 2006-1322-----  | 1    | 2006-2022-----  | 1     | 2006-2144----- | 17   |
| 2017-1322-----  | 1    | 2019-2023-----  | 1     | 2017-2147----- | 17   |
| ※2017-1323----- | 20   | 2019-2053-----  | 1     | 2017-2148----- | 17   |
| 2017-1324-----  | 1    | 2017-2054-----  | 1     | 2017-2157----- | 16   |
| ※2017-1325----- | 20   | 2019-2055-----  | 1     | 2017-2166----- | 16   |
| 2017-1326-----  | 1    | 2019-2056-----  | 1     | 2017-2168----- | 16   |
| ※2017-1327----- | 20   | 2017-2060-----  | 1     | 2017-2183----- | 16   |
| 2017-1328-----  | 1    | 2017-2062-----  | 1     | 2006-2184----- | 16   |
| 2017-1344-----  | 1    | 2019-2067-----  | 1     | 2017-2184----- | 16   |

※ mark shows exclusive part for Chrome model (2017-100).

★ mark shows exclusive part for both models, AE lock, non AE lock.

# I N D E X

| Part No.       | Page | Part No.         | Page | Part No.       | Page |
|----------------|------|------------------|------|----------------|------|
| 2017-0419----- | 8    | 2017-0571-----   | 9    | 0031-1027----- | 4    |
| 2017-0420----- | 24   | 2017-0576-----   | 6    | 2017-1030----- | 4    |
| 2024-0420----- | 5    | 2017-0584-----   | 9    | 2017-1031----- | 4    |
| 2017-0422----- | 6    |                  |      | 0031-1034----- | 4    |
| 2017-0423----- | 4    | 2017-0818-----   | 7    | 2017-1040----- | 14   |
| 2017-0425----- | 4    | 2006-0881-----   | 4    | 2017-1041----- | 14   |
| 2017-0430----- | 2    |                  |      | 2006-1042----- | 14   |
| 2017-0432----- | 6    | ★ 2017-1005----- | 6,38 | 2017-1043----- | 14   |
| 2017-0436----- | 4    | 2017-1006-----   | 8    | 2017-1052----- | 2    |
| 2017-0451----- | 4    | 2017-1007-----   | 1    | 2017-1054----- | 2    |
|                |      | 2017-1008-----   | 8    | 2017-1057----- | 2    |
| 2017-0505----- | 10   | 2017-1009-----   | 1    | 2005-1061----- | 6    |
| 2017-0508----- | 10   | 2017-1010-----   | 6    | 2006-1061----- | 2    |
| 2017-0510----- | 7    | 2006-1011-----   | 6    | 2005-1062----- | 6    |
| 2017-0512----- | 9    | 2006-1014-----   | 8    | 2017-1062----- | 2    |
| 2017-0517----- | 10   | ★ 2017-1015----- | 4,36 | 2005-1063----- | 6    |
| 2017-0519----- | 10   | ★ 2017-1016----- | 4,38 | 2017-1064----- | 6    |
| 2017-0521----- | 10   | 2017-1017-----   | 2    | 2019-1066----- | 24   |
| 2017-0523----- | 9    | 2006-1018-----   | 2    | 2017-1068----- | 2    |
| 2017-0534----- | 8    | ★ 2017-1021----- | 4,36 | 2017-1069----- | 2    |
| 2017-0542----- | 7    | 2017-1023-----   | 4    | 2017-1070----- | 2    |
| 2017-0550----- | 7    | ★ 2017-1024----- | 4,36 |                |      |
| 2017-0570----- | 9    | 2017-1025-----   | 4    | 2006-1106----- | 3    |

★ mark shows exclusive part for both models, AE lock, non AE lock.



I N D E X

| Part No.         | Page | Part No.         | Page  | Part No.         | Page |
|------------------|------|------------------|-------|------------------|------|
| 2017-2185-----   | 17   | 2017-3005-----   | 1     | 2017-3066-----   | 12   |
| 2017-2189-----   | 16   | 2006-3009-----   | 12    |                  |      |
| 2017-2191-----   | 16   | 2017-3010-----   | 5     | ※ 2019-3301----- | 20   |
| 2017-2192-----   | 16   | 2017-3013-----   | 1     | 2019-3303-----   | 1    |
|                  |      | 2017-3020-----   | 12    | 2017-3304-----   | 14   |
| 2017-2204-----   | 16   | 2017-3021-----   | 12    | 2019-3306-----   | 1    |
| 2017-2205-----   | 8,16 | 2017-3024-----   | 5     | 2019-3308-----   | 14   |
| 2017-2212-----   | 16   | 2017-3025-----   | 12    | 2017-3309-----   | 14   |
| 2019-2291-----   | 8    | 2017-3026-----   | 12    | 2019-3311-----   | 1    |
| 2017-2517-----   | 9    | 2017-3027-----   | 12    | 2017-3312-----   | 14   |
| 2017-2519-----   | 9    | 2017-3032-----   | 12    |                  |      |
| 2017-2520-----   | 9    | 2017-3037-----   | 13    | 2017-3403-----   | 11   |
| 2017-2577-----   | 9    | 2006-3040-----   | 12    | 2017-3404-----   | 11   |
| 2017-2585-----   | 6    | ★ 2017-3041----- | 13,38 | 2017-3405-----   | 11   |
|                  |      | ★ 2017-3042----- | 13,38 | 2017-3407-----   | 11   |
| 2006-2718-----   | 16   | 2017-3048-----   | 12    | 2017-3410-----   | 11   |
| 2006-2749-----   | 16   | 2017-3051-----   | 13    | 2017-3414-----   | 11   |
| 2006-2758-----   | 16   | 2006-3053-----   | 13    | 2017-3416-----   | 11   |
| 2006-2762-----   | 16   | 2006-3055-----   | 13    | 2017-3421-----   | 13   |
| 2006-2773-----   | 16   | 2017-3056-----   | 12    | 2017-3422-----   | 11   |
| 7991-3001-----   | 1    | 2017-3057-----   | 12    |                  |      |
| 2019-3002-----   | 21   | 2017-3058-----   | 12    | 2017-3424-----   | 11   |
| ※ 2006-3003----- | 20   | 2017-3065-----   | 12    |                  |      |

※ mark shows exclusive part for Chrome model (2017-100).

★ mark shows exclusive part for both models, AE lock, non AE lock.

# I N D E X

| Part No.         | Page  | Part No.       | Page | Part No.         | Page |
|------------------|-------|----------------|------|------------------|------|
| 2017-4037-----   | 26    | 2017-5014----- | 7    | 2017-5164-----   | 10   |
| 2017-4191-----   | 4     | 2017-5015----- | 7    |                  |      |
|                  |       | 2017-5016----- | 7    | 2017-5805-----   | 7    |
| 2017-4209-----   | 15    | 2017-5017----- | 7    | 2019-5806-----   | 10   |
| 2017-4216-----   | 5     | 2017-5018----- | 7    | 2017-5814-----   | 6    |
| 2017-4222-----   | 5     | 2017-5019----- | 10   | 2009-5870-----   | 6    |
| 2017-4255-----   | 14    | 2017-5023----- | 10   |                  |      |
| 2017-4256-----   | 2     | 2017-5025----- | 10   | 2017-9001-----   | 10   |
|                  |       | 2017-5026----- | 10   | 2005-9005-----   | 9    |
| 2017-4301-----   | 18,39 | 2017-5027----- | 10   | 2017-9011-----   | 12   |
| 2017-4302-----   | 18,39 | 2017-5028----- | 10   | 2017-9012-----   | 12   |
| ★ 2017-4303----- | 18,39 | 2017-5029----- | 10   | ☆ 2017-9014----- | 37   |
| 2017-4304-----   | 18,39 | 2017-5030----- | 10   | 2017-9018-----   | 15   |
| 2017-4305-----   | 18,39 | 2017-5031----- | 7    |                  |      |
| 2017-4344-----   | 6     | 2017-5032----- | 7    | 2006-9103-----   | 8    |
|                  |       | 2017-5034----- | 7    | 2017-9106-----   | 7    |
| 2017-4401-----   | 19    | 2009 5038----- | 8    | 2017-9107-----   | 8    |
| 2017-4402-----   | 19    | 2006-5039----- | 7    | 2017-9108-----   | 12   |
|                  |       | 2009-5080----- | 6    | 2006-9109-----   | 3    |
| 2017-5006-----   | 4     |                |      | ✱ 2006-9110----- | 20   |
| 2017-5008-----   | 4     | 2017-5106----- | 9    | 2006-9112-----   | 2    |
| 2017-5011-----   | 7     | 2017-5113----- | 10   | 2017-9113-----   | 5    |
| 2017-5013-----   | 7     | 2017-5121----- | 9    | 2017-9114-----   | 4    |

✱ mark shows exclusive part for Chrome model (2017-100).  
 ★ mark shows exclusive part for both models, AE lock, non AE lock.  
 ☆ mark shows exclusive part for model of non AE lock.

I N D E X

| Part No.          | Page     | Part No.          | Page | Part No.          | Page     |
|-------------------|----------|-------------------|------|-------------------|----------|
| 2017-9120-----    | 6        | 9612-1625-02----- | 8,9  | 9761-2060-07----- | 5        |
| 2006-9121-----    | 14       | 9612-1625-07----- | 16   | 9762-1725-07----- | 24       |
| 2017-9245-----    | 2        | 9612-1628-07----- | 4    | 9762-1730-07----- | 24       |
| 2006-9401-----    | 14       | 9612-1630-07----- | 6    | 9762-1735-07----- | 14       |
| 2017-9430-----    | 11       | 9612-1632-12----- | 12   | 9762-1740-07----- | 7        |
| 2017-9441-----    | 12       | 9612-1635-07----- | 6    | 9762-1745-07----- | 1,4      |
| 2017-9443-----    | 5        | 9612-1650-07----- | 15   | 9762-2040-07----- | 12       |
|                   |          | 9612-1675-01----- | 8    | 9762-2045-07----- | 14       |
|                   |          | 9612-1680-07----- | 4    | 9762-2060-07----- | 11       |
|                   |          | 9612-2080-07----- | 4,14 |                   |          |
| Screw             |          | 9613-1418-07----- | 17   | 9763-1735-07----- | 4        |
| 9611-1616-07----- | 2        | 9613-1645-01----- | 2    | 9763-1755-07----- | 21       |
| 9611-1616-12----- | 10       | 9613-1675-01----- | 8    | 9765-1740-07---   | 4,7,25   |
| 9611-1620-07----- | 4,6      | 9613-1416-07----- | 17   |                   |          |
| 9611-1625-01----- | 8        |                   |      | E-ring            |          |
| 9611-1625-07----- | 6        | 9761-1425-07----- | 1    | 9721-0120-13--    | 9,16,17  |
| 9611-1630-04----- | 14       | 9761-1725-07----- | 12   | 9721-0150-13--    | 13,16,17 |
| 9611-2030-01----- | 5        | 9761-1730-07----- | 4,5  | 9721-0200-13----- | 5        |
| 9611-2040-04----- | 6        | 9761-1740-07----- | 14   |                   |          |
| 9612-1616-01----- | 9        | 9761-2035-07----- | 5    | Steel ball        |          |
| 9612-1616-07--    | 10,25,29 | 9761-2040-07----- | 13   | 9758-0150-00----- | 2        |
| 9612-1620-07---   | 9,10,16  | 9761-2050-07----- | 4,5  |                   |          |
| 9612-1625-01----- | 16       |                   |      |                   |          |



# I N D E X

| Part No.              | Page | Part No.              | Page | Part No.              | Page |
|-----------------------|------|-----------------------|------|-----------------------|------|
| 9791-1830-40-----9    |      | 9391-0507-02----19,40 |      | 9422-2046-62----18,39 |      |
| 9791-2140-40-----17   |      | 9391-0507-03----19,40 |      | 9422-2736-62-----18   |      |
|                       |      | 9391-0507-04----19,40 |      | 9422-3036-62----18,39 |      |
| 9792-1735-40-----5,24 |      | 9391-0507-05----19,40 |      | 9422-3336-62----18,39 |      |
| 9792-2140-40-----8,12 |      | 9391-0507-06----19,40 |      | 9422-3616-62----16,39 |      |
| 9793-1840-86-----4    |      | 9391-0507-07----19,40 |      | 9422-3636-62----18,39 |      |
| 9794-1640-50-----9    |      | 9391-0507-08----19,40 |      | 9422-3916-62----18,39 |      |
| 9795-3155-87-----2    |      |                       |      | 9422-3936-62----18,39 |      |
|                       |      | 9391-0807-00----19,40 |      | 9422-4336-62----18,39 |      |
| L.E.D.                |      | 9391-0807-01----19,40 |      | 9422-4736-62----16,39 |      |
| 9353-2642-01-----8    |      | 9391-0807-02----19,40 |      | 9422-5636-62----16,39 |      |
|                       |      | 9391-0807-03----19,40 |      | 9422-6836-62----18,39 |      |
| Transistor            |      | 9391-0807-04----19,40 |      | 9422-9106-62----18,39 |      |
| 9363-1032-01----18,39 |      | 9391-0807-05----19,40 |      |                       |      |
| 9363-1032-02----18,39 |      | 9391-0807-06----19,40 |      | 9432-1046-62-----18   |      |
| 9363-1032-03----18,39 |      | 9391-0807-07----19,40 |      | 9432-1226-61-----18   |      |
|                       |      | 9391-0807-08----19,40 |      |                       |      |
| Crystal resonator     |      | 9391-0807-09----19,40 |      | 9432-2026-61----18,39 |      |
| 9373-4161-01----18,39 |      |                       |      | 9432-2046-62-----18   |      |
|                       |      | Fixed resistor        |      | 9432-2068-61----18,39 |      |
| Leas wire             |      | 9422-1026-62----18,39 |      | 9432-2426-61----18,39 |      |
| 9391-0507-00----19,40 |      | 9422-1046-62----18,39 |      | 9432-2436-62-----18   |      |
| 9391-0507-01----19,40 |      | 9422-1546-62----18,39 |      | 9432-2726-61----18,39 |      |

I N D E X

| Part No.               | Page | Part No.               | Page |
|------------------------|------|------------------------|------|
| 9432-2736-62-----18,39 |      | 9534-6845-61-----18,39 |      |
| 9432-3026-61-----18,39 |      | 9535-1555-36-----18,39 |      |
| 9432-3336-62-----18    |      | 9535-4745-36-----18    |      |
| 9432-3357-61-----18,39 |      | 9535-6845-36-----39    |      |
| 9432-3926-61-----18,39 |      | 9564-1025-61-----18,39 |      |
| 9432-3936-62-----18    |      | 9564-1514-62-----18    |      |
| 9432-5126-61-----18,39 |      | 9564-3005-62-----18,39 |      |
| 9432-5136-62-----18    |      | 9564-3324-61-----18,39 |      |
| 9432-5626-61-----18,39 |      | 9565-0200-61-----18,39 |      |
| 9432-6226-61-----18,39 |      | 9565-1234-61-----18,39 |      |
| 9432-6826-61-----18,39 |      | 9565-4738-64-----18,39 |      |
| 9432-6836-61-----18    |      |                        |      |
| 9432-7526-61-----18,39 |      |                        |      |


Variable resistor

|                        |
|------------------------|
| ☆9472-2039-65-----39   |
| 9472-2239-63-----18,39 |
| 9472-3329-63-----18,39 |

Condenser

|                        |
|------------------------|
| 9531-1075-63-----18,39 |
| 9531-1575-61-----18,39 |
| 9533-3355-63-----18,39 |

☆mark shows exclusive part for model of non AE lock.

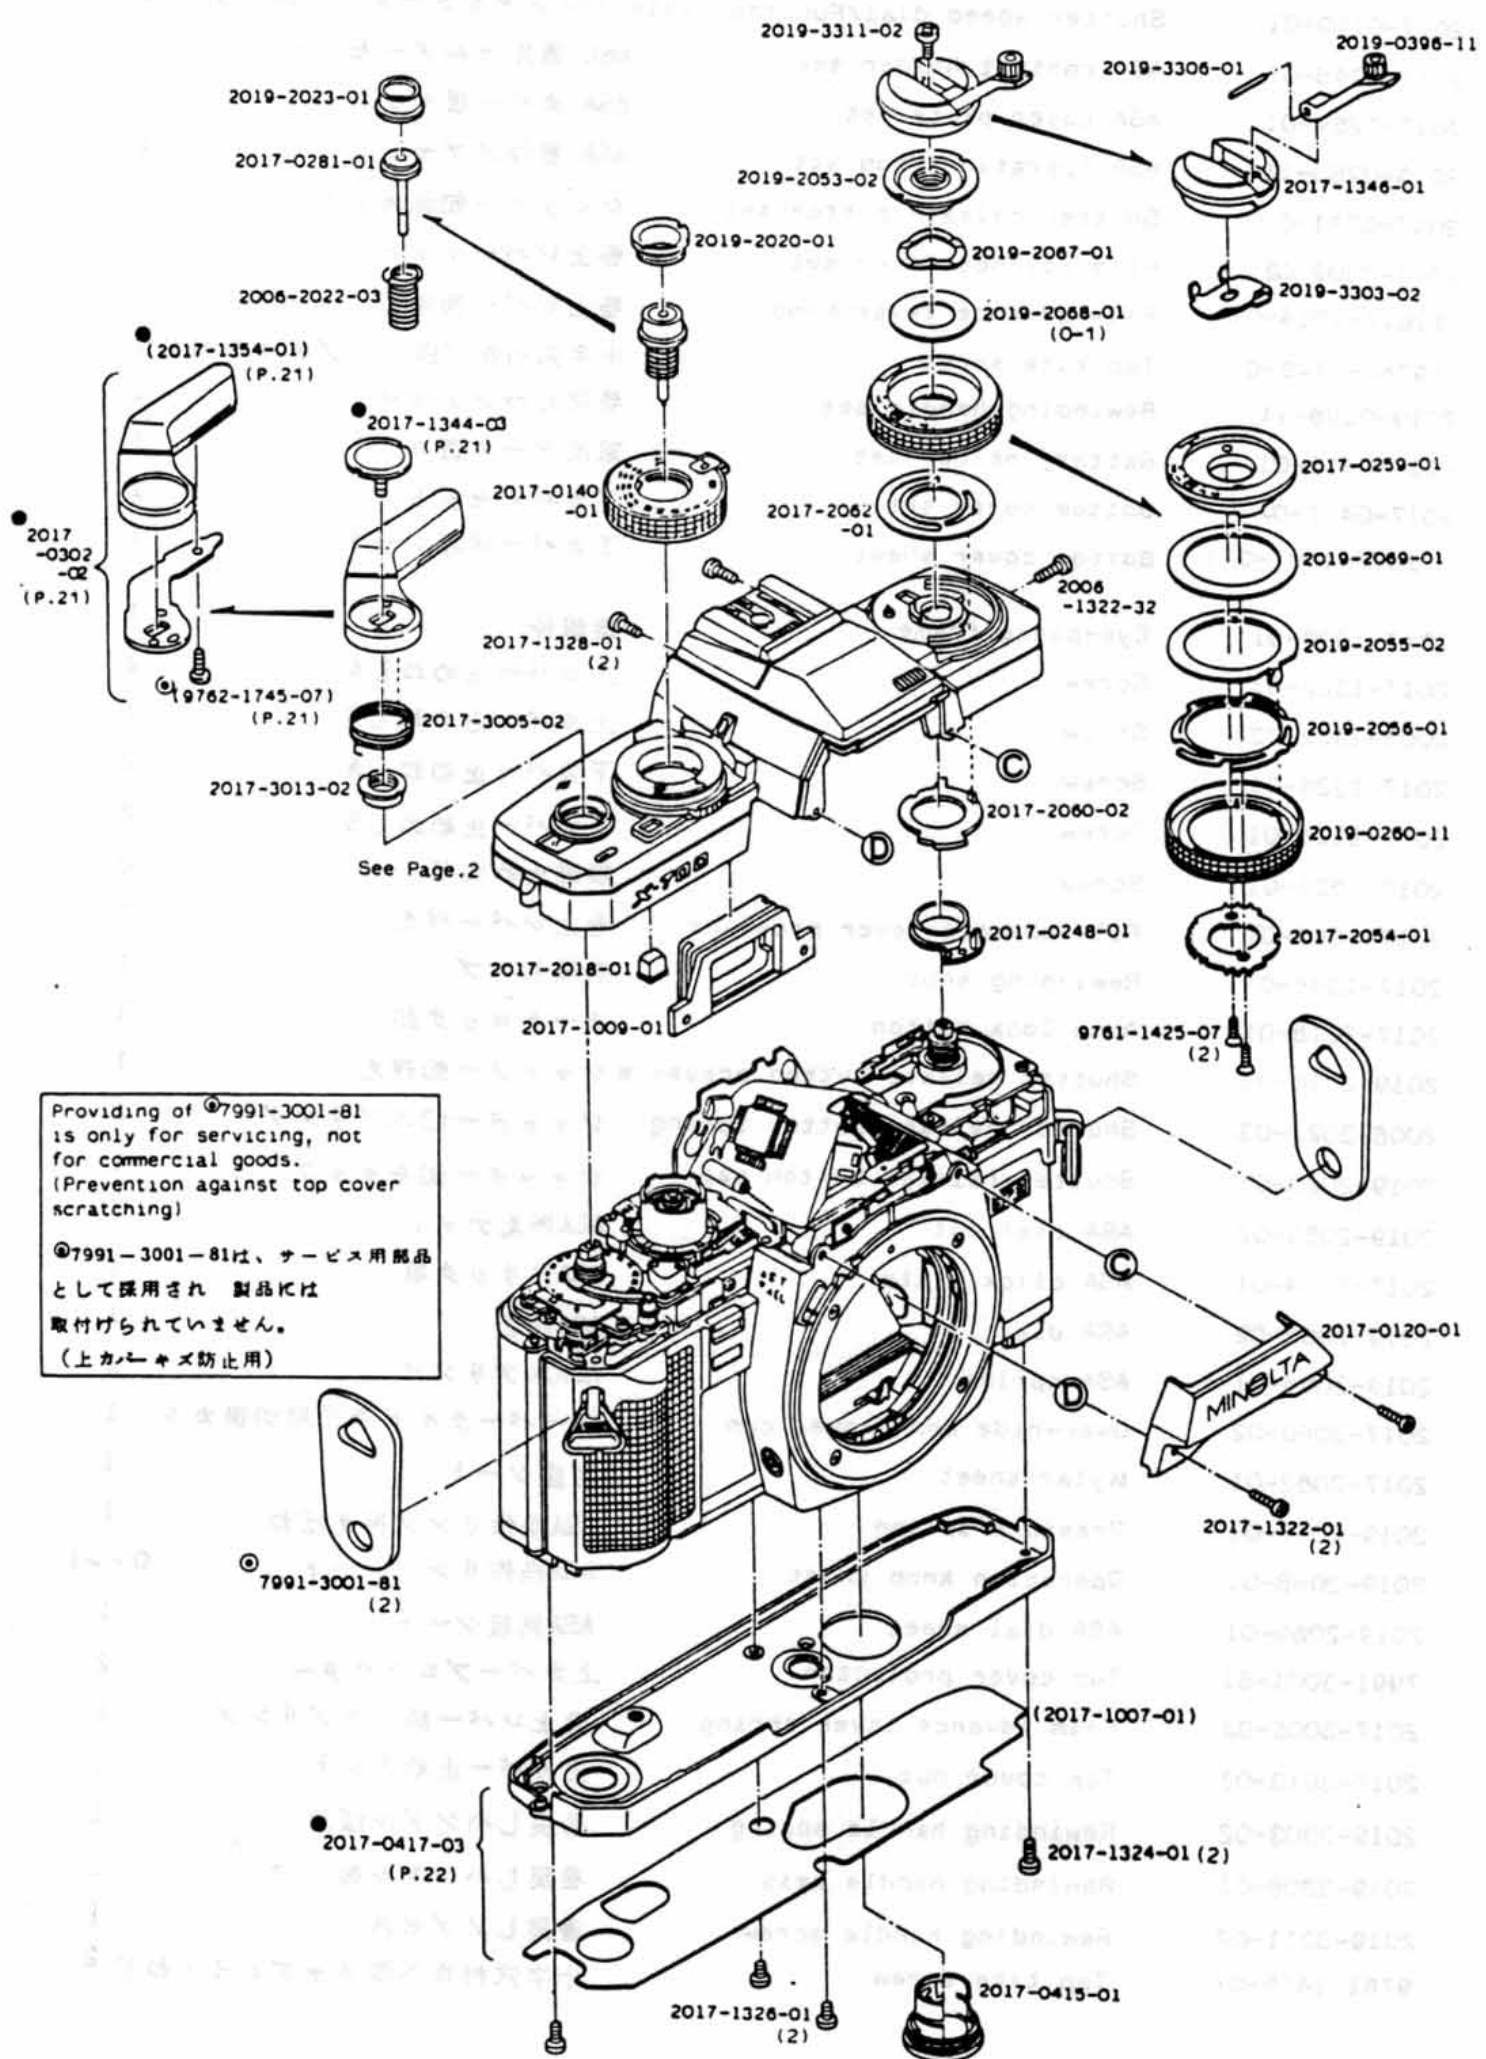


Providing of 7991-3001-81 is only for servicing, not for commercial goods. (Prevention against top cover scratching)

7991-3001-81は、サービス用部品として採用され 製品には取付けられていません。(上カバーキズ防止用)




| Part No.       | Part Name                            | Qty               |
|----------------|--------------------------------------|-------------------|
| 2017-0120-01   | Front top cover set                  | 上部正面カバーセット 1      |
| 2017-0140-01   | Shutter speed dial/Function selector | シャッターダイヤルセット 1    |
| 2017-0248-01   | ASA contact holder set               | ASA 接片ホルダーセット 1   |
| 2017-0259-01   | ASA cover plate set                  | ASA カバー板セット 1     |
| 2019-0260-11   | ASA operation knob set               | ASA 操作ノブセット 1     |
| 2017-0281-01   | Shutter release button set           | シャッター釦軸セット 1      |
| 2017-0302-02   | Film advance lever set               | 巻上レバーセット 1        |
| (2017-1354-01) | Film advance lever knob              | 巻上レバー指当て 1        |
| (9762-1745-07) | Tap tite screw                       | 十字穴付なべ頭タップタイトねじ 1 |
| 2019-0396-11   | Rewinding handle set                 | 巻戻しハンドセット 1       |
| 2017-0415-01   | Battery holder set                   | 電池ケース蓋セット 1       |
| 2017-0417-03   | Bottom cover set                     | 下カバーセット 1         |
| (2017-1007-01) | Bottom cover sheet                   | 下カバー保護シート 1       |
| 2017-1009-01   | Eye-piece frame                      | 接眼枠 1             |
| 2017-1322-01   | Screw                                | 上カバー止めねじA 2       |
| 2006-1322-32   | Screw                                | 上カバー止めねじB 1       |
| 2017-1324-01   | Screw                                | 下カバー止めねじA 2       |
| 2017-1326-01   | Screw                                | 下カバー止めねじB 2       |
| 2017-1328-01   | Screw                                | 接眼止めねじ 2          |
| 2017-1344-03   | Film advance lever pressure          | 巻上レバー押え 1         |
| 2017-1346-01   | Rewinding knob                       | 巻戻しノブ 1           |
| 2017-2018-01   | Auto lock button                     | オートロック釦 1         |
| 2019-2020-01   | Shutter release button pressure      | シャッター釦押え 1        |
| 2006-2022-03   | Shutter release button spring        | シャッター釦スプリング 1     |
| 2019-2023-01   | Shutter release button cap           | シャッター釦キャップ 1      |
| 2019-2053-02   | ASA dial nut                         | ASA押えナット 1        |
| 2017-2054-01   | ASA click plate                      | ASAクリック板 1        |
| 2019-2055-02   | ASA dial                             | ASA銘板 1           |
| 2019-2056-01   | ASA spring                           | ASAスプリング 1        |
| 2017-2060-02   | Over-ride changeover cam             | オーバーライド表示用切換カム 1  |
| 2017-2062-01   | Mylar sheet                          | 防塵シート 1           |
| 2019-2067-01   | Pressure spring                      | ASA操作リング押えばね 1    |
| 2019-2068-01   | Operation knob sheet                 | ASA操作リングシート 0~1   |
| 2019-2069-01   | ASA dial sheet                       | ASA銘板シート 1        |
| 7991-3001-81   | Top cover protector                  | 上カバープロテクター 2      |
| 2017-3005-02   | Film advance lever spring            | 巻上レバー戻しスプリング 1    |
| 2017-3013-02   | Top cover nut                        | 上カバー止めナット 1       |
| 2019-3303-02   | Rewinding handle spring              | 巻戻しハンドルばね 1       |
| 2019-3306-01   | Rewinding handle axis                | 巻戻しハンドル軸 1        |
| 2019-3311-02   | Rewinding handle screw               | 巻戻しノブビス 1         |
| 9761-1425-07   | Tap tite screw                       | 十字穴付なべ頭タップタイトねじ 2 |

Assy. Part No.2017-0132-01

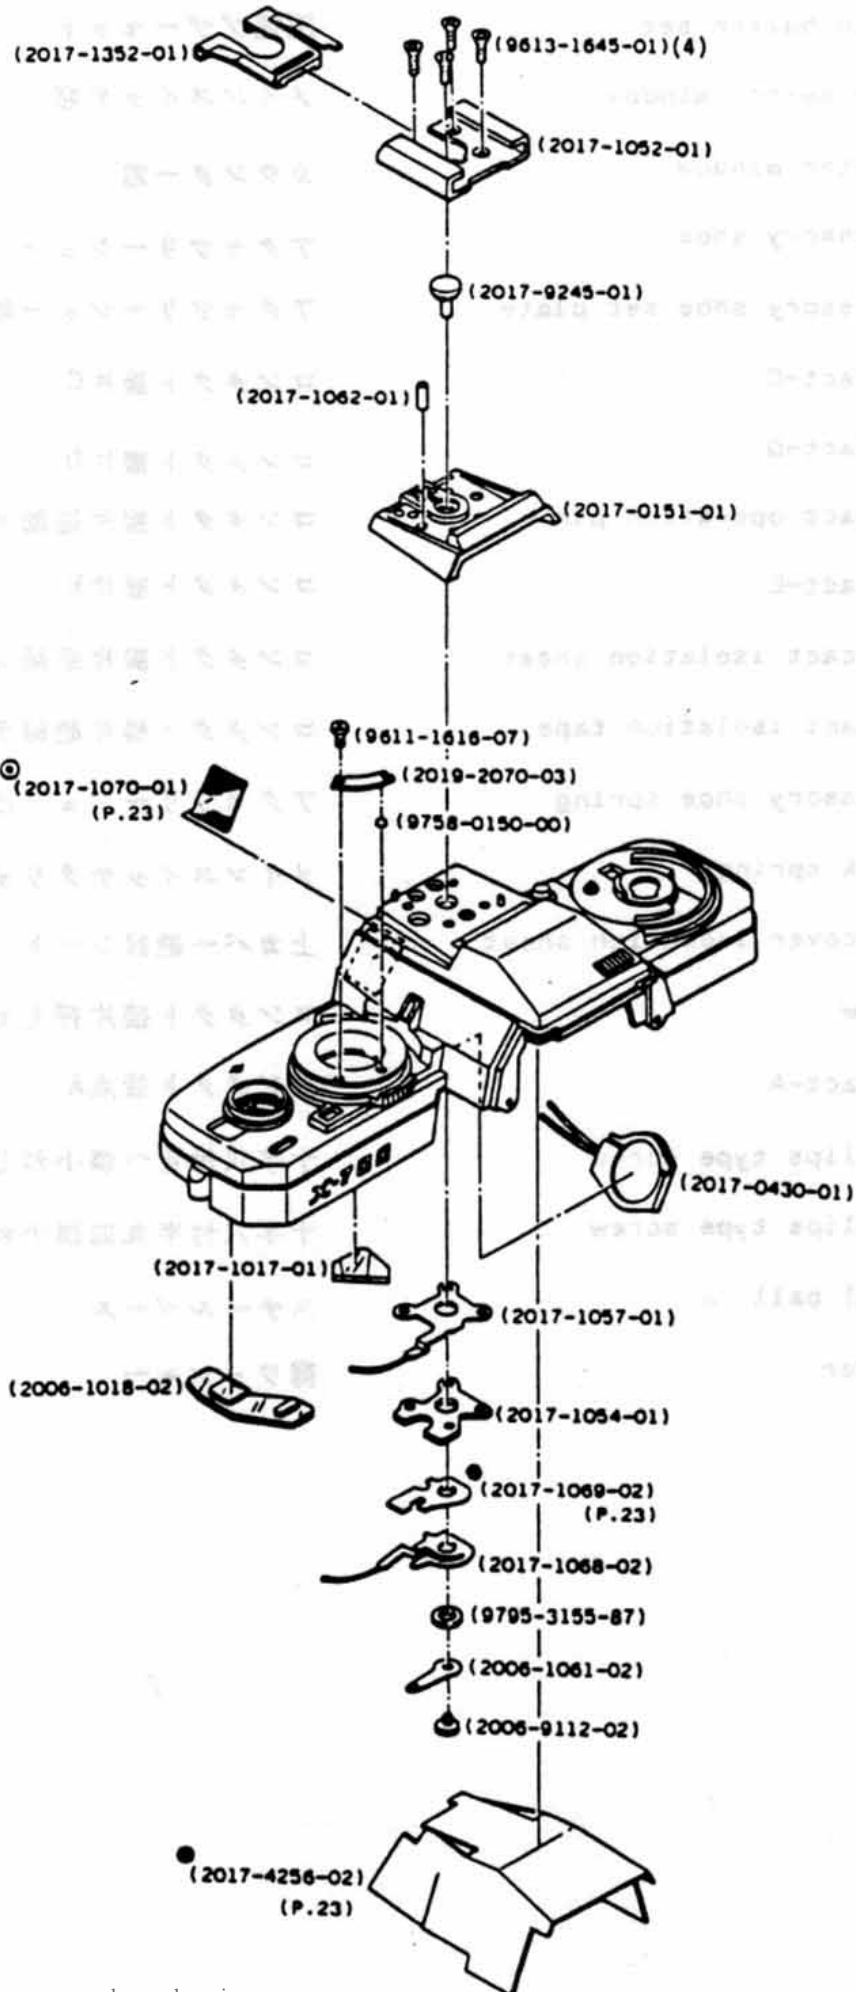



| Part No.       | Part Name                 |               | Qty |
|----------------|---------------------------|---------------|-----|
| 2017-0132-01   | Top cover set             | 上カバーセット       | 1   |
| (2017-0151-01) | Accessory shoe base set   | アクセサリースュー座セット | 1   |
| (2017-0430-01) | Piezo buzzer set          | 圧電ブザーセット      | 1   |
| (2017-1017-01) | Main switch window        | メインスイッチ窓      | 1   |
| (2006-1018-02) | Counter window            | カウンター窓        | 1   |
| (2017-1052-01) | Accessory shoe            | アクセサリースュー     | 1   |
| (2017-1054-01) | Accessory shoe set plate  | アクセサリースュー取付板  | 1   |
| (2017-1057-01) | Contact-C                 | コンタクト接片C      | 1   |
| (2006-1061-02) | Contact-D                 | コンタクト接片D      | 1   |
| (2017-1062-01) | Contact operation pin     | コンタクト接片連動ピン   | 1   |
| (2017-1068-02) | Contact-E                 | コンタクト接片E      | 1   |
| (2017-1069-02) | Contact isolation sheet   | コンタクト接片絶縁シート  | 1   |
| (2017-1070-01) | Contact isolation tape    | コンタクト接片絶縁テープ  | 1   |
| (2017-1352-01) | Accessory shoe spring     | アクセサリースューばね   | 1   |
| (2019-2070-03) | Click spring              | メインスイッチクリックばね | 1   |
| (2017-4256-02) | Top cover isolation sheet | 上カバー絶縁シート     | 1   |
| (2006-9112-02) | Screw                     | コンタクト接片押えビス   | 1   |
| (2017-9245-01) | Contact-A                 | コンタクト接点A      | 1   |
| (9611-1616-07) | Phillips type screw       | 十字穴付なべ頭小ねじ    | 1   |
| (9613-1645-01) | Phillips type screw       | 十字穴付半丸皿頭小ねじ   | 4   |
| (9758-0150-00) | Steel ball                | スチールボール       | 1   |
| (9795-3155-87) | Washer                    | 薄ワッシャー        | 1   |



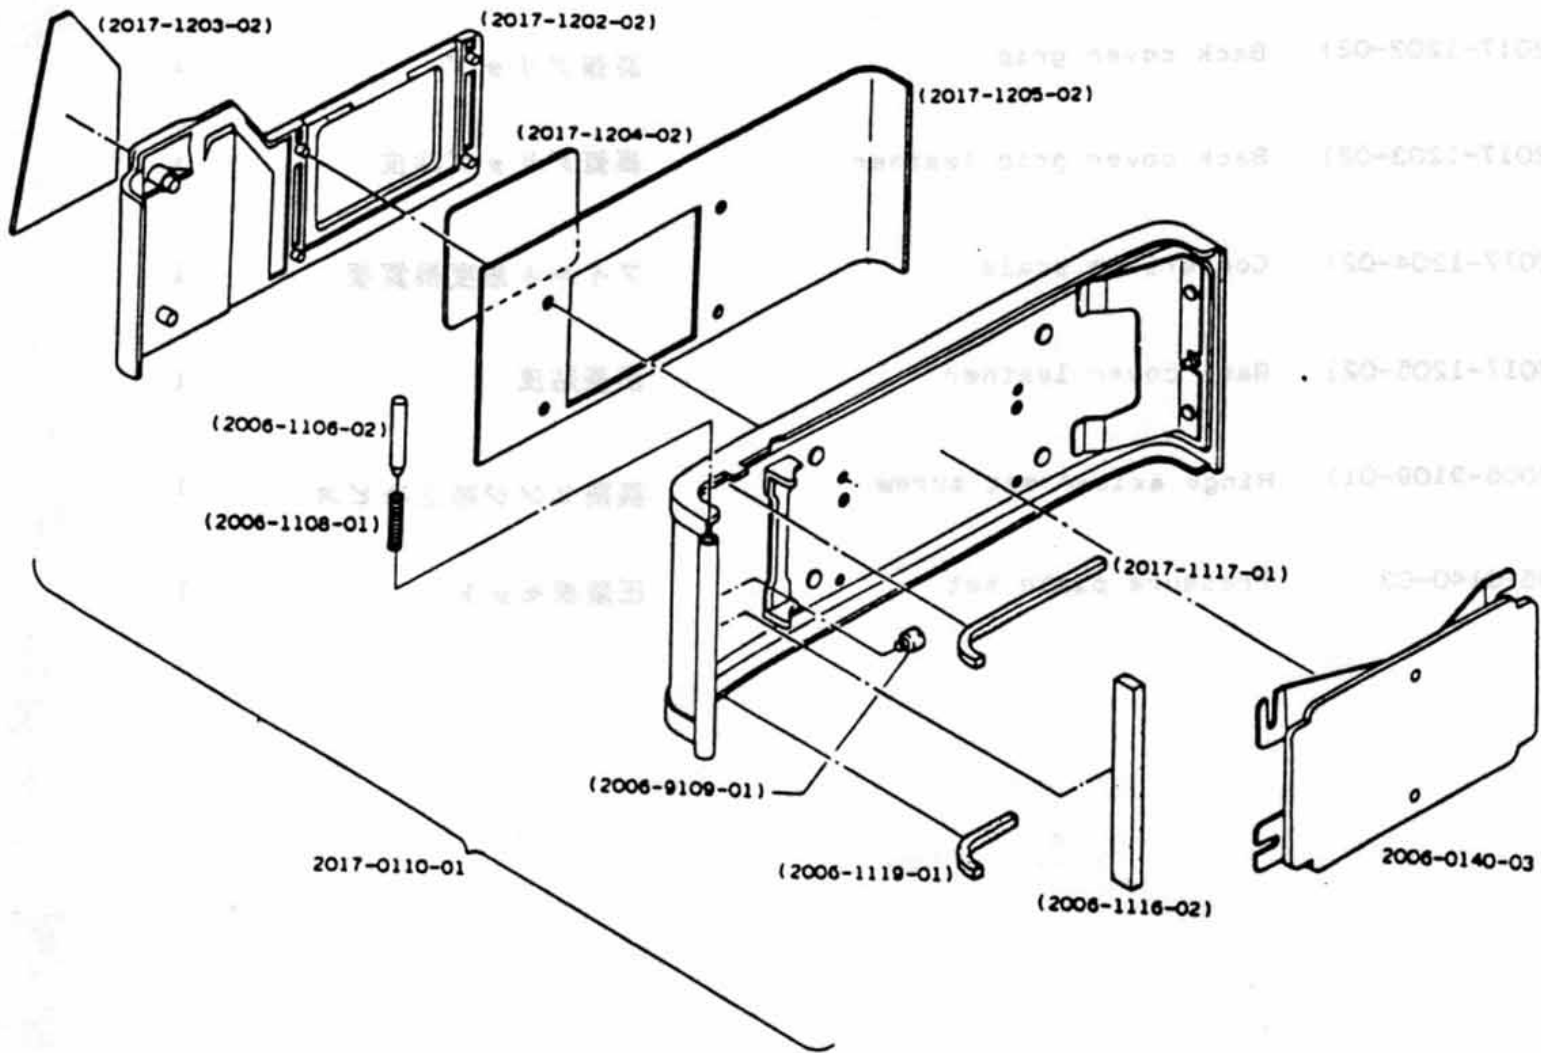

| Part No.       | Part Name                       | Qty        |   |
|----------------|---------------------------------|------------|---|
| 2017-0110-01   | Back cover set                  | 裏蓋セット      | 1 |
| (2006-1106-02) | Hinge axis-A                    | ヒンジ軸A      | 1 |
| (2006-1108-01) | Hinge spring                    | ヒンジスプリング   | 1 |
| (2006-1116-02) | Back cover light shield plate   | 裏蓋遮光片      | 1 |
| (2017-1117-01) | Back cover light shield plate-C | 裏蓋遮光片C     | 1 |
| (2006-1119-01) | Back cover light shield plate-B | 裏蓋遮光片B     | 1 |
| (2017-1202-02) | Back cover grip                 | 裏蓋グリップ     | 1 |
| (2017-1203-02) | Back cover grip leather         | 裏蓋グリップ貼皮   | 1 |
| (2017-1204-02) | Conversion scale                | フィルム感度換算板  | 1 |
| (2017-1205-02) | Back cover leather              | 裏蓋貼皮       | 1 |
| (2006-9109-01) | Hinge axis-A set screw          | 裏蓋ヒンジ軸止めビス | 1 |
| 2006-0140-03   | Pressure plate set              | 圧着板セット     | 1 |

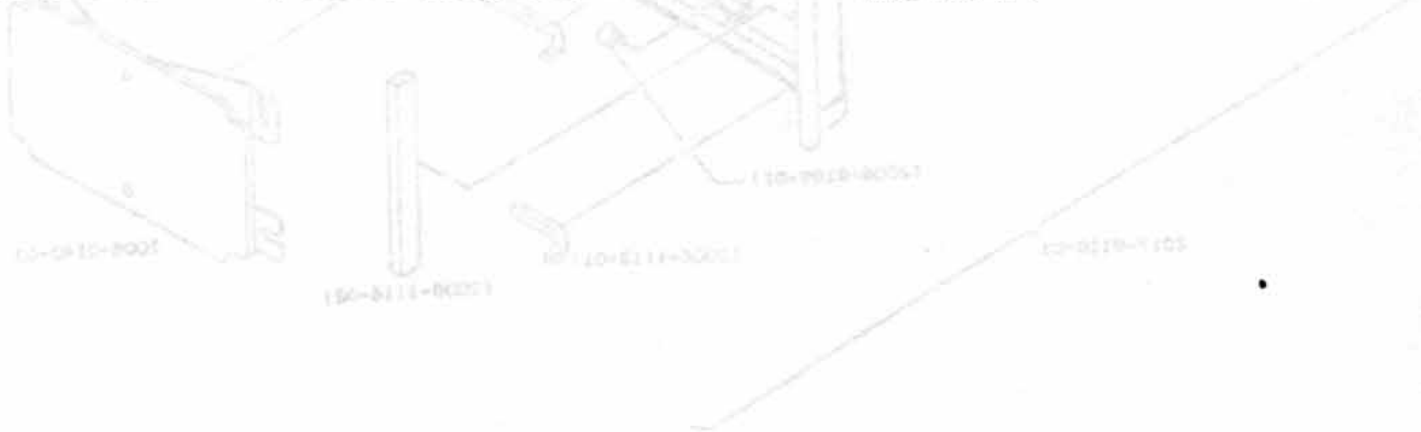


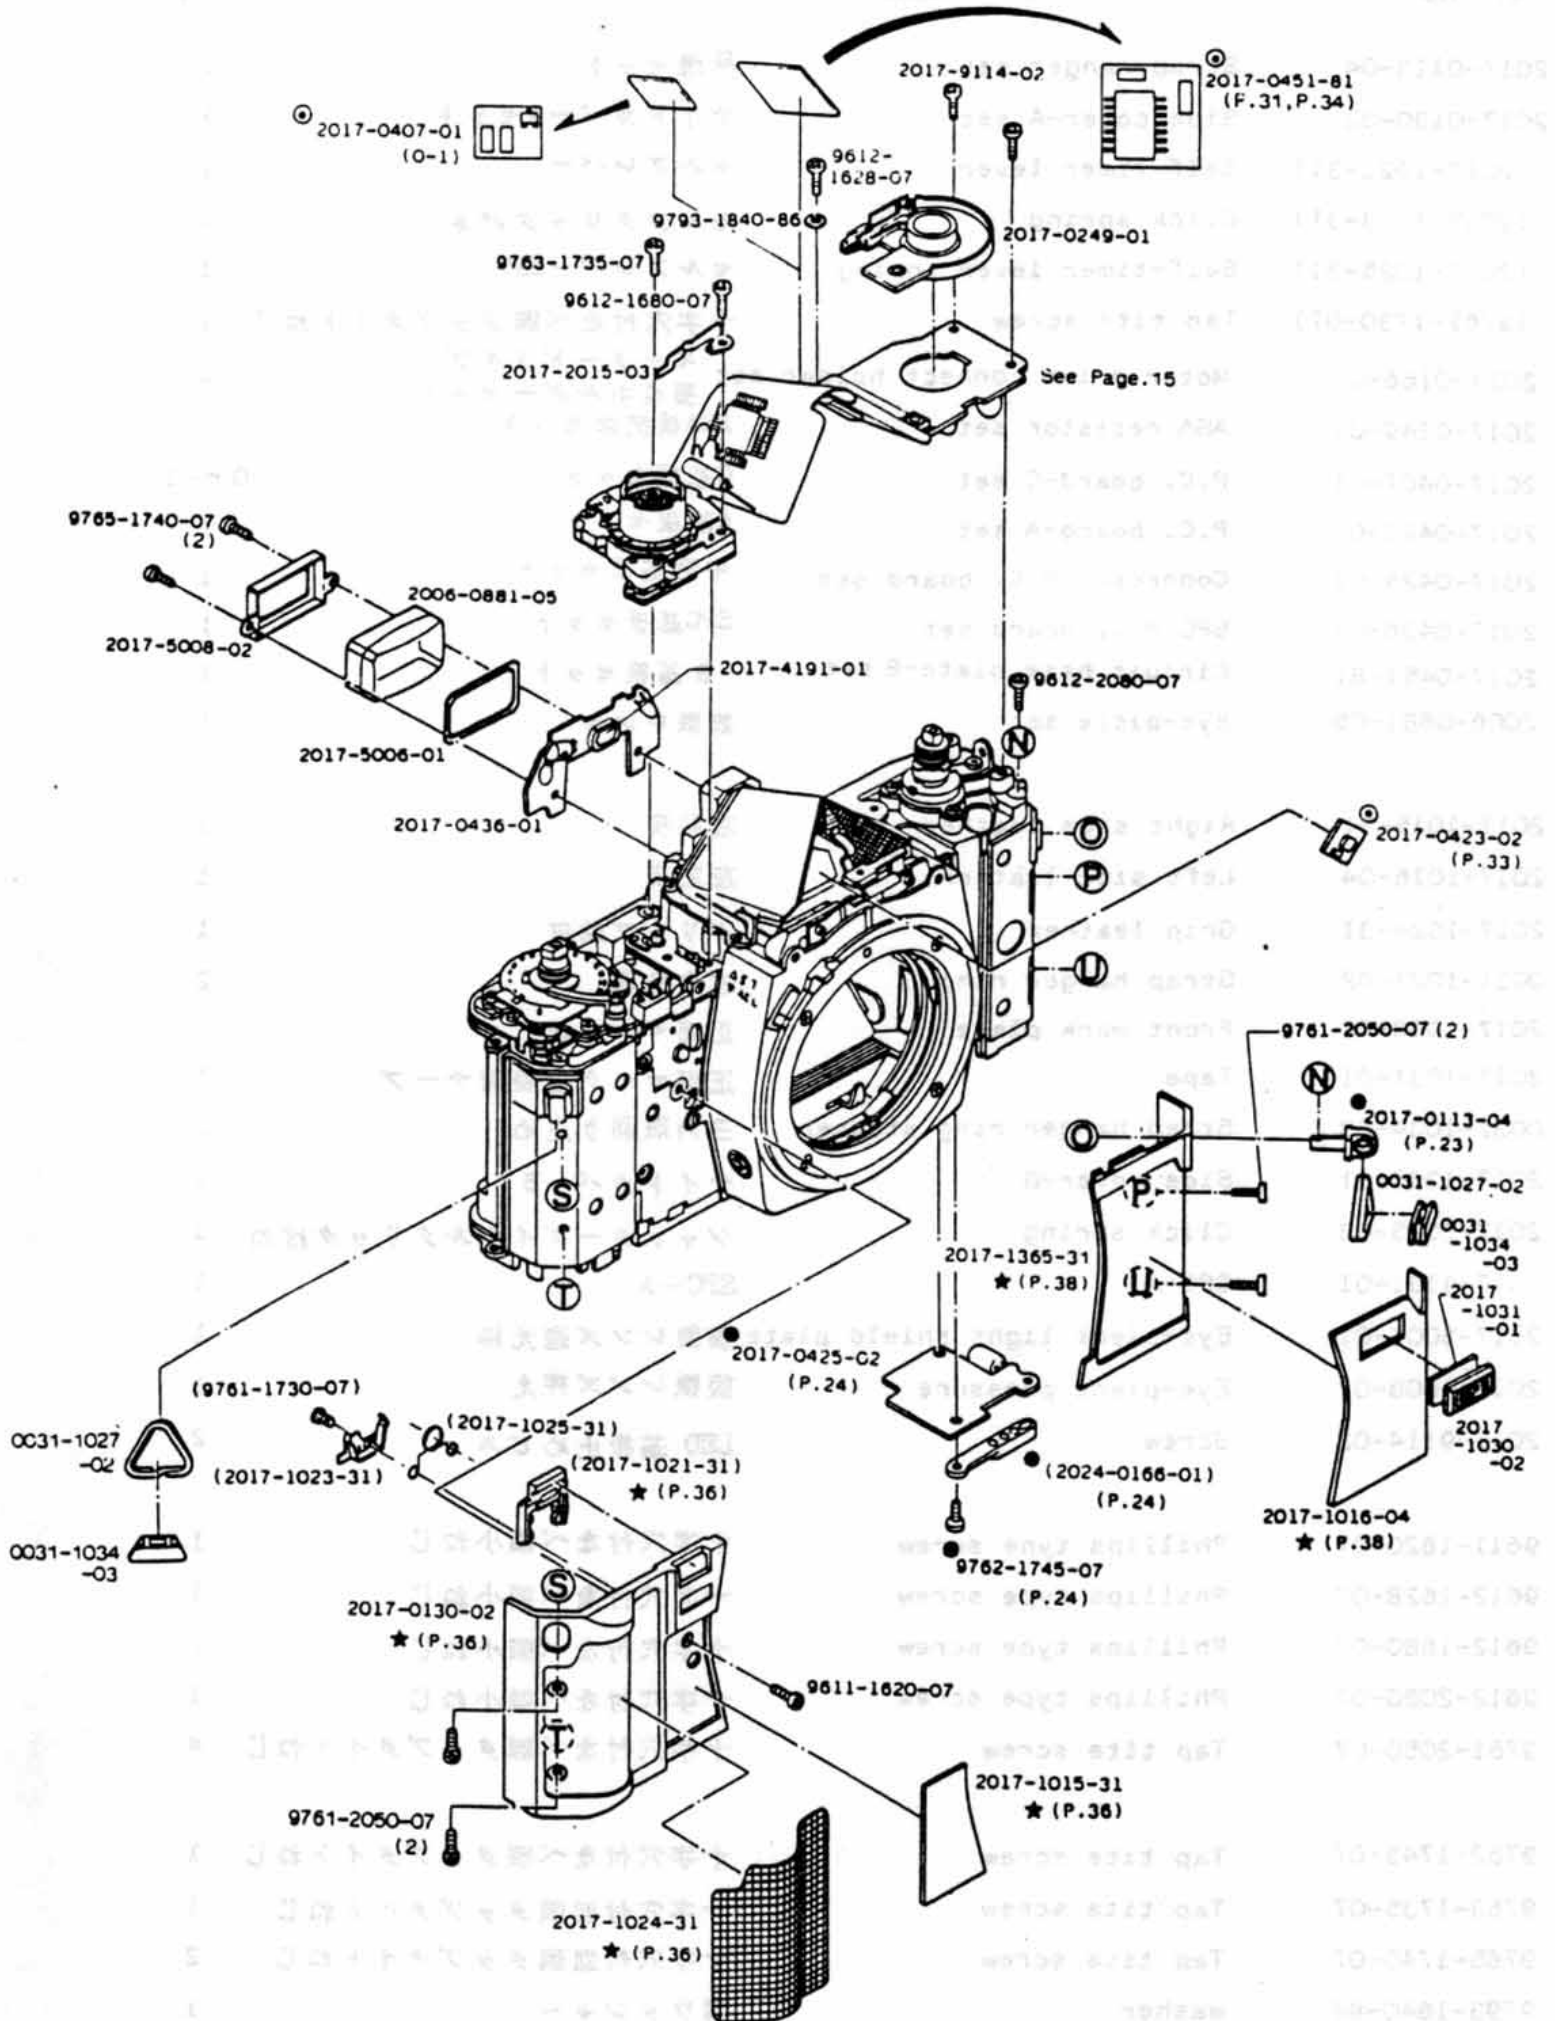

Concerning non AE lock model, refer to the page shown by ★.




| Part No.       | Part Name                      |                       | Qty |
|----------------|--------------------------------|-----------------------|-----|
| 2017-0113-04   | Strap hanger set               | 吊環セット                 | 1   |
| 2017-0130-02   | Side cover-A set               | サイドカバーAセット            | 1   |
| (2017-1021-31) | Self-timer lever               | セルフレバー                | 1   |
| (2017-1023-31) | Click spring                   | セルフクリックバネ             | 1   |
| (2017-1025-31) | Self-timer lever spring        | セルフレバーSP              | 1   |
| (9761-1730-07) | Tap tite screw                 | 十字穴付なべ頭タップタイトねじ       | 1   |
| 2024-0166-01   | Motor drive connect holder set | モータードライブ<br>接点ホルダーセット | 1   |
| 2017-0249-01   | ASA resistor set               | ASA抵抗体セット             | 1   |
| 2017-0407-01   | P.C. board-C set               | C基板セット                | 0~1 |
| 2017-0423-02   | P.C. board-A set               | A基板セット                | 1   |
| 2017-0425-02   | Connector P.C. board set       | 中継基板セット               | 1   |
| 2017-0436-01   | SPC P.C. board set             | SPC基板セット              | 1   |
| 2017-0451-81   | Circuit base plate-B set       | B基板セット                | 1   |
| 2006-0881-05   | Eye-piece set                  | 接眼レンズ                 | 1   |
| 2017-1015-31   | Right side leather             | 右貼皮                   | 1   |
| 2017-1016-04   | Left side leather              | 左貼皮                   | 1   |
| 2017-1024-31   | Grip leather                   | グリップ貼皮                | 1   |
| 0031-1027-02   | Strap hanger ring              | 三角吊環                  | 2   |
| 2017-1030-02   | Front mark plate               | 正面マーク板                | 1   |
| 2017-1031-01   | Tape                           | 正面マーク板接着テープ           | 1   |
| 0031-1034-03   | Strap hanger ring stopper      | 三角環回り止め               | 2   |
| 2017-1365-31   | Side cover-B                   | サイドカバーB               | 1   |
| 2017-2015-03   | Click spring                   | シャッターダイヤルクリックばね       | 1   |
| 2017-4191-01   | SPC-A                          | SPC-A                 | 1   |
| 2017-5006-01   | Eye-piece light shield plate   | 接眼レンズ遮光枠              | 1   |
| 2017-5008-02   | Eye-piece pressure             | 接眼レンズ押え               | 1   |
| 2017-9114-02   | Screw                          | LED 基板止めビス            | 2   |
| 9611-1620-07   | Phillips type screw            | 十字穴付なべ頭小ねじ            | 1   |
| 9612-1628-07   | Phillips type screw            | 十字穴付なべ頭小ねじ            | 1   |
| 9612-1680-07   | Phillips type screw            | 十字穴付なべ頭小ねじ            | 1   |
| 9612-2080-07   | Phillips type screw            | 十字穴付なべ頭小ねじ            | 1   |
| 9761-2050-07   | Tap tite screw                 | 十字穴付なべ頭タップタイトねじ       | 4   |
| 9762-1745-07   | Tap tite screw                 | 十字穴付なべ頭タップタイトねじ       | 1   |
| 9763-1735-07   | Tap tite screw                 | 十字穴付皿頭タップタイトねじ        | 1   |
| 9765-1740-07   | Tap tite screw                 | 十字穴付皿頭タップタイトねじ        | 2   |
| 9793-1840-86   | Washer                         | 薄ワッシャー                | 1   |

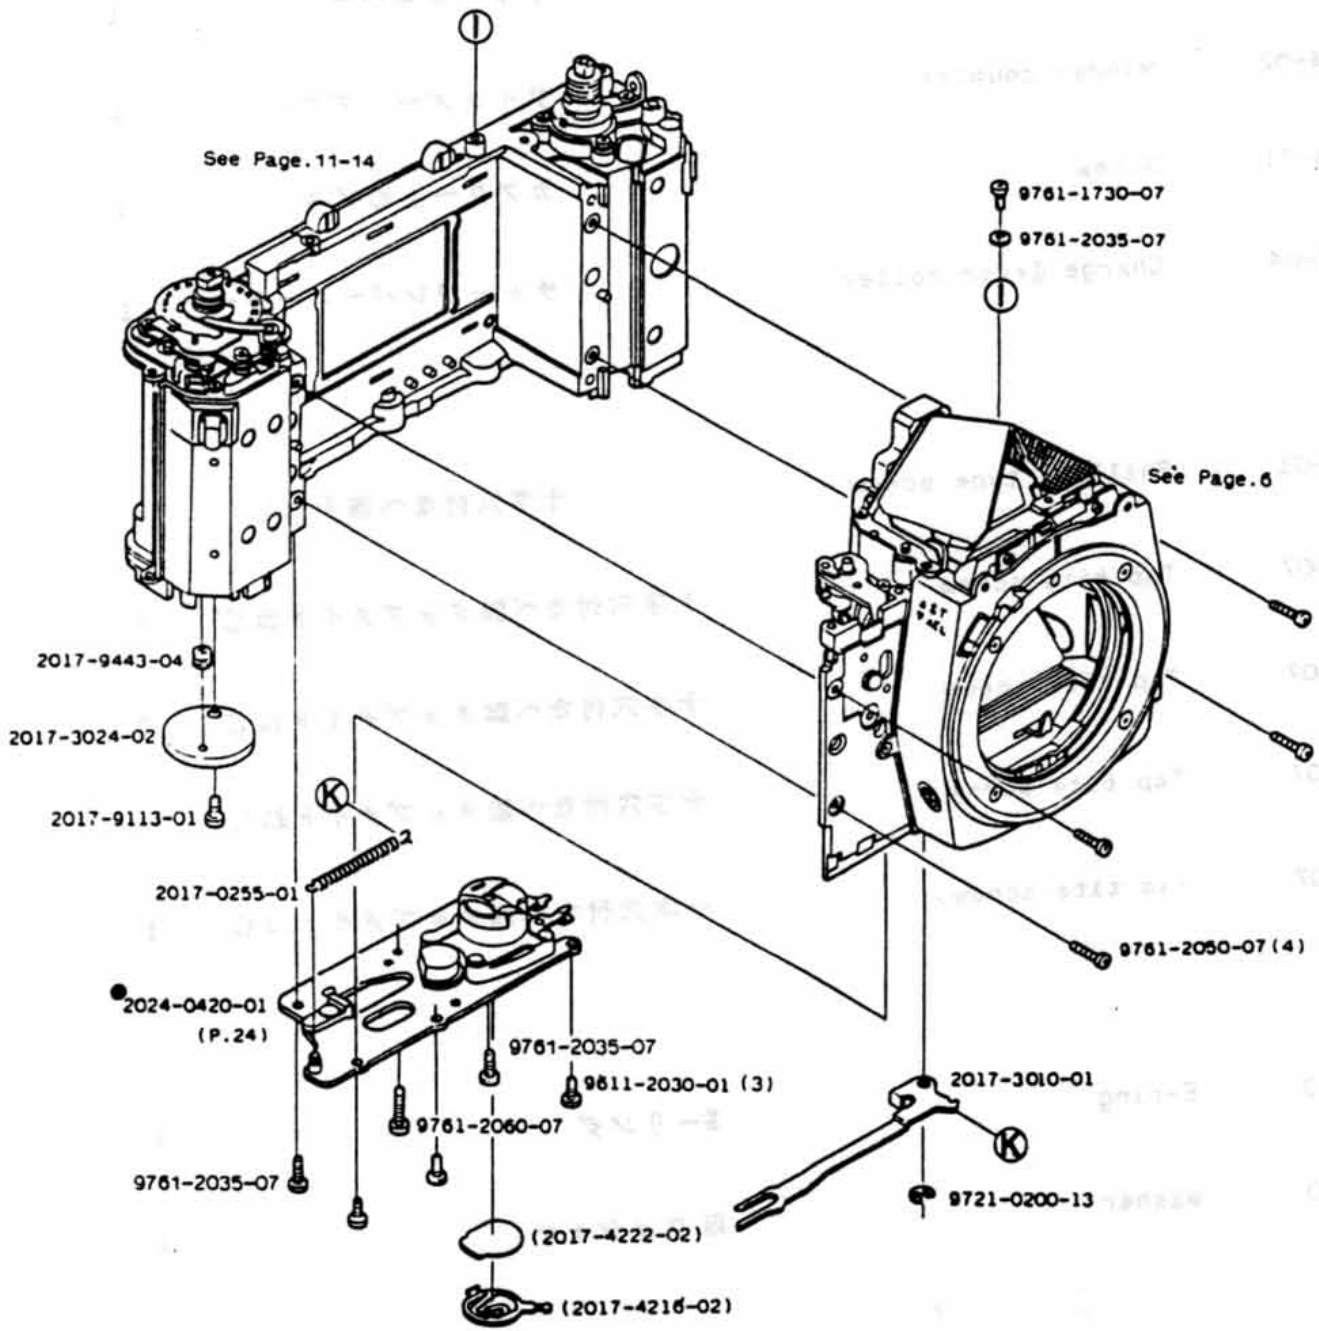

| Part No.       | Part Name                   |                 | Qty |
|----------------|-----------------------------|-----------------|-----|
| 2017-0255-01   | MP return sub spring-B set  | MP戻し補助SP-Bセット   | 1   |
| 2024-0420-01   | Battery case base plate set | 電池ケース台板セット      | 1   |
| (2017-4216-02) | Battery contact(+)          | 電池接片 (+)        | 1   |
| (2017-4222-02) | Battery light shield plate  | 電池ケース遮光板        | 1   |
| 2017-3010-01   | Charge lever                | チャージレバー         | 1   |
| 2017-3024-02   | Winder coupler              | ワインダーカプラー       | 1   |
| 2017-9113-01   | Screw                       | カプラー止めビス        | 1   |
| 2017-9443-04   | Charge lever roller         | チャージレバーローラー     | 1   |
| 9611-2030-01   | Phillips type screw         | 十字穴付なべ頭小ねじ      | 3   |
| 9761-1730-07   | Tap tite screw              | 十字穴付なべ頭タップタイトねじ | 1   |
| 9761-2035-07   | Tap tite screw              | 十字穴付なべ頭タップタイトねじ | 2   |
| 9761-2050-07   | Tap tite screw              | 十字穴付なべ頭タップタイトねじ | 4   |
| 9761-2060-07   | Tap tite screw              | 十字穴付なべ頭タップタイトねじ | 1   |
| 9721-0200-13   | E-ring                      | E-リング           | 1   |
| 9792-1735-40   | Washer                      | 薄ワッシャー          | 1   |




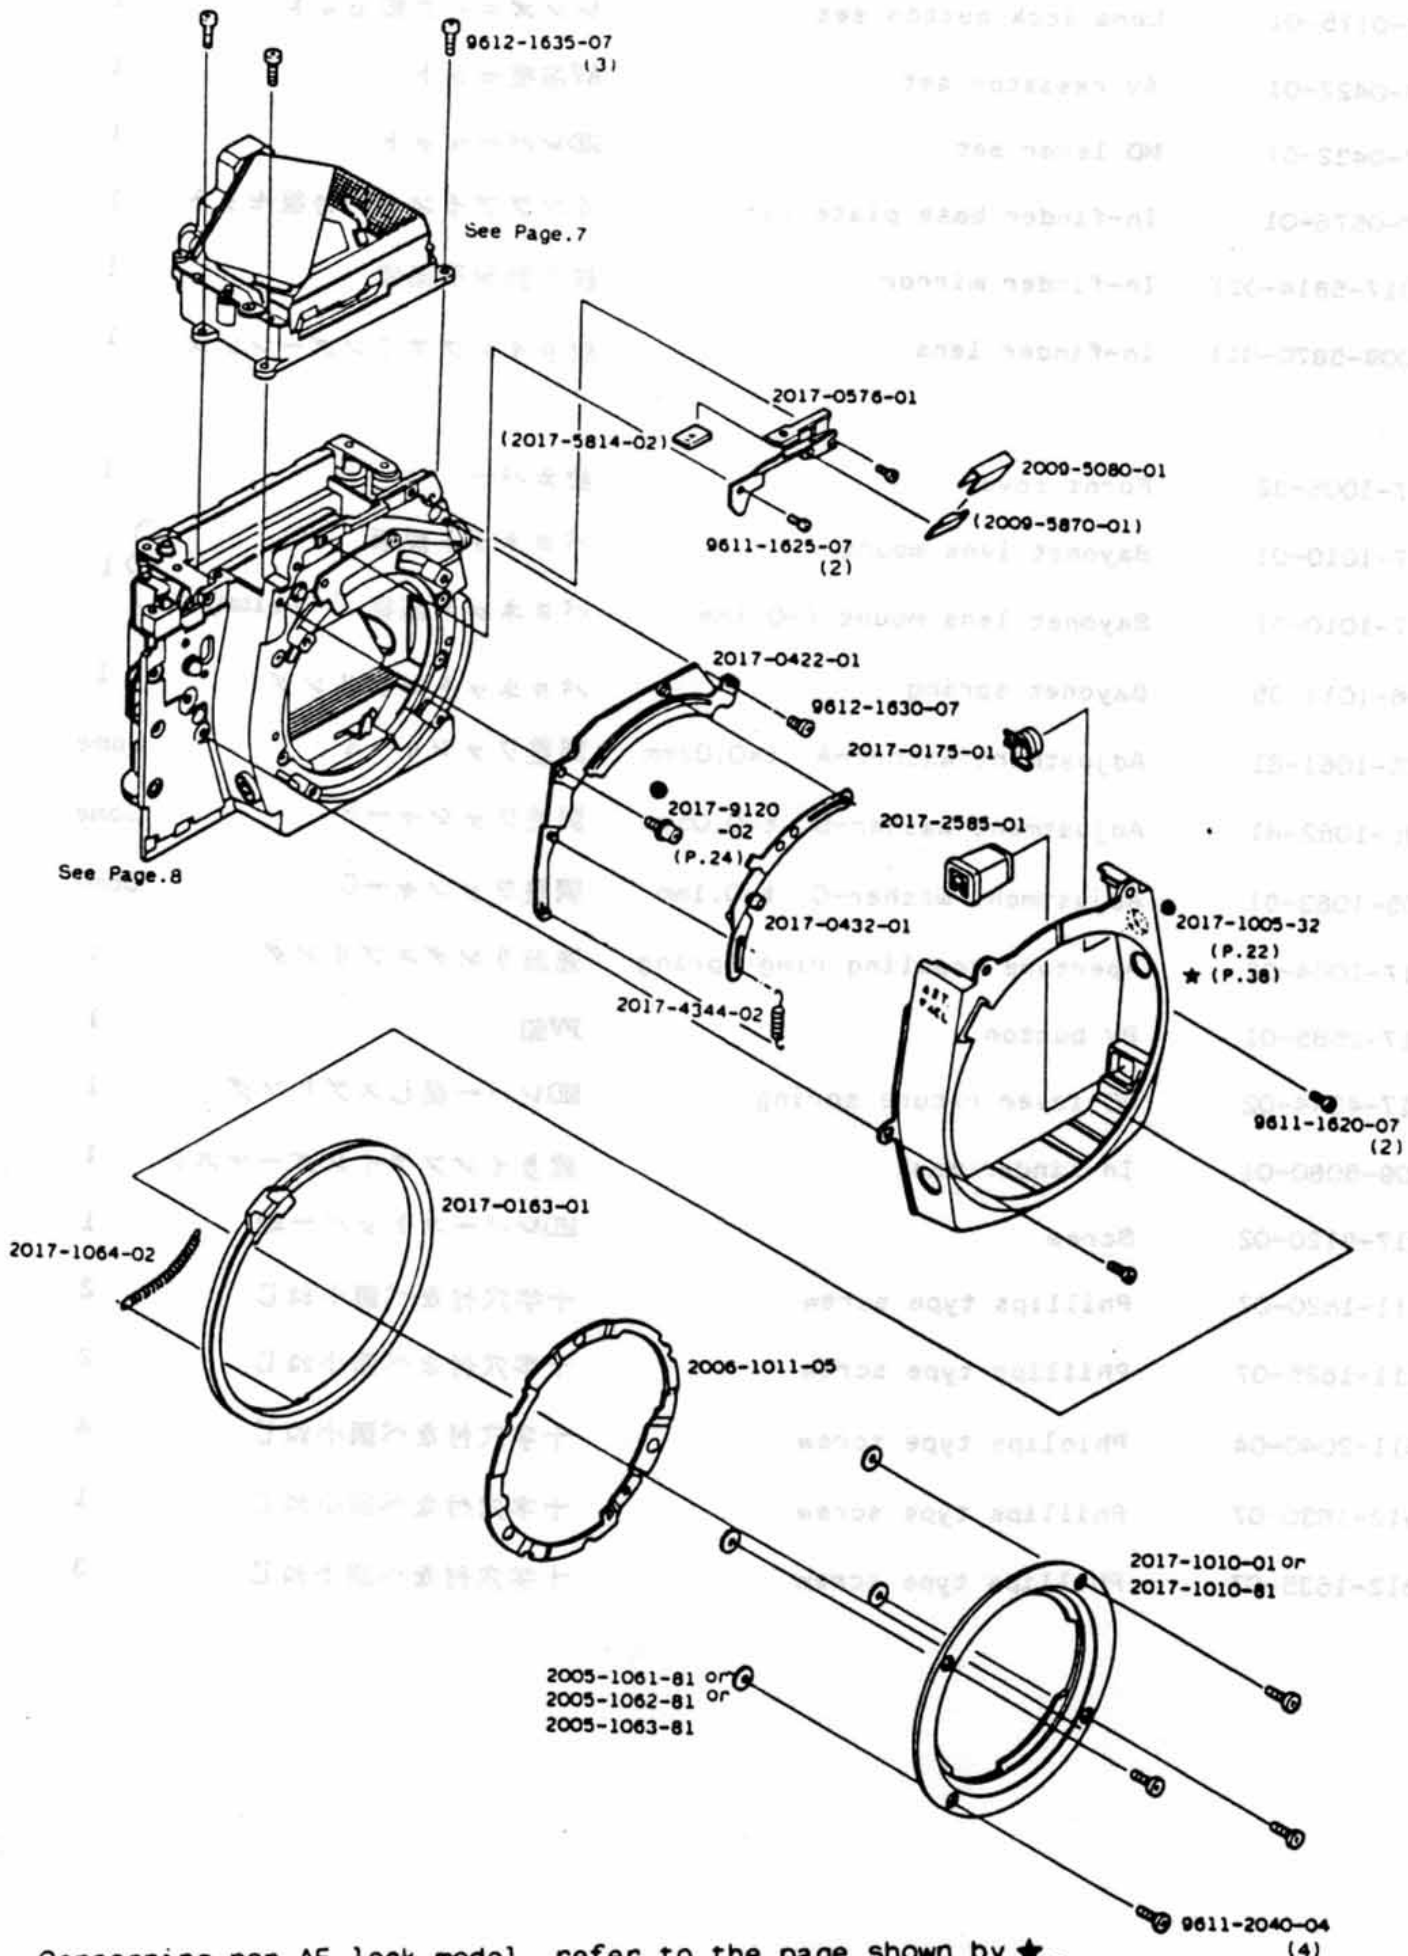

Concerning non AE lock model, refer to the page shown by ★.


AEロック機能なしモデルは、★マークのページを参照して下さい。


| Part No.       | Part Name                     |                  | Qty  |
|----------------|-------------------------------|------------------|------|
| 2017-0163-01   | Aperture coupling ring set    | 連結リングセット         | 1    |
| 2017-0175-01   | Lens lock button set          | レンズロック釦セット       | 1    |
| 2017-0422-01   | AV resistor set               | AV基板セット          | 1    |
| 2017-0432-01   | MD lever set                  | MDレバーセット         | 1    |
| 2017-0576-01   | In-finder base plate set      | インファインダー台板セット    | 1    |
| (2017-5814-02) | In-finder mirror              | 絞り表示平面鏡          | 1    |
| (2009-5870-01) | In-finder lens                | 絞りインファインダーレンズ    | 1    |
| 2017-1005-32   | Front cover                   | 前カバー             | 1    |
| 2017-1010-01   | Bayonet lens mount            | バヨネット座板          | } 1  |
| 2017-1010-81   | Bayonet lens mount (-0.1mm)   | バヨネット座板 (-0.1mm) |      |
| 2006-1011-05   | Bayonet spring                | バヨネットスプリング       | 1    |
| 2005-1061-81   | Adjustment washer-A t=0.02mm  | 調整ワッシャーA         | Some |
| 2005-1062-81   | Adjustment washer-B t=0.05mm  | 調整ワッシャーB         | Some |
| 2005-1063-81   | Adjustment washer-C t=0.1mm   | 調整ワッシャーC         | Some |
| 2017-1064-02   | Aperture coupling ring spring | 連結リングスプリング       | 1    |
| 2017-2585-01   | PV button                     | PV釦              | 1    |
| 2017-4344-02   | MD lever return spring        | MDレバー戻しスプリング     | 1    |
| 2009-5080-01   | In-finder mask                | 絞りインファインダーマスク    | 1    |
| 2017-9120-02   | Screw                         | MDレバーストッパー軸      | 1    |
| 9611-1620-07   | Phillips type screw           | 十字穴付なべ頭小ねじ       | 2    |
| 9611-1625-07   | Phillips type screw           | 十字穴付なべ頭小ねじ       | 2    |
| 9611-2040-04   | Phillips type screw           | 十字穴付なべ頭小ねじ       | 4    |
| 9612-1630-07   | Phillips type screw           | 十字穴付なべ頭小ねじ       | 1    |
| 9612-1635-07   | Phillips type screw           | 十字穴付なべ頭小ねじ       | 3    |

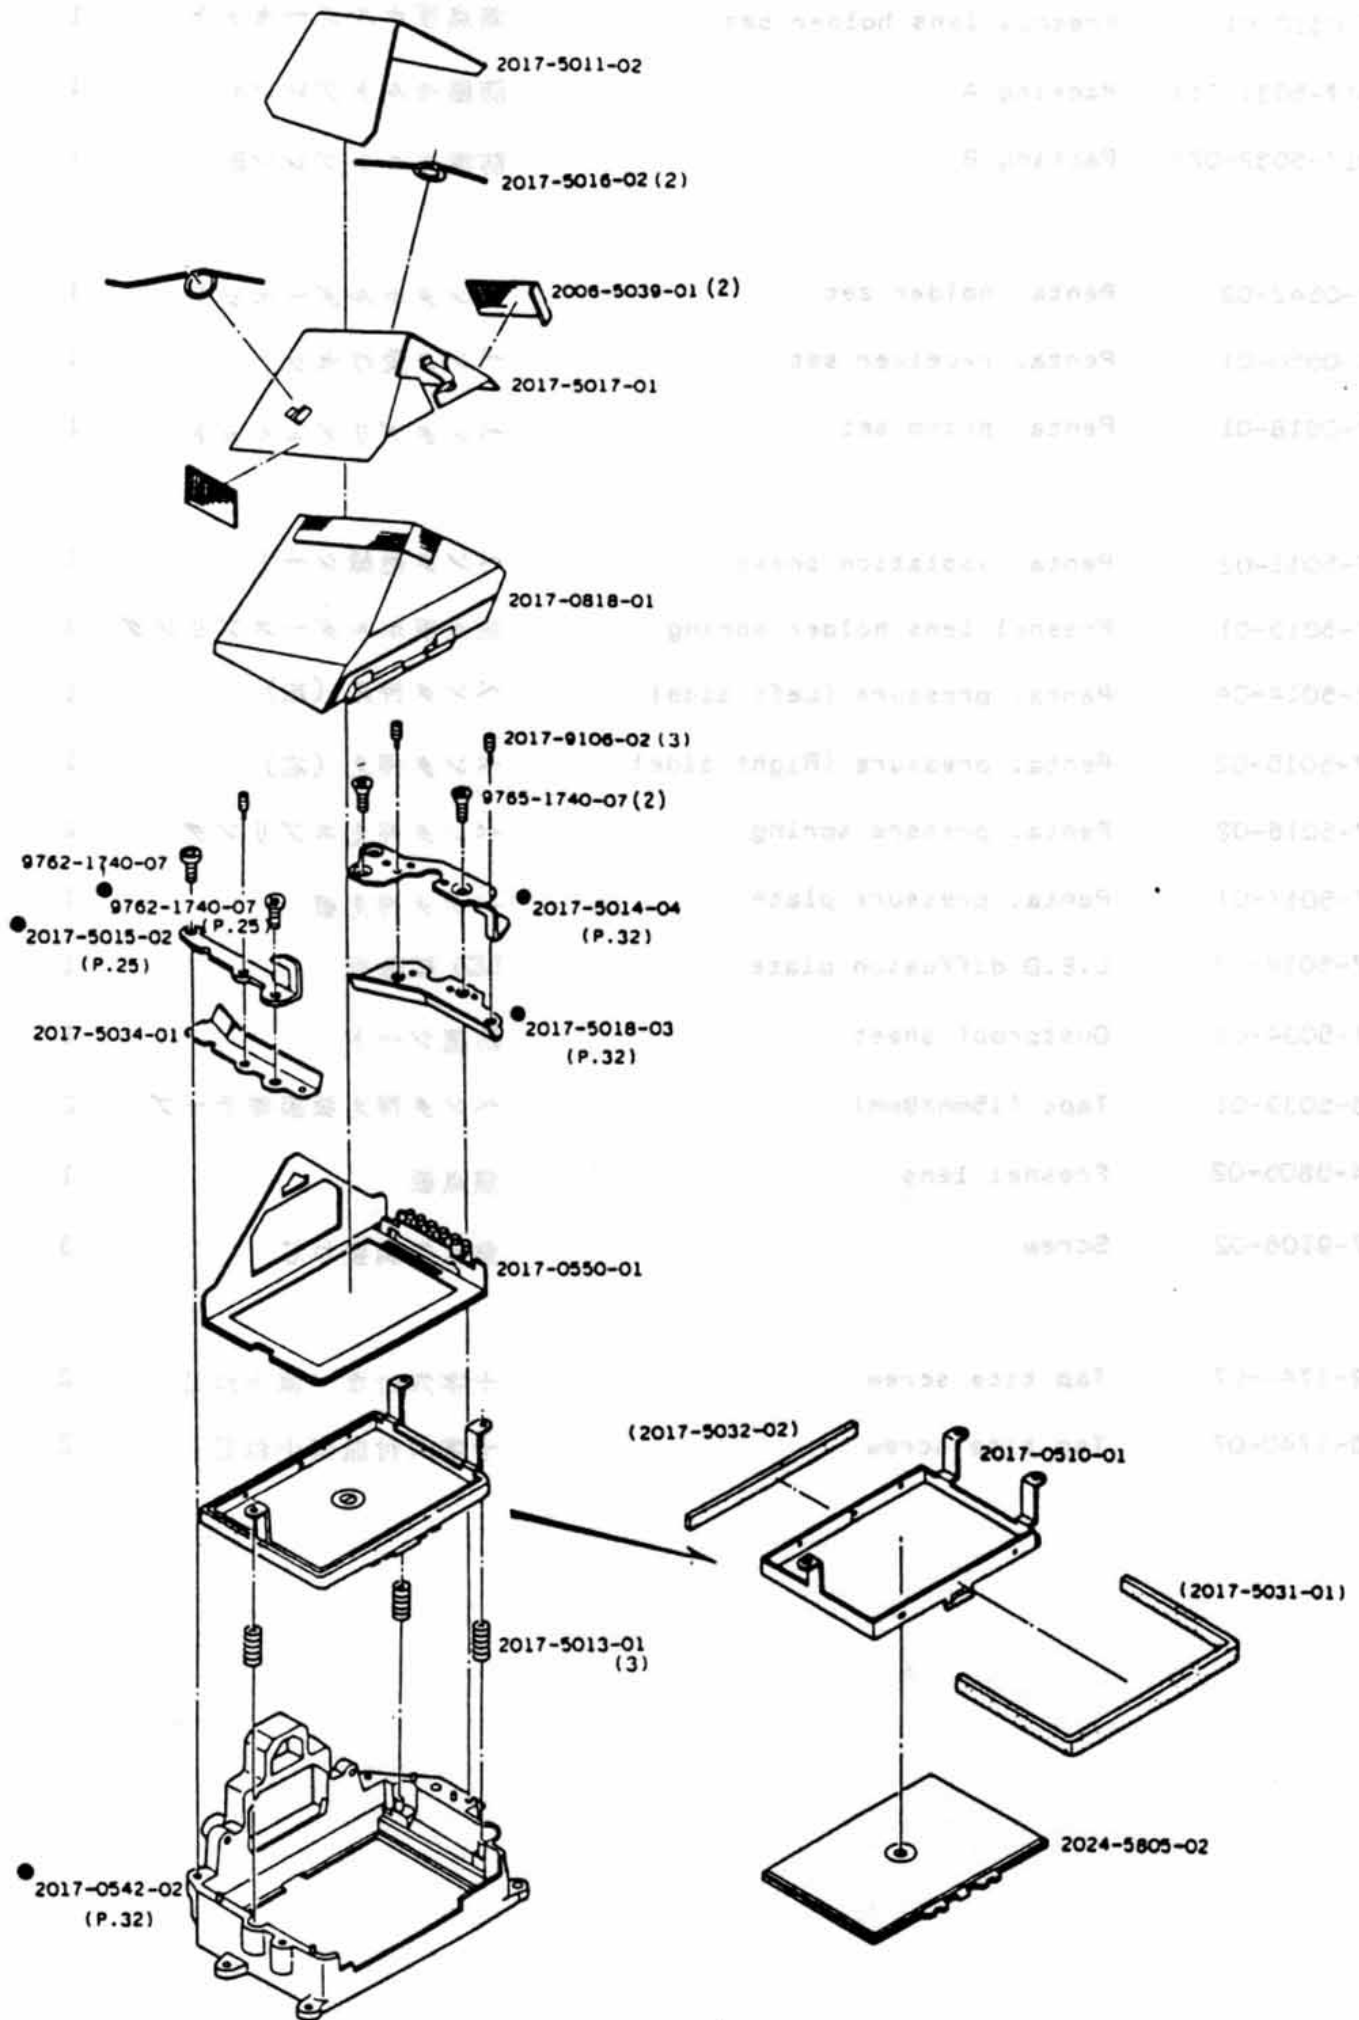



| Part No.       | Part Name                    |              | Qty |
|----------------|------------------------------|--------------|-----|
| 2017-0510-01   | Fresnel lens holder set      | 焦点板ホルダーセット   | 1   |
| (2017-5031-01) | Packing A                    | 防塵モルトブレンA    | 1   |
| (2017-5032-02) | Packing B                    | 防塵モルトブレンB    | 1   |
| 2017-0542-02   | Penta. holder set            | ペンタホルダーセット   | 1   |
| 2017-0550-01   | Penta. receiver set          | ペンタ受けセット     | 1   |
| 2017-0818-01   | Penta. prism set             | ペンタプリズムセット   | 1   |
| 2017-5011-02   | Penta. isolation sheet       | ペンタ絶縁シート     | 1   |
| 2017-5013-01   | Fresnel lens holder spring   | 焦点板ホルダースプリング | 3   |
| 2017-5014-04   | Penta. pressure (Left side)  | ペンタ押え (左)    | 1   |
| 2017-5015-02   | Penta. pressure (Right side) | ペンタ押え (右)    | 1   |
| 2017-5016-02   | Penta. pressre spring        | ペンタ押えスプリング   | 2   |
| 2017-5017-01   | Penta. pressure plate        | ペンタ押え板       | 1   |
| 2017-5018-03   | L.E.D diffusion plate        | LED 拡散板      | 1   |
| 2017-5034-01   | Dustproof sheet              | 防塵シート        | 1   |
| 2006-5039-01   | Tape (15mmX9mm)              | ペンタ押え板接着テープ  | 2   |
| 2024-5805-02   | Fresnel lens                 | 焦点板          | 1   |
| 2017-9106-02   | Screw                        | 焦点板調整ねじ      | 3   |
| 9762-1740-07   | Tap tite screw               | 十字穴付なべ頭小ねじ   | 2   |
| 9765-1740-07   | Tap tite screw               | 十字穴付皿頭小ねじ    | 2   |

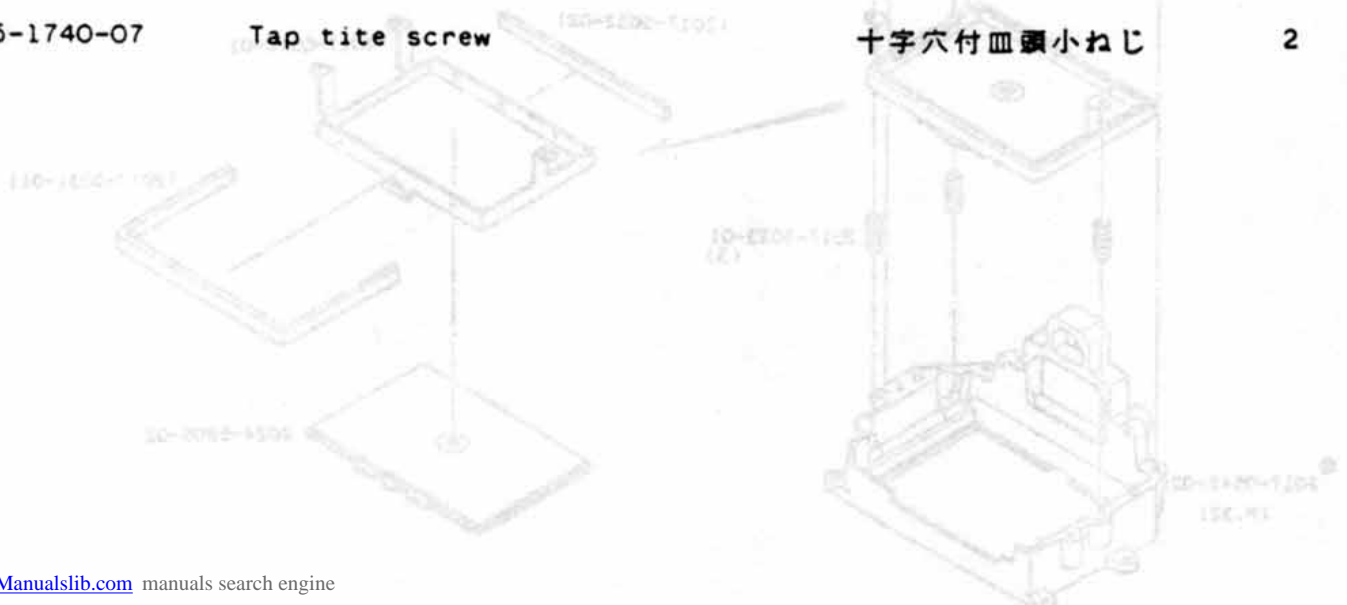


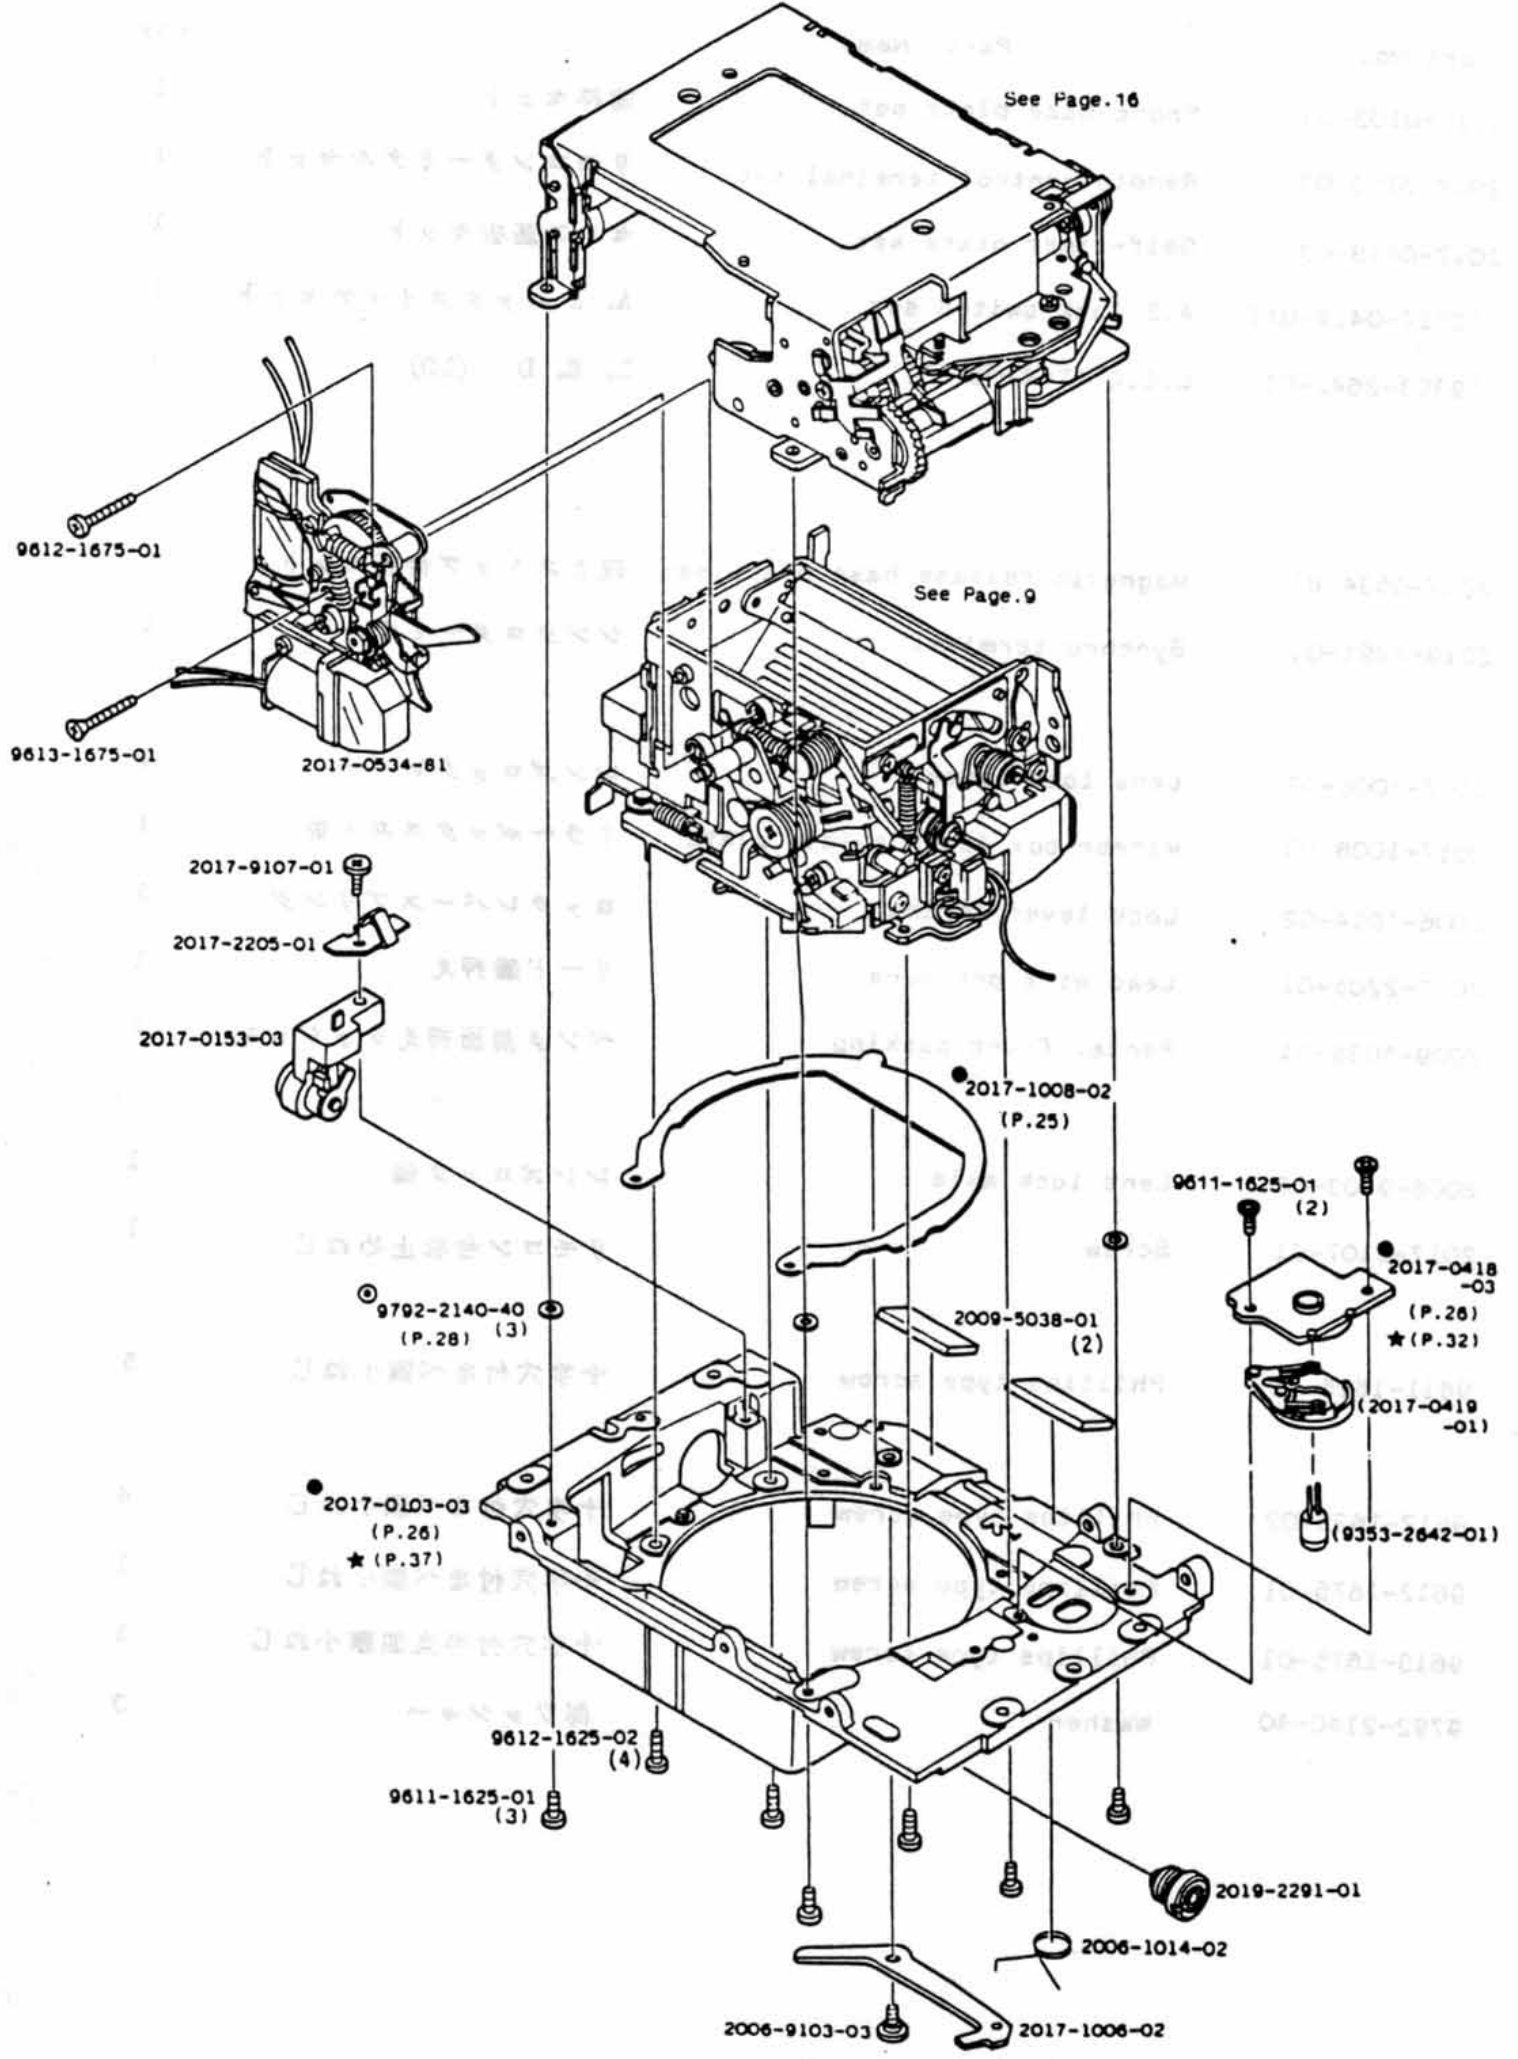

Concerning non AE lock model, refer to the page shown by ★.


| Part No.       | Part Name                       | Qty             |   |
|----------------|---------------------------------|-----------------|---|
| 2017-0103-03   | Front base plate set            | 前枠セット           | 1 |
| 2017-0153-03   | Remote control terminal set     | リモコンターミナルセット    | 1 |
| 2017-0418-03   | Self-timer plate set            | セルフ基板セット        | 1 |
| (2017-0419-01) | A.E lock switch set             | A. E ロックスイッチセット | 1 |
| (9353-2642-01) | L.E.D (TLR108:LD)               | L. E. D (LD)    | 1 |
| 2017-0534-81   | Magnetic release base plate set | 絞りストップ台板セット     | 1 |
| 2019-2291-01   | Synchro terminal                | シンクロターミナル       | 1 |
| 2017-1006-02   | Lens lock lever                 | レンズロックレバー       | 1 |
| 2017-1008-02   | Mirror box light shield plate   | ミラーボックス遮光板      | 1 |
| 2006-1014-02   | Lock lever spring               | ロックレバースプリング     | 1 |
| 2017-2205-01   | Lead wire pressure              | リード線押え          | 1 |
| 2009-5038-01   | Penta. front packing            | ペンタ前面押えクッション    | 2 |
| 2006-9103-03   | Lens lock axis                  | レンズロック軸         | 1 |
| 2017-9107-01   | Screw                           | リモコン台板止めねじ      | 1 |
| 9611-1625-01   | Phillips type screw             | 十字穴付なべ頭小ねじ      | 5 |
| 9612-1625-02   | Phillips type screw             | 十字穴付なべ頭小ねじ      | 4 |
| 9612-1675-01   | Phillips type screw             | 十字穴付なべ頭小ねじ      | 1 |
| 9613-1675-01   | Phillips type screw             | 十字穴付半丸皿頭小ねじ     | 1 |
| 9792-2140-40   | Washer                          | 薄ワッシャー          | 3 |



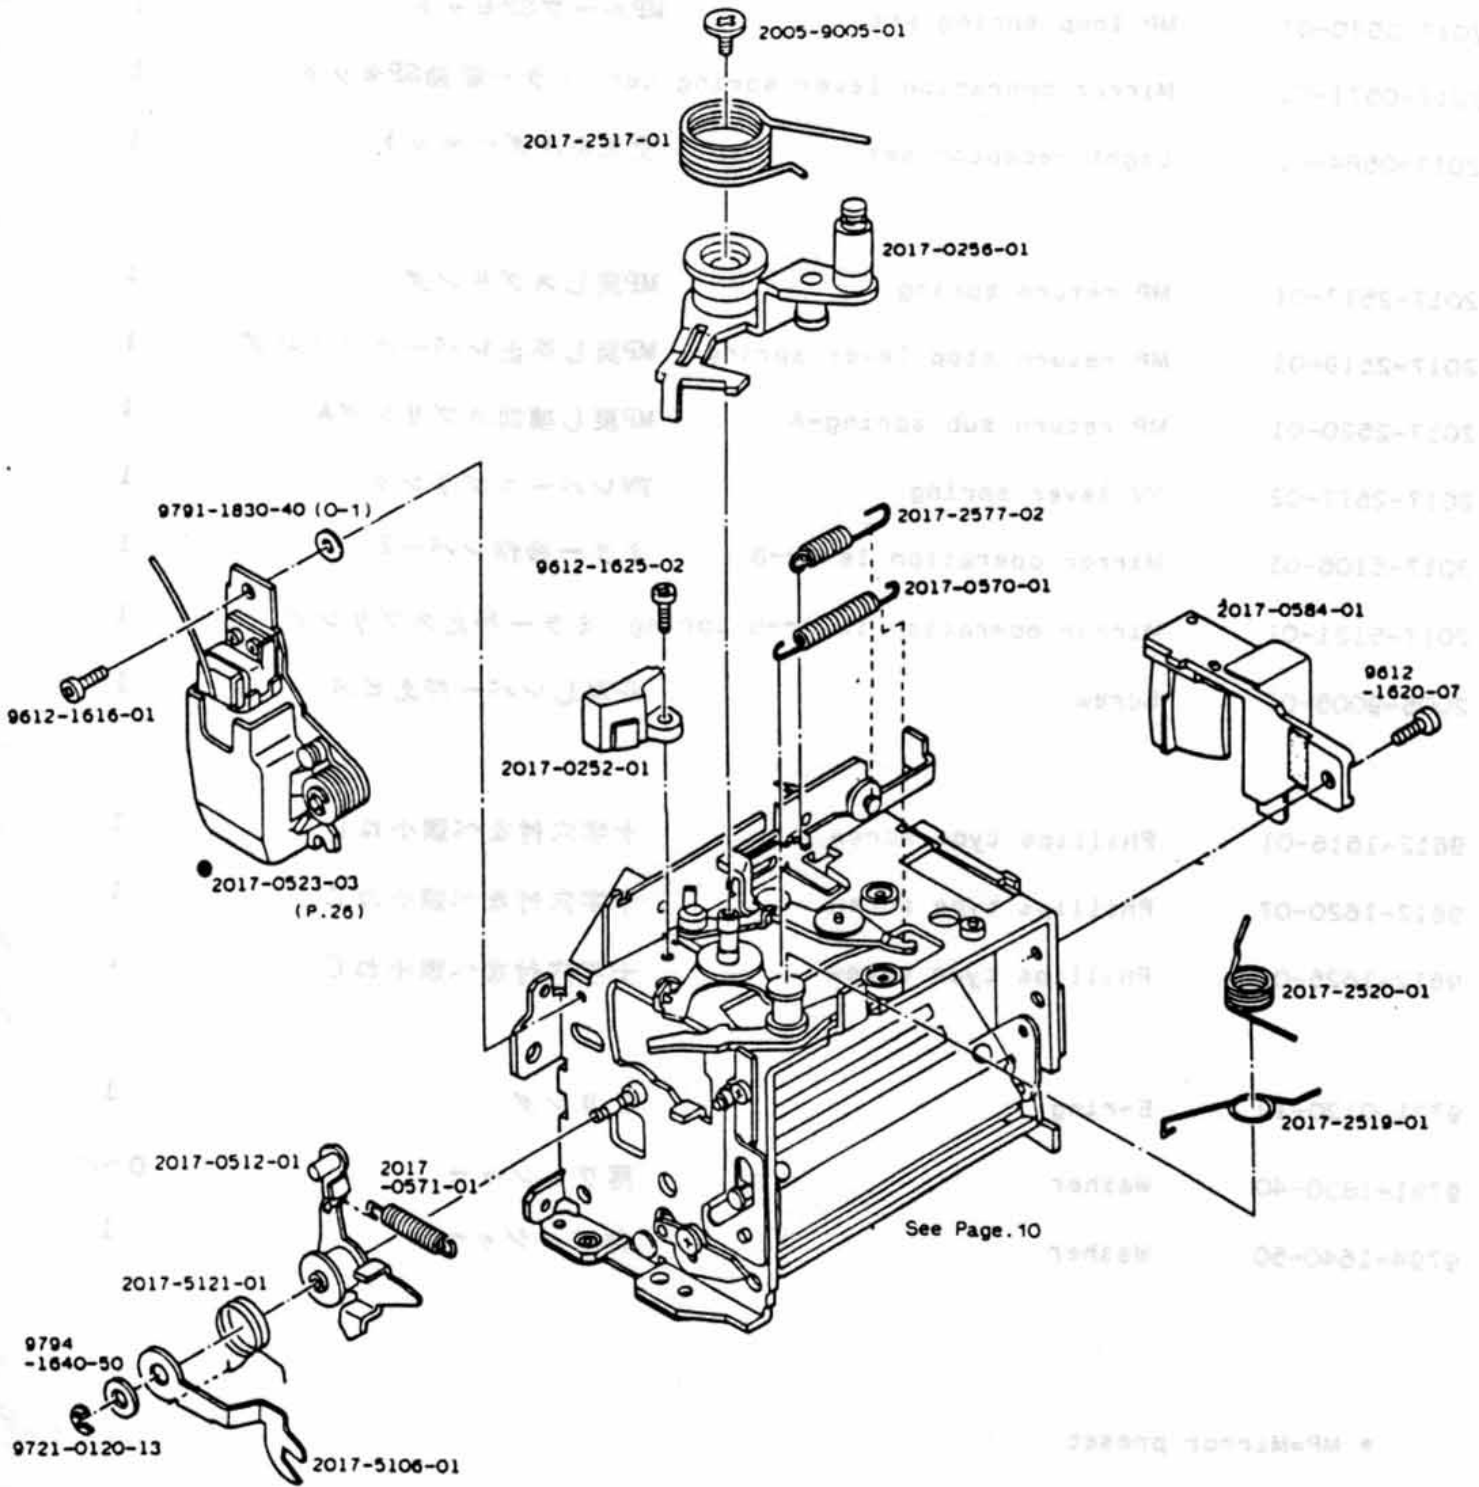


| Part No.     | Part Name                         | MP             | Qty |
|--------------|-----------------------------------|----------------|-----|
| 2017-0252-01 | MP return stopper set             | MP戻しストッパーセット   | 1   |
| 2017-0256-01 | MP return lever set               | MP戻しレバーセット     | 1   |
| 2017-0512-01 | Mirror operation lever set        | ミラー駆動レバーセット    | 1   |
| 2017-0523-03 | Mirror magnet set                 | ミラーマグネットセット    | 1   |
| 2017-0570-01 | MP loop spring set                | MPループSPセット     | 1   |
| 2017-0571-01 | Mirror operation lever spring set | ミラー駆動SPセット     | 1   |
| 2017-0584-01 | Light receptor set                | 受光ホルダーセット      | 1   |
| 2017-2517-01 | MP return spring                  | MP戻しスプリング      | 1   |
| 2017-2519-01 | MP return stop lever spring       | MP戻し係止レバースプリング | 1   |
| 2017-2520-01 | MP return sub spring-A            | MP戻し補助スプリングA   | 1   |
| 2017-2577-02 | PV lever spring                   | PVレバースプリング     | 1   |
| 2017-5106-01 | Mirror operation lever-B          | ミラー操作レバー-B     | 1   |
| 2017-5121-01 | Mirror operation lever-B spring   | ミラー押えスプリング     | 1   |
| 2005-9005-01 | Screw                             | MP戻しレバー押えビス    | 1   |
| 9612-1616-01 | Phillips type screw               | 十字穴付なべ頭小ねじ     | 1   |
| 9612-1620-07 | Phillips type screw               | 十字穴付なべ頭小ねじ     | 1   |
| 9612-1625-02 | Phillips type screw               | 十字穴付なべ頭小ねじ     | 1   |
| 9721-0120-13 | E-ring                            | Eリング           | 1   |
| 9791-1830-40 | Washer                            | 薄ワッシャー         | 0~1 |
| 9794-1640-50 | Washer                            | 薄ワッシャー         | 1   |

\* MP=Mirror preset

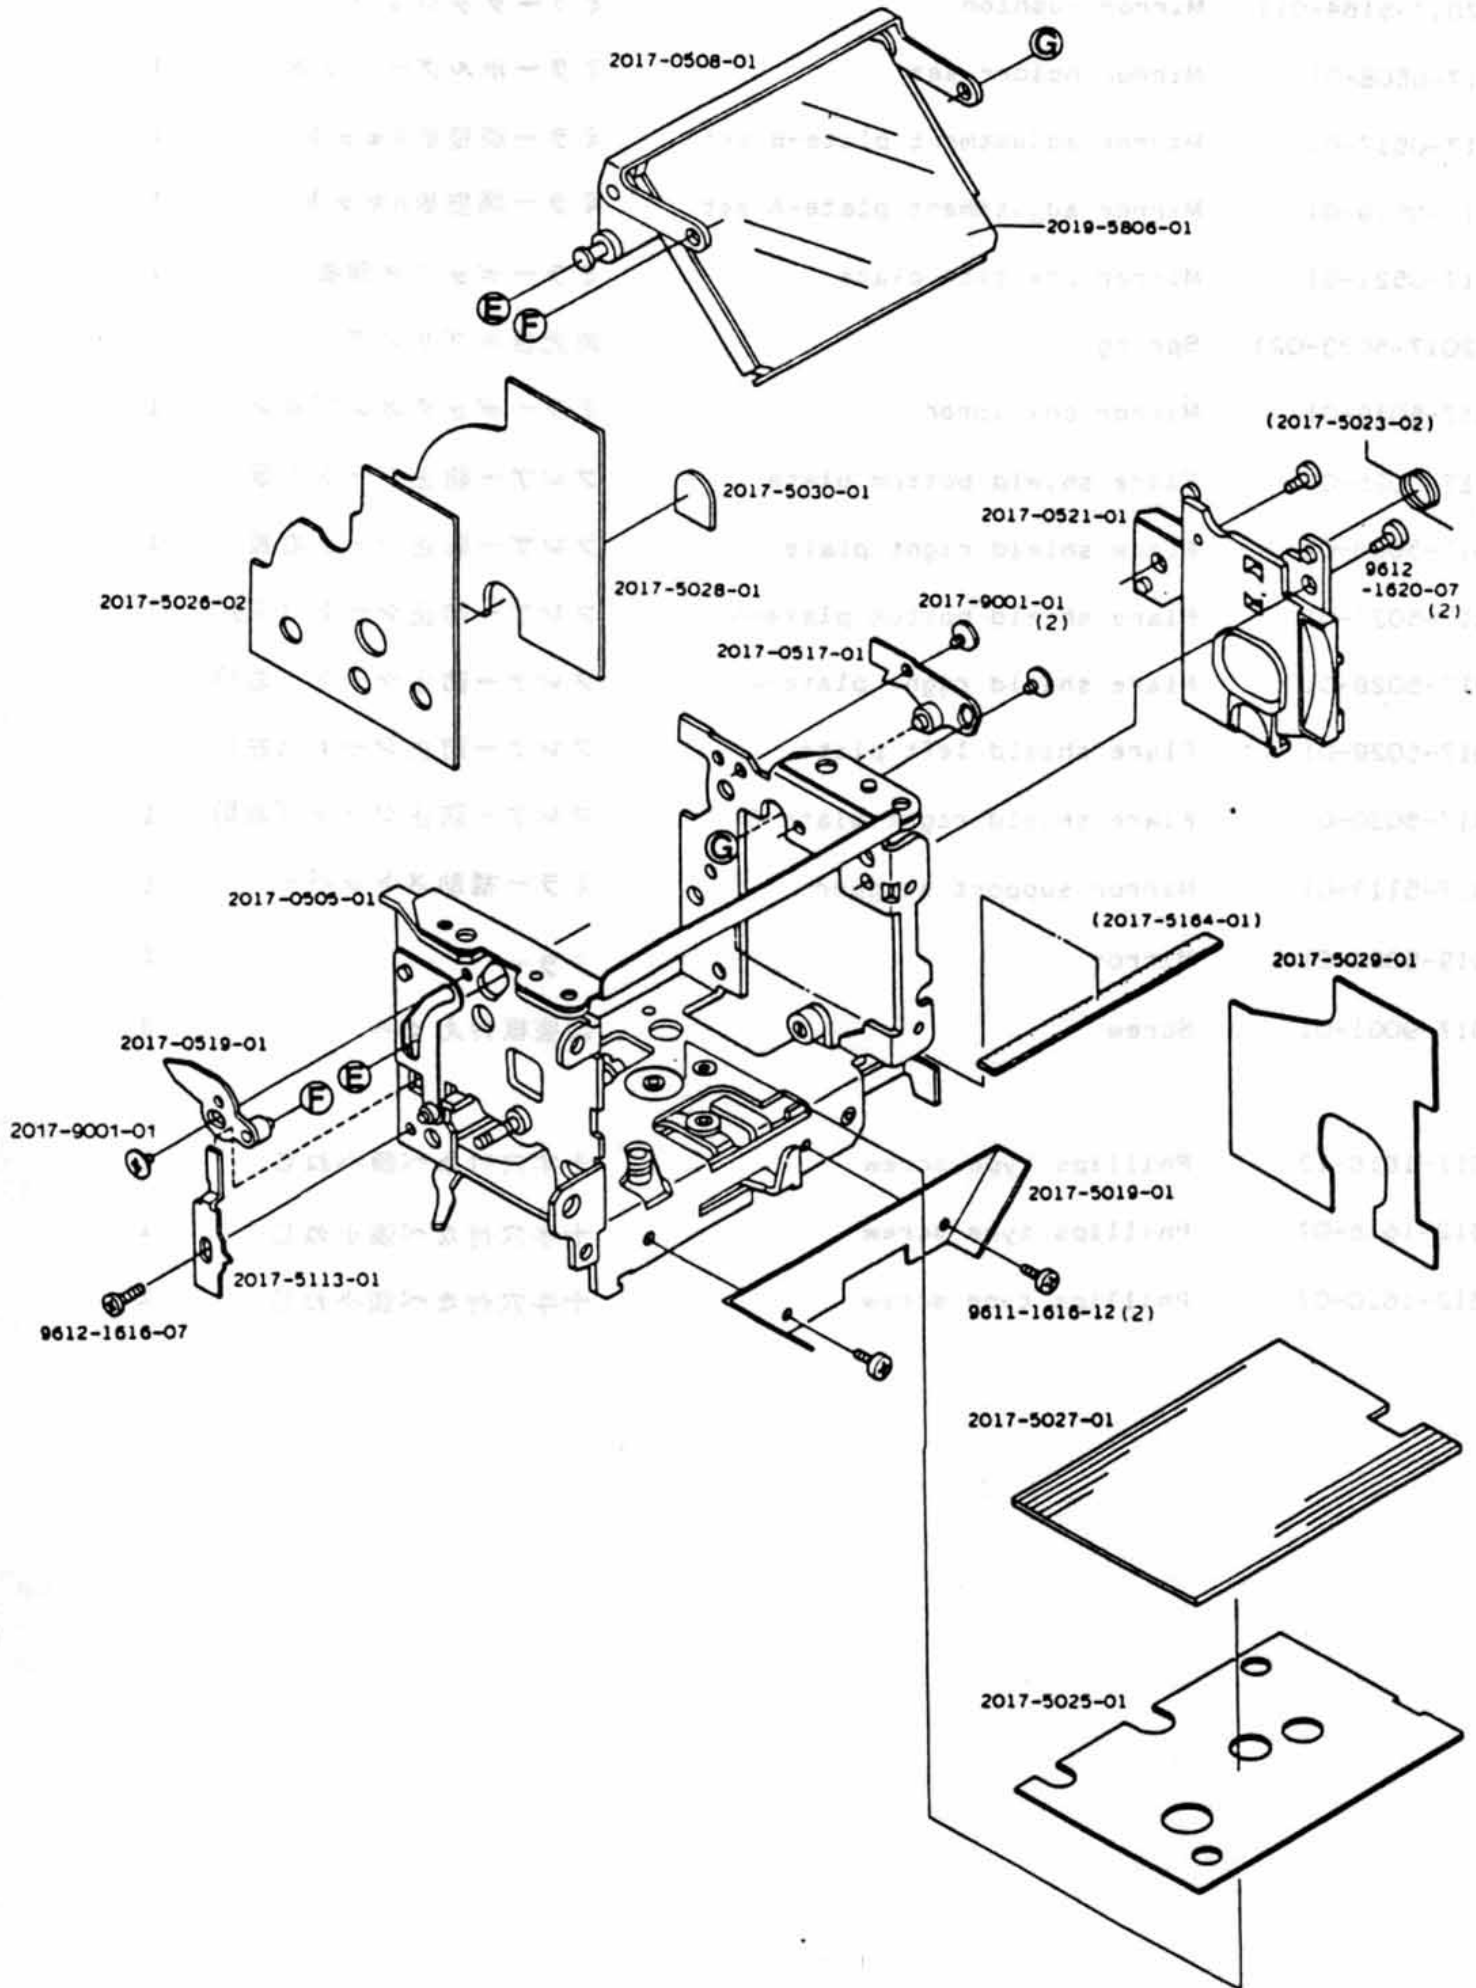




| Part No.       | Part Name                     |                | Qty |
|----------------|-------------------------------|----------------|-----|
| 2017-0505-01   | Mirror box set                | ミラーボックスセット     | 1   |
| (2017-5164-01) | Mirror cushion                | ミラークッション       | 1   |
| 2017-0508-01   | Mirror holder set             | ミラーホルダーセット     | 1   |
| 2017-0517-01   | Mirror adjustment plate-B set | ミラー調整板Bセット     | 1   |
| 2017-0519-01   | Mirror adjustment plate-A set | ミラー調整板Aセット     | 1   |
| 2017-0521-01   | Mirror box side plate         | ミラーボックス側板      | 1   |
| (2017-5023-02) | Spring                        | 遮光板スプリング       | 1   |
| 2017-5019-01   | Mirror box apron              | ミラーボックスエプロン    | 1   |
| 2017-5025-01   | Flare shield bottom plate     | フレアー防止シート下板    | 1   |
| 2017-5026-02   | Flare shield right plate      | フレアー防止シート右板    | 1   |
| 2017-5027-01   | Flare shield bottom plate-A   | フレアー防止シート (下)  | 1   |
| 2017-5028-01   | Flare shield right plate-A    | フレアー防止シート (右A) | 1   |
| 2017-5029-01   | Flare shield left plate       | フレアー防止シート (左)  | 1   |
| 2017-5030-01   | Flare shield right plate-B    | フレアー防止シート (右B) | 1   |
| 2017-5113-01   | Mirror support stopper        | ミラー補助ストッパー     | 1   |
| 2019-5806-01   | Mirror                        | ミラー            | 1   |
| 2017-9001-01   | Screw                         | 調整板押えビス        | 3   |
| 9611-1616-12   | Phillips type screw           | 十字穴付なべ頭小ねじ     | 2   |
| 9612-1616-07   | Phillips type screw           | 十字穴付なべ頭小ねじ     | 1   |
| 9612-1620-07   | Phillips type screw           | 十字穴付なべ頭小ねじ     | 2   |

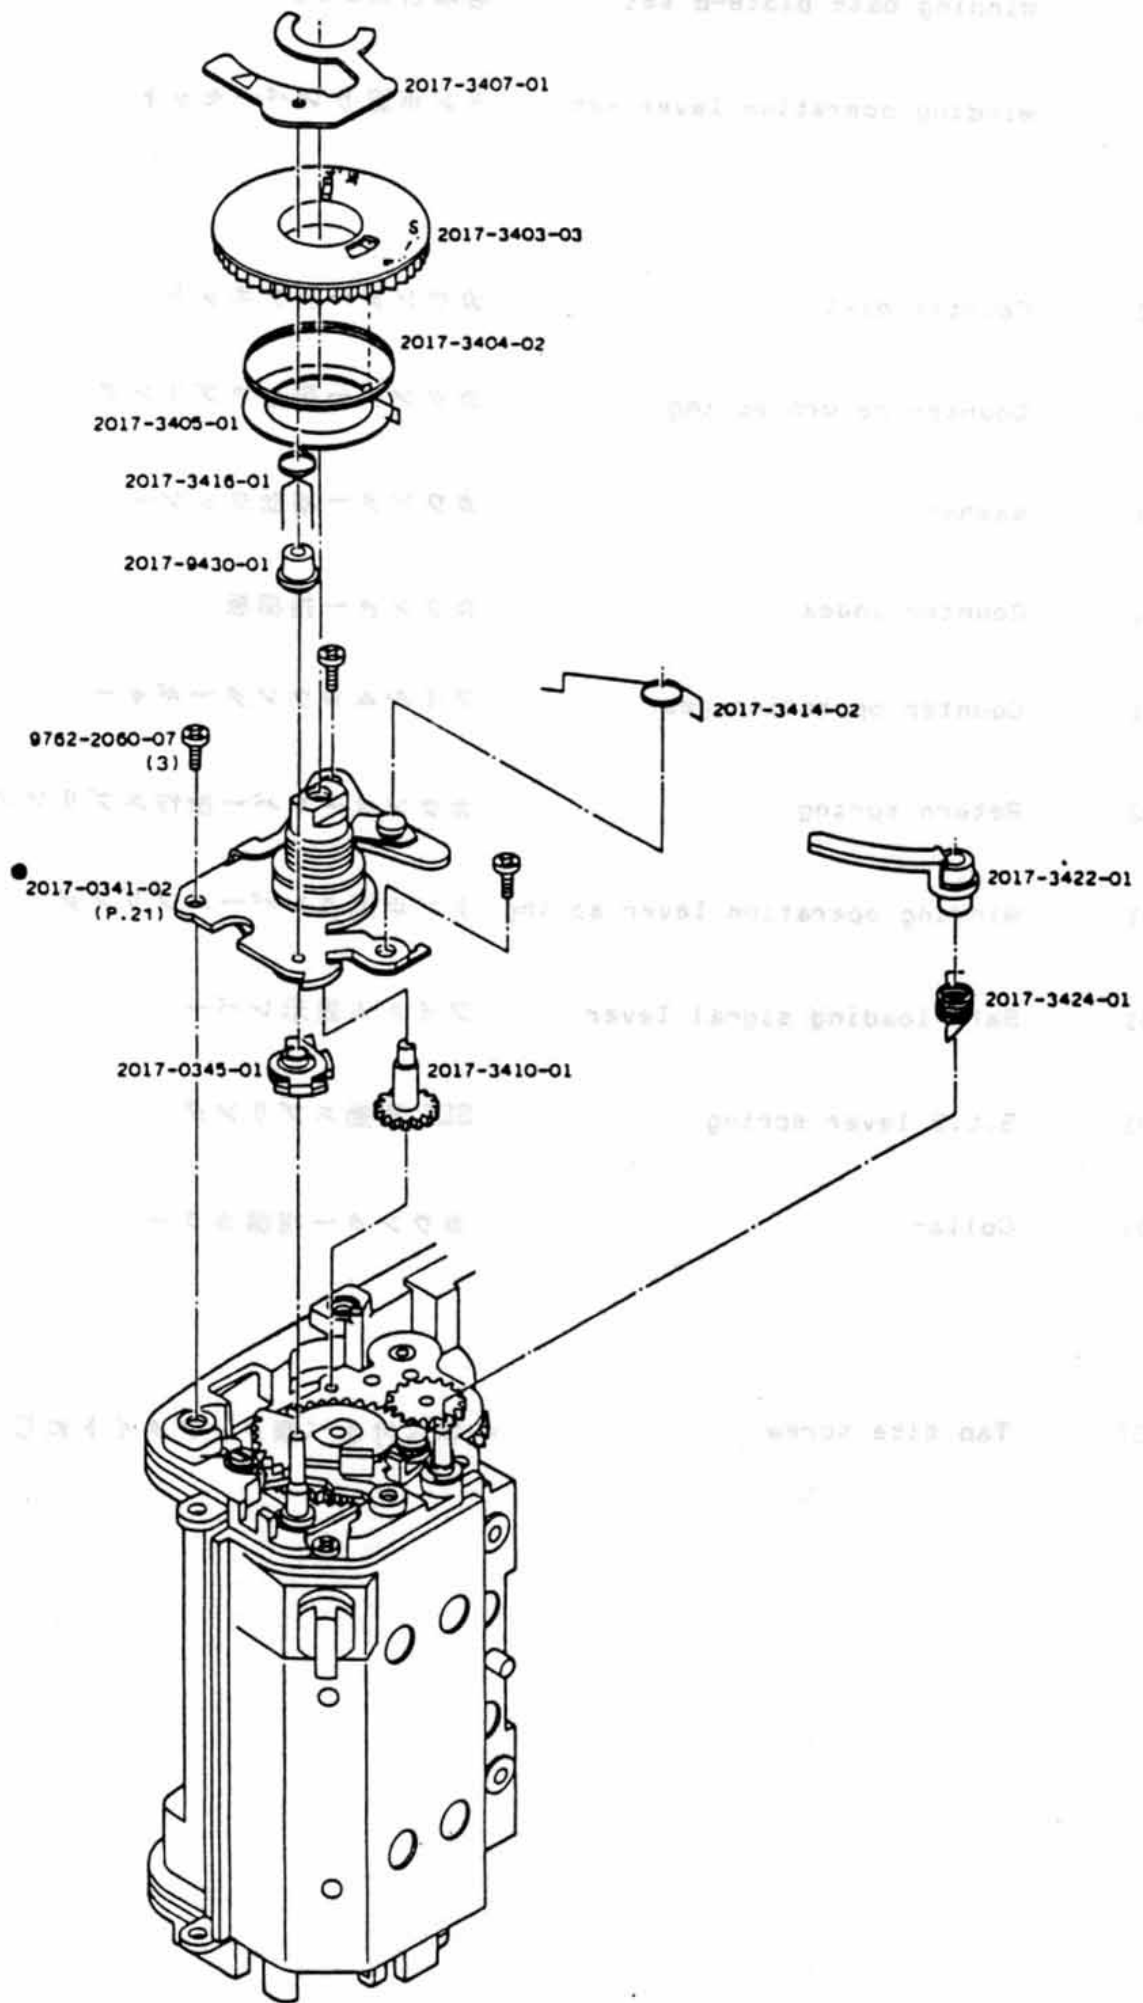


| Part No.     | Part Name                                       | Qty |
|--------------|-------------------------------------------------|-----|
| 2017-0341-02 | Winding base plate-B set<br>巻取台板Bセット            | 1   |
| 2017-0345-01 | Winding operation lever set<br>トンボ返りレバーセット      | 1   |
| 2017-3403-03 | Counter dial<br>カウンターラチエット                      | 1   |
| 2017-3404-02 | Counter return spring<br>カウンター戻しスプリング           | 1   |
| 2017-3405-01 | Washer<br>カウンター補助ワッシャー                          | 1   |
| 2017-3407-01 | Counter index<br>カウンター指標板                       | 1   |
| 2017-3410-01 | Counter operation gear<br>フィルムカウンターギヤー          | 1   |
| 2017-3414-02 | Return spring<br>カウンターレバー操作スプリング                | 1   |
| 2017-3416-01 | Winding operation lever spring<br>トンボ返りレバーズプリング | 1   |
| 2017-3422-01 | Safe loading signal lever<br>フィルム表示レバー          | 1   |
| 2017-3424-01 | S.L.S lever spring<br>SLS 駆動スプリング               | 1   |
| 2017-9430-01 | Collar<br>カウンター指標カラー                            | 1   |
| 9762-2060-07 | Tap tite screw<br>十字穴付なべ頭タップタイトねじ               | 3   |





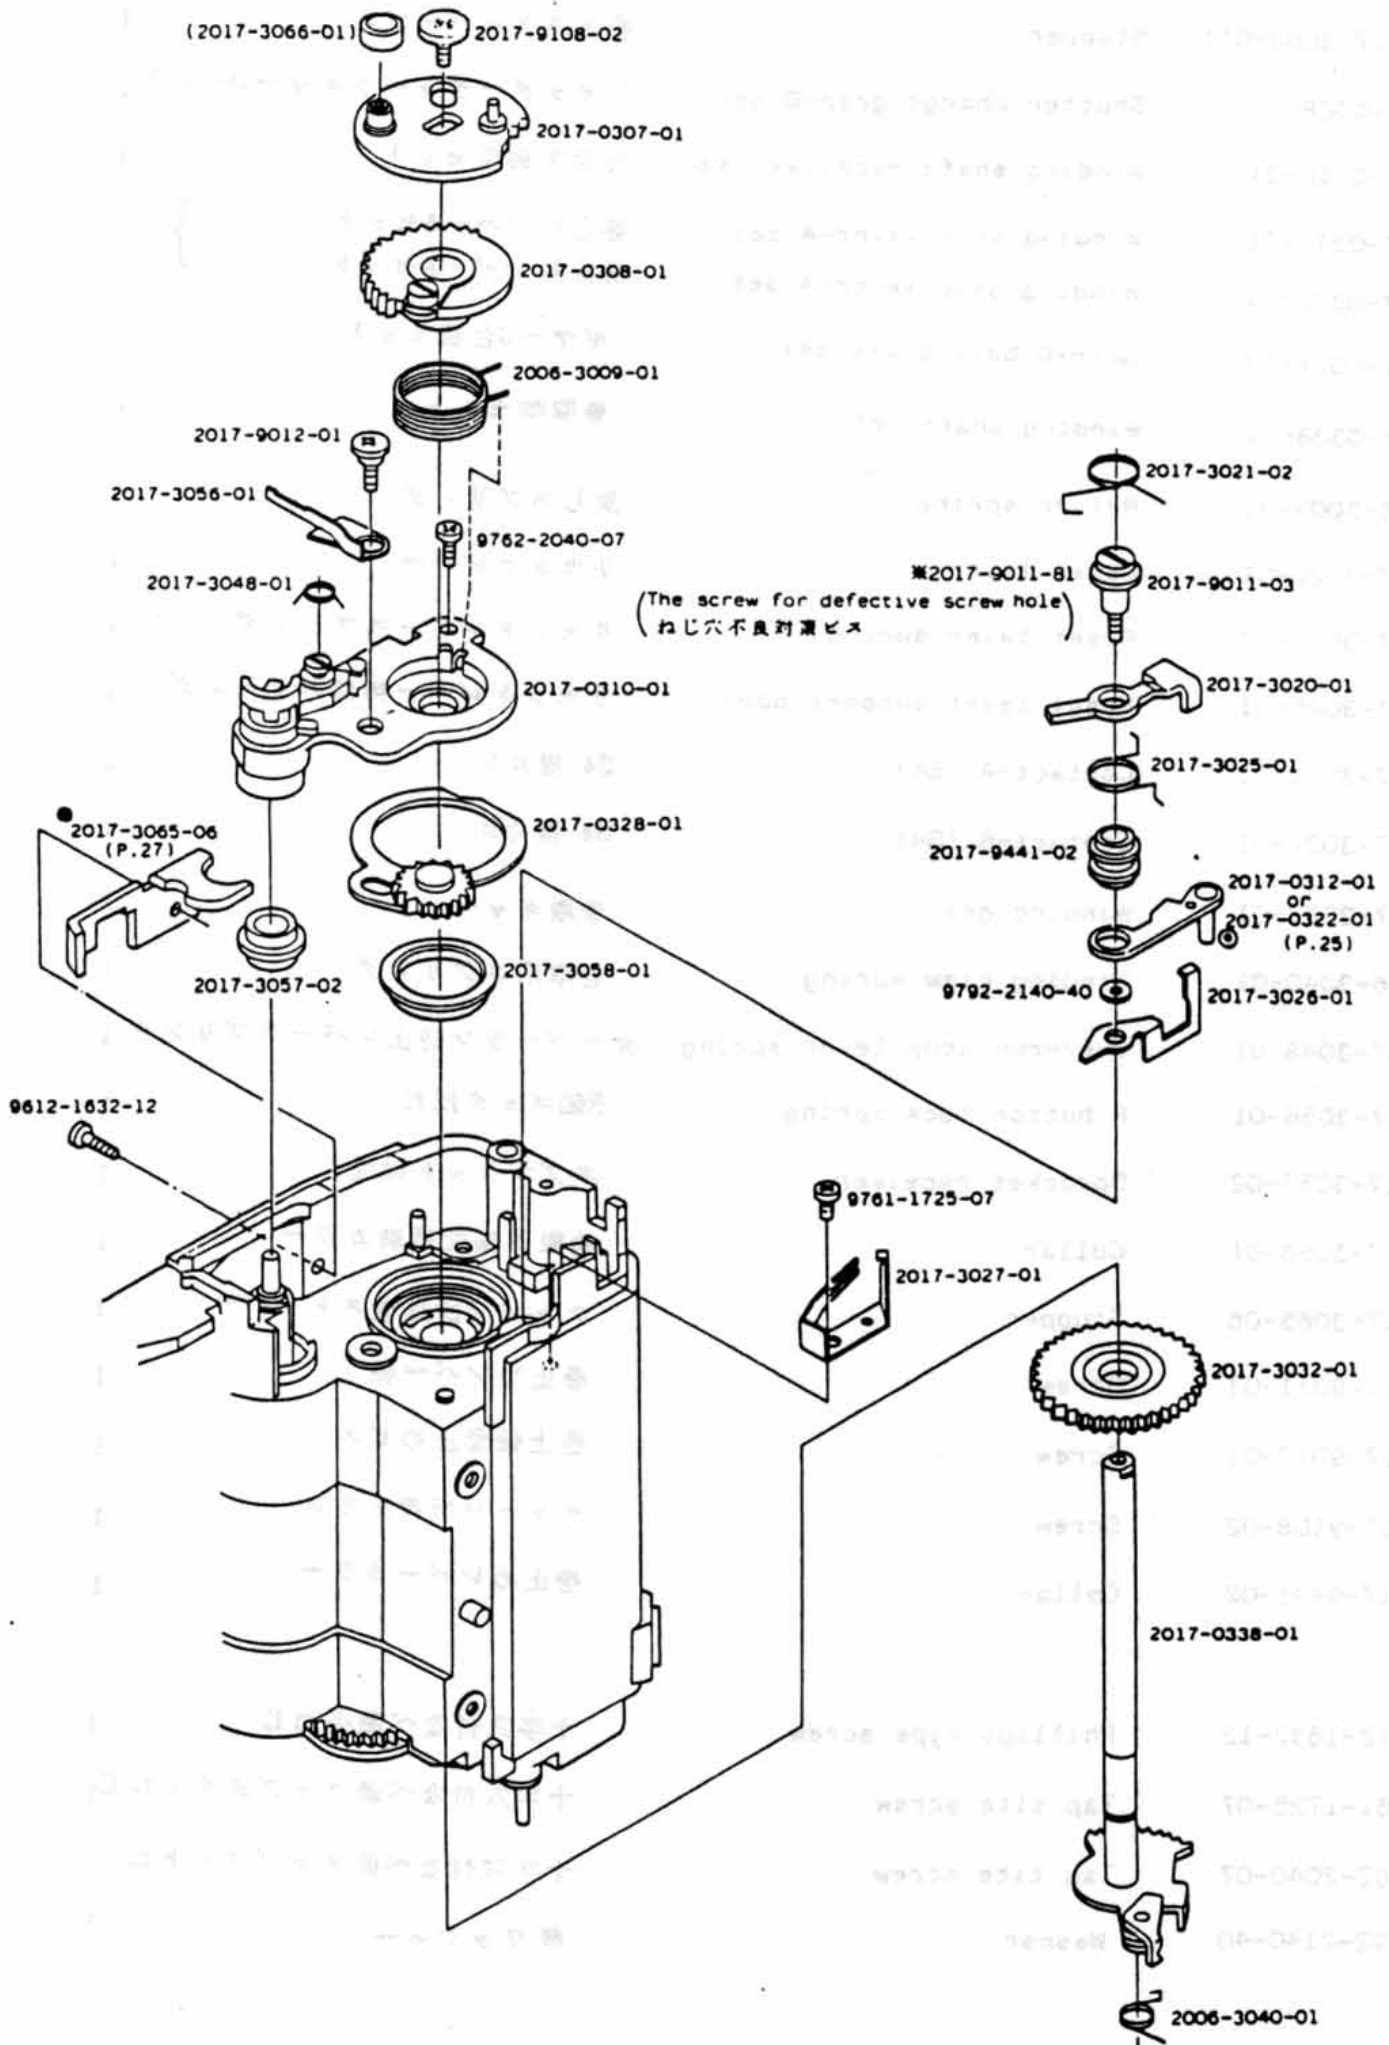


| Part No.       | Part Name                  |                  | Qty |
|----------------|----------------------------|------------------|-----|
| 2017-0307-01   | Charge operation plate set | チャージ操作板セット       | 1   |
| (2017-3066-01) | Stopper                    | 巻上ストッパーゴム        | 1   |
| 2017-0308-01   | Shutter charge gear-D set  | シャッターチャージギヤ-Dセット | 1   |
| 2017-0310-01   | Winding shaft receiver set | 巻取下軸受セット         | 1   |
| 2017-0312-01   | Winding stop lever-A set   | 巻止めレバーAセット       | } 1 |
| 2017-0322-01   | Winding stop lever-A set   | 巻止めレバーAセット       |     |
| 2017-0328-01   | Gear-C base plate set      | ギヤ-C台板セット        | 1   |
| 2017-0338-01   | Winding shaft set          | 巻取軸セット           | 1   |
| 2006-3009-01   | Return spring              | 戻しスプリング          | 1   |
| 2017-3020-01   | Reset lever                | リセットレバー          | 1   |
| 2017-3021-02   | Reset lever spring         | リセットレバースプリング     | 1   |
| 2017-3025-01   | Reset lever support spring | リセットレバー補助スプリング   | 1   |
| 2017-3026-01   | Contact-A (S4)             | S4 接片A           | 1   |
| 2017-3027-01   | Contact-B (S4)             | S4 接片B           | 1   |
| 2017-3032-01   | Winding gear               | 巻取ギヤ             | 1   |
| 2006-3040-01   | Winding claw spring        | 巻取爪スプリング         | 1   |
| 2017-3048-01   | Over-run stop lever spring | オーバーラン防止レバースプリング | 1   |
| 2017-3056-01   | R button lock spring       | R釦ロックばね          | 1   |
| 2017-3057-02   | Sprocket receiver          | スプロケット軸受         | 1   |
| 2017-3058-01   | Collar                     | 巻取下軸受補助カラー       | 1   |
| 2017-3065-06   | Stopper                    | チャージ操作板ストッパー     | 1   |
| 2017-9011-03   | Screw                      | 巻止めレバー軸          | 1   |
| 2017-9012-01   | Screw                      | 巻上軸受止めビス         | 1   |
| 2017-9108-02   | Screw                      | チャージ板押えビス        | 1   |
| 2017-9441-02   | Collar                     | 巻止めレバーカラー        | 1   |
| 9612-1632-12   | Phillips type screw        | 十字穴付なべ頭小ねじ       | 1   |
| 9761-1725-07   | Tap tite screw             | 十字穴付なべ頭タップタイトねじ  | 1   |
| 9762-2040-07   | Tap tite screw             | 十字穴付なべ頭タップタイトねじ  | 1   |
| 9792-2140-40   | Washer                     | 薄ワッシャー           | 1   |

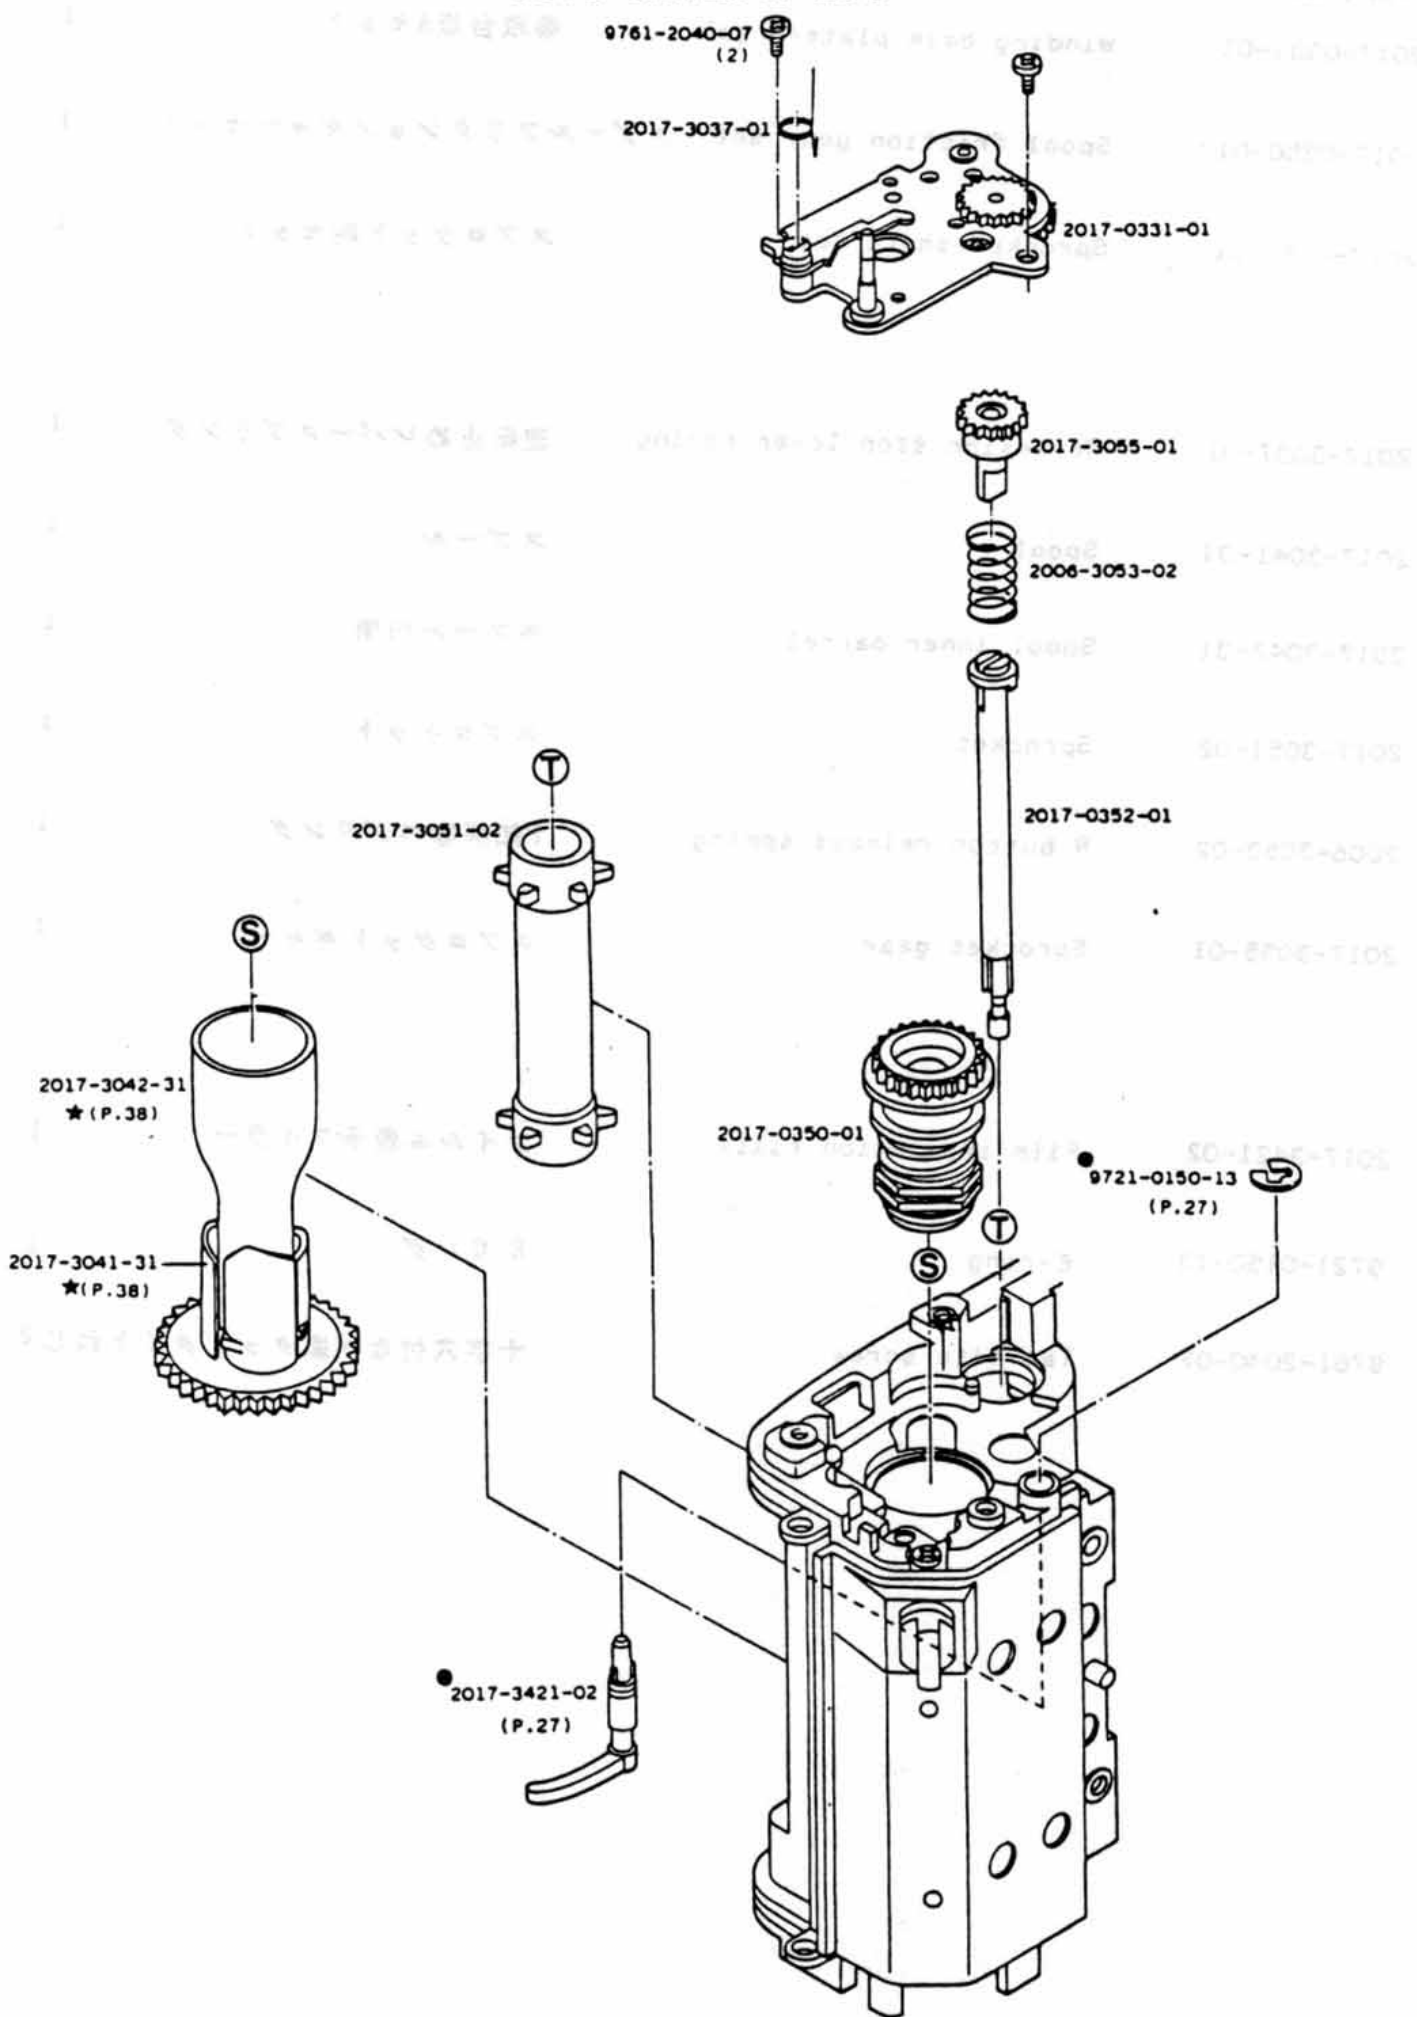


Concerning non AE lock model, refer to the page shown by ★.




| Part No.     | Part Name                                | Qty |
|--------------|------------------------------------------|-----|
| 2017-0331-01 | Winding base plate-A set 巻取台板Aセット        | 1   |
| 2017-0350-01 | Spool friction gear set スプールフリクションギヤーセット | 1   |
| 2017-0352-01 | Sprocket shaft set スプロケット軸セット            | 1   |
| 2017-3037-01 | Reversion stop lever spring 逆転止めレバースプリング | 1   |
| 2017-3041-31 | Spool スプール                               | 1   |
| 2017-3042-31 | Spool inner barrel スプール内筒                | 1   |
| 2017-3051-02 | Sprocket スプロケット                          | 1   |
| 2006-3053-02 | R button release spring R釦解除スプリング        | 1   |
| 2017-3055-01 | Sprocket gear スプロケットギヤー                  | 1   |
| 2017-3421-02 | Film indication filler フィルム表示ファイラー       | 1   |
| 9721-0150-13 | E-ring Eリング                              | 1   |
| 9761-2040-07 | Tap tite screw 十字穴付なべ頭タップタイトねじ2          |     |

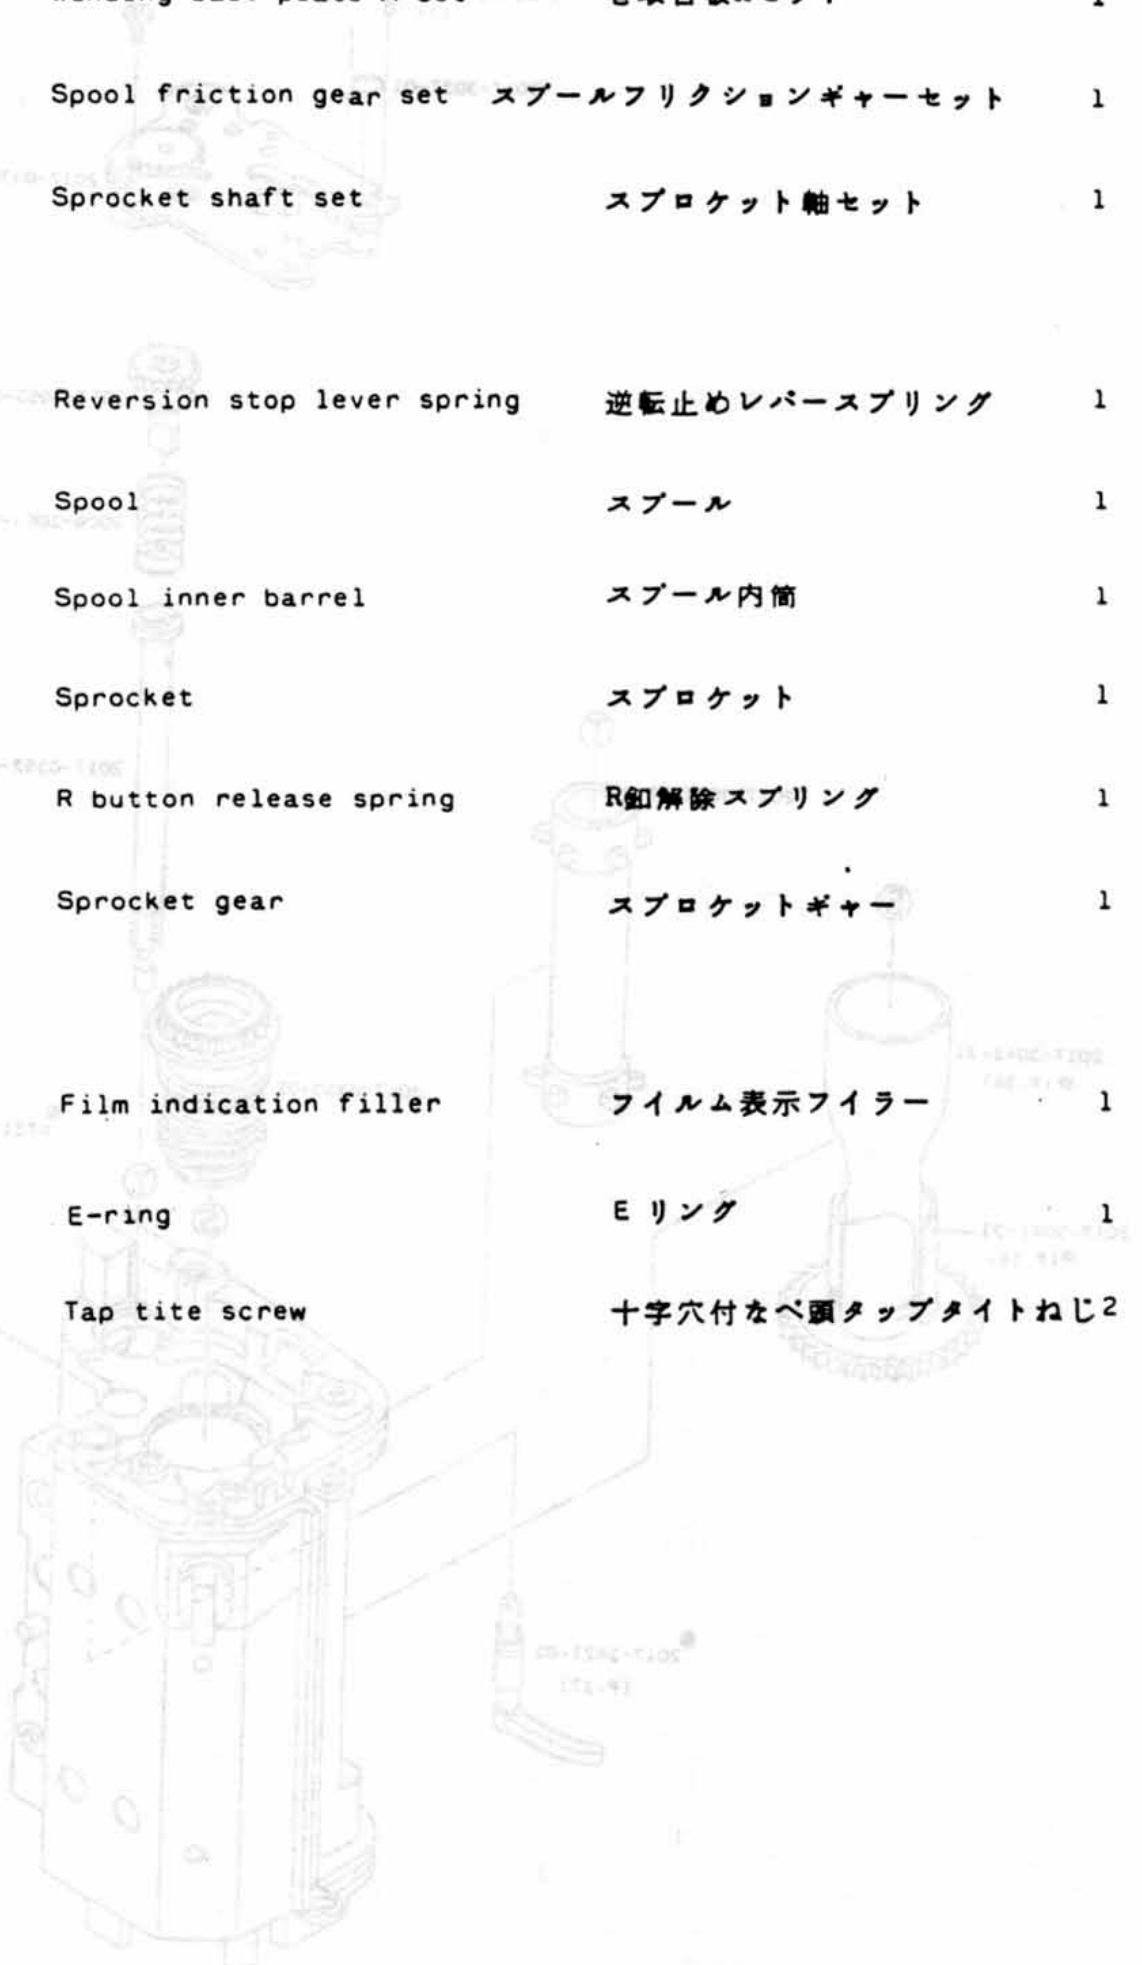

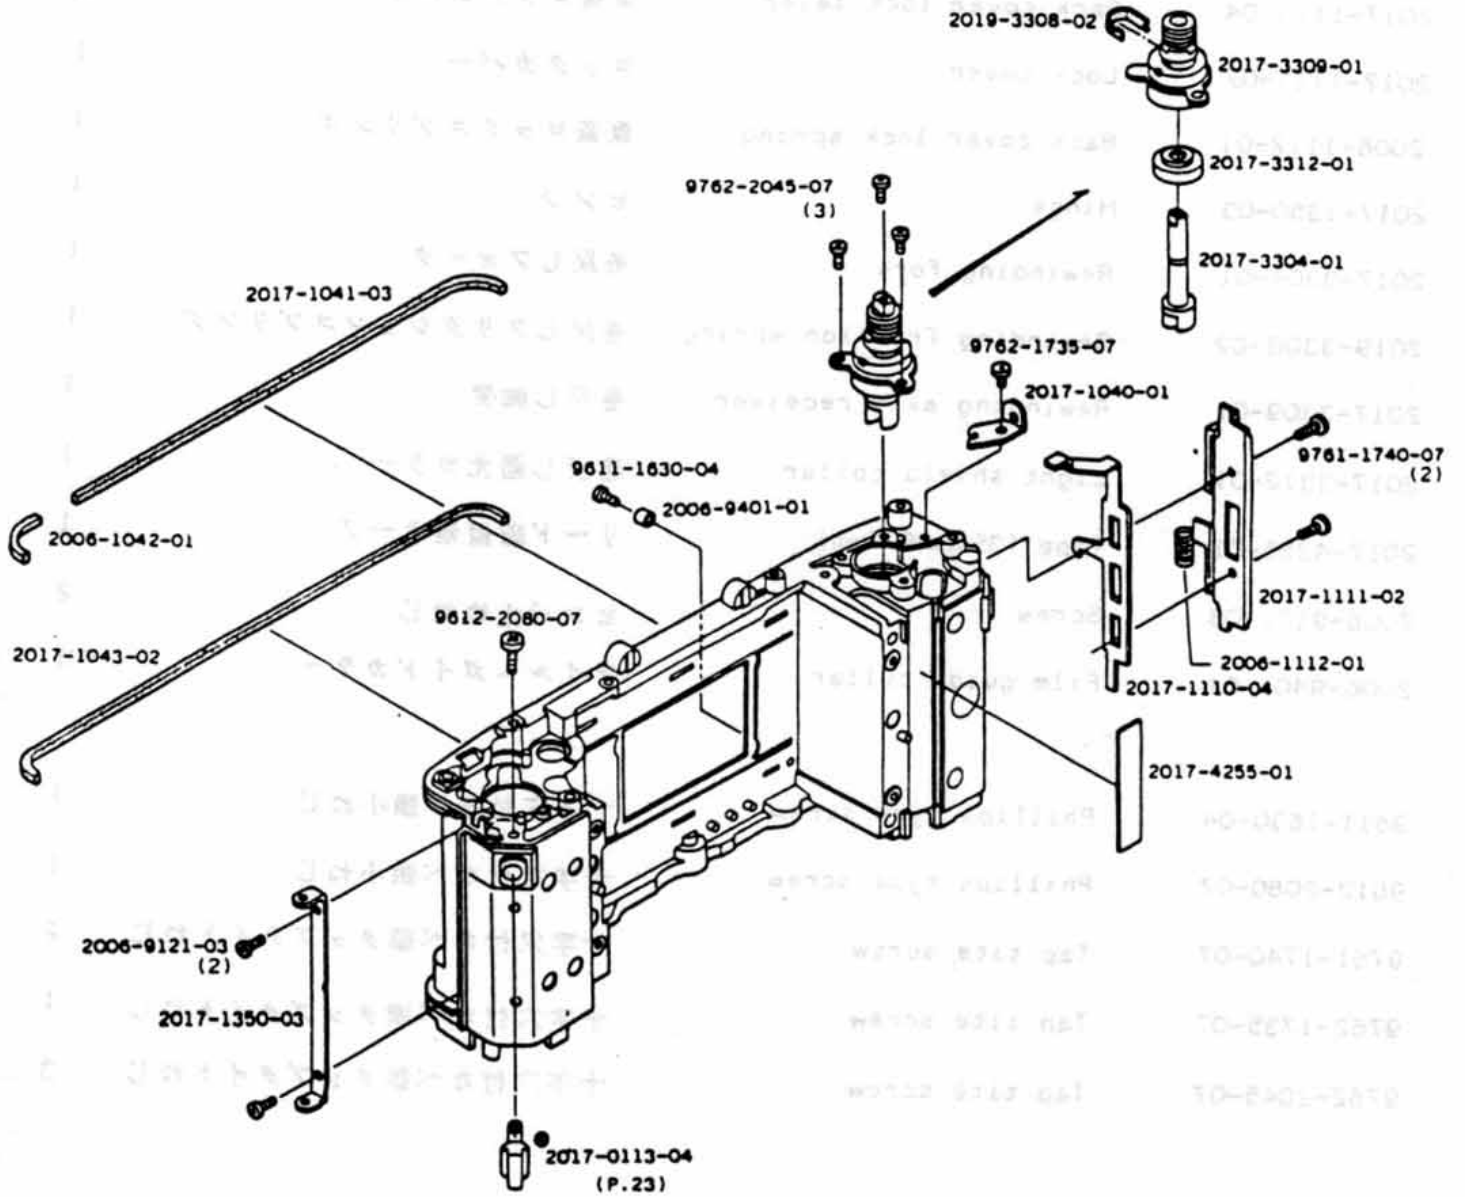

| Part No.     | Part Name                 |                 | Qty |
|--------------|---------------------------|-----------------|-----|
| 2017-0113-04 | Strap hanger set          | 吊環セット           | 1   |
| 2017-1040-01 | Top cover set plate       | 上カバー止め板         | 1   |
| 2017-1041-03 | Light shield packing-A    | 遮光パッキンA         | 1   |
| 2006-1042-01 | Light shield packing-B    | 遮光パッキンB         | 1   |
| 2017-1043-02 | Light shield packing-C    | 遮光パッキンC         | 1   |
| 2017-1110-04 | Back cover lock lever     | 裏蓋ロックレバー        | 1   |
| 2017-1111-02 | Lock cover                | ロックカバー          | 1   |
| 2006-1112-01 | Back cover lock spring    | 裏蓋ロックスプリング      | 1   |
| 2017-1350-03 | Hinge                     | ヒンジ             | 1   |
| 2017-3304-01 | Rewinding fork            | 巻戻しフォーク         | 1   |
| 2019-3308-02 | Rewinding friction spring | 巻戻しフリクションスプリング  | 1   |
| 2017-3309-01 | Rewinding axis receiver   | 巻戻し軸受           | 1   |
| 2017-3312-01 | Light shield collar       | 巻戻し遮光カラー        | 1   |
| 2017-4255-01 | Tape (35mmX6.7mm)         | リード線接着テープ       | 1   |
| 2006-9121-03 | Screw                     | ヒンジ止めねじ         | 2   |
| 2006-9401-01 | Film guide collar         | フィルムガイドカラー      | 1   |
| 9611-1630-04 | Phillips type screw       | 十字穴付なべ頭小ねじ      | 1   |
| 9612-2080-07 | Phillips type screw       | 十字穴付なべ頭小ねじ      | 1   |
| 9761-1740-07 | Tap tite screw            | 十字穴付なべ頭タップタイトねじ | 2   |
| 9762-1735-07 | Tap tite screw            | 十字穴付なべ頭タップタイトねじ | 1   |
| 9762-2045-07 | Tap tite screw            | 十字穴付なべ頭タップタイトねじ | 3   |




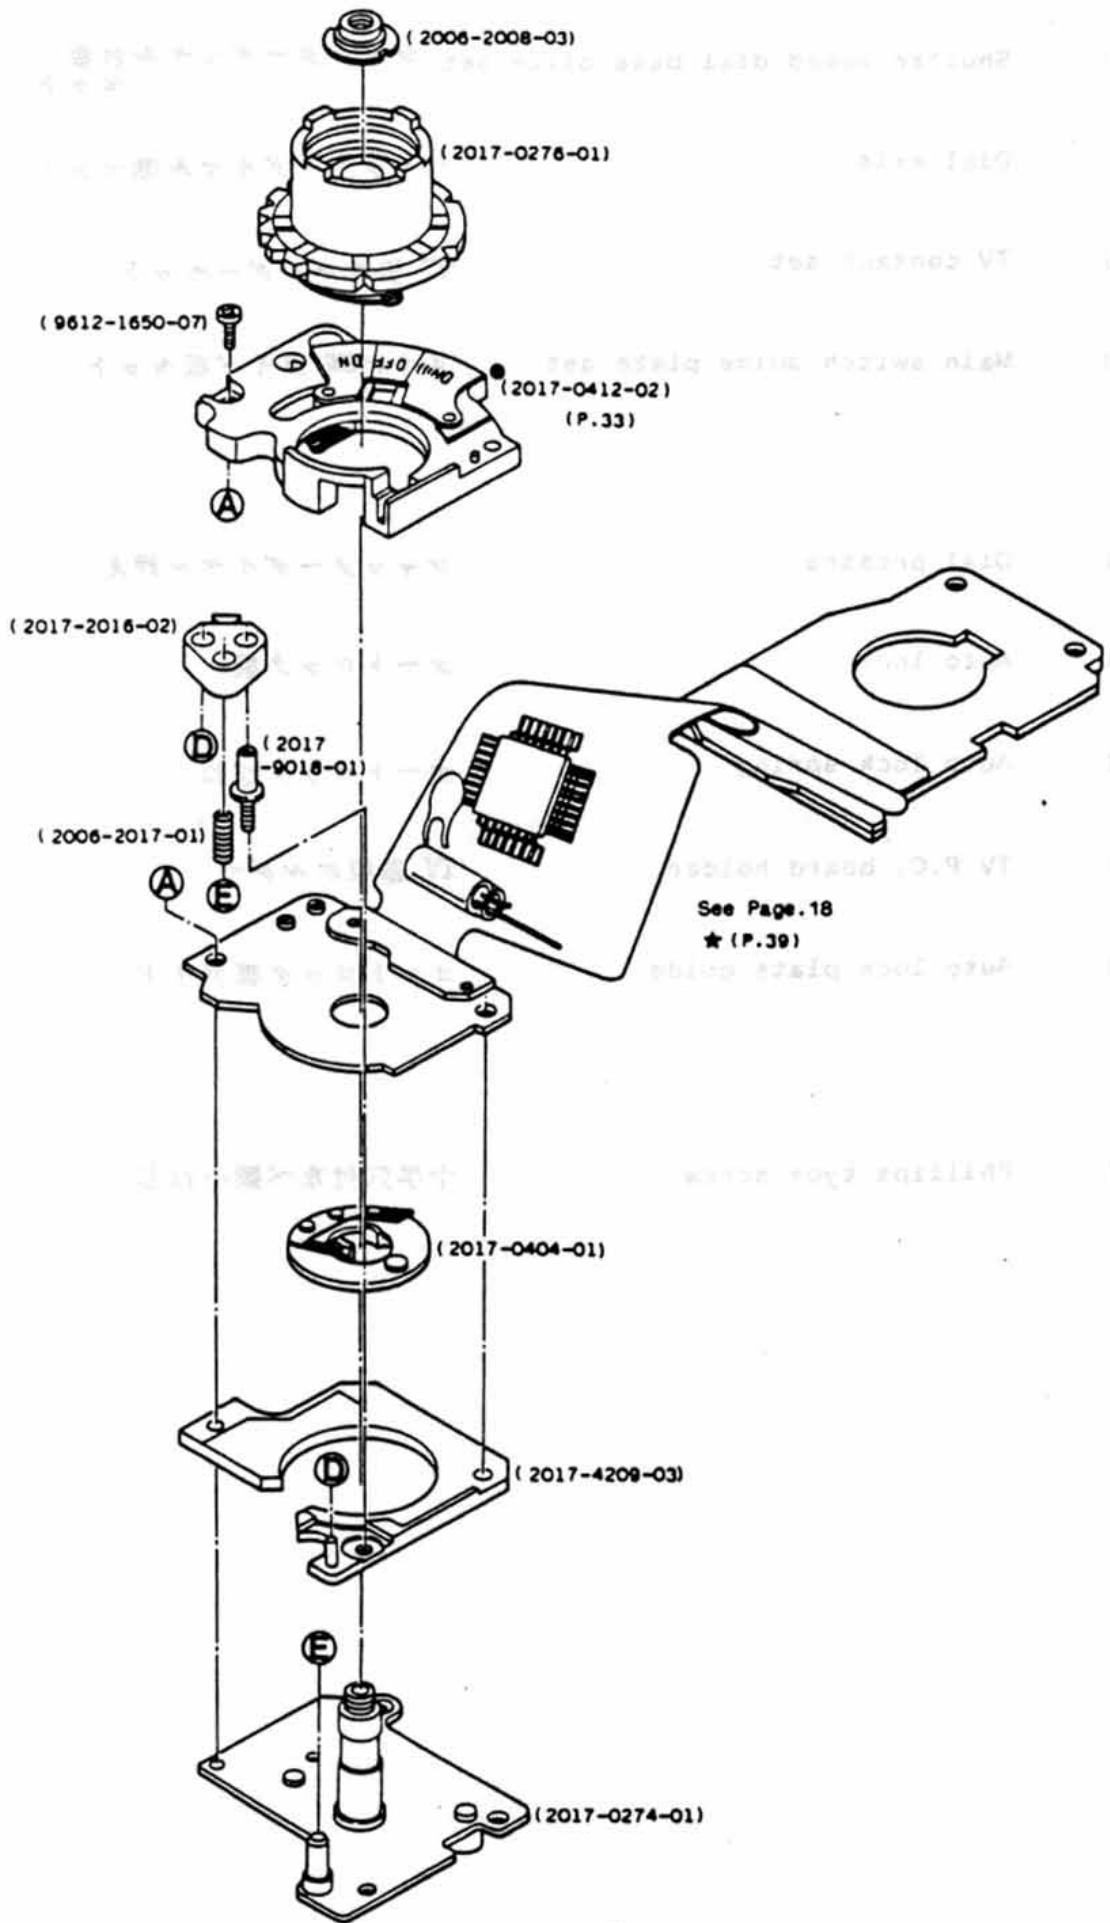


Concerning non AE lock model, refer to the page shown by ★.

AEロック機能なしモデルは、★マークのページを参照して下さい。

| Part No.       | Part Name                         | Qty                  |
|----------------|-----------------------------------|----------------------|
| 2017-0401-35   | Flexible P.C. board set           | フレキシブル基板セット 1        |
| (2017-0274-01) | Shutter speed dial base plate set | シャッターダイヤル台板<br>セット 1 |
| (2017-0276-01) | Dial axis                         | シャッターダイヤル軸セット 1      |
| (2017-0404-01) | TV contact set                    | TV 接片ホルダーセット 1       |
| (2017-0412-02) | Main switch guide plate set       | メインSW ガイド板セット 1      |
| (2006-2008-03) | Dial pressre                      | シャッターダイヤル押え 1        |
| (2017-2016-02) | Auto lock                         | オートロック板 1            |
| (2006-2017-01) | Auto lock spring                  | オートロックばね 1           |
| (2017-4209-03) | TV P.C. board holder              | TV 基板ホルダー 1          |
| (2017-9018-01) | Auto lock plate guide             | オートロック板ガイド 1         |
| (9612-1650-07) | Phillips type screw               | 十字穴付なべ頭小ねじ 1         |

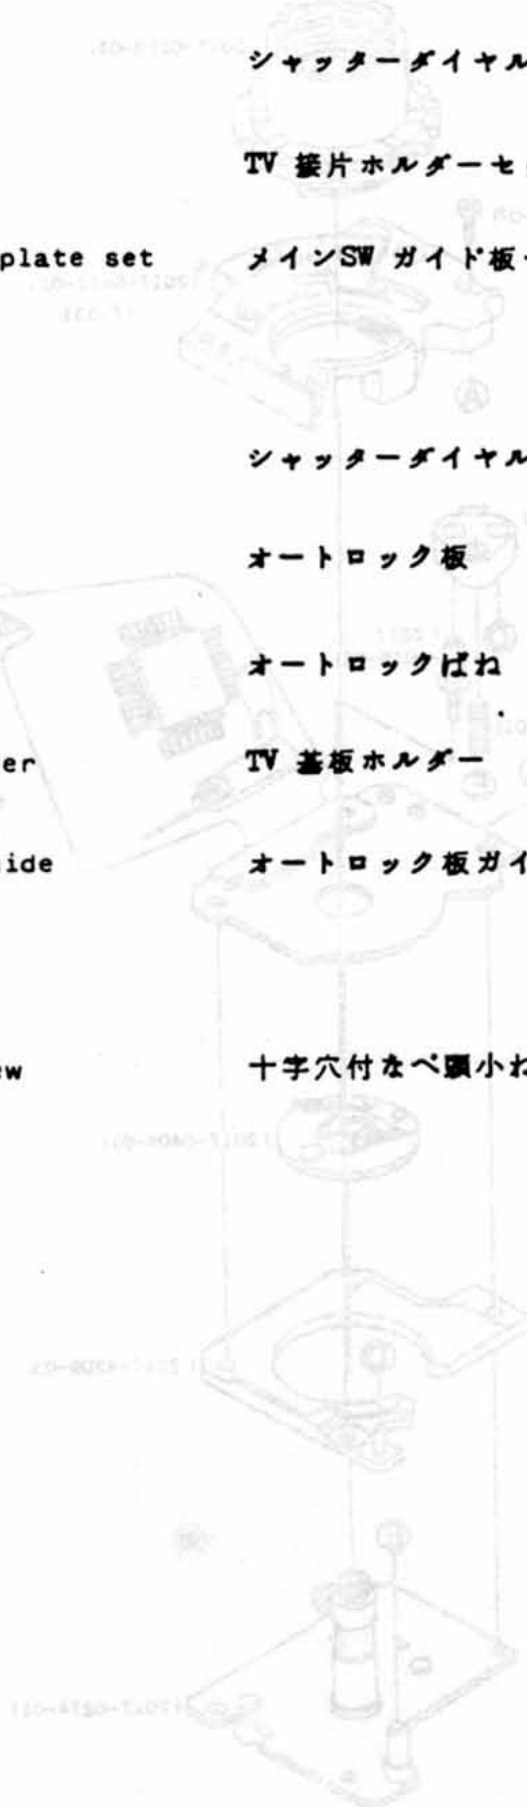


Assy. Part No. 2017-0201-01  
(P.28)

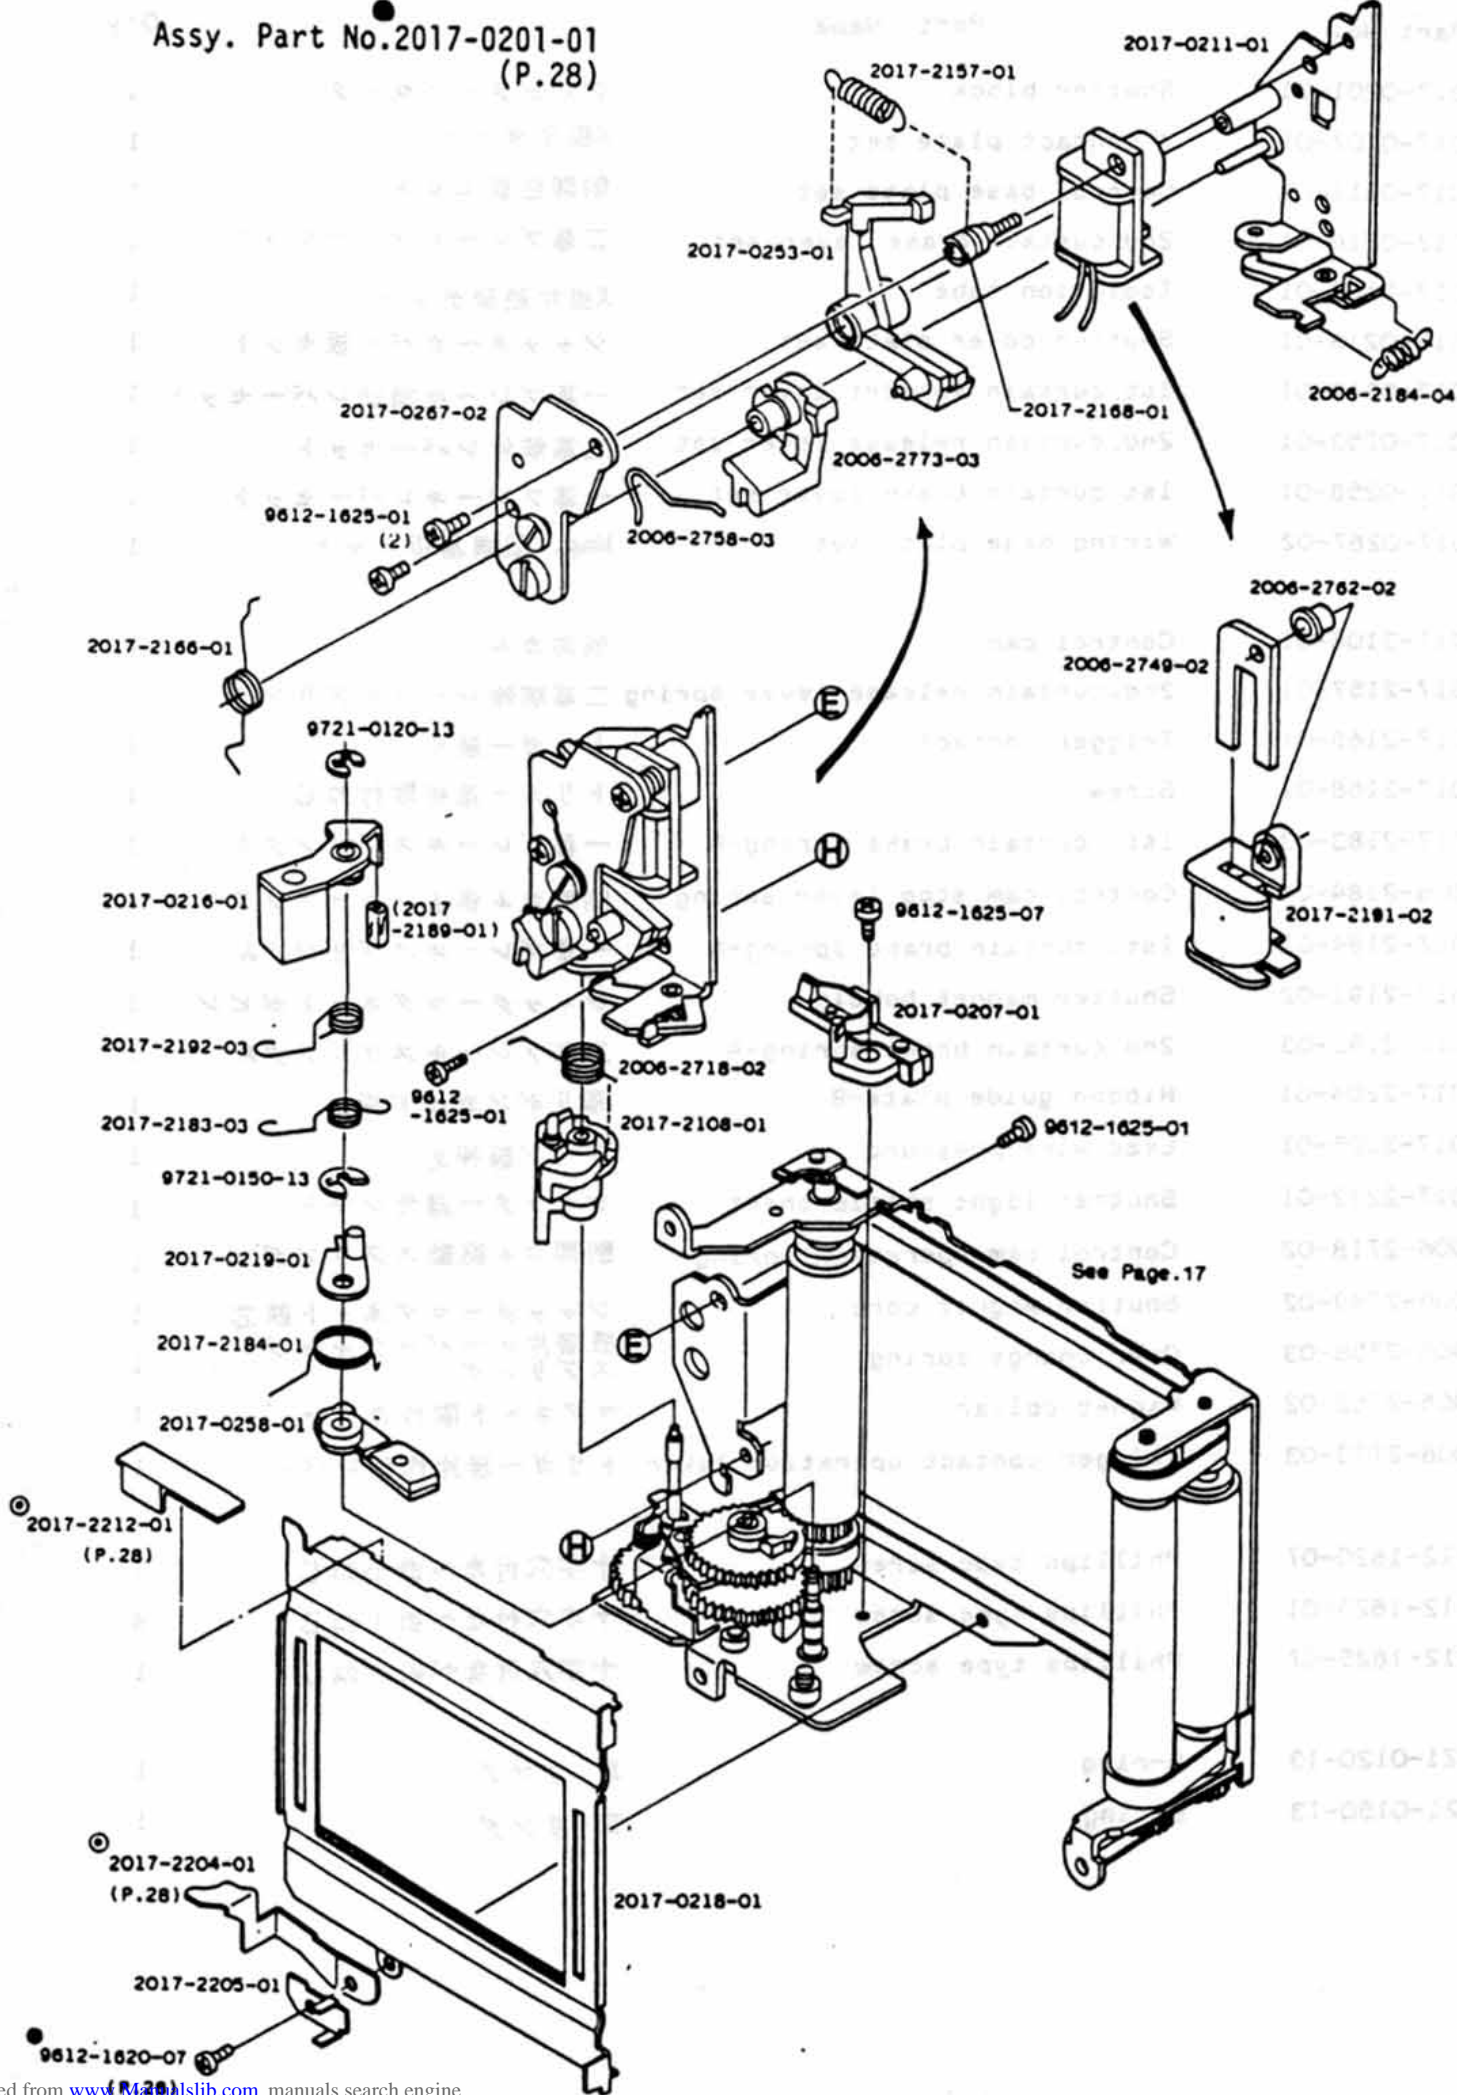




| Part No.       | Part Name                        |                      | Qty |
|----------------|----------------------------------|----------------------|-----|
| 2017-0201-01   | Shutter block                    | シャッターブロック            | 1   |
| 2017-0207-01   | X contact plate set              | X接片セット               | 1   |
| 2017-0211-01   | Control base plate set           | 制御台板セット              | 1   |
| 2017-0216-01   | 2nd.curtain brake lever set      | 二幕ブレーキレバーセット         | 1   |
| (2017-2189-01) | Isolation tube                   | X接片絶縁チューブ            | 1   |
| 2017-0218-01   | Shutter cover plate set          | シャッターカバー板セット         | 1   |
| 2017-0219-01   | 1st.curtain support lever set    | 一幕ブレーキ補助レバーセット       | 1   |
| 2017-0253-01   | 2nd.curtain release lever set    | 二幕解除レバーセット           | 1   |
| 2017-0258-01   | 1st.curtain brake lever set      | 一幕ブレーキレバーセット         | 1   |
| 2017-0267-02   | Wiring base plate set            | Mag. 配線基板セット         | 1   |
| 2017-2108-01   | Control cam                      | 制御カム                 | 1   |
| 2017-2157-01   | 2nd.curtain release lever spring | 二幕解除レバースプリング         | 1   |
| 2017-2166-01   | Trigger contact                  | トリガー接片               | 1   |
| 2017-2168-01   | Screw                            | トリガー基板取付ねじ           | 1   |
| 2017-2183-03   | 1st. curtain brake spring-B      | 一幕ブレーキスプリングB         | 1   |
| 2006-2184-04   | Control cam stop lever spring    | 制御カム係止レバースプリング       | 1   |
| 2017-2184-01   | 1st. curtain brake spring-A      | 一幕ブレーキスプリングA         | 1   |
| 2017-2191-02   | Shutter magnet bobbin            | シャッターマグネットボビン        | 1   |
| 2017-2192-03   | 2nd.curtain brake spring-A       | 二幕ブレーキスプリングA         | 1   |
| 2017-2204-01   | Ribbon guide plate-B             | 幕リボンガイド板B            | 1   |
| 2017-2205-01   | Lead wire pressure               | リード線押え               | 1   |
| 2017-2212-01   | Shutter light shield sheet       | シャッター遮光シート           | 1   |
| 2006-2718-02   | Control cam operation spring     | 制御カム駆動スプリング          | 1   |
| 2006-2749-02   | Shutter magnet core              | シャッターマグネット鉄芯         | 1   |
| 2006-2758-03   | Over charge spring               | 吸着片オーバーチャージ<br>スプリング | 1   |
| 2006-2762-02   | Magnet collar                    | マグネット取付カラー           | 1   |
| 2006-2773-03   | Trigger contact operation lever  | トリガー接片作動レバー          | 1   |
| 9612-1620-07   | Phillips type screw              | 十字穴付なべ頭小ねじ           | 1   |
| 9612-1625-01   | Phillips type screw              | 十字穴付なべ頭小ねじ           | 4   |
| 9612-1625-07   | Phillips type screw              | 十字穴付なべ頭小ねじ           | 1   |
| 9721-0120-13   | E-ring                           | E リング                | 1   |
| 9721-0150-13   | E-ring                           | E リング                | 1   |

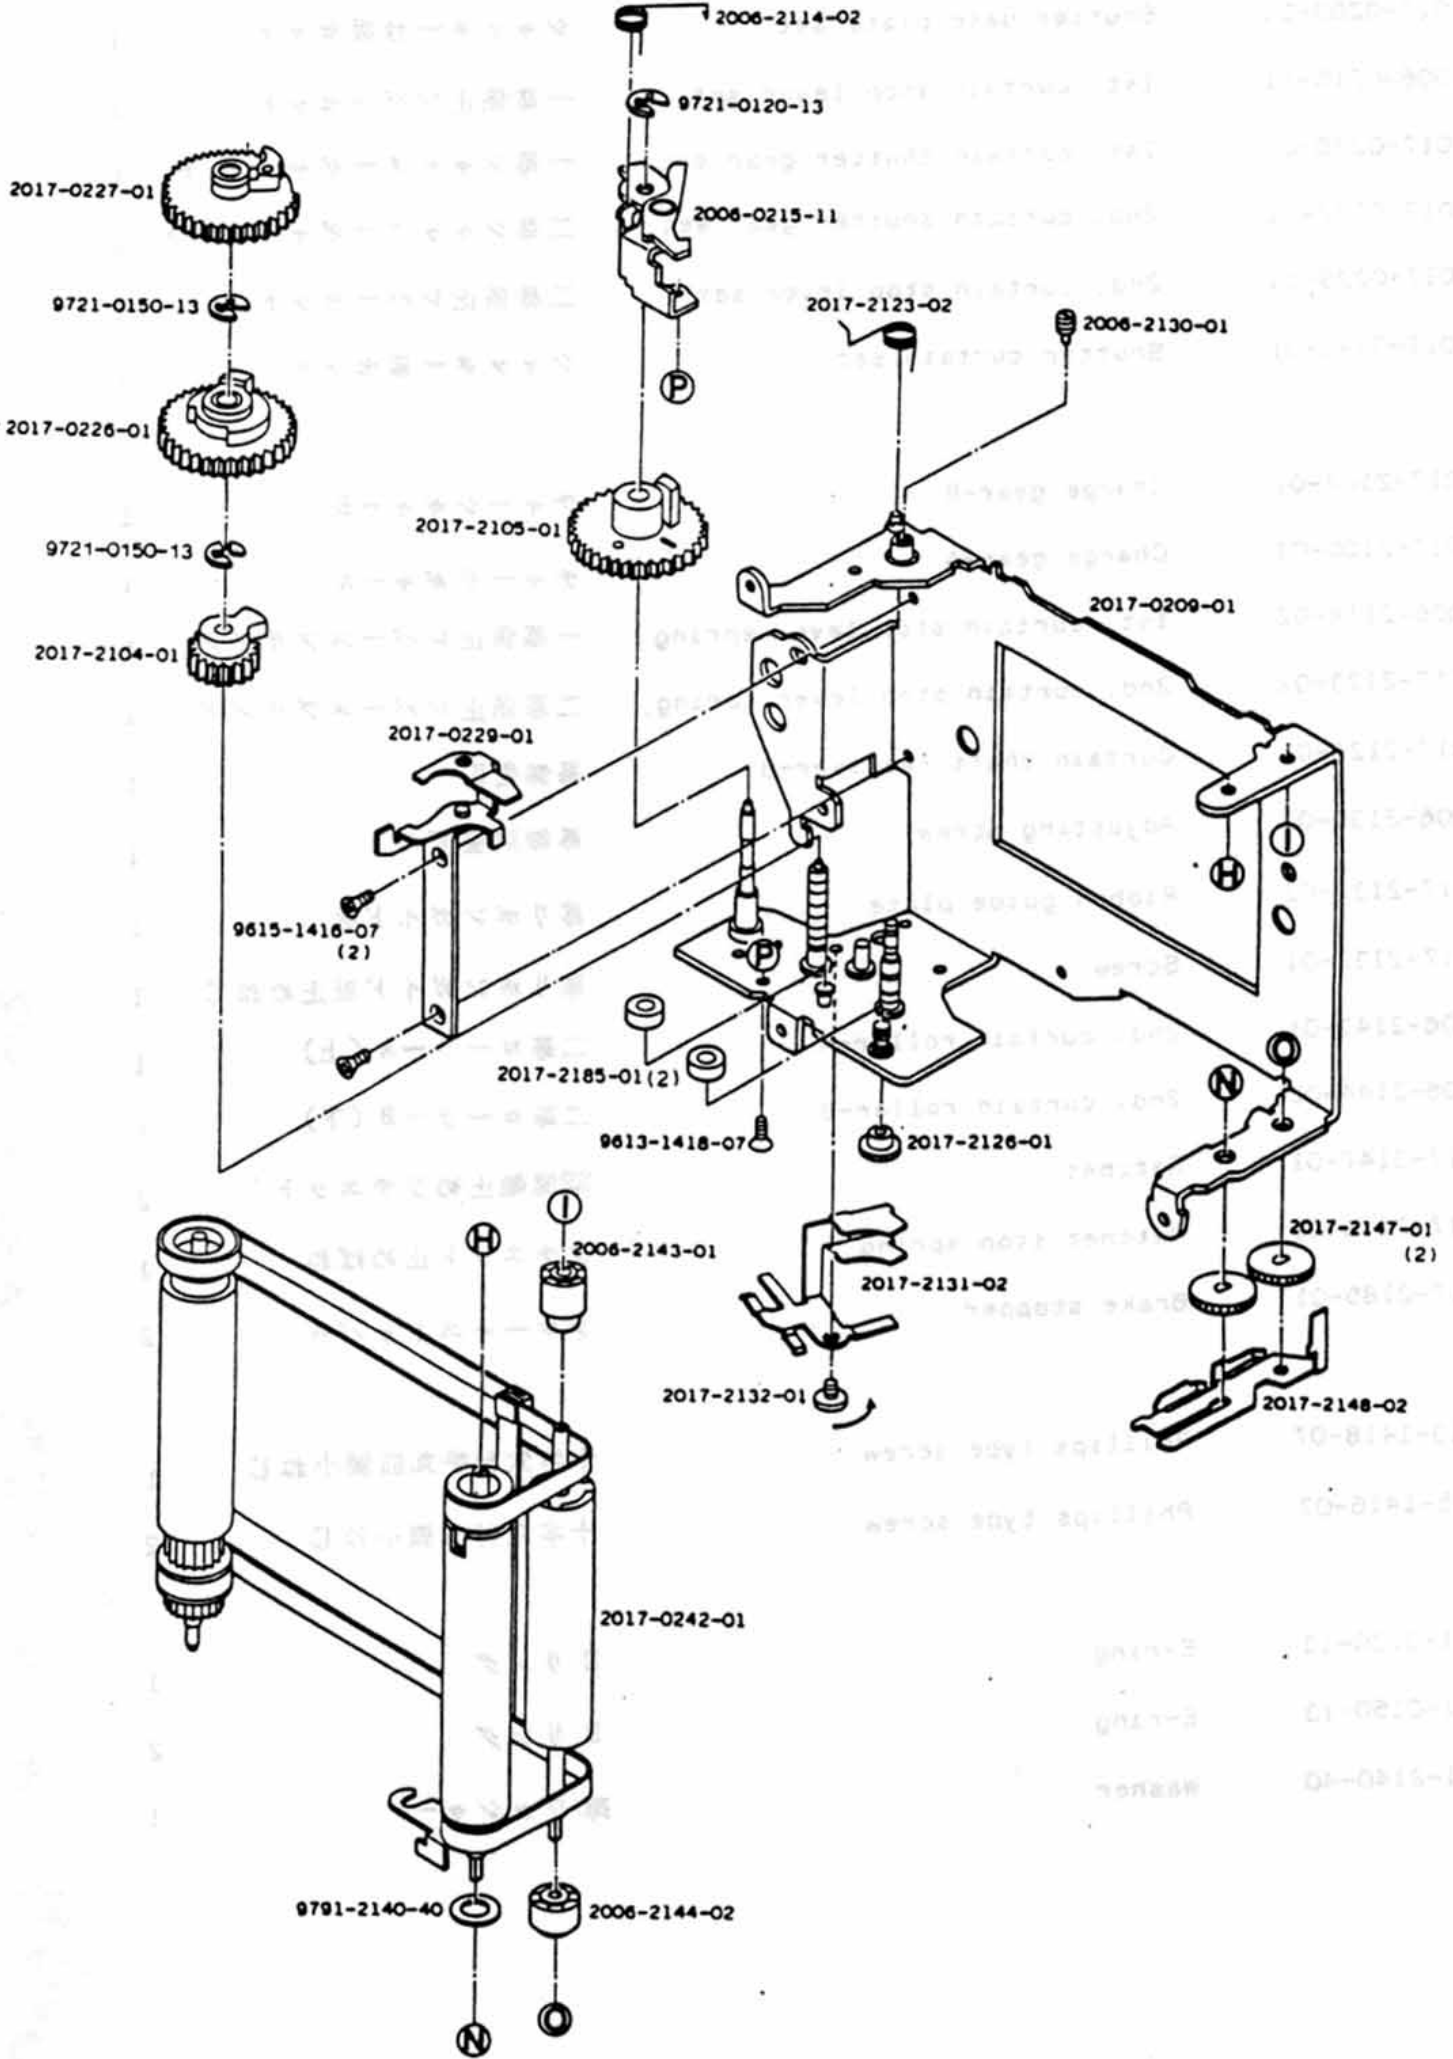

| Part No.     | Part Name                      |              | Qty |
|--------------|--------------------------------|--------------|-----|
| 2017-0209-01 | Shutter base plate set         | シャッター台板セット   | 1   |
| 2006-0215-11 | 1st. curtain stop lever set    | 一幕係止レバーセット   | 1   |
| 2017-0226-01 | 1st. curtain shutter gear set  | 一幕シャッターギヤセット | 1   |
| 2017-0227-01 | 2nd. curtain shutter gear set  | 二幕シャッターギヤセット | 1   |
| 2017-0229-01 | 2nd. curtain stop lever set    | 二幕係止レバーセット   | 1   |
| 2017-0242-01 | Shutter curtain set            | シャッター幕セット    | 1   |
| 2017-2104-01 | Charge gear-B                  | チャージギヤ-B     | 1   |
| 2017-2105-01 | Charge gear-A                  | チャージギヤ-A     | 1   |
| 2006-2114-02 | 1st. curtain stop lever spring | 一幕係止レバースプリング | 1   |
| 2017-2123-02 | 2nd. curtain stop lever spring | 二幕係止レバースプリング | 1   |
| 2017-2126-01 | Curtain shaft receiver-B       | 幕軸受B         | 1   |
| 2006-2130-01 | Adjusting screw                | 幕軸調整ビス       | 1   |
| 2017-2131-02 | Ribbon guide plate             | 幕リボンガイド板     | 1   |
| 2017-2132-01 | Screw                          | 幕リボンガイド板止めねじ | 1   |
| 2006-2143-01 | 2nd. curtain roller-A          | 二幕ローラーA(上)   | 1   |
| 2006-2144-02 | 2nd. curtain roller-B          | 二幕ローラーB(下)   | 1   |
| 2017-2147-01 | Ratchet                        | SP筒軸止めラチエット  | 2   |
| 2017-2148-02 | Ratchet stop spring            | ラチエット止めばね    | 1   |
| 2017-2185-01 | Brake stopper                  | ブレーキストッパー    | 2   |
| 9613-1418-07 | Phillips type screw            | 十字穴付半丸皿頭小ねじ  | 1   |
| 9615-1416-07 | Phillips type screw            | 十字穴付皿頭小ねじ    | 2   |
| 9721-0120-13 | E-ring                         | Eリング         | 1   |
| 9721-0150-13 | E-ring                         | Eリング         | 2   |
| 9791-2140-40 | Washer                         | 薄ワッシャー       | 1   |



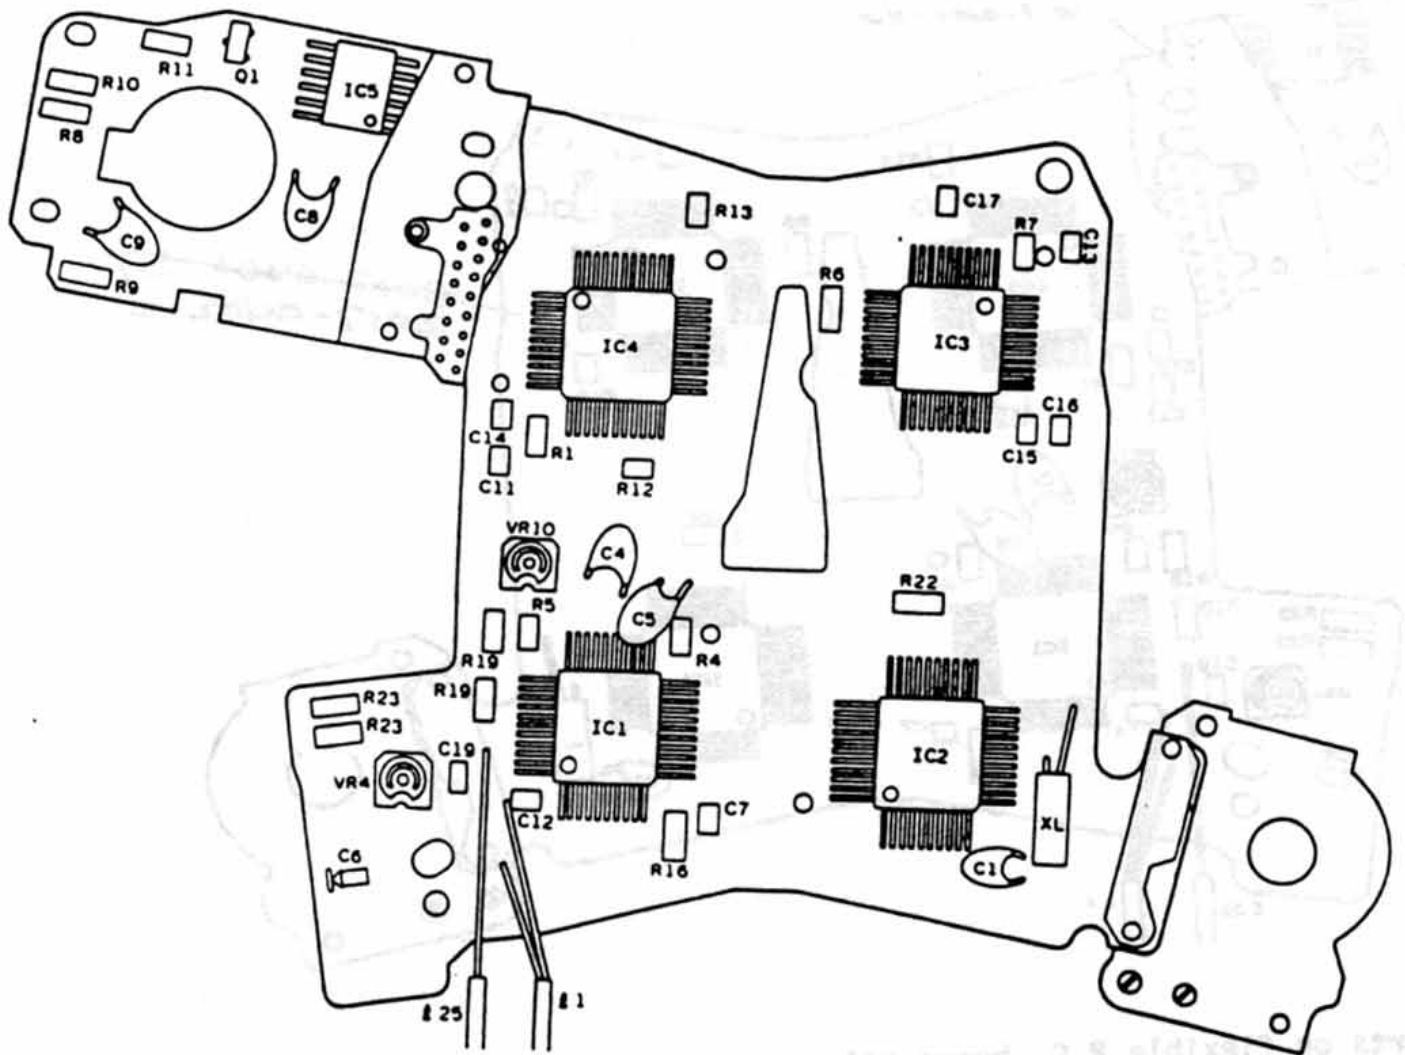

■ Electrical parts on flexible P.C. board set

- Flexible P.C. board set with AE lock circuit, 5 types (2017-0401-81, 2017-0401-32, 2017-0401-33, 2017-0401-34, 2017-0401-35) had been assembled, however, other parts than IC3 on 0401-81 are common parts.
- 0401-81 is not a service part, use IC3 (2017-4303-32) when replacing.


■ For the other type flexible P.C. board set, refer to page 30.

■ フレキシブル基板搭載の電気部品について

- AEロック回路付フレキシブル基板セットは、5種類 (2017-0401-81, 2017-0401-32, 2017-0401-33, 2017-0401-34, 2017-0401-35) ありますが、0401-81のIC3以外全て共通です。
- 0401-81のIC3は、部品供給しておりませんので交換時は、右表のIC3 (2017-4303-32) に交換して下さい。

■ 他の種類のフレキシブル基板については、page 30 を参照して下さい。

**X-700 (Black model)**  
**CODE No. 2017-200**

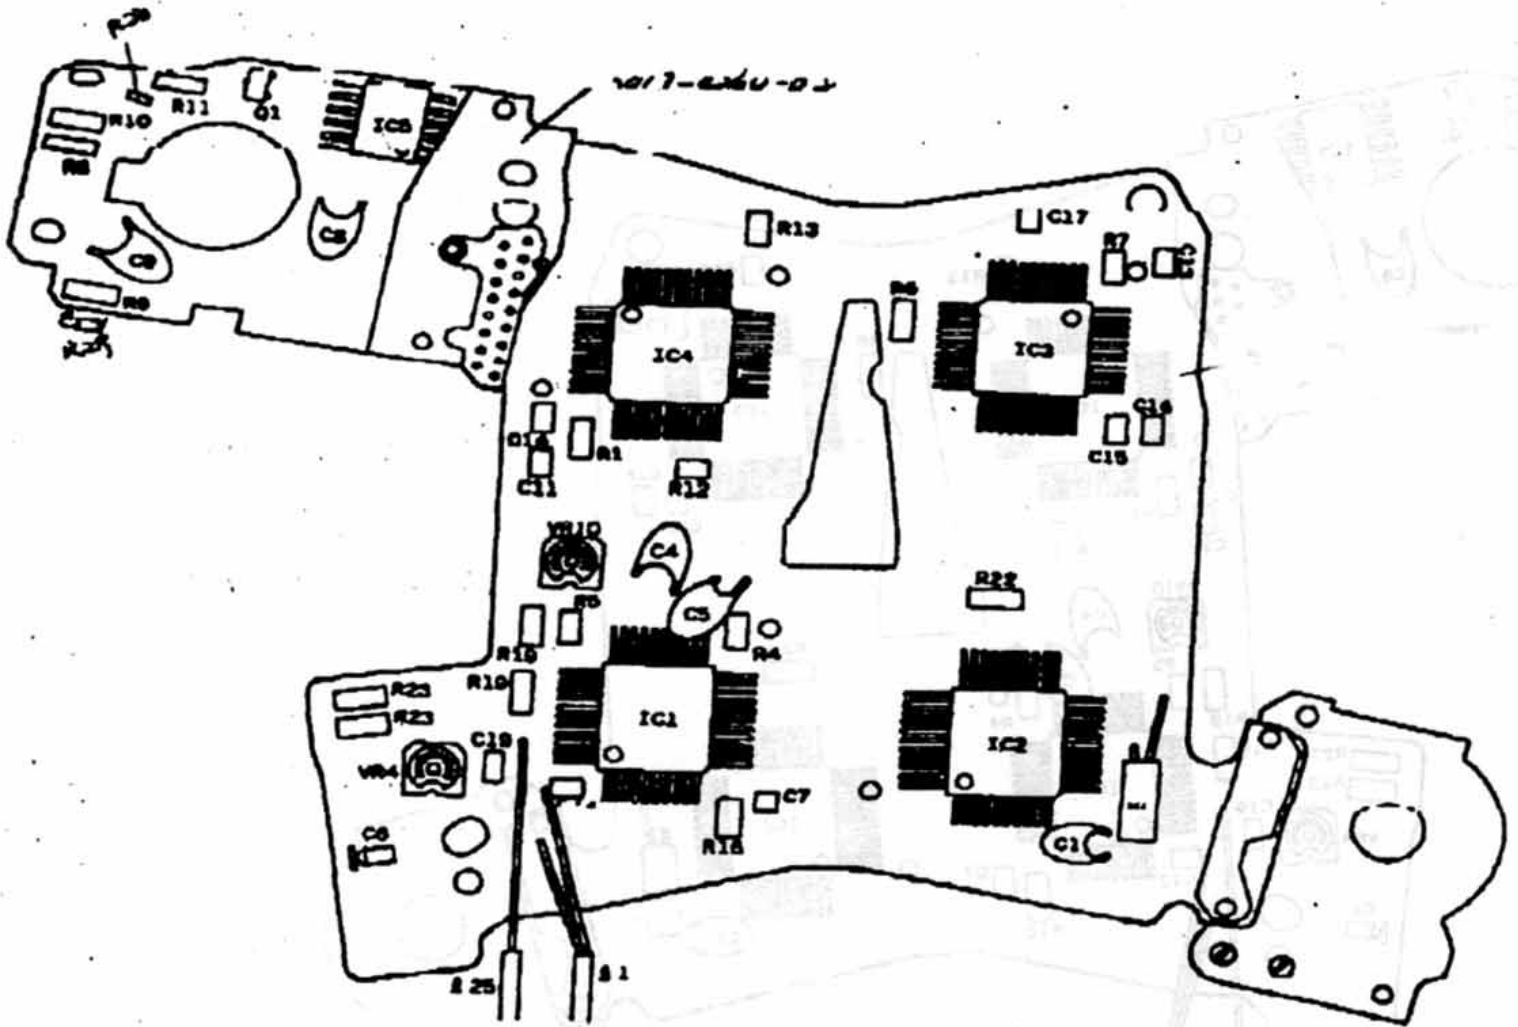

■ Electrical parts on flexible P.C. board set

• Flexible P.C. board set with AE lock circuit, 5 types (2017-0401-81, 2017-0401-32, 2017-0401-33, 2017-0401-34, 2017-0401-35) had been assembled, however, other parts than IC3 on 0401-81 are common parts.

• 0401-81 is not a service part, use IC3 (2017-4303-32) when replacing.

■ For the other type flexible P.C. board set, refer to page 30.

■ フレキシブル基板塔装の電気部品について


• AEロック回路付フレキシブル基板セットは、5種類 (2017-0401-81, 2017-0401-32, 2017-0401-33, 2017-0401-34, 2017-0401-35) ありますが、0401-81のIC3以外全て共通です。

• 0401-81のIC3は、部品供給してありませんので交換時は、右表のIC3 (2017-4303-32) に交換して下さい。


■ 他の種類のフレキシブル基板については、page 30 を参照して下さい。




**A X-700 CODE No.3017 (2017.0401.01, 2017.0401.02, 2017.0401.03)**

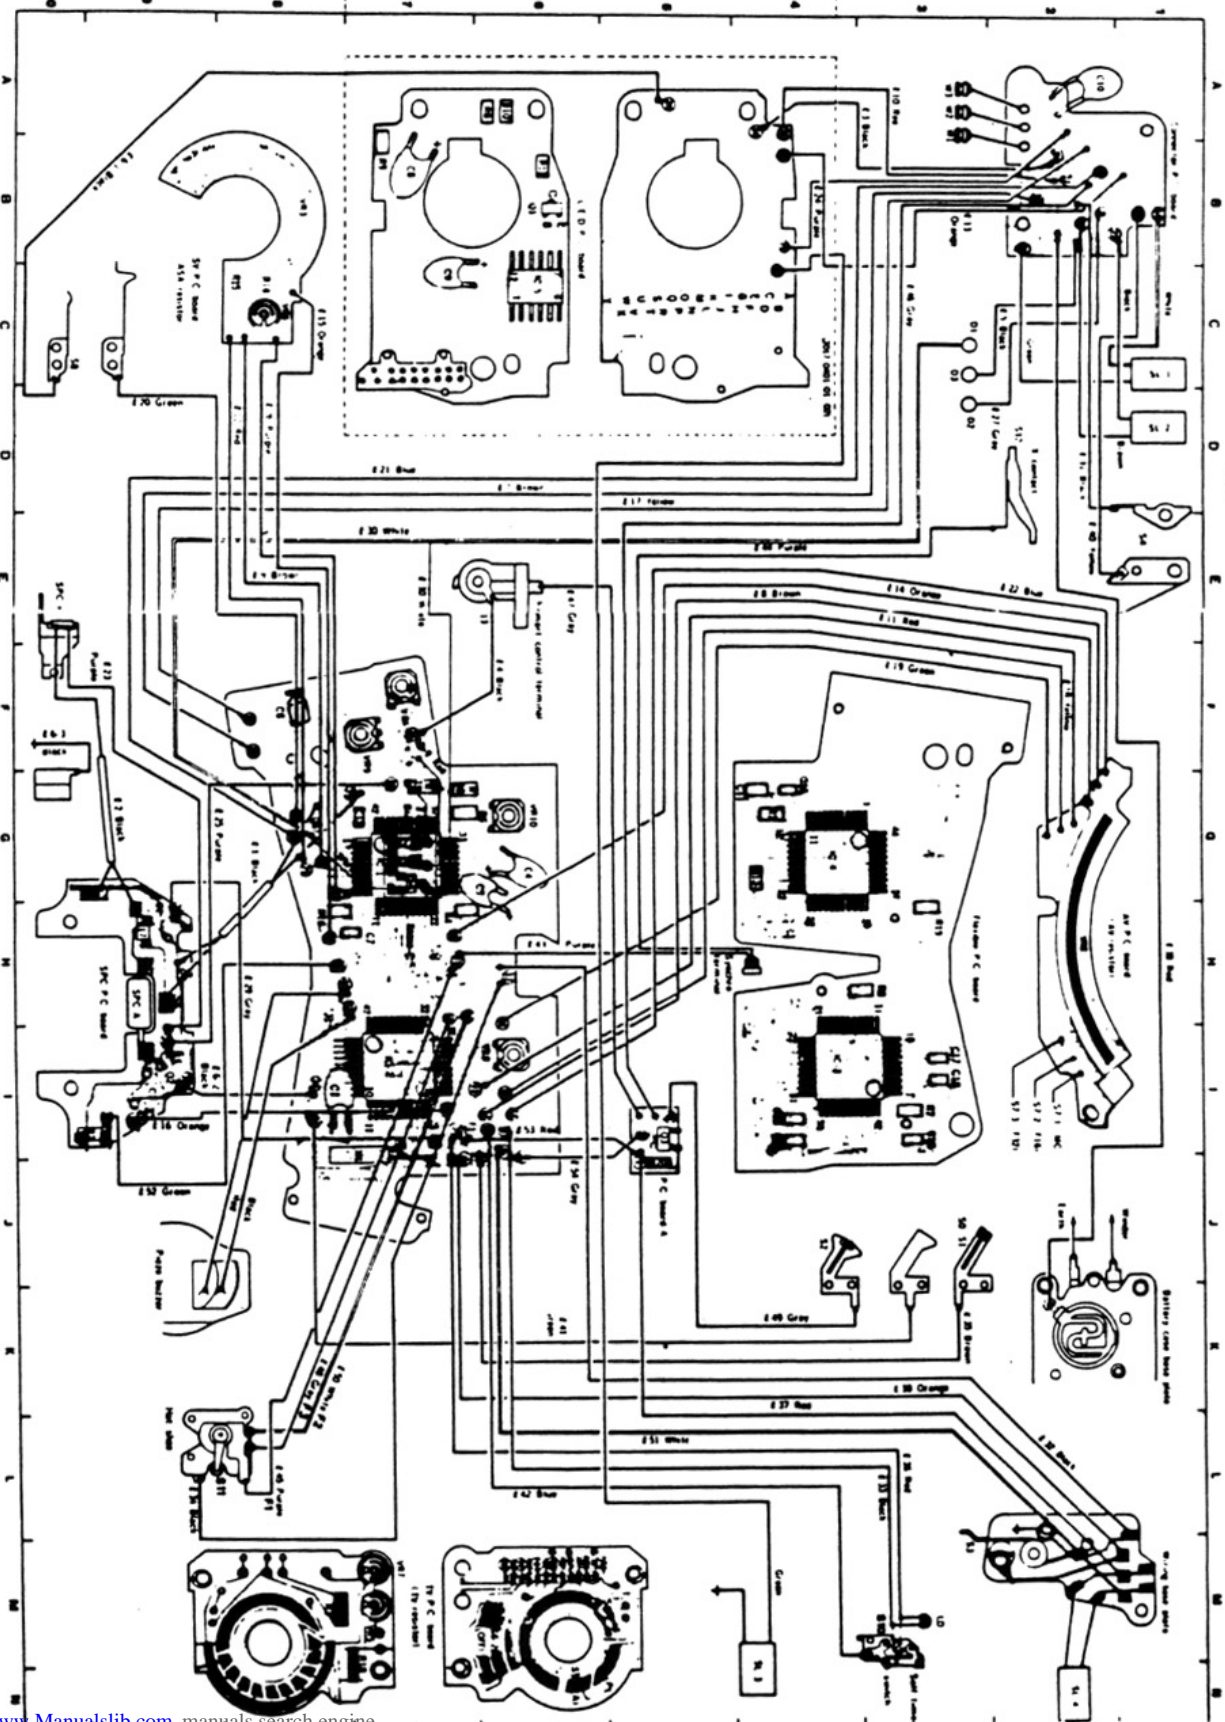





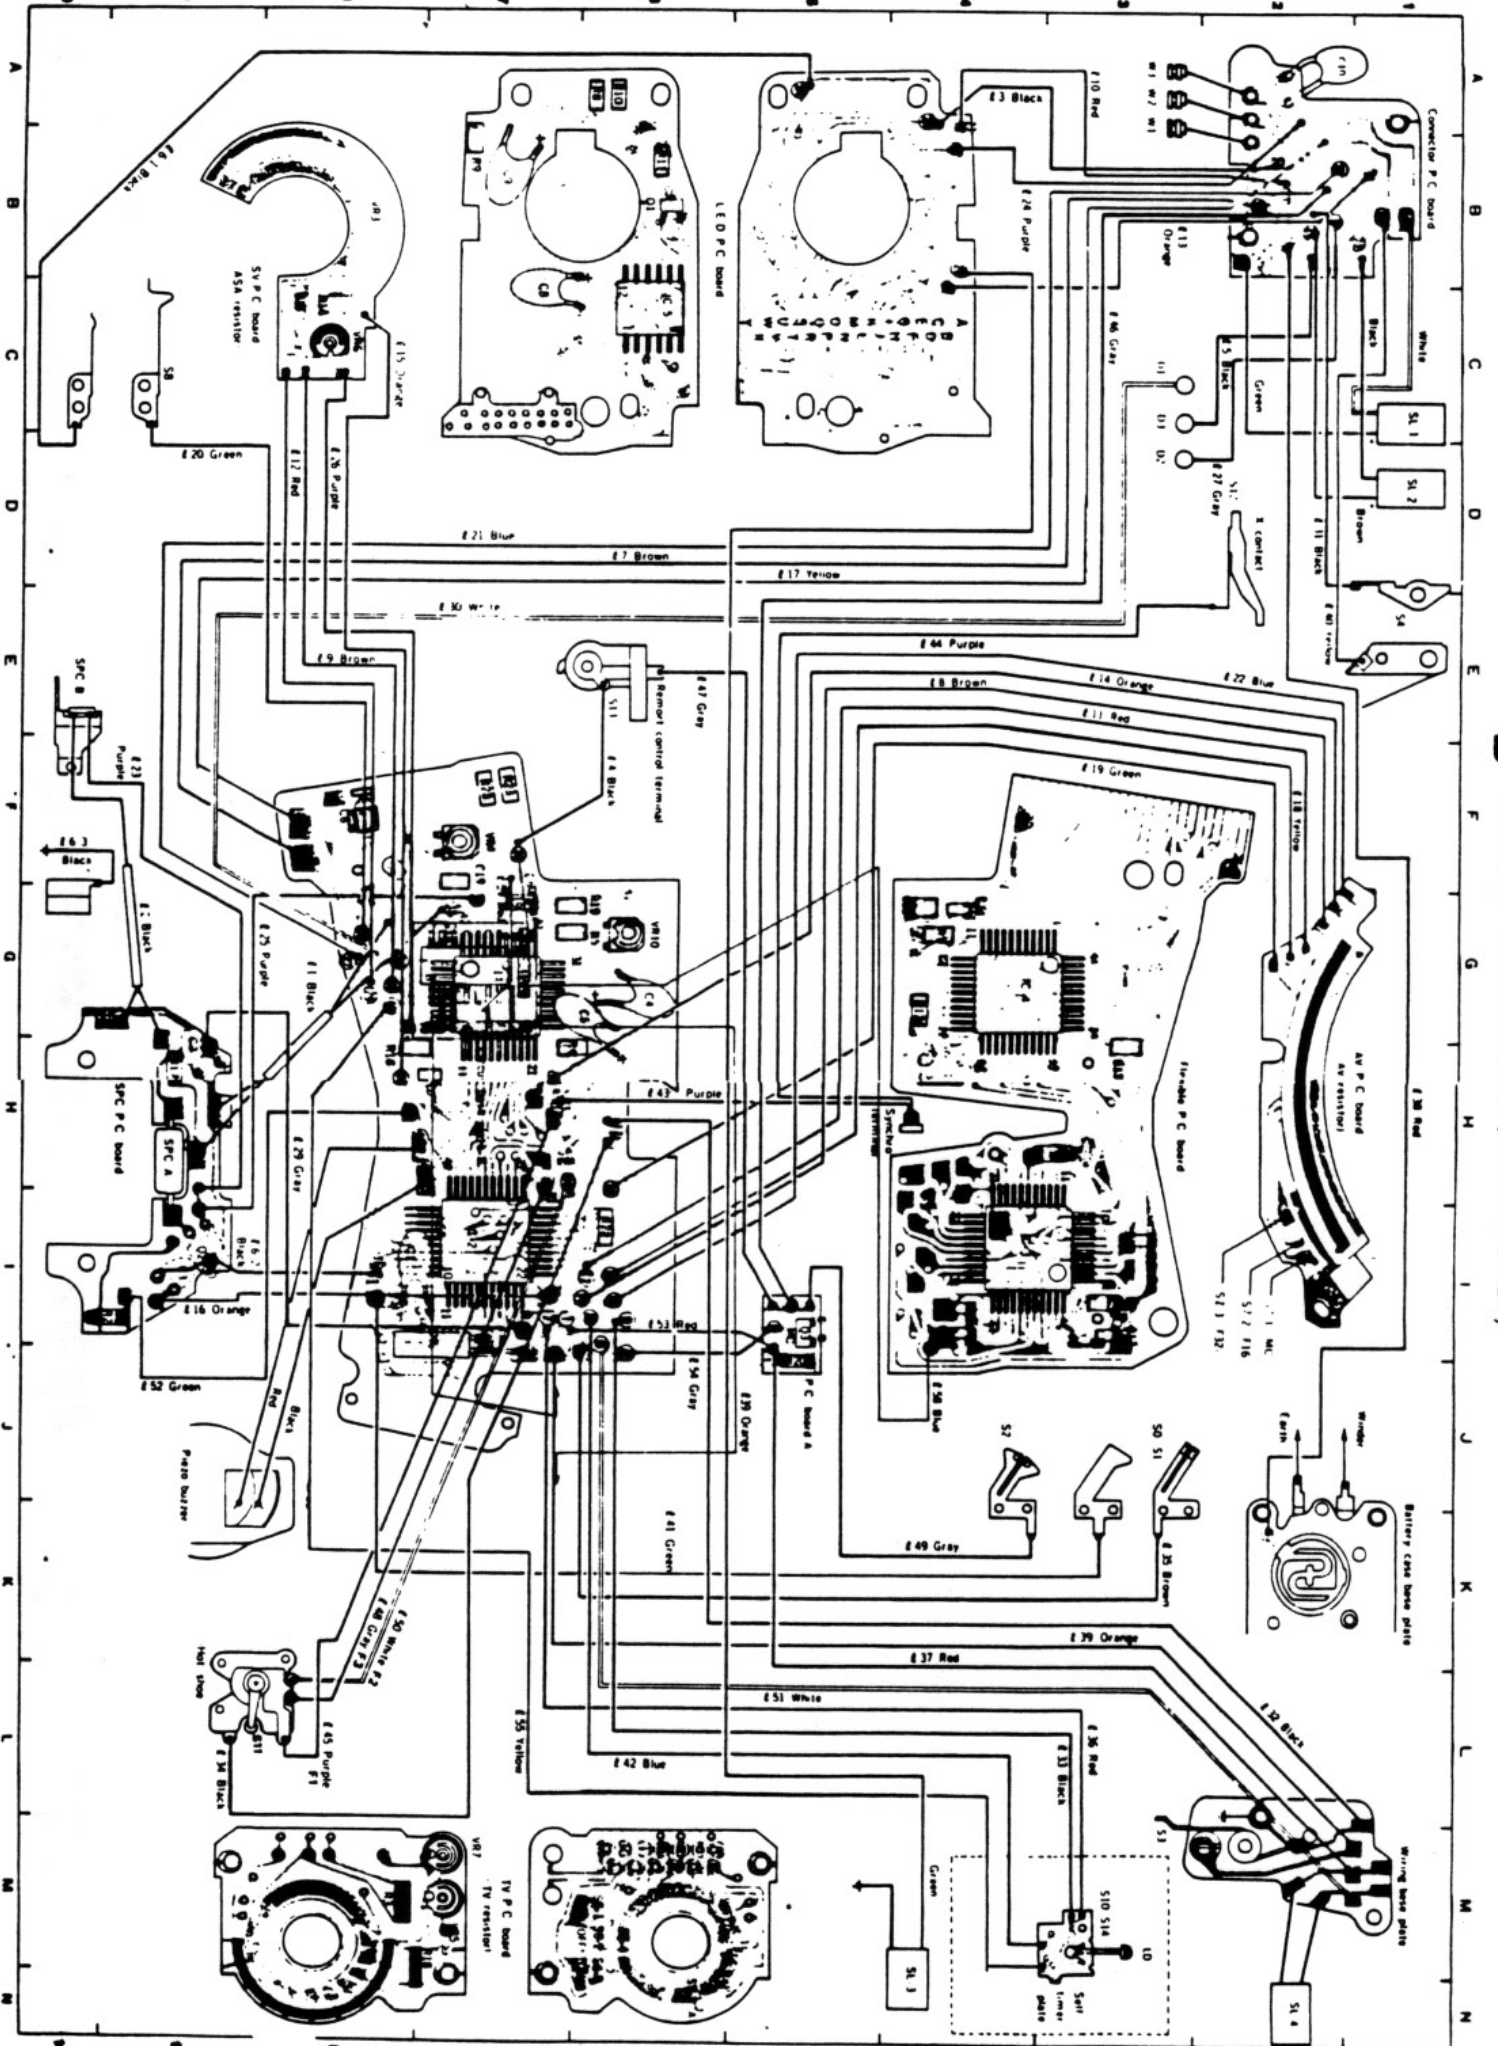



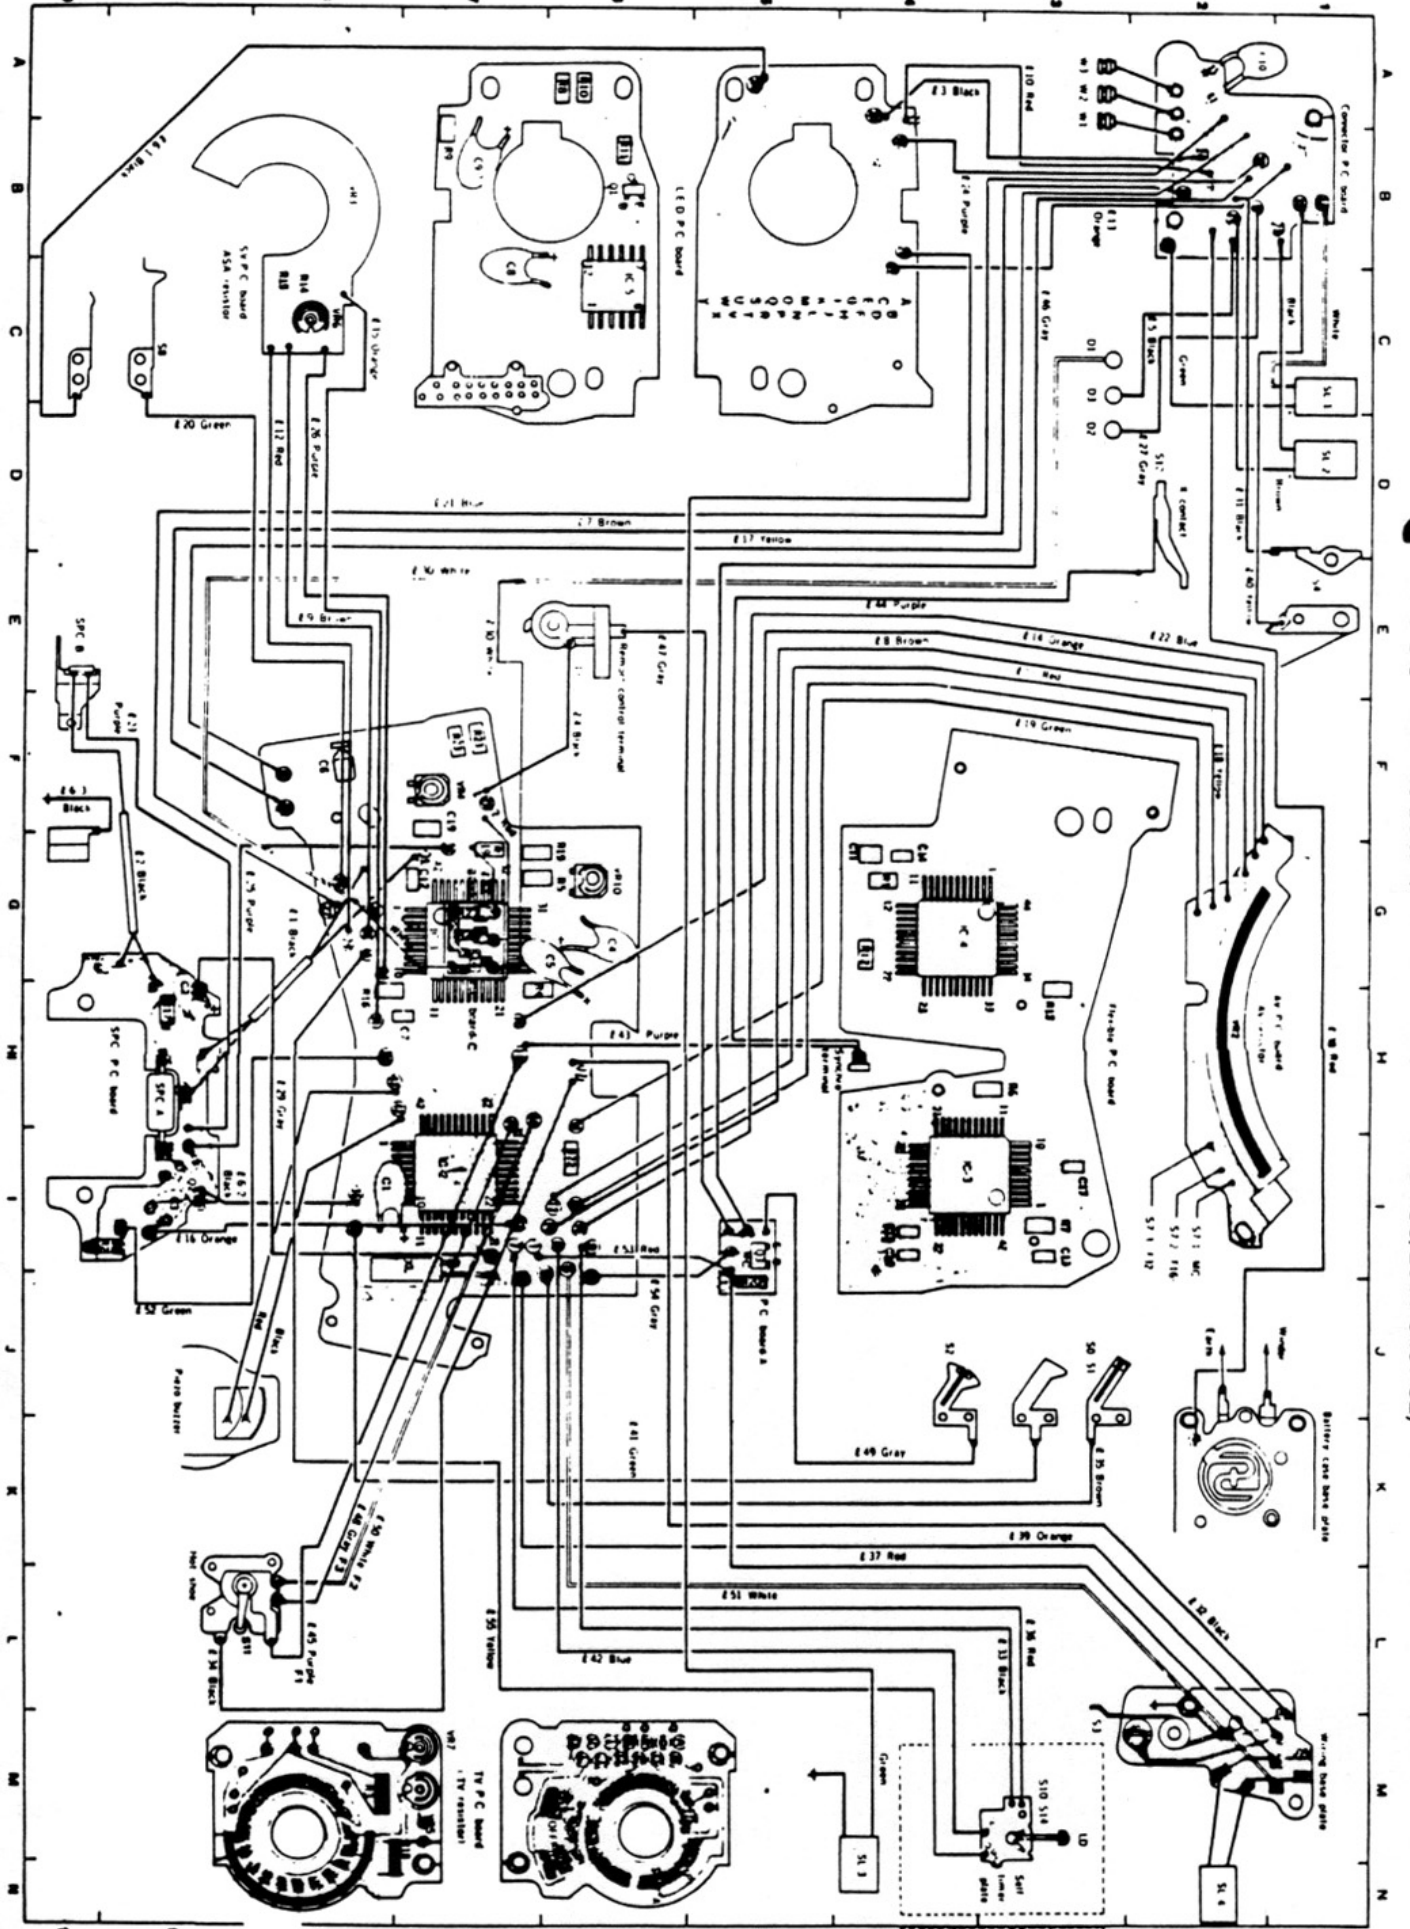

1999 updated AT, with 1999 (2017) (2017) (2017) (2017)

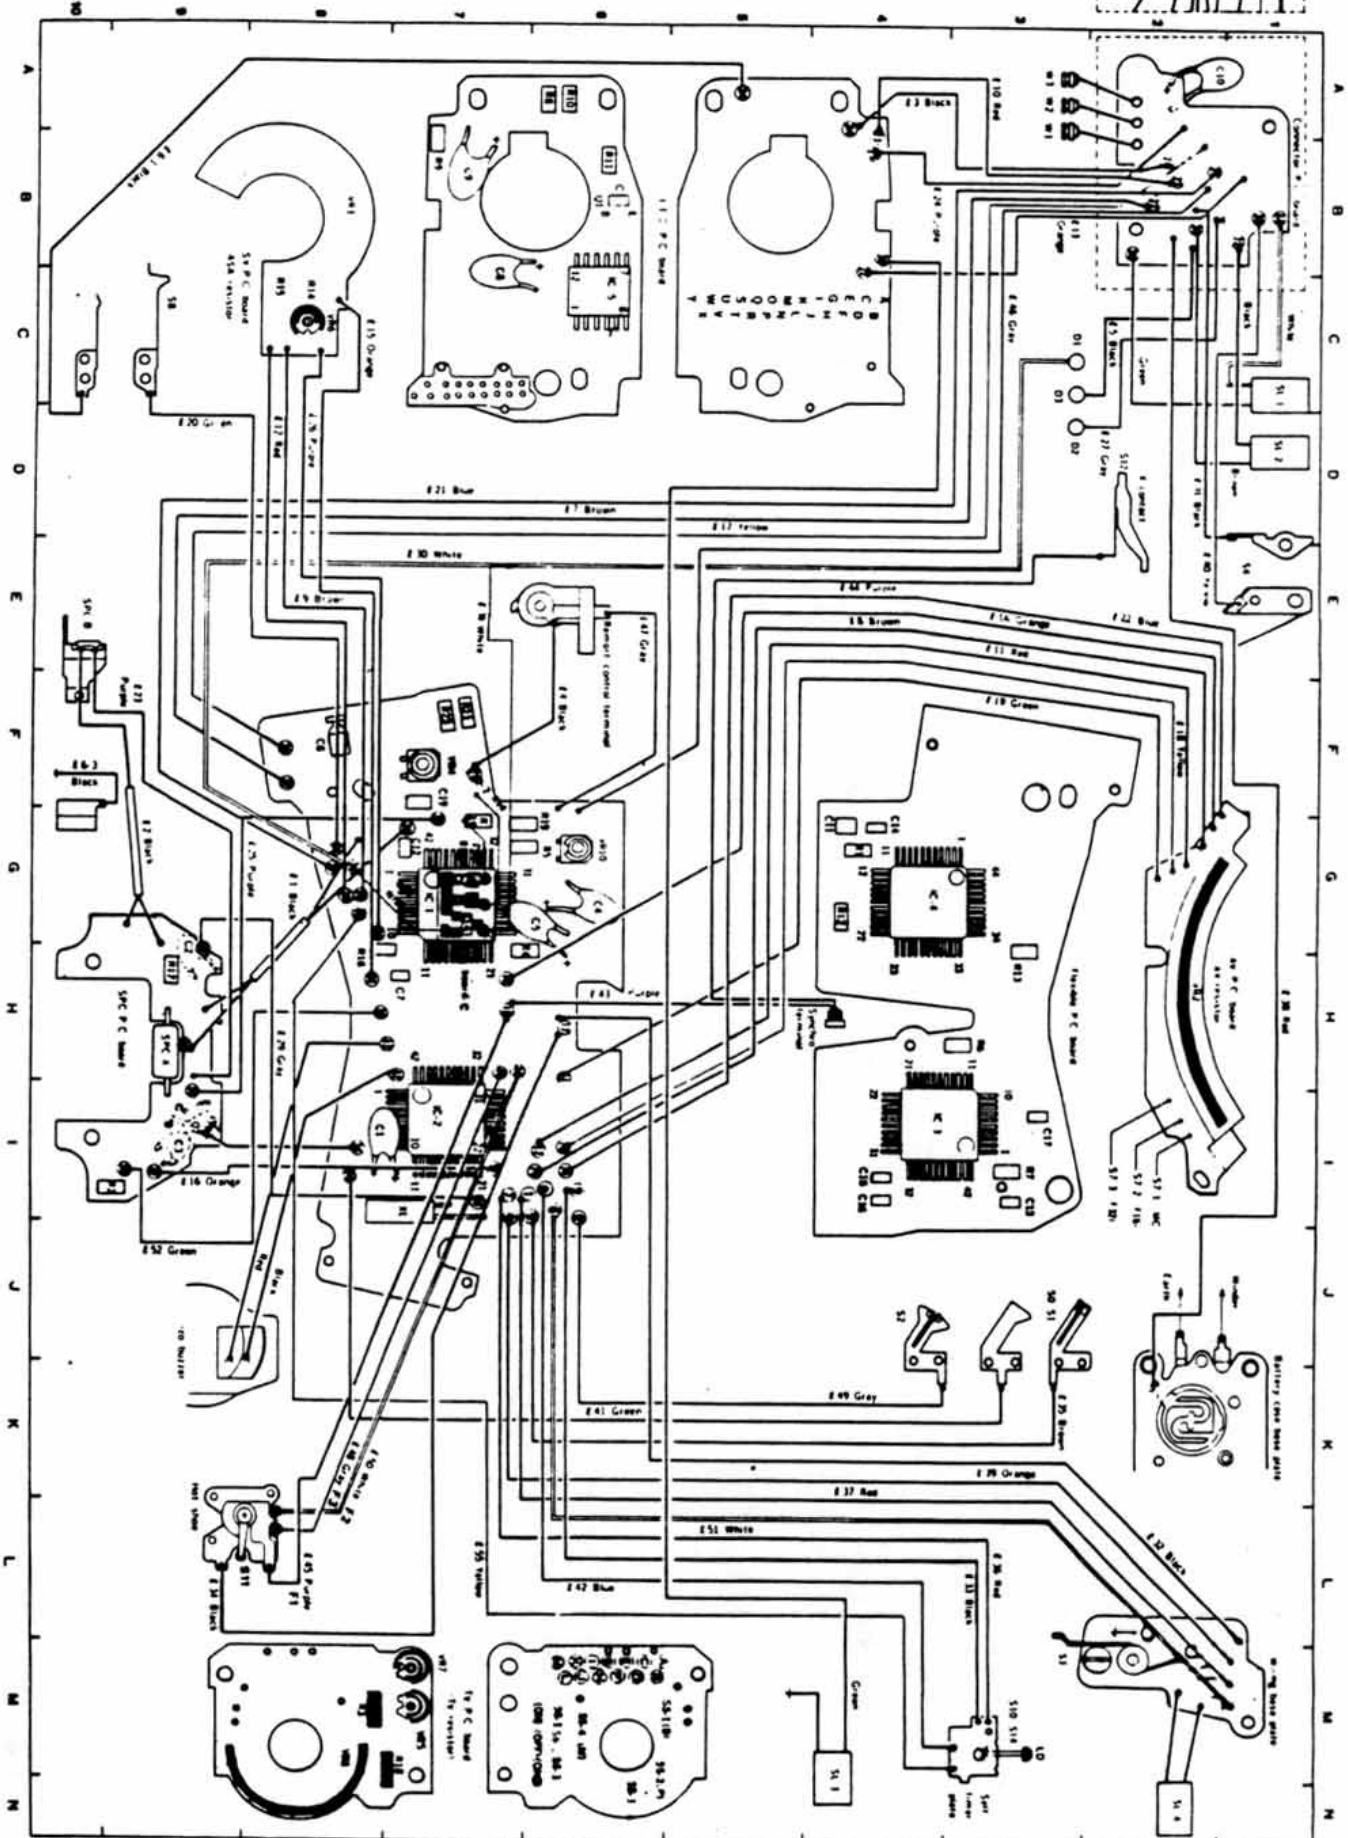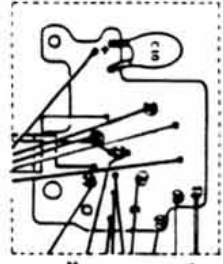

**D X-700 CODE No.2017 (2017.0401-34,2017.0401-35)**



| Symbol       | Part No.     | Com                | Part Name          | Typ.                      | Qty.               |
|--------------|--------------|--------------------|--------------------|---------------------------|--------------------|
| IC1          | 2017-4301-01 |                    | IC                 | M51885P                   | 1                  |
| IC2          | 2017-4302-01 |                    |                    | M51886P                   | 1                  |
| IC3          | 2017-4303-32 |                    |                    | M51889P                   | 1                  |
| IC4          | 2017-4304-01 |                    |                    | HA16526                   | 1                  |
| IC5          | 2017-4305-01 |                    |                    | BA6128                    | 1                  |
| Q1           | 9363-1032-01 | 02,03              | Transistor         | 2SA1162S(O,Y,G)           | 1                  |
| XL           | 9373-4161-01 |                    | Crystal resonator  | KF38G                     | 1                  |
| R1           | 9422-2046-62 |                    | Fixed resistor     | 1/8W 200K $\Omega$        | 1                  |
| R4           | 9422-9106-62 |                    |                    | 1/8W 91 $\Omega$          | 1                  |
| R5           | 9432-5626-61 |                    |                    | 1/8W 5.6K $\Omega$        | } 1                |
|              | 9432-6226-61 |                    |                    | 1/8W 6.2K $\Omega$        |                    |
|              | 9432-6826-61 |                    |                    | 1/8W 6.8K $\Omega$        |                    |
|              | 9432-7526-61 |                    |                    | 1/8W 7.5K $\Omega$        |                    |
| R6           | 9422-3916-62 |                    |                    | 1/8W 390 $\Omega$         | 1                  |
| R7           | 9432-2068-61 |                    |                    | 1/8W 20M $\Omega$         | 1                  |
| R8           | 9422-3616-62 |                    |                    | 1/8W 360K $\Omega$        | 1                  |
| R9 R10 R11   | 9422-1026-62 |                    |                    | 1/8W 1K $\Omega$          | 3                  |
| R12          | 9432-2026-61 |                    |                    | 1/8W 2K $\Omega$          | } 1                |
|              | 9432-2426-61 |                    |                    | 1/8W 2.4K $\Omega$        |                    |
|              | 9432-2726-61 |                    |                    | 1/8W 2.7K $\Omega$        |                    |
|              | 9432-3026-61 |                    |                    | 1/8W 3K $\Omega$          |                    |
|              | 9432-3926-61 |                    |                    | 1/8W 3.9K $\Omega$        |                    |
| R13          | 9432-3357-61 |                    |                    | 1/8W 3.3M $\Omega$        | 1                  |
| R16          | 9432-5126-61 |                    |                    | 1/8W 5.1K $\Omega$        | 1                  |
| R19          | 9422-2736-62 |                    |                    | 1/8W 27K $\Omega$         | } 1 or 2           |
|              | 9422-3036-62 |                    |                    | 1/8W 30K $\Omega$         |                    |
|              | 9422-3336-62 |                    |                    | 1/8W 33K $\Omega$         |                    |
|              | 9422-3636-62 |                    | 1/8W 36K $\Omega$  |                           |                    |
|              | 9422-3936-62 |                    | 1/8W 39K $\Omega$  |                           |                    |
|              | 9422-4336-62 |                    | 1/8W 43K $\Omega$  |                           |                    |
|              | 9422-4736-62 |                    | 1/8W 47K $\Omega$  |                           |                    |
|              | 9422-5636-62 |                    | 1/8W 56K $\Omega$  |                           |                    |
|              | 9422-6836-62 |                    | 1/8W 68K $\Omega$  |                           |                    |
| 9422-1046-62 |              | 1/8W 100K $\Omega$ |                    |                           |                    |
| R22          | 9422-1546-62 |                    | 1/8W 150K $\Omega$ | } 1                       |                    |
|              | 9432-1226-61 |                    | 1/8W 1.2K $\Omega$ |                           |                    |
|              | 9432-3926-61 |                    | 1/8W 3.9K $\Omega$ |                           |                    |
| R23          | 9432-7526-61 |                    | 1/8W 7.5K $\Omega$ | } 0 or 1                  |                    |
|              | 9432-2436-62 |                    | 1/8W 24K $\Omega$  |                           |                    |
|              | 9432-2736-62 |                    | 1/8W 27K $\Omega$  |                           |                    |
|              | 9432-3336-62 |                    | 1/8W 33K $\Omega$  |                           |                    |
|              | 9432-3936-62 |                    | 1/8W 39K $\Omega$  |                           |                    |
|              | 9432-5136-62 |                    | 1/8W 51K $\Omega$  |                           |                    |
|              | 9432-6836-62 |                    | 1/8W 68K $\Omega$  |                           |                    |
|              | 9432-1046-62 |                    | 1/8W 100K $\Omega$ |                           |                    |
| 9432-2046-62 |              | 1/8W 200K $\Omega$ |                    |                           |                    |
| VR4          | 9472-2239-63 |                    | Variable resistor  | EVM14G 22K $\Omega$       | 1                  |
| VR10         | 9472-3329-63 |                    |                    | EVM 3.3K $\Omega$         | 1                  |
| C1           | 9535-1555-36 |                    | Condenser          | 202 1.5 $\mu$ F/35V       | 1                  |
| C4           | 9533-3355-63 |                    |                    | DN 3.3 $\mu$ F/16V        | 1                  |
| C5           | 9535-4745-36 |                    |                    | 202 0.47 $\mu$ F/35V      | 1                  |
| C6           | 9534-6845-61 |                    |                    | CS81E 0.68 $\mu$ F/20V    | 1                  |
| C7           | 9564-3324-61 |                    |                    | CM21WR 3300PF/25V         | 1                  |
| C8           | 9531-1575-61 |                    |                    | 202 150 $\mu$ F/3.15V     | 1                  |
| C9           | 9531-1075-63 |                    |                    | DN 100 $\mu$ F/3.15V      | 1                  |
| C11          | 9565-4738-64 |                    |                    | CM22YU 0.047 $\mu$ F/50V  | 1                  |
| C12          | 9565-0200-61 |                    |                    | GR40CK 2PF/50V            | 1                  |
| C13 C14      | 9565-1234-61 |                    |                    | GR40W5R 0.012 $\mu$ F/50V | 2                  |
| C15 C16      | 9564-3005-62 |                    |                    | CM21CH 30PF/25V           | 2                  |
| C17          | 9564-1025-61 |                    |                    | CM21WR 1000PF/25V         | 1                  |
| C19          | 9564-1514-62 |                    |                    | CM21SL 150PF/25V          | 1                  |
| l 1          | 2017-4401-C2 |                    |                    | Lead wire Black           | Junfuron cord l=33 |
| l 25         | 9391-0507-07 |                    | Purple             | l=45                      | 1                  |



■ Lead wires list (2017-0401-81)

| Symbol     | Part's No.   | Color  | Type            | Qty |
|------------|--------------|--------|-----------------|-----|
| g1         | 2017-4401-02 | Black  | φ 0.33          | 1   |
| g2         | 2017-4402-02 | Black  | φ 0.90          | 1   |
| g3         | 9391-0507-00 | Black  | φ 0.05/7 φ 0.80 | 1   |
| g4         | 9391-0507-00 | Black  | φ 0.05/7 φ 0.70 | 1   |
| g5         | 9391-0807-00 | Black  | φ 0.08/7 φ 0.40 | 1   |
| g6-1       | 9391-0507-00 | Black  | φ 0.05/7 φ 0.30 | 1   |
| g6-2, g6-3 | 9391-0507-00 | Black  | φ 0.05/7 φ 0.25 | 2   |
| g7         | 9391-0807-01 | Brown  | φ 0.08/7 φ 1.05 | 1   |
| g8         | 9391-0507-01 | Brown  | φ 0.05/7 φ 0.70 | 1   |
| g9         | 9391-0807-01 | Brown  | φ 0.08/7 φ 0.25 | 1   |
| g10        | 9391-0507-02 | Red    | φ 0.05/7 φ 0.90 | 1   |
| g11        | 9391-0507-02 | Red    | φ 0.05/7 φ 0.65 | 1   |
| g12        | 9391-0807-02 | Red    | φ 0.08/7 φ 0.25 | 1   |
| g13        | 9391-0507-03 | Orange | φ 0.05/7 φ 0.90 | 1   |
| g14        | 9391-0507-03 | Orange | φ 0.05/7 φ 0.55 | 1   |
| g15        | 9391-0807-03 | Orange | φ 0.08/7 φ 0.45 | 1   |
| g16        | 9391-0507-03 | Orange | φ 0.05/7 φ 0.35 | 1   |
| g17        | 9391-0807-04 | Yellow | φ 0.08/7 φ 1.15 | 1   |
| g18        | 9391-0507-04 | Yellow | φ 0.05/7 φ 0.65 | 1   |
| g19        | 9391-0507-05 | Green  | φ 0.05/7 φ 0.60 | 1   |
| g20        | 9391-0507-05 | Green  | φ 0.05/7 φ 0.25 | 1   |
| g21        | 9391-0507-06 | Blue   | φ 0.05/7 φ 1.20 | 1   |
| g22        | 9391-0507-06 | Blue   | φ 0.05/7 φ 0.65 | 1   |
| g23        | 9391-0807-07 | Purple | φ 0.08/7 φ 0.95 | 1   |
| g24        | 9391-0507-07 | Purple | φ 0.05/7 φ 0.85 | 1   |
| g25        | 9391-0507-07 | Purple | φ 0.05/7 φ 0.45 | 1   |
| g26        | 9391-0807-07 | Purple | φ 0.08/7 φ 0.30 | 1   |
| g27        | 9391-0807-08 | Gray   | φ 0.08/7 φ 0.50 | 1   |
| g29        | 9391-0507-08 | Gray   | φ 0.05/7 φ 0.50 | 1   |
| g30        | 9391-0807-09 | White  | φ 0.08/7 φ 1.45 | 1   |
| g31        | 9391-0807-00 | Black  | φ 0.08/7 φ 1.55 | 1   |
| g32        | 9391-0807-00 | Black  | φ 0.08/7 φ 0.65 | 1   |
| g33        | 9391-0807-00 | Black  | φ 0.08/7 φ 0.45 | 1   |
| g34        | 9391-0807-00 | Black  | φ 0.08/7 φ 0.45 | 1   |
| g35        | 9391-0807-01 | Brown  | φ 0.08/7 φ 0.25 | 1   |
| g36        | 9391-0807-02 | Red    | φ 0.08/7 φ 0.75 | 1   |
| g37        | 9391-0807-02 | Red    | φ 0.08/7 φ 0.35 | 1   |
| g38        | 9391-0807-02 | Red    | φ 0.08/7 φ 0.25 | 1   |
| g39        | 9391-0807-03 | Orange | φ 0.08/7 φ 0.85 | 1   |
| g40        | 9391-0807-04 | Yellow | φ 0.08/7 φ 1.50 | 1   |
| g41        | 9391-0807-05 | Green  | φ 0.08/7 φ 0.40 | 1   |
| g42        | 9391-0807-06 | Blue   | φ 0.08/7 φ 0.45 | 1   |
| g43        | 9391-0807-07 | Purple | φ 0.08/7 φ 1.05 | 1   |
| g44        | 9391-0807-07 | Purple | φ 0.08/7 φ 0.65 | 1   |
| g45        | 9391-0807-07 | Purple | φ 0.08/7 φ 0.50 | 1   |
| g46        | 9391-0807-08 | Gray   | φ 0.08/7 φ 1.40 | 1   |
| g47        | 9391-0807-08 | Gray   | φ 0.08/7 φ 0.75 | 1   |
| g48        | 9391-0807-08 | Gray   | φ 0.08/7 φ 0.55 | 1   |
| g49        | 9391-0807-08 | Gray   | φ 0.08/7 φ 0.60 | 1   |
| g50        | 9391-0807-09 | White  | φ 0.08/7 φ 0.55 | 1   |
| g51        | 9391-0807-09 | White  | φ 0.08/7 φ 0.30 | 1   |
| g52        | 9391-0507-05 | Green  | φ 0.05/7 φ 0.35 | 1   |
| g53        | 9391-0507-02 | Red    | φ 0.05/7 φ 0.25 | 1   |
| g54        | 9391-0507-08 | Gray   | φ 0.05/7 φ 0.25 | 1   |
| g55        | 9391-0807-04 | Yellow | φ 0.08/7 φ 0.80 | 1   |
| g57        | 9391-0807-04 | Yellow | φ 0.08/7 φ 0.55 | 1   |
| g58        | 9391-0807-06 | Blue   | φ 0.08/7 φ 0.65 | 1   |
| g59        | 9391-0807-02 | Red    | φ 0.08/7 φ 0.25 | 1   |
| g60        | 9391-0807-00 | Black  | φ 0.08/7 φ 0.10 | 1   |

■ g1 (2017-4401-02) and g2 (2017-4402-02) are supplied with specified length above as service part.

Other lead wires than g1 and g2 are supplied with meter (m) each.

■ g1 (2017-4401-02)、g2 (2017-4402-02) は、上記指定の長さで供給します。それ以外は、1m単位で供給します。

# Lead wires list (2017-0401-32, 2017-0401-33, 2017-0401-82)

\*2017-0401-82, whose flexible P.C. board has non AE lock circuit, has the same wirings except #55 since it has a common printed wiring. (#55 is unnecessary.)

\*2017-0401-82は、AEロック回路の無いフレキシブル基板ですが、フレキシブル基板の配線が#55以外配線は、全て同じです。( #55は配線しない。)

| Symbol     | Parts No.    | Color  | Type          | Qty |
|------------|--------------|--------|---------------|-----|
| #1         | 2017-4401-02 | Black  | φ0.33         | 1   |
| #2         | 2017-4402-02 | Black  | φ0.90         | 1   |
| #3         | 9391-0507-00 | Black  | φ0.05/7 φ0.80 | 1   |
| #4         | 9391-0507-00 | Black  | φ0.05/7 φ0.70 | 1   |
| #5         | 9391-0807-00 | Black  | φ0.08/7 φ0.40 | 1   |
| #6-1       | 9391-0507-00 | Black  | φ0.05/7 φ0.30 | 1   |
| #6-2, #6-3 | 9391-0507-00 | Black  | φ0.05/7 φ0.25 | 2   |
| #7         | 9391-0807-01 | Brown  | φ0.08/7 φ1.05 | 1   |
| #8         | 9391-0507-01 | Brown  | φ0.05/7 φ1.10 | 1   |
| #9         | 9391-0807-01 | Brown  | φ0.08/7 φ0.25 | 1   |
| #10        | 9391-0507-01 | Red    | φ0.05/7 φ0.90 | 1   |
| #11        | 9391-0507-01 | Red    | φ0.05/7 φ0.65 | 1   |
| #12        | 9391-0807-01 | Red    | φ0.08/7 φ0.20 | 1   |
| #13        | 9391-0507-03 | Orange | φ0.05/7 φ0.90 | 1   |
| #14        | 9391-0507-03 | Orange | φ0.05/7 φ0.55 | 1   |
| #15        | 9391-0807-03 | Orange | φ0.08/7 φ0.45 | 1   |
| #16        | 9391-0507-03 | Orange | φ0.05/7 φ0.35 | 1   |
| #17        | 9391-0807-04 | Yellow | φ0.08/7 φ1.15 | 1   |
| #18        | 9391-0507-04 | Yellow | φ0.05/7 φ0.65 | 1   |
| #19        | 9391-0507-05 | Green  | φ0.05/7 φ0.60 | 1   |
| #20        | 9391-0507-05 | Green  | φ0.05/7 φ0.25 | 1   |
| #21        | 9391-0507-06 | Blue   | φ0.05/7 φ1.20 | 1   |
| #22        | 9391-0507-06 | Blue   | φ0.05/7 φ0.65 | 1   |
| #23        | 9391-0807-07 | Purple | φ0.08/7 φ0.95 | 1   |
| #24        | 9391-0507-07 | Purple | φ0.05/7 φ0.85 | 1   |
| #25        | 9391-0507-07 | Purple | φ0.05/7 φ0.45 | 1   |
| #26        | 9391-0807-07 | Purple | φ0.08/7 φ0.30 | 1   |
| #27        | 9391-0807-08 | Gray   | φ0.08/7 φ0.50 | 1   |
| #29        | 9391-0507-08 | Gray   | φ0.05/7 φ0.50 | 1   |
| #30        | 9391-0807-09 | White  | φ0.08/7 φ1.45 | 1   |
| #31        | 9391-0807-00 | Black  | φ0.08/7 φ1.55 | 1   |
| #32        | 9391-0807-00 | Black  | φ0.08/7 φ0.65 | 1   |
| #33        | 9391-0807-00 | Black  | φ0.08/7 φ0.45 | 1   |
| #34        | 9391-0807-00 | Black  | φ0.08/7 φ0.45 | 1   |
| #35        | 9391-0807-01 | Brown  | φ0.08/7 φ0.25 | 1   |
| #36        | 9391-0807-02 | Red    | φ0.08/7 φ0.75 | 1   |
| #37        | 9391-0807-02 | Red    | φ0.08/7 φ0.35 | 1   |
| #38        | 9391-0807-02 | Red    | φ0.08/7 φ0.25 | 1   |
| #39        | 9391-0807-03 | Orange | φ0.08/7 φ0.40 | 1   |
| #40        | 9391-0807-04 | Yellow | φ0.08/7 φ1.50 | 1   |
| #41        | 9391-0807-05 | Green  | φ0.08/7 φ0.40 | 1   |
| #42        | 9391-0807-06 | Blue   | φ0.08/7 φ0.45 | 1   |
| #43        | 9391-0807-07 | Purple | φ0.08/7 φ1.05 | 1   |
| #44        | 9391-0807-07 | Purple | φ0.08/7 φ0.65 | 1   |
| #45        | 9391-0807-07 | Purple | φ0.08/7 φ0.50 | 1   |
| #46        | 9391-0807-08 | Gray   | φ0.08/7 φ1.40 | 1   |
| #47        | 9391-0807-08 | Gray   | φ0.08/7 φ0.75 | 1   |
| #48        | 9391-0807-08 | Gray   | φ0.08/7 φ0.55 | 1   |
| #49        | 9391-0807-08 | Gray   | φ0.08/7 φ0.60 | 1   |
| #50        | 9391-0807-09 | White  | φ0.08/7 φ0.55 | 1   |
| #51        | 9391-0807-09 | White  | φ0.08/7 φ0.30 | 1   |
| #52        | 9391-0507-05 | Green  | φ0.05/7 φ0.35 | 1   |
| #53        | 9391-0507-02 | Red    | φ0.05/7 φ0.25 | 1   |
| #54        | 9391-0507-08 | Gray   | φ0.05/7 φ0.25 | 1   |
| #55        | 9391-0807-04 | Yellow | φ0.08/7 φ0.80 | 1   |
| #62        | 9391-0807-09 | White  | φ0.08/7 φ0.25 | 1   |
| #63        | 9391-0807-00 | Black  | φ0.08/7 φ0.25 | 1   |

#1 (2017-4401-02) and #2 (2017-4402-02) are supplied with specified length above as service part.

Other lead wires than #1 and #2 are supplied with meter (m) each.

#1 (2017-4401-02)、#2 (2017-4402-02) は、上記指定の長さで供給しますが、それ以外は、1m単位で供給します。




■ Lead wires list (2017-0401-34,2017-0401-35)

| Symbol   | Parts No.       | Color  | Type         | Qty |
|----------|-----------------|--------|--------------|-----|
| 1        | 2017-4401-02    | Black  | 1=33         | 1   |
| 2        | 2017-4402-02    | Black  | 1=90         | 1   |
| 3        | 9391-0507-00    | Black  | 0.05/7 1=80  | 1   |
| 4        | 9391-0507-00    | Black  | 0.05/7 1=70  | 1   |
| 5        | 9391-0807-00    | Black  | 0.08/7 1=40  | 1   |
| 6-1      | 9391-0507-00    | Black  | 0.05/7 1=30  | 1   |
| 6-2, 6-3 | 9391-0507-00    | Black  | 0.05/7 1=25  | 2   |
| 7        | 9391-0807-01    | Brown  | 0.08/7 1=105 | 1   |
| 8        | 9391-0507-01    | Brown  | 0.05/7 1=70  | 1   |
| 9        | 9391-0807-01    | Brown  | 0.08/7 1=25  | 1   |
| 10       | 9391-0507-02    | Red    | 0.05/7 1=90  | 1   |
| 11       | 9391-0507-02    | Red    | 0.05/7 1=65  | 1   |
| 12-2     | 12 9391-0807-02 | Red    | 0.08/7 1=25  | 2   |
| 13       | 9391-0507-03    | Orange | 0.05/7 1=90  | 1   |
| 14       | 9391-0507-03    | Orange | 0.05/7 1=55  | 1   |
| 15       | 9391-0807-03    | Orange | 0.08/7 1=45  | 1   |
| 16       | 9391-0507-03    | Orange | 0.05/7 1=35  | 1   |
| 17       | 9391-0807-04    | Yellow | 0.08/7 1=115 | 1   |
| 18       | 9391-0507-04    | Yellow | 0.05/7 1=65  | 1   |
| 19       | 9391-0507-05    | Green  | 0.05/7 1=60  | 1   |
| 20       | 9391-0507-05    | Green  | 0.05/7 1=25  | 1   |
| 21       | 9391-0507-06    | Blue   | 0.05/7 1=120 | 1   |
| 22       | 9391-0507-06    | Blue   | 0.05/7 1=65  | 1   |
| 23       | 9391-0807-07    | Purple | 0.08/7 1=95  | 1   |
| 24       | 9391-0507-07    | Purple | 0.05/7 1=85  | 1   |
| 25       | 9391-0507-07    | Purple | 0.05/7 1=45  | 1   |
| 26       | 9391-0807-07    | Purple | 0.08/7 1=30  | 1   |
| 27       | 9391-0807-08    | Gray   | 0.08/7 1=50  | 1   |
| 29       | 9391-0507-08    | Gray   | 0.05/7 1=50  | 1   |
| 30       | 9391-0807-09    | White  | 0.08/7 1=145 | 1   |
| 31       | 9391-0807-00    | Black  | 0.08/7 1=155 | 1   |
| 32       | 9391-0807-00    | Black  | 0.08/7 1=65  | 1   |
| 33       | 9391-0807-00    | Black  | 0.08/7 1=45  | 1   |
| 34       | 9391-0807-00    | Black  | 0.08/7 1=45  | 1   |
| 35       | 9391-0807-01    | Brown  | 0.08/7 1=25  | 1   |
| 36       | 9391-0807-02    | Red    | 0.08/7 1=75  | 1   |
| 37       | 9391-0807-02    | Red    | 0.08/7 1=35  | 1   |
| 38       | 9391-0807-02    | Red    | 0.08/7 1=25  | 1   |
| 39       | 9391-0807-03    | Orange | 0.08/7 1=40  | 1   |
| 40       | 9391-0807-04    | Yellow | 0.08/7 1=150 | 1   |
| 41       | 9391-0807-05    | Green  | 0.08/7 1=40  | 1   |
| 42       | 9391-0807-06    | Blue   | 0.08/7 1=45  | 1   |
| 43       | 9391-0807-07    | Purple | 0.08/7 1=105 | 1   |
| 44       | 9391-0807-07    | Purple | 0.08/7 1=65  | 1   |
| 45       | 9391-0807-07    | Purple | 0.08/7 1=50  | 1   |
| 46       | 9391-0807-08    | Gray   | 0.08/7 1=140 | 1   |
| 47       | 9391-0807-08    | Gray   | 0.08/7 1=50  | 1   |
| 48       | 9391-0807-08    | Gray   | 0.08/7 1=55  | 1   |
| 49       | 9391-0807-08    | Gray   | 0.08/7 1=35  | 1   |
| 50       | 9391-0807-09    | White  | 0.08/7 1=55  | 1   |
| 51       | 9391-0807-09    | White  | 0.08/7 1=30  | 1   |
| 52       | 9391-0507-05    | Green  | 0.05/7 1=35  | 1   |
| 55       | 9391-0807-04    | Yellow | 0.08/7 1=80  | 1   |
| 62       | 9391-0807-09    | White  | 0.08/7 1=25  | 1   |
| 63       | 9391-0807-00    | Black  | 0.08/7 1=25  | 1   |

1 (2017-4401-02) and 2 (2017-4402-02) are supplied with specified length above as service part.

Other lead wires than 1 and 2 are supplied with meter (m) each.

1 (2017-4401-02)、2 (2017-4402-02) は、上記指定の長さで供給します。それ以外は、1m単位で供給します。

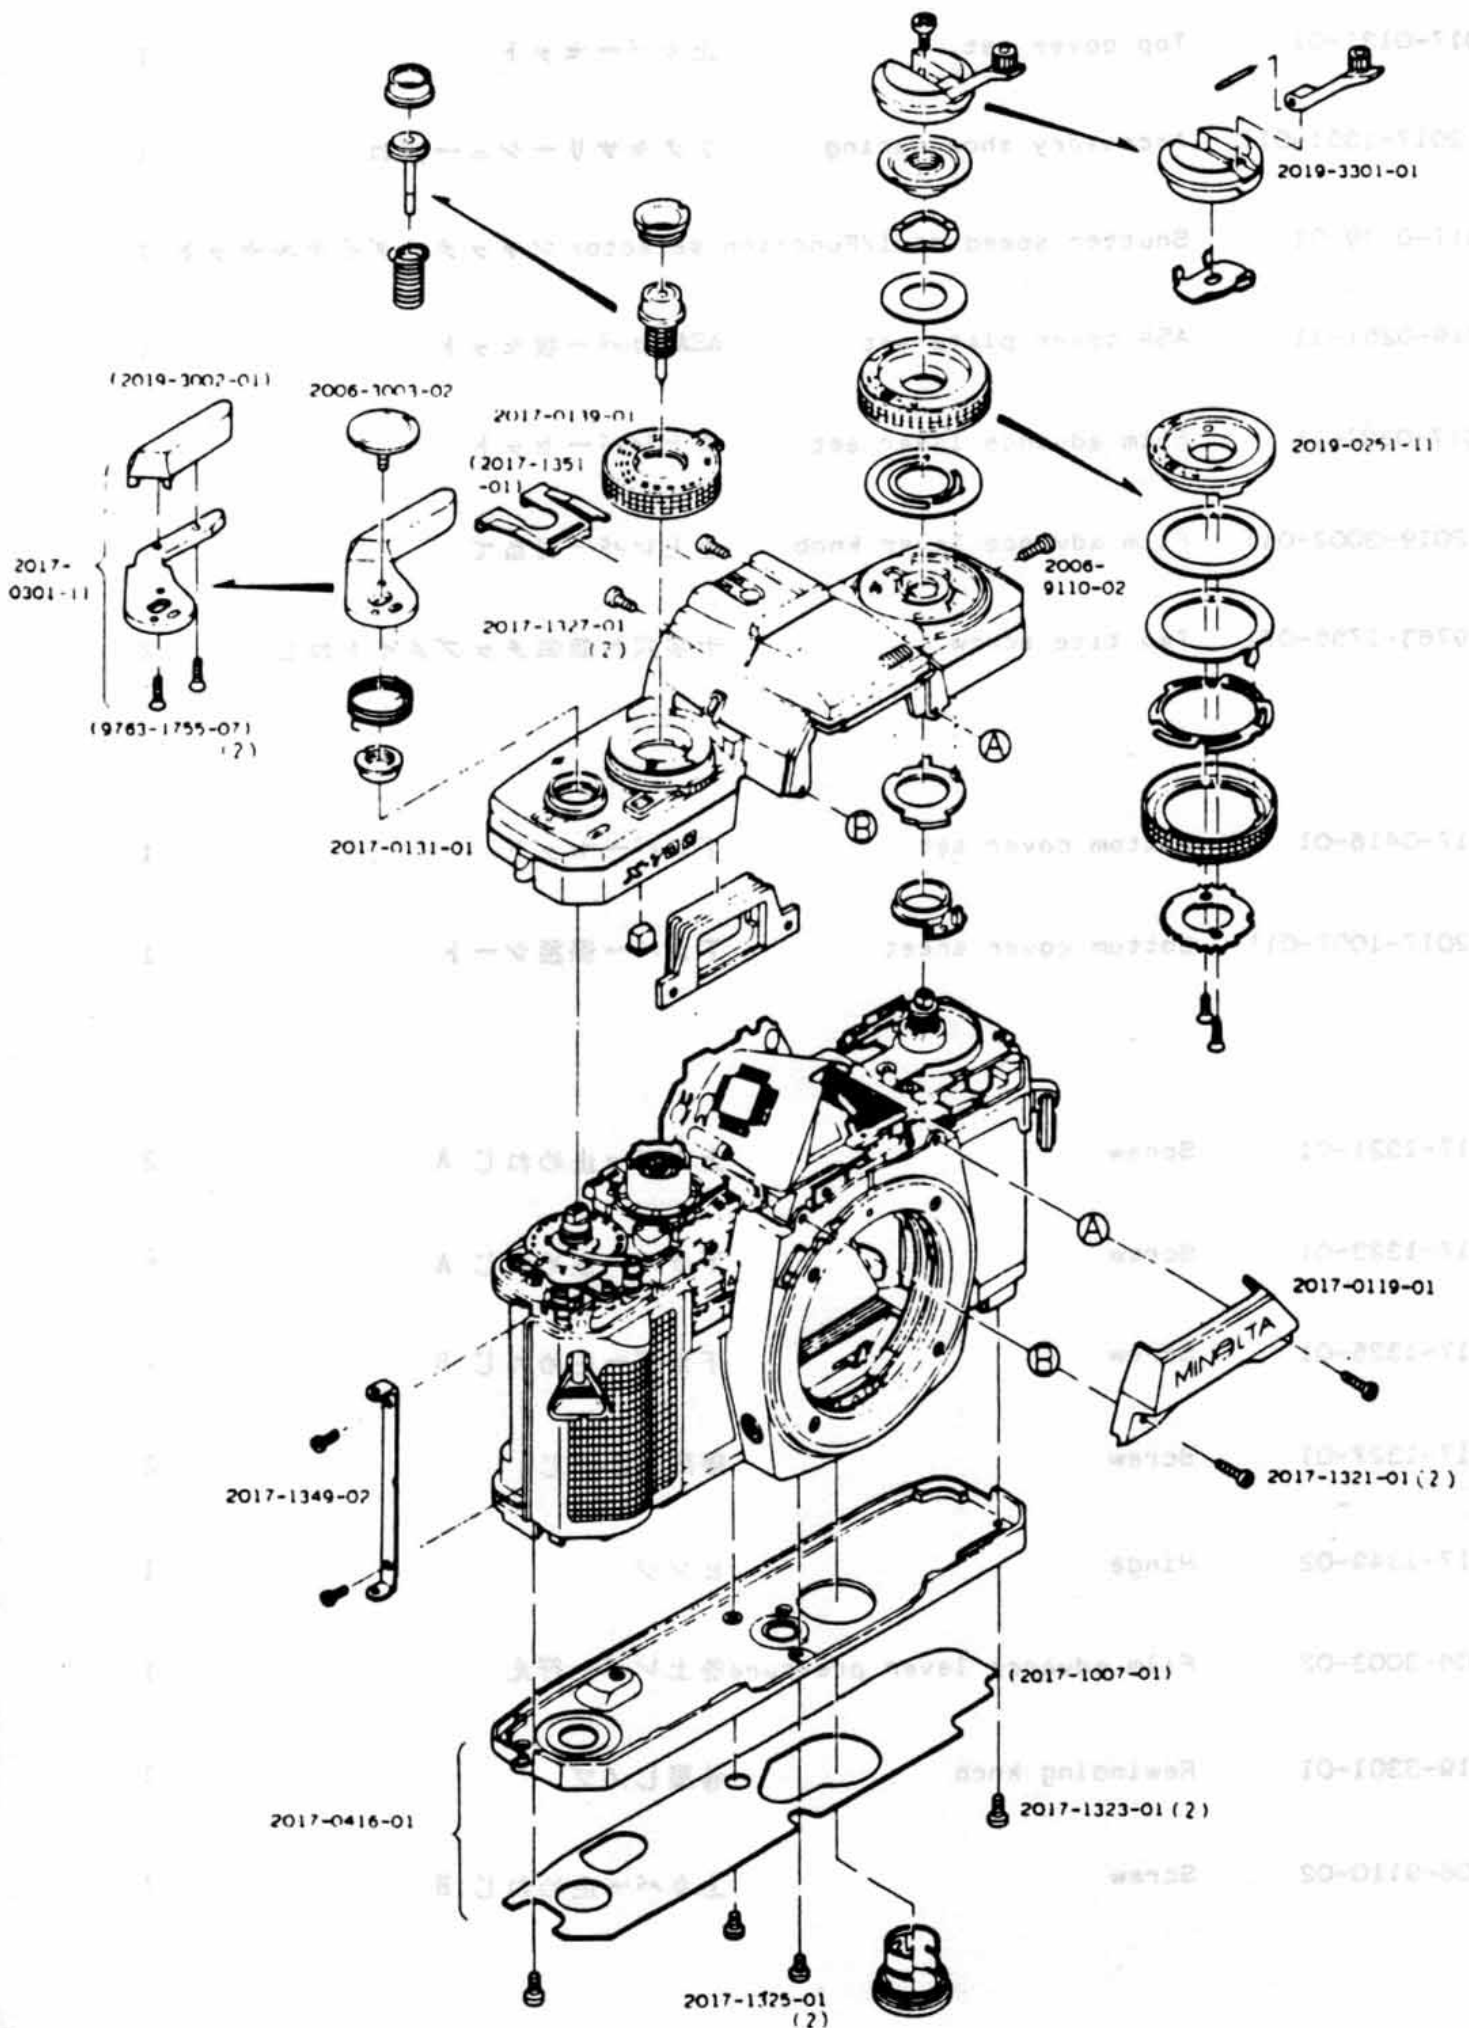



| Part No.       | Part Name                                         | Qty |
|----------------|---------------------------------------------------|-----|
| 2017-0119-01   | Front top cover set 上部正面カバーセット                    | 1   |
| 2017-0131-01   | Top cover set 上カバーセット                             | 1   |
| (2017-1351-01) | Accessory shoe spring アクセサリーシューばね                 | 1   |
| 2017-0139-01   | Shutter speed dial/Function selector シャッターダイヤルセット | 1   |
| 2019-0251-11   | ASA cover plate set ASA カバー板セット                   | 1   |
| 2017-0301-11   | Film advance lever set 巻上レバーセット                   | 1   |
| (2019-3002-01) | Film advance lever knob 巻上レバー指当て                  | 1   |
| (9763-1755-07) | Tap tite screw 十字穴付皿頭タップタイトねじ                     | 2   |
| 2017-0416-01   | Bottom cover set 下カバーセット                          | 1   |
| (2017-1007-01) | Bottom cover sheet 下カバー保護シート                      | 1   |
| 2017-1321-01   | Screw 上カバー止めねじ A                                  | 2   |
| 2017-1323-01   | Screw 下カバー止めねじ A                                  | 2   |
| 2017-1325-01   | Screw 下カバー止めねじ B                                  | 2   |
| 2017-1327-01   | Screw 接眼止めねじ                                      | 2   |
| 2017-1349-02   | Hinge ヒンジ                                         | 1   |
| 2006-3003-02   | Film advance lever pressure 巻上レバー押え               | 1   |
| 2019-3301-01   | Rewinding knob 巻戻しノブ                              | 1   |
| 2006-9110-02   | Screw 上カバー止めねじ B                                  | 1   |




Modification of the concerning the ● or ● marked parts are mentioned in P. 1~P. 20. Carefully read explanations 1~4 beforehand.

このページ以降はP. 1~P. 20で●印, 又は●印のついている部品の変更内容等について記載しています。神内1~4をよく理解の上で利用して下さい。

1. This type of modification is classified into Type A~B according to the frequency of modification. The differences are shown in a following diagram.
2. When the modification of a part also involves the modification of other parts, the related parts are listed in a column below the first in the diagram.
3. When there are related parts, one part cannot be replaced individually unless otherwise noted. It must be replaced as a set with the other related parts.
4. For those of previous type which cannot be supplied, an (X) mark is attached to the part No. If it is necessary to replace (X)-marked parts, replace them with those of another type (as a set if related parts are available).

1. 変更の回数によってType A~Bに分け、各タイプごとの違いを表の形式で記載しています。
2. その部品単独の変更でなく、関連する変更部品がある場合は表の縦の列で関連変更部品（使用可能な部品の組み合わせ）を示しています。
3. 関連変更部品がある場合、止載のない限りその部品単独では交換できません。関連部品とセットであれば他のタイプに交換は可能です。
4. 旧タイプの部品で供給できない部品には、部品番号の後に(X)の印をつけてあります。(X)印の部品で交換の必要がある場合は他のタイプに（関連部品があればセットで）交換して下さい。

### ■ Film advance lever / 巻上レバー


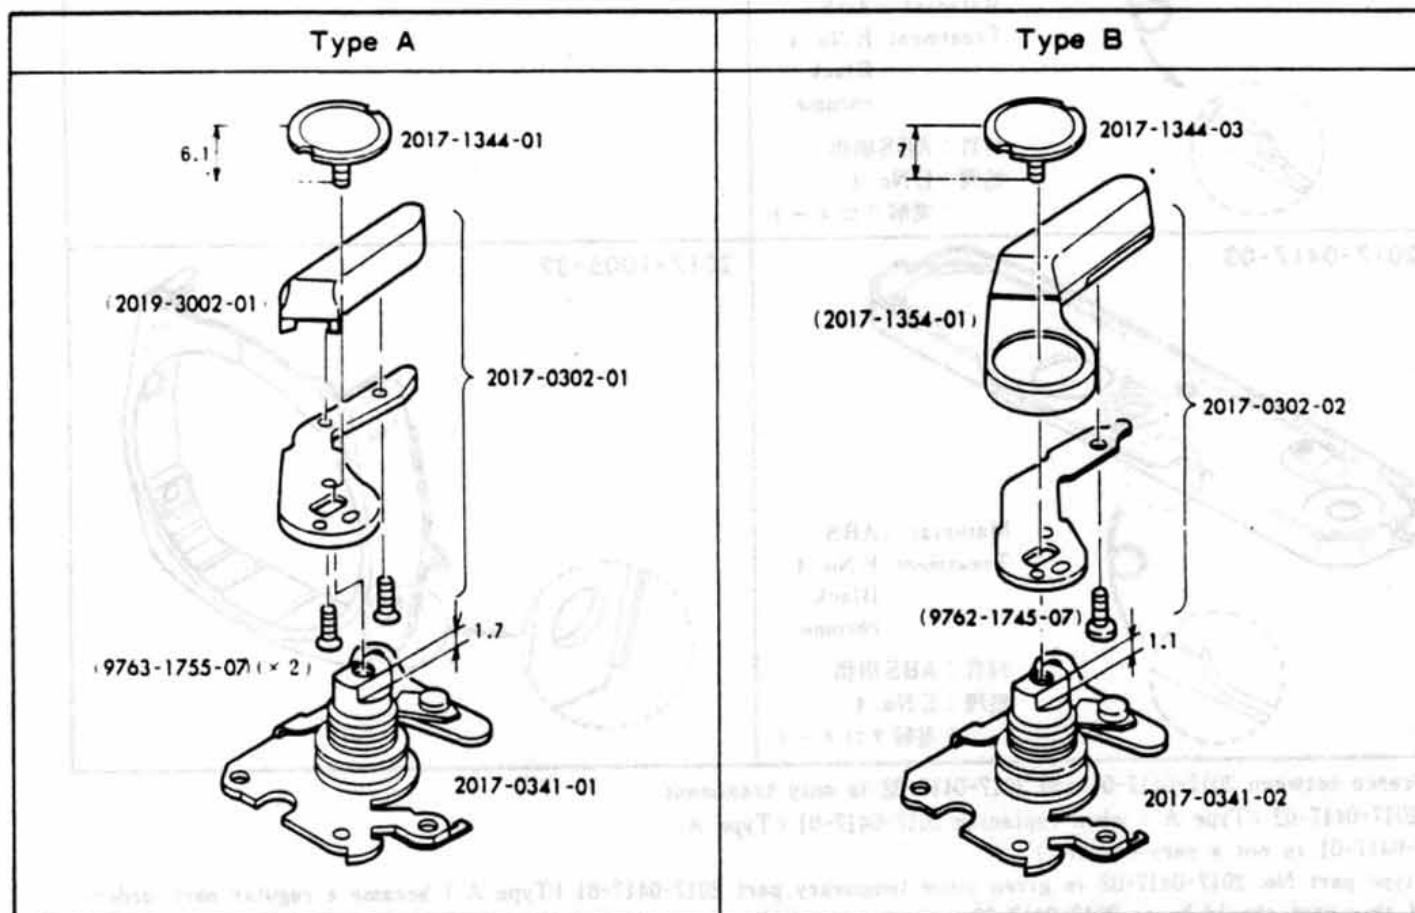

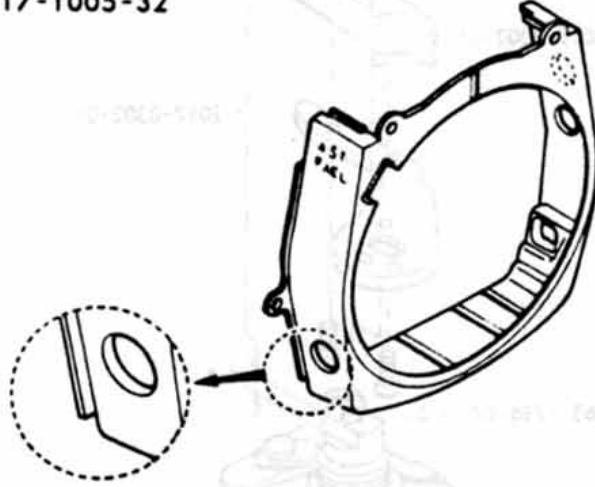



- 2017-0341-02 (Type B) can be used instead of 2017-0341-01 (Type A), however, converse using is not allowed.
- 2017-0341-02 (Type B) は、2017-0341-01 (Type A) の代りに使用可能、逆は不可。

- |                            |                                     |
|----------------------------|-------------------------------------|
| 2017-0302                  | Film advance lever set 巻上レバーセット     |
| 2017-0341                  | Winding base plate B set 巻取台板Bセット   |
| 2017-1344                  | Film advance lever pressure 巻上レバー押え |
| 2017-1354 }<br>2019-3002 } | Film advance lever knob 巻上レバー指当     |
| 9762-1745-07               | Tap tite screw 十字穴付なべ頭タップタイトねじ      |
| 9763-1755-07               | Tap tite screw 十字穴付半丸皿頭タップタイトねじ     |

■ Bottom cover / 下カバー

■ Front cover / 前カバー



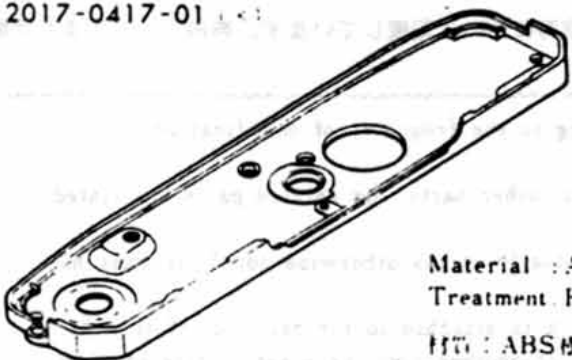
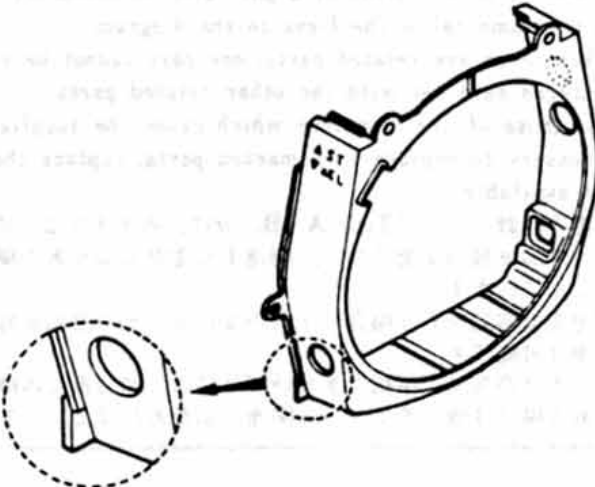
|                                                                              |                                                                                                                                                                                                                                        |                                                                                                          |
|------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <p style="writing-mode: vertical-rl; transform: rotate(180deg);">Type A</p>  | <p>2017-0417-01</p>  <p>Material : ABS<br/>Treatment : E No. 4<br/>材質 : ABS樹脂<br/>処理 : E No. 4</p>                                                     | <p>2017-1005-31</p>    |
| <p style="writing-mode: vertical-rl; transform: rotate(180deg);">Type A'</p> | <p>2017-0417-02<br/>2017-0417-81</p>  <p>Material : ABS<br/>Treatment : E No. 4<br/>: Black chrome<br/>材質 : ABS樹脂<br/>処理 : E No. 4<br/>: 電解クロメート</p> | <p>2017-1005-32</p>  |
| <p style="writing-mode: vertical-rl; transform: rotate(180deg);">Type B</p>  | <p>2017-0417-03</p>  <p>Material : ABS<br/>Treatment : E No. 4<br/>Black chrome<br/>材質 : ABS樹脂<br/>処理 : E No. 4<br/>: 電解クロメート</p>                   |                                                                                                          |

- Difference between 2017-0417-01 and 2017-0417-02 is only treatment.
- Use 2017-0417-02 (Type A') when replacing 2017-0417-01 (Type A).  
(2017-0417-01 is not a service part.)
- New type part No. 2017-0417-02 is given since temporary part 2017-0417-81 (Type A') became a regular part, ordering of this part should be as 2017-0417-02.
- 2017-0417-01と2017-0417-02の違いは処理のみです
- 2017-0417-01 (Type A) 交換時は2017-0417-02 (Type A') に交換して下さい。  
(2017-0417-01は部品供給致しません)
- 2017-0417-81 (Type A') は、臨時部品扱いでしたが正規部品となったため2017-0417-02と部番のみ変更しました  
部品注文時は2017-0417-02で行なって下さい。

2017-0417 Bottom cover set 下カバーセット  
2017-1005 Front cover 前カバー







■ Top cover / 上カバー
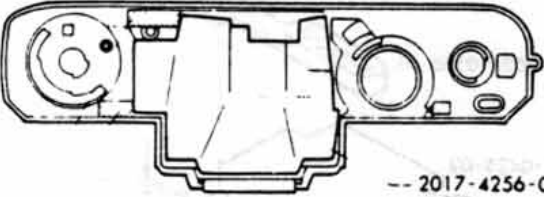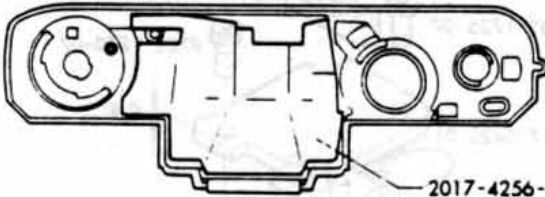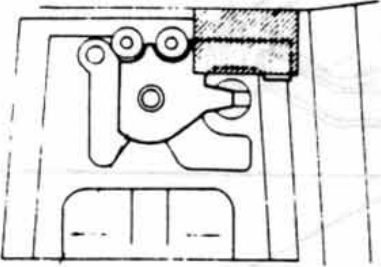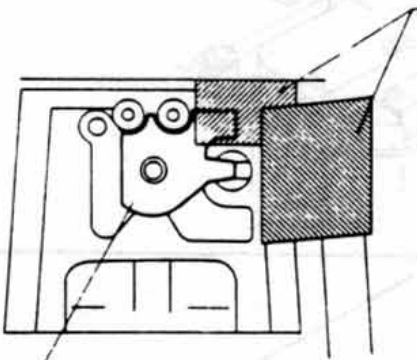
| Type A                                                                                                                                                                                         | Type B                                                                                                                                                                   |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>2017-0132-01 (Black model)<br/>2017-0131-01 (Chrome model)</p>  <p>-- 2017-4256-01</p> <p>← Tape ... 2</p> | <p>2017-0132-01 (Black model)<br/>2017-0131-01 (Chrome model)</p>  <p>2017-4256-02</p> |
|  <p>2017-1070-01 ... 2</p> <p>--- 2017-1069-01</p>                                                            |  <p>2017-1070-01</p> <p>2017-1069-02</p>                                               |


- 4256-02 and 1069-02 (Type B) can be used instead of 4256-01, 1069-01 (Type A). For converse using, needing tape and 1070-01.
- 4256-02, 1069-02 (Type B) は、4256-01, 1069-01 (Type A) の代りに使用可能、逆の場合はTapeと1070-01を付ければ使用可能

■ Strap hanger / 吊環

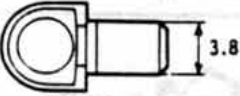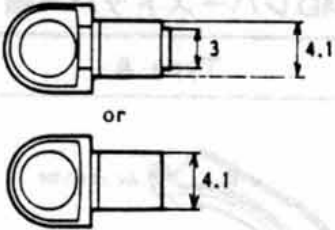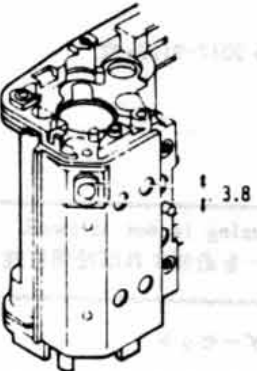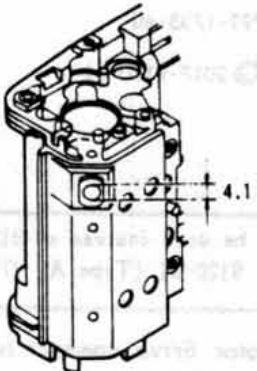
| Type A                                                                                                             | Type B                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <p>2017-0113-01</p>  <p>3.8</p> | <p>2017-0113-04</p>  <p>3 4.1</p> <p>or</p> <p>4.1</p> |
| <p>Body</p>  <p>3.8</p>         | <p>Body</p>  <p>4.1</p>                                |

- 2017-0113 Strap hanger set 吊環セット  
 2017-0131 Top cover set for 2017-100  
 2017-0132 Top cover set for 2017-200  
 2017-1069 Contact isolation sheet コンタクト接片絶縁シート  
 2017-1070 Contact isolation tape コンタクト接点絶縁テープ  
 2017-4256 Top cover isolation sheet 上カバー絶縁シート



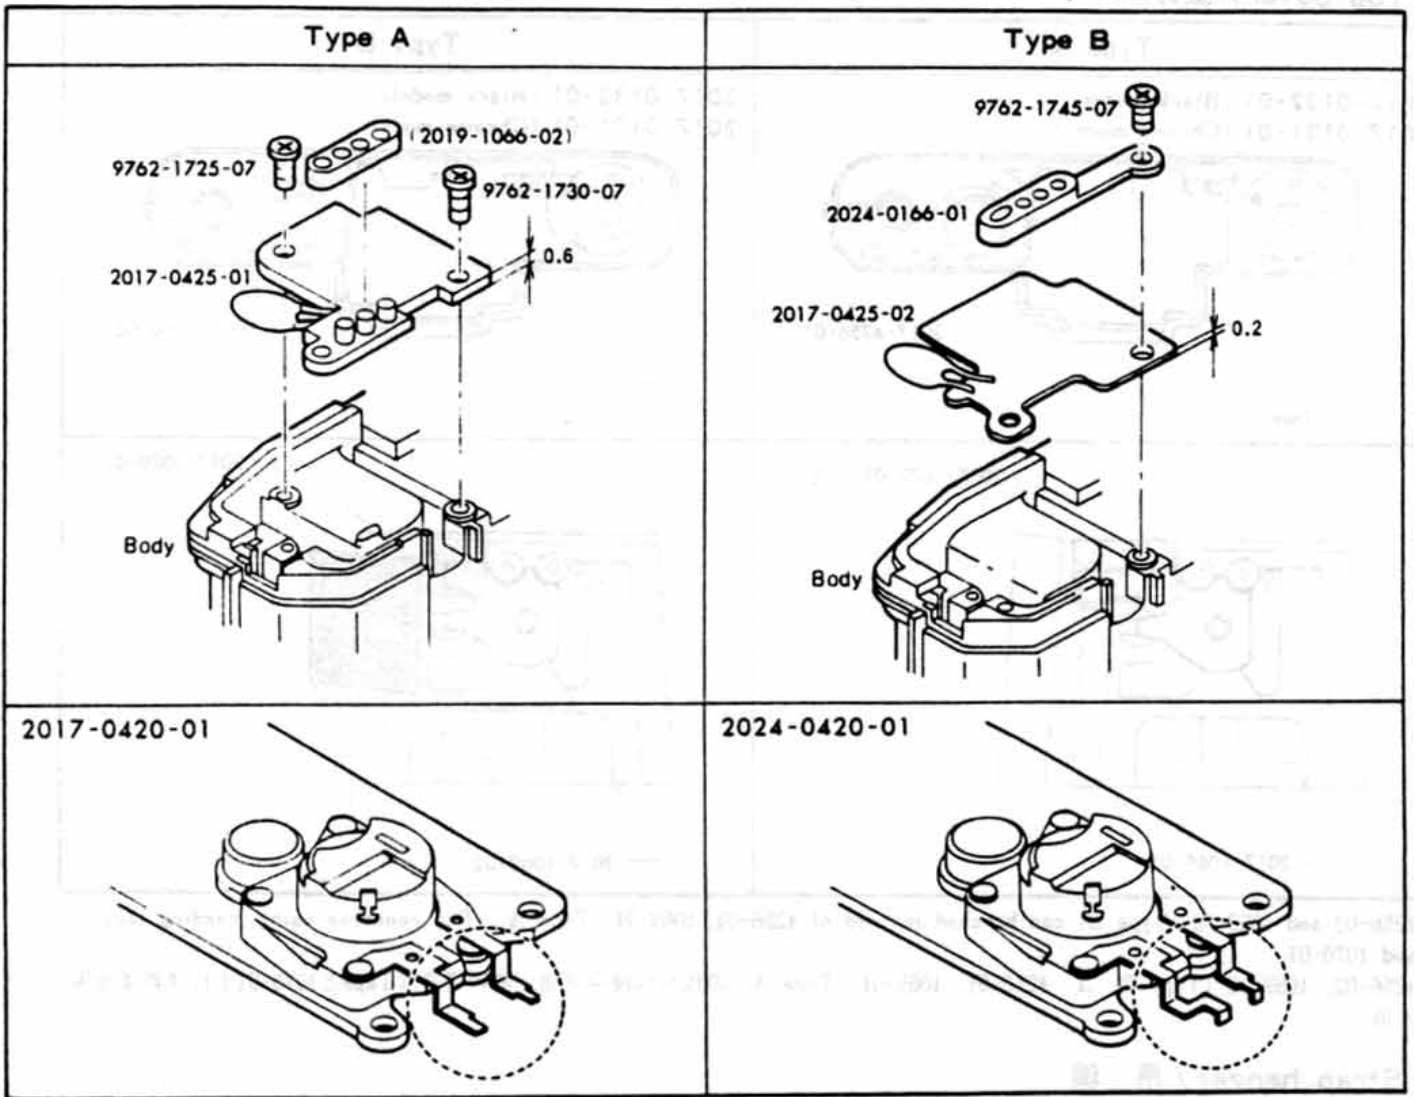


■ Screw / MDレバーストッパー軸

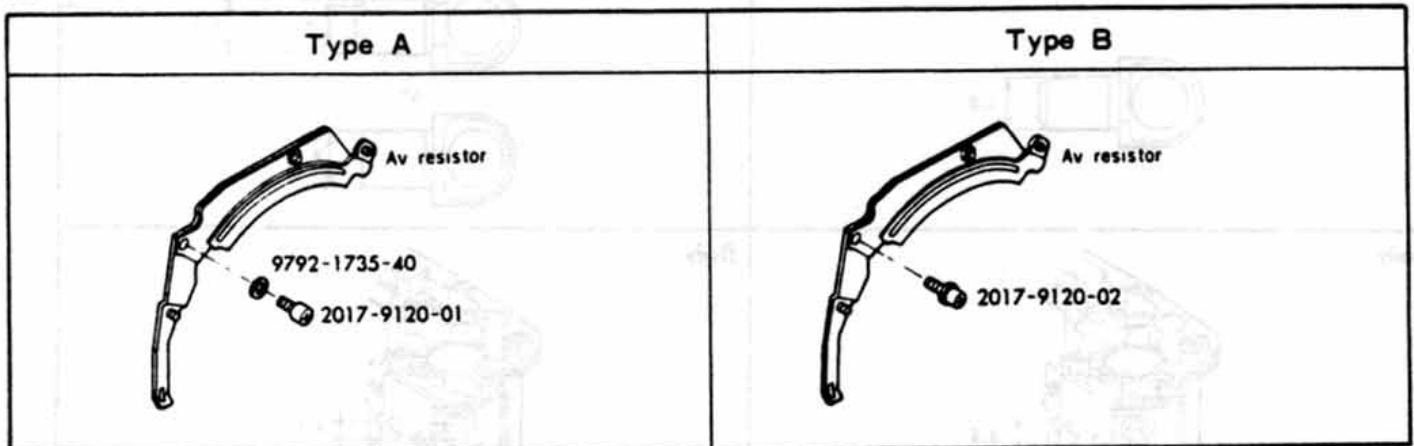


- 9120-20 (Type B) can be used instead of 9120-01 (Type A), however, converse using is not allowed.
- 9120-02 (Type B) は、9120-01 (Type A) の代わりに使用可能。逆の場合はワッシャーを追加すれば使用可能。

- |              |                                |                   |
|--------------|--------------------------------|-------------------|
| 2024-0166    | Motor drive connect holder set | モータードライブ接点ホルダーセット |
| 2017-0420    | Battery case base plate set    | 電池ケース台板セット        |
| 2024-0420    |                                |                   |
| 2017-0425    |                                |                   |
| 2019-1066    | Connector P.C. board set       | 中継基板セット           |
| 2017-9120    | Motor drive connect holder     | モータードライブ接点ホルダー    |
| 9792-1735-40 | Screw MDレバーストッパー軸              |                   |
| 9762-        | Tape lite screw                | 十字穴付なべ頭タップタイトねじ   |
| 9792-1735-40 | Washer                         | 薄ワッシャー            |


■ Penta pressure (Right side) / ペンタ押え (右)

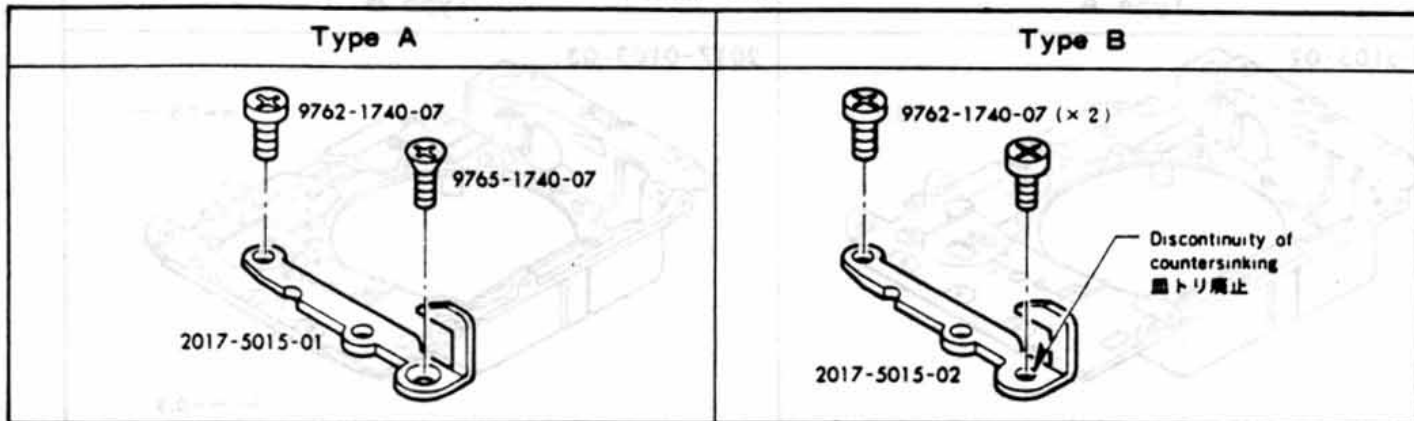

■ Mirror box light shield plate / ミラーボックス遮光板

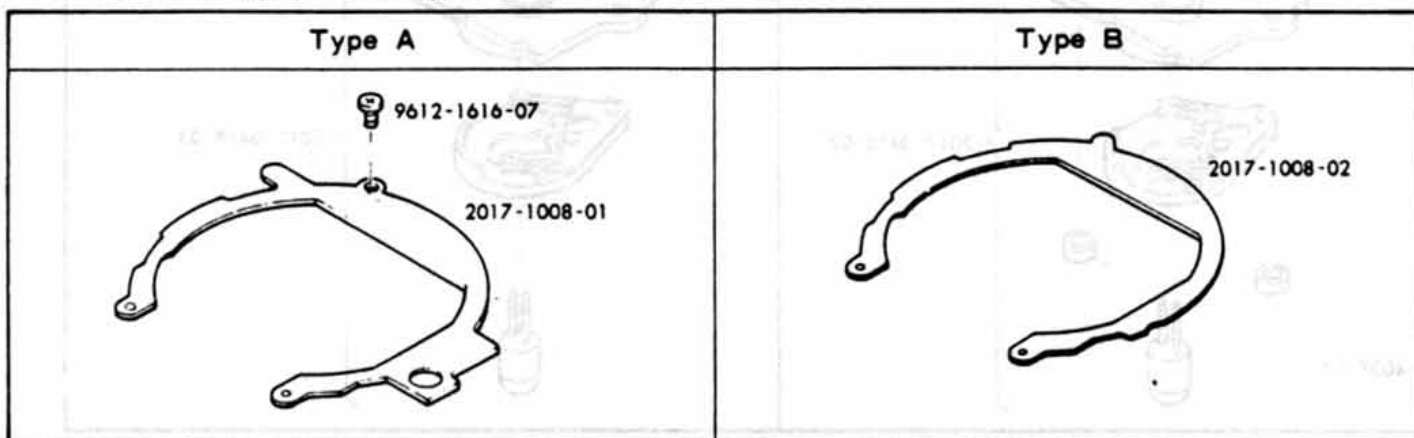

■ Winding stop lever-A / 巻止めレバー A

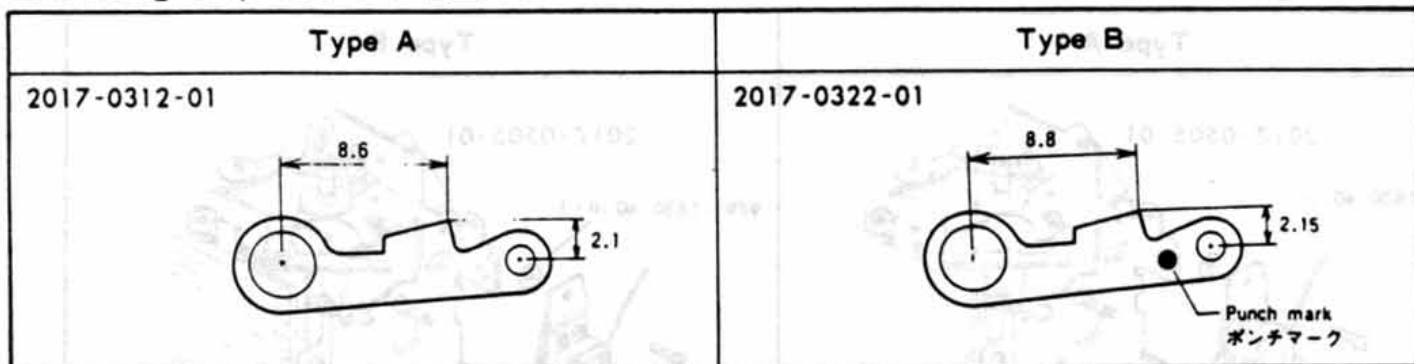


- Use one of parts above properly depending upon winding operation lever timing.
- トンホ返りレバーのタイミングにより使い分けて下さい。

|              |                                          |
|--------------|------------------------------------------|
| 2017-0312    | } Winding stop lever-A set 巻止めレバー Aセット   |
| 2017-0322    |                                          |
| 2017-1008    | Mirror box light shield plate ミラーボックス遮光板 |
| 2017-5015    | Penta. pressure (Right side) ペンタ押え (右)   |
| 9612-1616-07 | Phillips type screw 十字穴付なべ頭小ねじ           |
| 9762-1740-07 | Top lite screw 十字穴付なべ頭タップタイトねじ           |
| 9765-1740-07 | Top lite screw 十字穴付皿頭タップタイトねじ            |




■ Front base plate / 前 枠

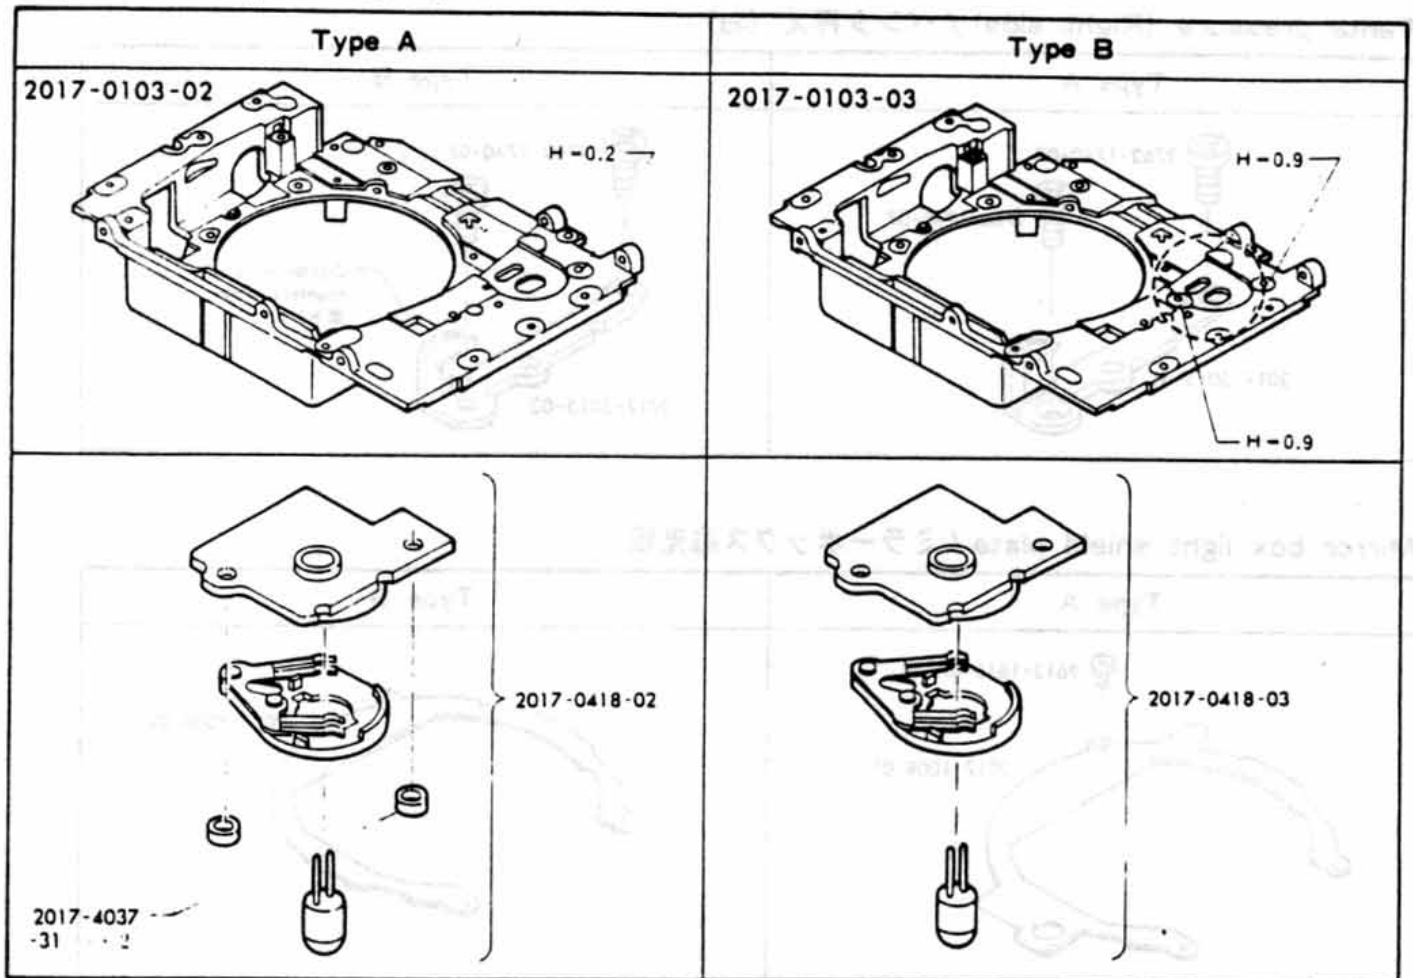

- For 2017-0103-02, use 2017-4037-31. For 2017-0103-03, no needing 2017-4037-31.
- 2017-0103-02には2017-4037-31を取付けて下さい 2017-0103-03には2017-4037-31は不要

■ Mirror magnet / ミラーマグネット

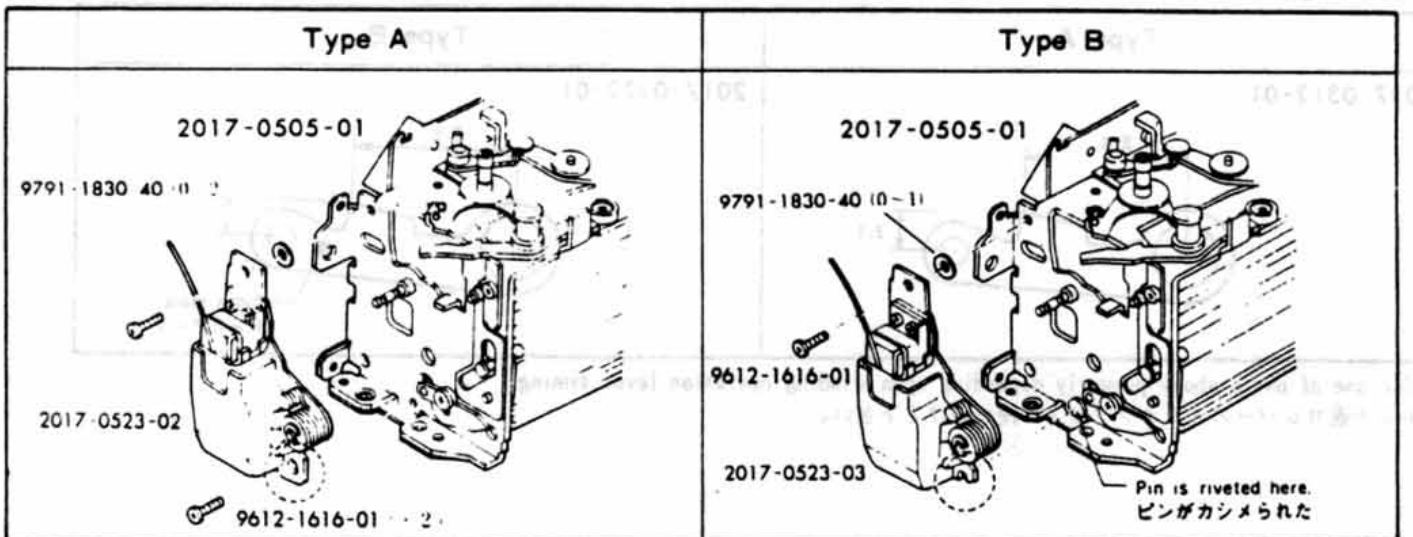

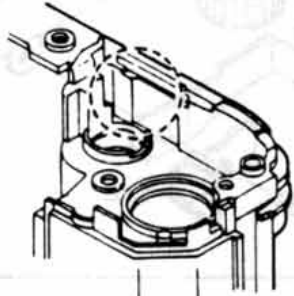
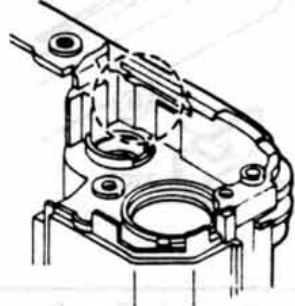


- For mirror box with pin riveted, use Type B mirror magnet (2017-0523-03).
- For mirror box without pin, either (2017-0523-02 or 2017-0523-03) will do.
- ヒン付のミラーボックスにはミラーマグネットはType B (2017-0523-03) を使用して下さい。
- ヒン無しのミラーボックスにはミラーマグネットはType A, Type B (2017-0523-02又は2017-0523-03) どちらを使用しても良い



|              |                      |             |
|--------------|----------------------|-------------|
| 2017-0103    | Front base plate set | 前枠セット       |
| 2017-0418    | Self-timer plate set | セルフ基板セット    |
| 2017-0505    | Mirror box set       | ミラーボックスセット  |
| 2017-0523    | Mirror magnet set    | ミラーマグネットセット |
| 2017-4037    | Washer               | ワッシャー       |
| 9612-1616-01 | Phillips type screw  | 十字穴付なべ頭小ねじ  |
| 9791-1830-40 | Washer               | ワッシャー       |



■ Stopper / チャージ操作板ストッパー

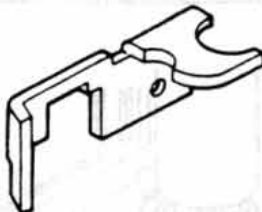
| Type A                                                                            | Type B                                                                             |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| 2017-3065-02                                                                      | 2017-3065-06                                                                       |
|  |  |
| Body                                                                              | Body                                                                               |
|  |  |

■ Film indication filler / フィルム表示フィラー

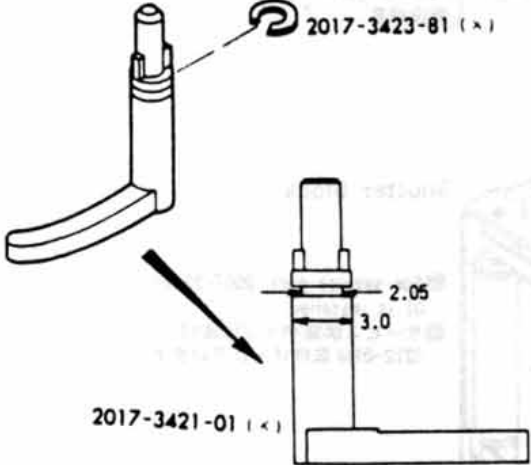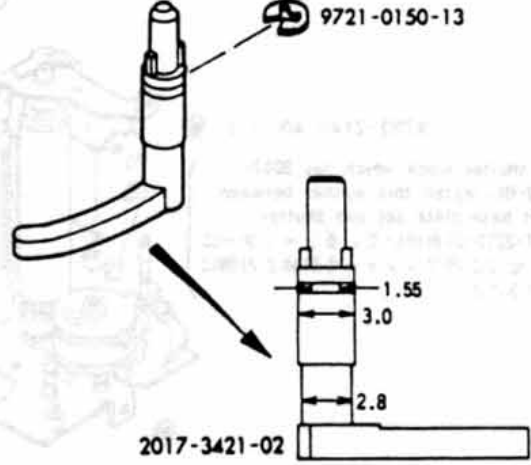
| Type A                                                                                                                                                     | Type B                                                                                                                                                         |
|------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  <p>2017-3423-81 (×)</p> <p>2017-3421-01 (×)</p> <p>2.05</p> <p>3.0</p> |  <p>9721-0150-13</p> <p>2017-3421-02</p> <p>1.55</p> <p>3.0</p> <p>2.8</p> |

- Use Type B when replacing Type A. (Type A is not a service part.)
- Type A 交換時は Type B に交換して下さい。(Type A は部品供給致しません)

■ Shutter / シャッター

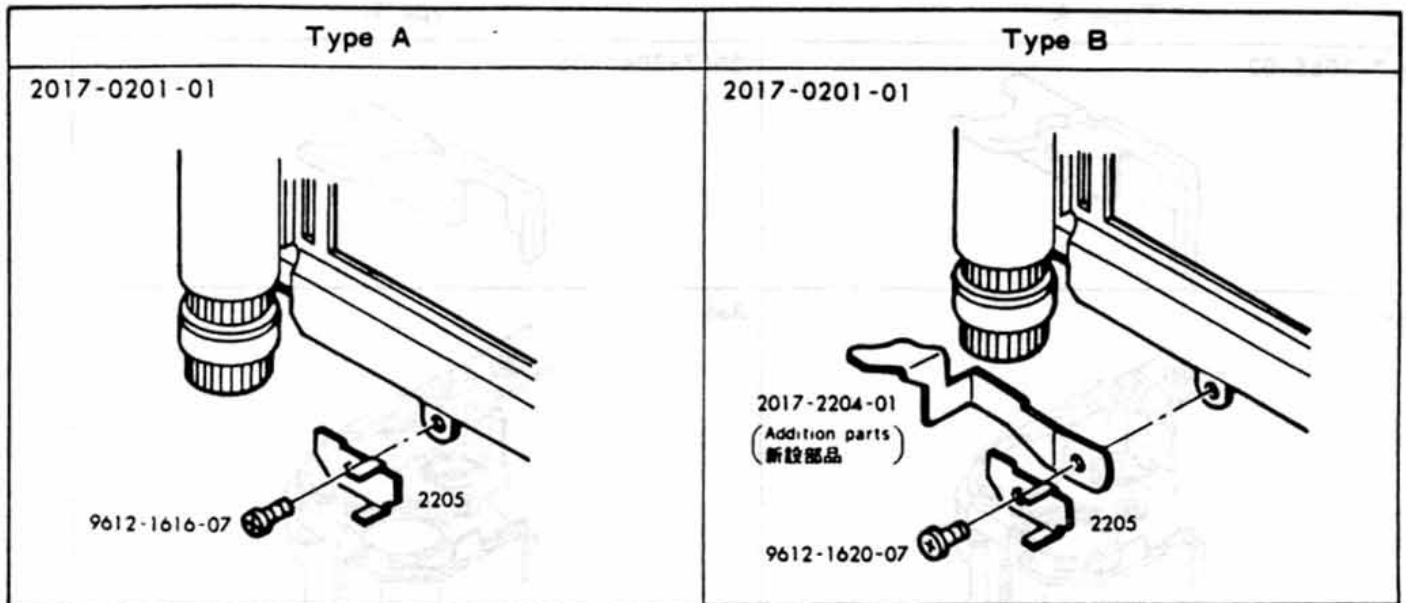


- Service part of 2017-0201 is only Type B.
- サービス供給バージョン「2017-0201」はType Bとなります。

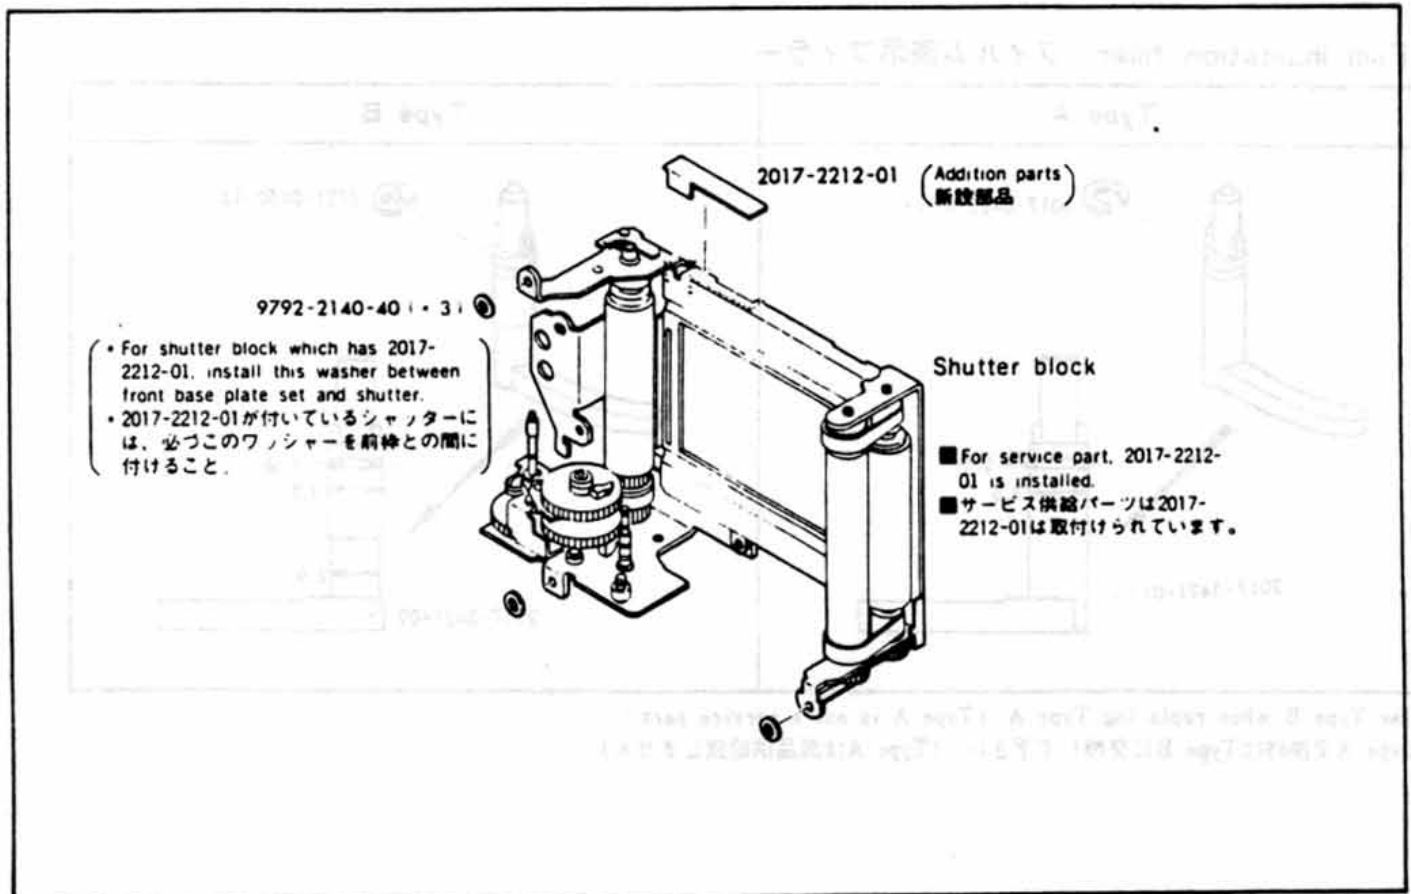

- 2017-0201 Shutter block シャッターブロック
- 2017-2204 Ribbon guide plate-B 幕リボンガイド板B
- 2017-2212 Shutter light shield sheet シャッター遮光シート
- 9612-1616-07 } Phillips type screw 十字穴付なべ頭小ねじ.
- 9612-1620-07 }
- 9792-2140-40 Washer 華ワッシャー

■ Modification records and details of flexible P.C. board set

■ フレキシブル基板セットの変更経歴及び変更内容

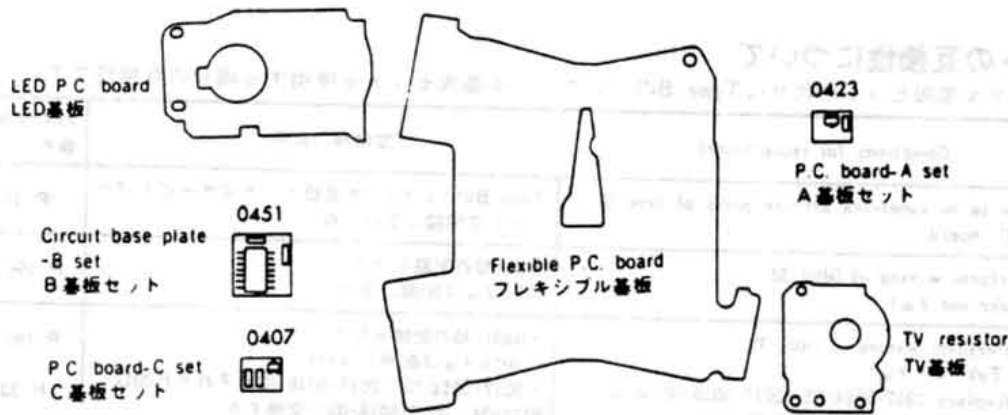

0401 Flexible P.C. board set

(・ LED PC board, Tv resistor for flexible P.C. board set are not service parts )  
 (・ フレキシブル基板セット内のLED基板, Tv基板は部品供給しておりません)

■ Modification record

■ 変更経歴

| 生産時期           |                 | Flexible P.C. board set<br>フレキシブル基板セット | P.C. board-A set<br>A基板セット | Circuit base plate-B set<br>B基板セット | P.C. board-C set<br>C基板セット |
|----------------|-----------------|----------------------------------------|----------------------------|------------------------------------|----------------------------|
| '81/6          |                 | 2017-0401-01                           |                            |                                    |                            |
| '81/6 ~ '81/9  | Without AE lock | ★ 2017-0401-02                         |                            |                                    | ★ 2017-0407-01             |
| '81/9 ~ '81/12 | AEロック無          | 2017-0401-03                           |                            |                                    |                            |
| '81/12         |                 | 2017-0401-82                           | ★ 2017-0423-02             |                                    |                            |
| '82/1 ~ '82/2  |                 | 2017-0401-81                           |                            | ★ 2017-0451-81                     |                            |
| '82/2 ~ '82/3  | With AE lock    | ★ 2017-0401-32                         |                            |                                    |                            |
| '82/3 ~ '82/4  | AEロック付          | 2017-0401-33                           |                            |                                    | ★ 2017-0407-01             |
| '82/6 ~ '82/7  |                 | 2017-0401-34                           |                            |                                    |                            |
| '82/7 ~        |                 | ★ 2017-0401-35                         |                            |                                    |                            |

■ Service parts

- Mark (★) shows service parts
- .....When replacing 0401-01, 0401-03 or 0401-82, use 0401-02.
- .....When replacing 0401-81, use 0401-32.
- .....When replacing 0401-33 or 0401-34, use 0401-35.

■ For modification details of flexible P.C. board set which has non AE lock circuit, refer to page 38.

■ Others

- Description for circuit base plate-B set.....Refer to page 34.

■ サービス供給パーツについて

- ★印パーツのみ供給.....0401-01, 0401-03, 0401-82を交換する場合は, 0401-02に交換して下さい。
- .....0401-81を交換する場合は, 0401-32に交換して下さい。
- .....0401-33, 0401-34を交換する場合は, 0401-35に交換して下さい。

■ AEロック回路無しフレキシブル基板の変更内容は, Page 38を参照して下さい。

■ その他

- B基板についての説明.....Page 34参照



## ■ Interchangeability of flexible P.C. board set

• 2017-0401-01, -02, -03, -82 (Type A) • 2017-0401-81 (Type B) • 2017-0401-32 (Type C) • 2017-0401-33 (Type D)  
 • 2017-0401-34, -35 (Type E)

\* A→B shows the interchangeability when using Type B flexible P.C. board set instead of Type A flexible P.C. board set.

## ■ フレキシブル基板セットの互換性について

\* A→BとはType Aのフレキシブル基板セットの代わりにType Bのフレキシブル基板セットを使用する場合の互換性です。



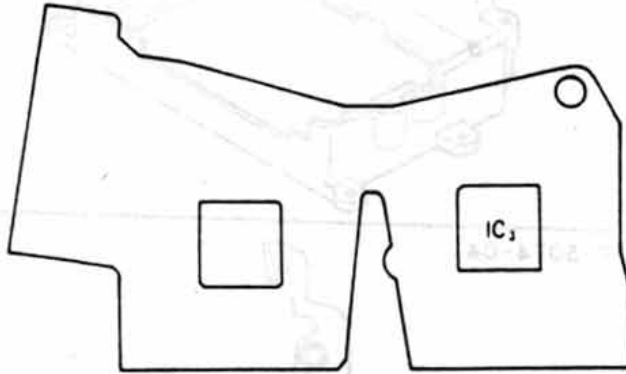


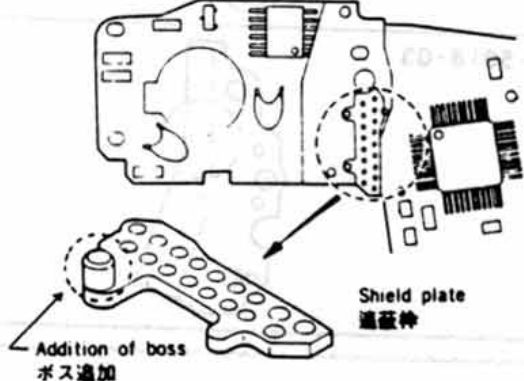
| Type                                  | Interchangeability<br>互換性 | Conditions for replacement                                                                                                                                                                                                                            | 交換時の条件                                                                                                                                                                                                         | Referring page<br>参考ページ   |
|---------------------------------------|---------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------|
| ※<br>A → B<br>A → C<br>A → D<br>A → E | NO<br>無                   | Due to no supplying service parts of type B P.C. board.                                                                                                                                                                                               | Type Bのフレキシブル基板セットはサービスパーツとして供給しないため                                                                                                                                                                           | P. 31                     |
|                                       | YES<br>有                  | Perform wiring of 0401-32.<br>(Take out $f_{32}$ )                                                                                                                                                                                                    | 0401-32の配線を行う<br>(但し $f_{32}$ は配線しない)                                                                                                                                                                          | P. 19-2                   |
|                                       | YES<br>有                  | <ul style="list-style-type: none"> <li>Perform wiring of 0401-33.<br/>(Take out <math>f_{33}</math>)</li> <li>Replace 2017-5014-03, 2017-5018-02 with 2017-5014-04, 2017-5018-03.</li> </ul>                                                          | <ul style="list-style-type: none"> <li>0401-33の配線を行う<br/>(但し<math>f_{33}</math>は配線しない)</li> <li>2017-5014-03, 2017-5018-02をそれぞれ2017-5014-04, 2017-5018-03へ交換する</li> </ul>                                      | P. 19-2<br>P. 32          |
|                                       | YES<br>有                  | <ul style="list-style-type: none"> <li>Perform wiring of 0401-33.<br/>(Take out <math>f_{33}</math>)</li> <li>Replace 2017-5014-03, 2017-5018-02 with 2017-5014-04, 2017-5018-03.</li> <li>Abandonment of P.C. board-A set (2017-0423-02).</li> </ul> | <ul style="list-style-type: none"> <li>0401-35の配線を行う<br/>(但し<math>f_{35}</math>は配線しない)</li> <li>2017-5014-03, 2017-5018-02をそれぞれ2017-5014-04, 2017-5018-03へ交換する</li> <li>A基板セット (2017-0423-02) を廃止する</li> </ul> | P. 19-3<br>P. 32<br>P. 33 |
| B → A<br>B → C<br>B → D<br>B → E      | NO<br>無                   | Due to no functioning for AE lock with type A.                                                                                                                                                                                                        | Type AにはAEロック機能がないため                                                                                                                                                                                           | —                         |
|                                       | YES<br>有                  | Abandonment of circuit base plate-B set (2017-0451-81).                                                                                                                                                                                               | B基板セット (2017-0451-81) を廃止する                                                                                                                                                                                    | P. 31                     |
|                                       | YES<br>有                  | <ul style="list-style-type: none"> <li>Abandonment of circuit base plate-B set (2017-0451-81).</li> <li>Replace 2017-5014-03, 2017-5018-02 with 2017-5014-04, 2017-5018-03.</li> </ul>                                                                | <ul style="list-style-type: none"> <li>B基板セット (2017-0451-81) を廃止する</li> <li>2017-5014-03, 2017-5018-02をそれぞれ2017-5014-04, 2017-5018-03へ交換する</li> </ul>                                                          | P. 31<br>P. 32            |
|                                       | YES<br>有                  | <ul style="list-style-type: none"> <li>Abandonment of circuit base plate-B set (2017-0451-81).</li> <li>Abandonment of P.C. board-A set (2017-0423-02).</li> <li>Replace 2017-5014-03, 2017-5018-02 with 2017-5014-04, 2017-5018-03.</li> </ul>       | <ul style="list-style-type: none"> <li>B基板セット (2017-0451-81) を廃止する</li> <li>A基板セット (2017-0423-02) を廃止する</li> <li>2017-5014-03, 2017-5018-02をそれぞれ2017-5014-04, 2017-5018-03へ交換する</li> </ul>                     | P. 31<br>P. 33<br>P. 32   |
| C → A, B<br>C → D<br>C → E            | NO<br>無                   | <ul style="list-style-type: none"> <li>Due to no functioning for AE lock with Type A.</li> <li>Due to no supplying service parts of Type B.</li> </ul>                                                                                                | <ul style="list-style-type: none"> <li>Type AにはAEロック機能がないため</li> <li>Type Bはサービスパーツとして供給しないため</li> </ul>                                                                                                       | P. 31                     |
|                                       | YES<br>有                  | Replace 2017-5014-03, 2017-5018-02 with 2017-5014-04, 2017-5018-03.                                                                                                                                                                                   | 2017-5014-03, 2017-5018-02をそれぞれ2017-5014-04, 2017-5018-03へ交換する                                                                                                                                                 | P. 32                     |
|                                       | YES<br>有                  | <ul style="list-style-type: none"> <li>Abandonment of P.C. board-A set (2017-0423-02).</li> <li>Replace 2017-5014-03, 2017-5018-02 with 2017-5014-04, 2017-5018-03.</li> </ul>                                                                        | <ul style="list-style-type: none"> <li>A基板セット (2017-0423-02) を廃止する</li> <li>2017-5014-03, 2017-5018-02をそれぞれ2017-5014-04, 2017-5018-03へ交換する</li> </ul>                                                          | P. 33<br>P. 32            |
| D → A, B<br>D → C<br>D → E            | NO<br>無                   | <ul style="list-style-type: none"> <li>Due to no functioning for AE lock with Type A.</li> <li>Due to no supplying service parts of Type B.</li> </ul>                                                                                                | <ul style="list-style-type: none"> <li>Type AにはAEロック機能がないため</li> <li>Type Bはサービス用パーツとして供給しないため</li> </ul>                                                                                                      | P. 31                     |
|                                       | YES<br>有                  | Replace 2017-5014-04, 2017-5018-03 with 2017-5014-03, 2017-5018-02.                                                                                                                                                                                   | 2017-5014-04, 2017-5018-03をそれぞれ2017-5014-03, 2017-5018-02へ交換する                                                                                                                                                 | P. 32                     |
|                                       | YES<br>有                  | Abandonment of P.C. board-A set (2017-0423-02).                                                                                                                                                                                                       | A基板セット (2017-0423-02) を廃止する                                                                                                                                                                                    | P. 33                     |
| E → A, B<br>E → C<br>E → D            | NO<br>無                   | <ul style="list-style-type: none"> <li>Due to no functioning for AE lock with Type A.</li> <li>Due to no supplying service parts of Type B.</li> </ul>                                                                                                | <ul style="list-style-type: none"> <li>Type AにはAEロック機能がないため</li> <li>Type Bはサービスパーツとして供給しないため</li> </ul>                                                                                                       | P. 31                     |
|                                       | YES<br>有                  | Replace 2017-5014-04, 2017-5018-03 with 2017-5014-03, 2017-5018-02.                                                                                                                                                                                   | 2017-5014-04, 2017-5018-03をそれぞれ2017-5014-03, 2017-5018-02へ交換する                                                                                                                                                 | P. 32                     |
|                                       | YES<br>有                  | Abandonment of P.C. board-A set (2017-0423-02).                                                                                                                                                                                                       | A基板セット (2017-0423-02) を取付ける                                                                                                                                                                                    | P. 33                     |

## ■ Types, modification details of flexible P.C. board set (with AE lock)

- For X-700 with AE lock, one of 5 types flexible P.C. board set is employed.

## ■ AEロック付フレキシブル基板の種類, 変更内容

- AEロック付のX-700には少しづつ異なった5種類のフレキシブル基板が使用されています。
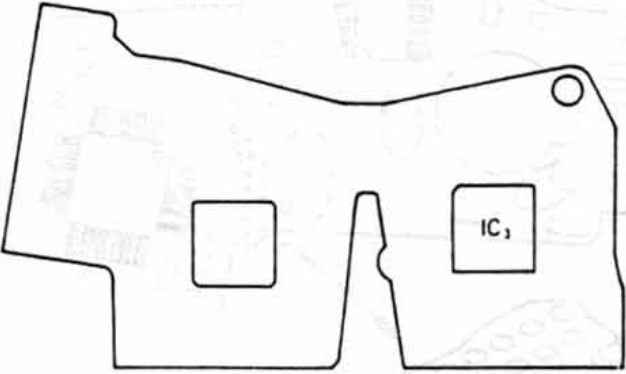
| Types                                                                                                                                                                                                                                                   | Remarks                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p>2017-0401-81 (×)</p>   <p>2017-0451-81<br/>Circuit base plate-B set<br/>B基板セット</p> | <p>■ Initial mass production (with AE lock)</p> <ul style="list-style-type: none"> <li>• Type of IC<sub>1</sub>……M 5 1 8 8 9 P (not for service part)</li> </ul> <p style="text-align: center;">Lot No.</p> <ul style="list-style-type: none"> <li>• 0401-81 and 0451-81 should be used together.</li> <li>• For wiring of 0401-81 lead wire, refer to page 19-1. (Since 0401-81 is not a service part, use 0401-32 when replacing, then 0451-81 will be unnecessary part.)</li> </ul> <p>■ A.Eロック付, 量産当初のタイプ</p> <ul style="list-style-type: none"> <li>• IC<sub>1</sub>のType……M 5 1 8 8 9 P (このタイプのIC<sub>1</sub>は部品)<br/>(供給していません)</li> </ul> <p style="text-align: center;">ロット番号</p> <ul style="list-style-type: none"> <li>• 0401-81と0451-81は必ずペアで使用して下さい。</li> <li>• 0401-81のリード線の配線はPage 19-1を参照して下さい。<br/>(0401-81は部品供給していません。交換時は0401-32に交換して下さい。この時0451-81は不要になります)</li> </ul>                                                   |
| <p>2017-0401-32</p>                                                                                                                                                  | <ul style="list-style-type: none"> <li>• Modification of IC<sub>1</sub> type……M 5 1 8 8 9 P (2017-4303-32)</li> </ul> <p>Addition of letter "A".  Lot No.</p> <p>(IC<sub>1</sub> on 0401-32 can be used on 0401-81, then circuit base plate-B set will be unnecessary part. However, converse using is not allowed.)</p> <ul style="list-style-type: none"> <li>• Abandonment of circuit base plate-B set (2017-0451-81)</li> <li>• Wiring modification of lead wire……Refer to page 19-2.</li> <li>• IC<sub>1</sub>のType変更……M 5 1 8 8 9 P (2017-4303-32)</li> </ul> <p>A文字追加  Lot No.</p> <p>(0401-32搭載のIC<sub>1</sub>を0401-81に使用可。その際B基板は不要。逆は不可)</p> <ul style="list-style-type: none"> <li>• B基板 (2017-0451-81) 廃止</li> <li>• リード線の配線変更……Page 19-2参照</li> </ul> |
| <p>2017-0401-33 (×)</p>  <p>Addition of boss<br/>ボス追加</p> <p>Shield plate<br/>遮蔽枠</p>                                                                                | <ul style="list-style-type: none"> <li>• Addition of boss on shield plate on LED P.C. board.</li> <li>• Related parts modification according to shield plate modification……Refer to next page. (0401-33 is not a service part, use 0401-35 when replacing, then P.C. board-A set will be unnecessary.)</li> <li>• LED基板内の遮蔽枠にボス追加</li> <li>• 遮蔽枠変更により関連変更部品があります。……次ページ参照</li> <li>• リード線の配線は0401-32と共通……Page 19-2参照<br/>(0401-33は部品供給していません。交換時は0401-35に交換して下さい。この時A基板は不要になります。)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                 |



■Table below shows related parts according to flexible P.C. board modification (0401-32⇒0401-33).

■Interchangeability:.....Interchangeable with related parts used together.

.....0542-02 can be used instead of 0542-01, however, converse using is not allowed.

.....5014-04 can be used instead of 5014-03, however, converse using is not allowed.


■2011-0401-33 is not a service part, use 2017-0401-35 when replacing.

■下表はフレキシブル基板セット変更 (0401-32⇒0401-33) による関連変更部品を示しています。

■互換性.....0542-02は、0542-01の代りに使用可能、逆は不可

.....5014-04は、5014-03の代りに使用可能、逆は不可、

■2017-0401-33は部品供給しておりませんので、交換時は2017-0401-35を使用して下さい。

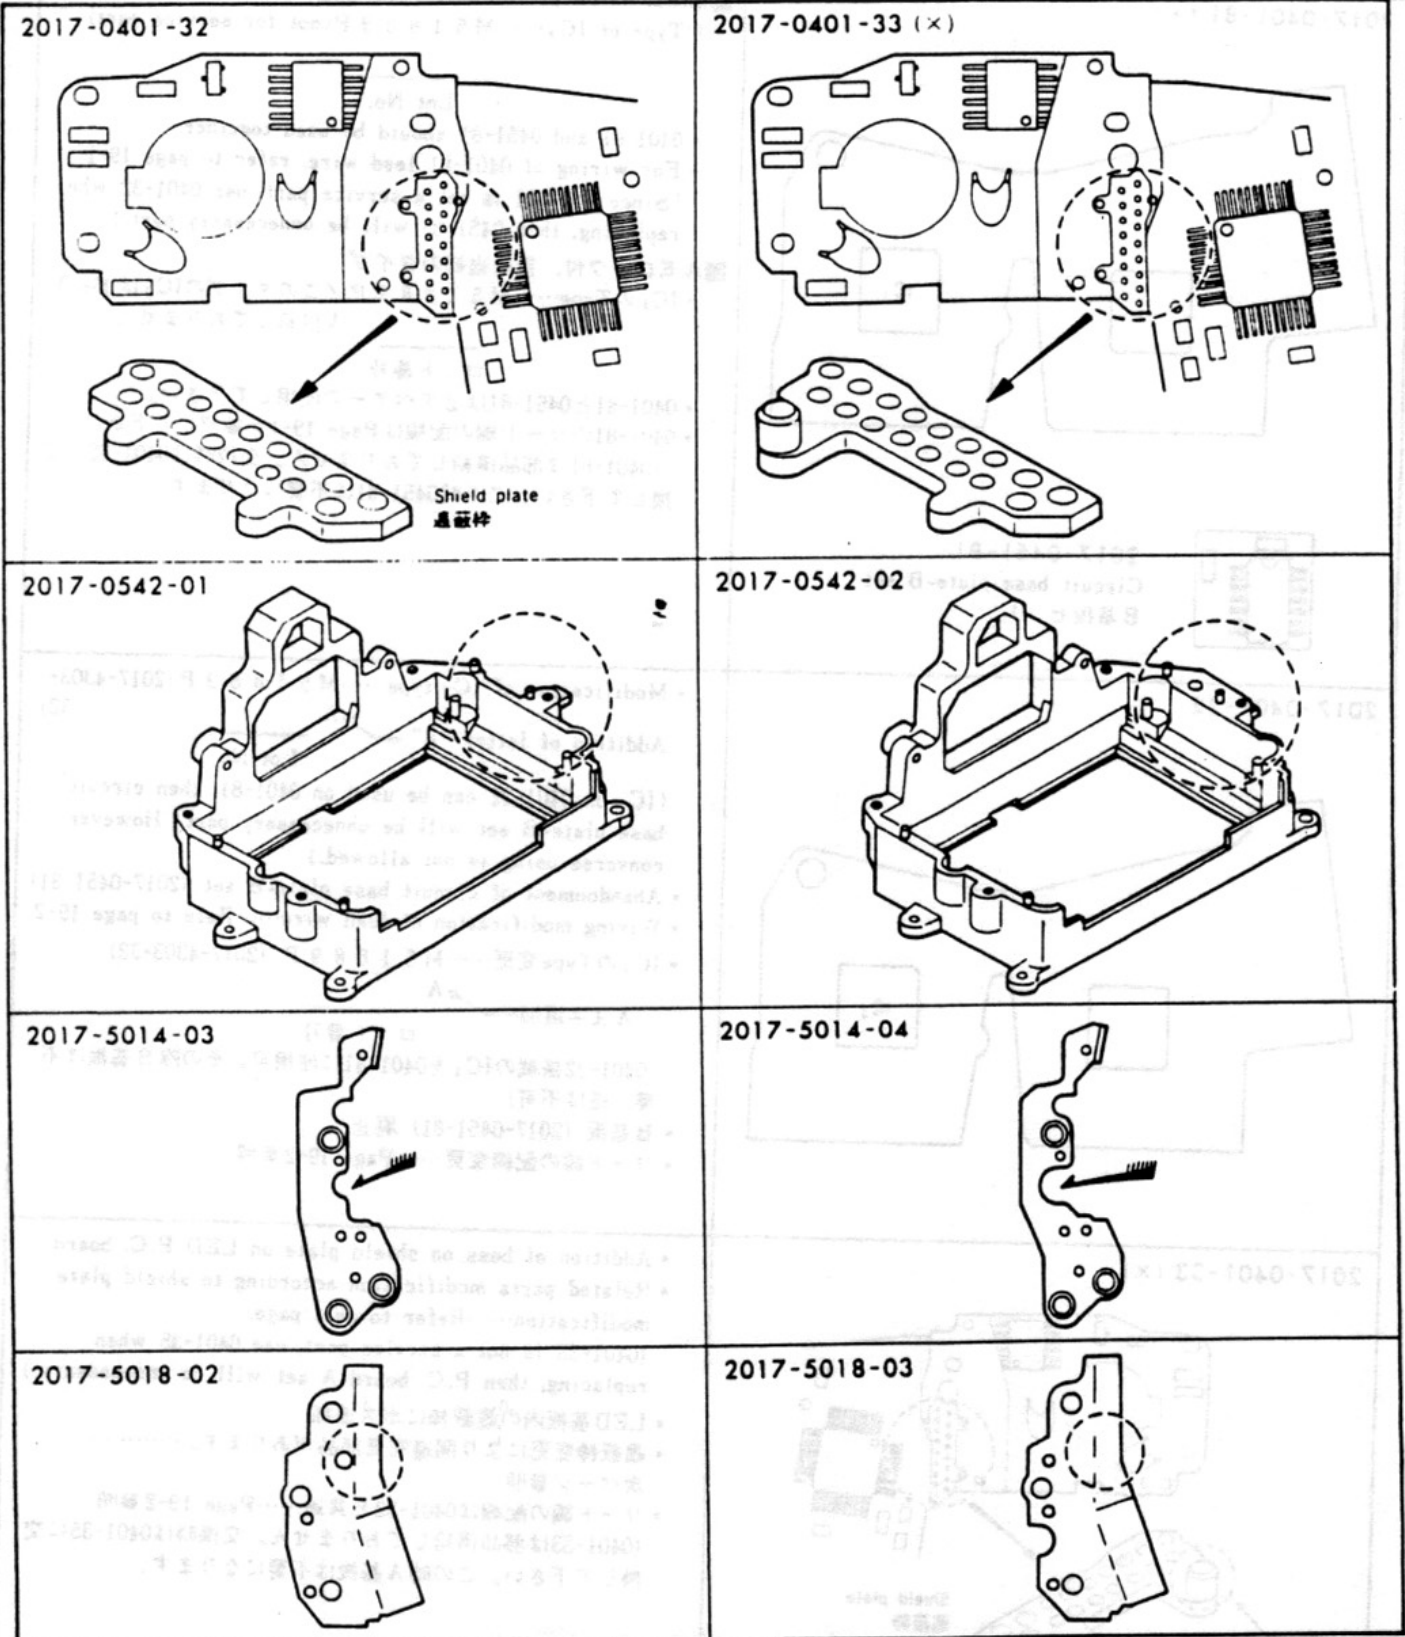




- |           |                             |             |
|-----------|-----------------------------|-------------|
| 2017-0401 | Flexible P.C. board set     | フレキシブル基板セット |
| 2017-0542 | Penta. holder set           | ペンタホルダーセット  |
| 2017-5014 | Penta. pressure (left side) | ペンタ押え板 (右)  |
| 2017-5018 | LED diffusion plate         | LED拡散板      |



## Types



## Remarks

2017-0401-33 (×)

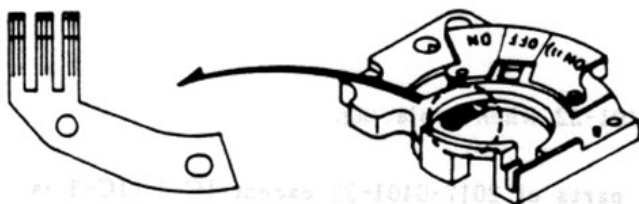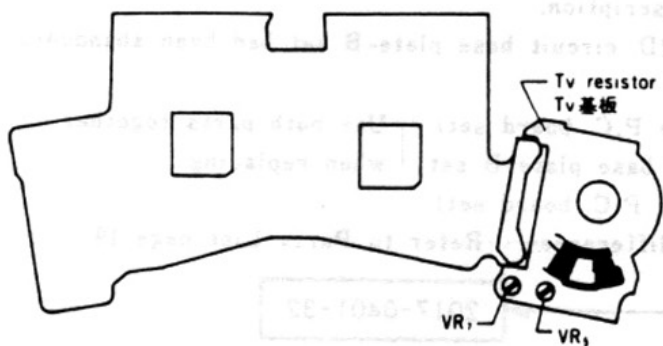(2017-0412-01) Main SW guide plate set  
メインSWガイド板セット2017-0423-02  
P.C. board-A set  
A基板セット

- 0401-33 is not a service part, use 0401-35 when replacing, then P.C. board-A set (2017-0423-02) will be unnecessary.
- 0401-33は部品供給しておりません。交換時は0401-35に交換して下さい。この時、A基板 (0423-02) は不要になります。


2017-0401-34 (×)

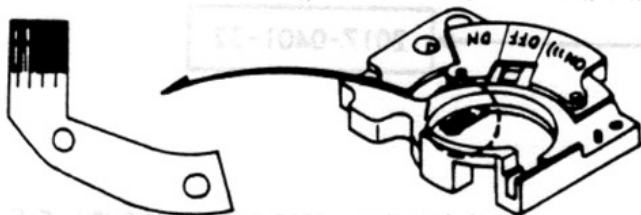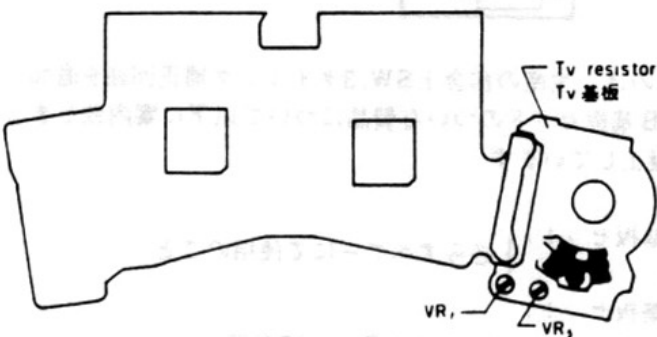2017-0412-02 Main SW guide plate set  
メインSWガイド板セット

- Abandonment of P.C. board-A set (0423-02).
- Printed wiring modification on Tv resistor (addition of carbon resist film...7K $\Omega$ )
- Modification of main SW. guide plate set (no interchangeability)
- Wiring modification of lead wire...Refer to page 19-3.
- (0401-34 is not a service part, use 0401-35 when replacing.)

- A基板セット (0423-02) 廃止
- Tv基板パターン変更 (印刷抵抗7K $\Omega$ 追加)
- メインSWガイド板セット変更 (互換性無)
- リード線の配線変更...Page 19-3参照
- (0401-34は部品供給しておりません。交換時は0401-35に交換して下さい)

2017-0401-35

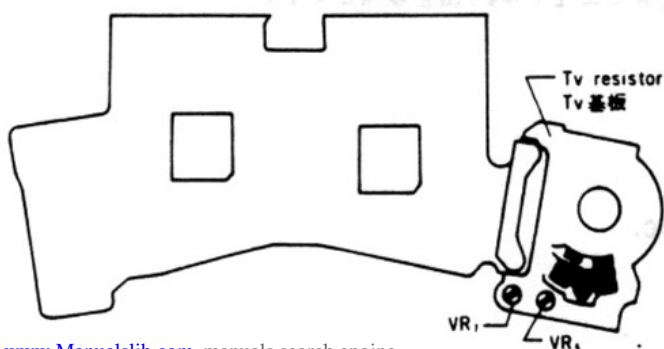

- Modification of VR<sub>1</sub> (interchangeable)  
1.3K $\Omega$   $\rightarrow$  2.6K $\Omega$
- VR<sub>2</sub>の抵抗値変更 (互換性有)  
1.3K $\Omega$   $\rightarrow$  2.6K $\Omega$


## ■ Circuit base plate-B set

- Initial mass production of X-700 (with AE lock), secret Nos. 1L-2C, has SW.3 timing correction circuit on circuit base palet-B set for temporary use. For the production which has circuit base plate-B set, read the following description.

For the production whose secret No. is after 2D, circuit base plate-B set had been abandoned.

### ■ Interchangeability


- Temporary parts ..... 2017-0401-81 (flexible P.C. board set) } Use both parts together  
2017-0451-81 (circuit base plate-B set) } when replacing
  - Regular part ..... 2017-0401-32 (flexible P.C. board set)
- Interchangeable, however, wiring is slightly difference..... Refer to Parts List page 19.

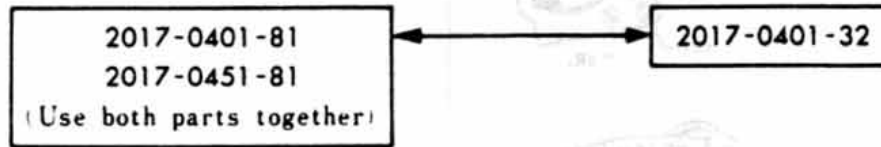

### ■ Service parts

- 2017-0401-81 is not a service part, use 2017-0401-32 when replacing.  
2017-0451-81 is a service part.
- Electrical parts on 2017-0401-81 are the same parts of 2017-0401-32 except IC-3 (IC-3 is not a service part).  
When replacing individual element, refer to Service Manual P. 18.
- Installing method of circuit base plate-B set.  
Strick it on IC-1 using double-faced tape.

Circuit base plate-B set  
(2017-0451-81)

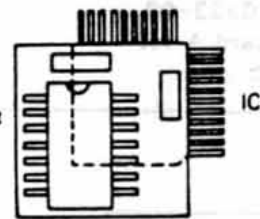

## ■ B基板について

- AEロック付X-700の生産当初(Body密番1L~2C)のものは、生産の都合上SW.3タイミング補正回路を追加したB基板セット(暫定部品)がっています。このB基板セットのついた製品について以下に案内致します。尚、Body密番2D以降のものは、B基板セットは廃止しています。

### ■ 互換性について


- 暫定用部品..... 2017-0401-81 (フレキシブル基板セット) } 必ずスヘアーにて使用のこと  
..... 2017-0451-81 (B基板セット)
  - 正規部品..... 2017-0401-32 (フレキシブル基板セット)
- 相互に互換性有り。但し各々配線方法が一部異なります。.....パーツリストPage 19参照



### ■ 修理用部品について

- 2017-0401-81についてはサービスでの部品供給は致しません。不良発生時は、2017-0401-32に交換して下さい。尚、2017-0451-81については部品供給します。
- 2017-0401-81に搭載している電装部品はIC-3 (このIC-3は部品供給致しません)をのぞいて2017-0401-32と同じです。素子を単品交換する場合はサービスマニュアルP.18を参照して下さい。
- B基板取付方法  
IC-1の上に両面テープにて貼付ける。

B基板セット  
(2017-0451-81)

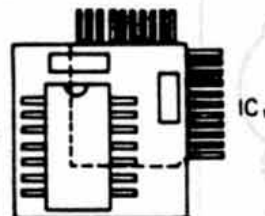









## ■ Exclusive parts List for X-700 (without AE lock)





- Table below shows the parts difference between AE lock and non AE lock models.
- No interchangeability between each ones, however, other parts than table below are common parts regardless AE lock employment, so use Parts List P. 1~P. 17.

## ■ X-700 AEロック機能なしモデル専用部品表

- 以下の内容は、AEロック機能付（右欄）とAEロック機能なし（左欄）における使用部品の違いをまとめたものです。
- 各部品の互換性はありません。下表以外の部品は、AEロック機能の有無に関係なく共通ですので、P. 1~P. 17のパーツリストをご利用下さい。
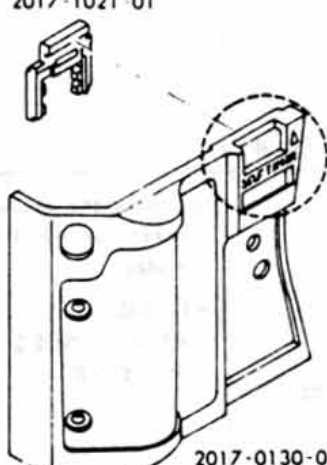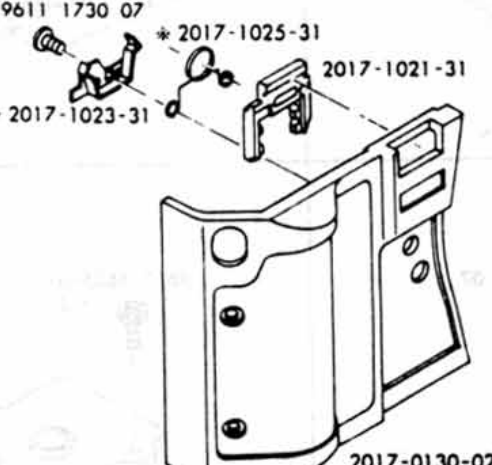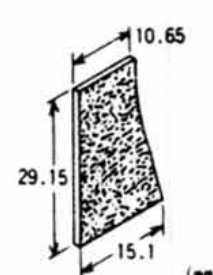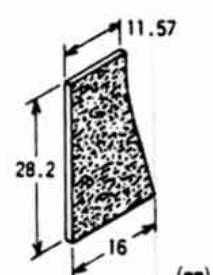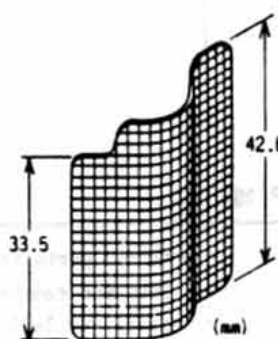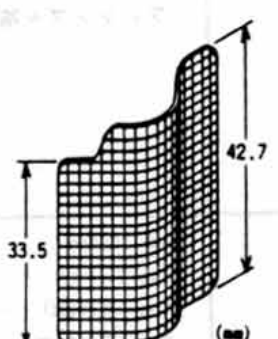
| For non AE lock model<br>AEロック機能なしモデル専用部品                                                                                                                                                                                             | For AE lock model<br>AEロック機能付モデル専用部品                                                                                                                                                                       | Remarks<br>備 考                                                                           |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|
| <p>2017-1021-01</p>  <p>2017-0130-01</p> <p>2017-1021-01</p> <p>2017-0130...Side cover-A set サイドカバー-Aセット<br/>2017-1021...Self-timer lever セルノレバー</p> | <p>+ 9611 1730 07</p> <p>* 2017-1025-31</p> <p>+ 2017-1023-31</p> <p>2017-1021-31</p>  <p>2017-0130-02</p> <p>(P. 4)</p> | <p>* Shows the exclusive parts for AE lock model.</p> <p>* 印部品……<br/>AEロック機能なしモデルは不要</p> |
| <p>2017-1015-01</p>  <p>(mm)</p> <p>Right side leather 右貼皮</p>                                                                                     | <p>2017-1015-31</p>  <p>(mm)</p> <p>(P. 4)</p>                                                                         |                                                                                          |
| <p>2017-1024-03</p>  <p>(mm)</p> <p>Grip leather グリップ貼皮</p>                                                                                        | <p>2017-1024-31</p>  <p>(mm)</p> <p>(P. 4)</p>                                                                         |                                                                                          |

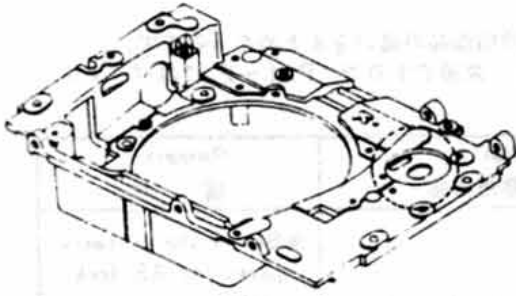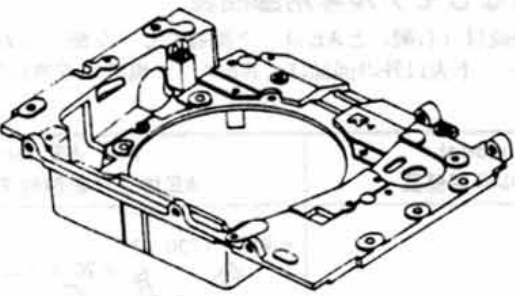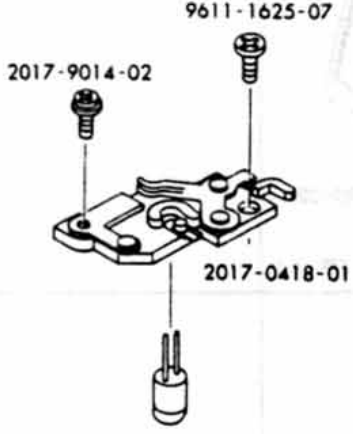
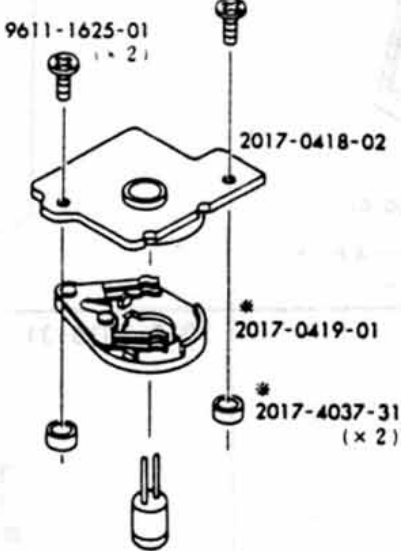


| For non AE lock model<br>AEロック機能なしモデル専用部品                                                                                                                                                                                                                 | For AE lock model<br>AEロック機能付モデル専用部品                                                                                                                                                              | Remarks<br>備考                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|
| <p>2017-0103-01</p>  <p>Front base plate set 前枠セット</p>                                                                                                                   | <p>2017-0103-02</p>  <p>(P. 8)</p>                                                                              |                                                                                             |
|  <p>2017-0418.....Self-timer switch set<br/>セルフスイッヂホルダーセット</p> <p>2017-9014.....Screw<br/>セルフSW.ホルダー止めビス</p> <p>9611-1625-07...Phillips type screw<br/>十字穴付ネジ(頭小ねじ)</p> |  <p>9611-1625-01 (x 2)</p> <p>2017-0418-02</p> <p>* 2017-0419-01</p> <p>* 2017-4037-31 (x 2)</p> <p>(P. 8)</p> | <p>* Shows the exclusive parts for AE lock model.</p> <p>* 印部品..... AEロック機能なしモデルは不要</p>     |
| <p>2017-0401-02<br/>Flexible P.C. board set<br/>フレキシブル基板セット<br/>(Refer to page 39)<br/>(Page 39参照)</p>                                                                                                                                                    | <p>2017-0401-32<br/>Flexible P.C. board set<br/>フレキシブル基板セット</p> <p>(P. 18)</p>                                                                                                                    |                                                                                             |
| <p>Lead wires</p> <p>φ<sub>29</sub> (Grey) .....ℓ = 30 mm</p> <p>φ<sub>13</sub> (Black) .....ℓ = 55 mm</p> <p>(Refer to Page 40)<br/>(Page 40参照)</p>                                                                                                      | <p>Lead wires</p> <p>ℓ<sub>29</sub> (Grey) .....ℓ = 50 mm</p> <p>ℓ<sub>13</sub> (Black) .....ℓ = 45 mm</p> <p>ℓ<sub>55</sub> (Yellow) .....ℓ = 80 mm</p> <p>(P. 19)</p>                           | <p>• Other parts than left are common parts for both type cameras.</p> <p>• 記載以外は両モデル共通</p> |


For non AE lock model  
AEロック機能なしモデル専用部品

For AE lock model  
AEロック機能付モデル専用部品

Remarks  
備考

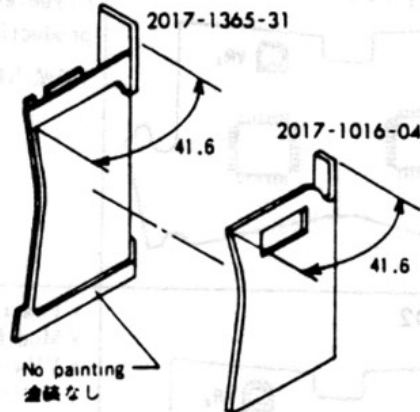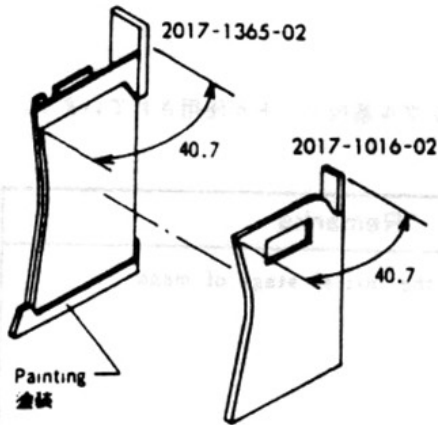

- For AE lock model, 1365-02 and 1016-02, 1365-03 and 1016-04 should be used together. Other combinations are not allowed.
- AEロック機能なしモデルの1365-02と1016-02及び1365-03と1016-04はペアで使用すること。

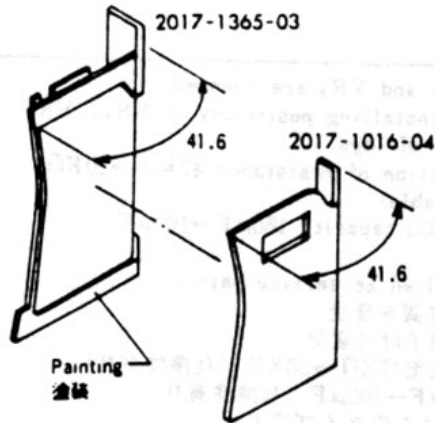


2017-1016.....Left side leather 左貼皮  
2017-1365.....Side cover-B サイドカバー B

(P. 4)



2017-1005-02

2017-1005-31

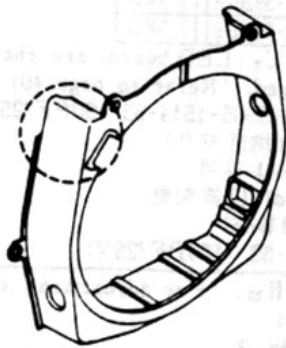

Front cover 前カバー

(P. 6)

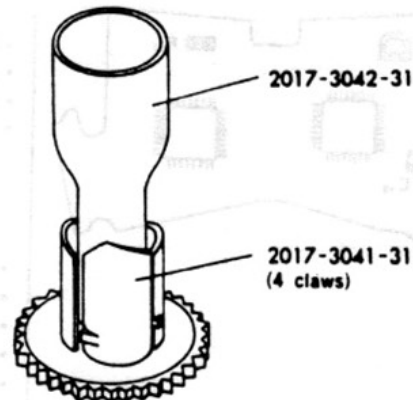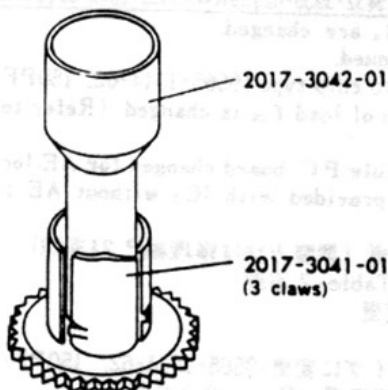

2017-3041.....Spool スプール  
2017-3042.....Spool inner barrel スプール内筒

(P. 13)









## Types of flexible P.C. board set, and details of modifications

- For 2017 without AE lock, 4 types of flexible P.C. boards, which are different in part position as shown below, are used. (Interchangeable)
- Elements other than R<sub>22</sub>, R<sub>23</sub>, C<sub>19</sub> are common. (Refer to page 39)

## フレキシブル基板セットの種類, 変更内容

- AEロックの無い2017には下表のように部品の配置が少し異なった, 4種類のフレキシブル基板セットが使用されています。(互換性あり)
- R<sub>22</sub>, R<sub>23</sub>, C<sub>19</sub>以外の各素子は共通です (P.39参照)
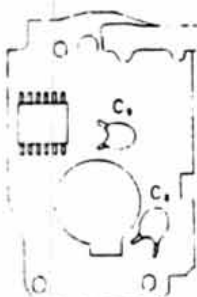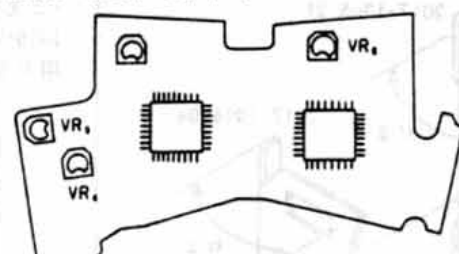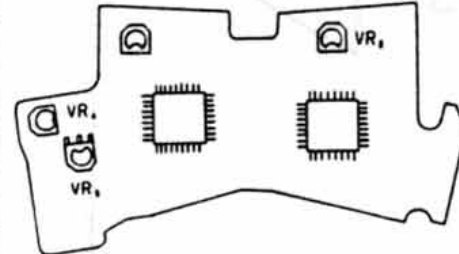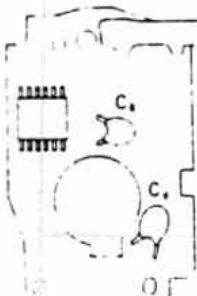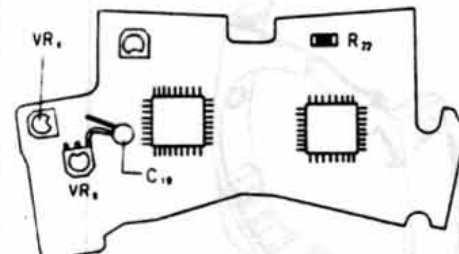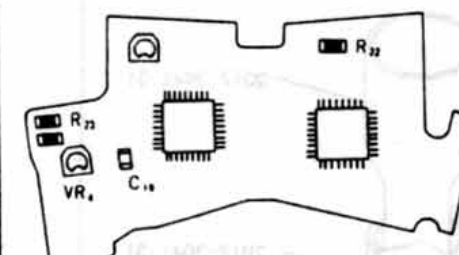
| Type                                                                                                                                                                                                             | Remarks                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |              |       |              |       |              |       |              |      |              |      |              |       |              |      |              |       |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------|-------|--------------|-------|--------------|-------|--------------|------|--------------|------|--------------|-------|--------------|------|--------------|-------|
| <p>LED board</p>  <p>2017-0401-01 (×)</p>      | <p>(Type available at the initial stage of mass production)<br/>(機種当初のタイプ)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |              |       |              |       |              |       |              |      |              |      |              |       |              |      |              |       |
| <p>2017-0401-02</p>                                                                                                             | <ul style="list-style-type: none"> <li>• Positions of VR<sub>4</sub> and VR<sub>5</sub> are changed.</li> <li>• Modification of installing positions of VR<sub>4</sub>, VR<sub>5</sub>.</li> <li>• VR<sub>5</sub>……Addition of legs<br/>……Modification of resistance 47KΩ→20KΩ (replaceable)</li> <li>• Modification of C<sub>9</sub> capacity 150μF→100μF (replaceable)</li> </ul> <p>(This type is supplied as service part.)</p> <ul style="list-style-type: none"> <li>• VR<sub>4</sub>, VR<sub>5</sub> 取付位置を変更</li> <li>• VR<sub>5</sub>……リード端子付に変更<br/>……抵抗値変更47KΩ→20KΩ (互換性有り)</li> <li>• C<sub>9</sub> 容量変更 150μF→100μF (互換性有り)</li> </ul> <p>(サービス供給部品はこのタイプです)</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |              |       |              |       |              |       |              |      |              |      |              |       |              |      |              |       |
| <p>LED board</p>  <p>2017-0401-03 (×)</p>  | <ul style="list-style-type: none"> <li>• VR<sub>4</sub> is change to R<sub>22</sub>. (R<sub>22</sub> can be replaced with VR<sub>4</sub>)</li> </ul> <p>Table-1</p> <table border="1"> <tr> <td>9432-1226-61</td> <td>1.2KΩ</td> </tr> <tr> <td>9432-3926-61</td> <td>3.9KΩ</td> </tr> <tr> <td>9432-7526-61</td> <td>7.5KΩ</td> </tr> </table> <ul style="list-style-type: none"> <li>• Positions of C<sub>8</sub> and C<sub>9</sub> (LED board) are changed.<br/>……Wiring is changed. (Refer to page 40)</li> <li>• C<sub>19</sub> is newly added. (9565-1514-63 150PF/25V)</li> <li>• VR<sub>4</sub>をR<sub>22</sub>に変更 (互換性有り)</li> <li>• R<sub>22</sub>の種類……Table-1参照</li> <li>• C<sub>8</sub>, C<sub>9</sub> (LED board) 位置変更</li> <li>• 配線の変更 (page 40参照)</li> <li>• C<sub>19</sub>新設 (9565-1514-63, 150PF/25V)</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | 9432-1226-61 | 1.2KΩ | 9432-3926-61 | 3.9KΩ | 9432-7526-61 | 7.5KΩ |              |      |              |      |              |       |              |      |              |       |
| 9432-1226-61                                                                                                                                                                                                     | 1.2KΩ                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |              |       |              |       |              |       |              |      |              |      |              |       |              |      |              |       |
| 9432-3926-61                                                                                                                                                                                                     | 3.9KΩ                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |              |       |              |       |              |       |              |      |              |      |              |       |              |      |              |       |
| 9432-7526-61                                                                                                                                                                                                     | 7.5KΩ                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |              |       |              |       |              |       |              |      |              |      |              |       |              |      |              |       |
| <p>2017-0401-82 (×)</p>                                                                                                       | <ul style="list-style-type: none"> <li>• VR<sub>5</sub> is changed to R<sub>23</sub>. (For adjustment, see page 21 of Repair Guide)</li> </ul> <p>Table-2</p> <table border="1"> <tr> <td>9432-2436-62</td> <td>24KΩ</td> <td>9432-5136-62</td> <td>51KΩ</td> </tr> <tr> <td>9432-2736-62</td> <td>27KΩ</td> <td>9432-6836-62</td> <td>68KΩ</td> </tr> <tr> <td>9432-3336-62</td> <td>33KΩ</td> <td>9432-1046-62</td> <td>100KΩ</td> </tr> <tr> <td>9432-3936-62</td> <td>39KΩ</td> <td>9432-2046-62</td> <td>200KΩ</td> </tr> </table> <ul style="list-style-type: none"> <li>• Position of VR<sub>4</sub> are changed.</li> <li>• C<sub>18</sub> is discontinued.</li> <li>• C<sub>19</sub> is changed to chip type (9565-1514-62, 150PF/25V)</li> <li>• Wiring position of lead ℓ<sub>29</sub> is changed. (Refer to P. 19-2)<br/>(This is a flexible P.C. board changed for AE lock circuit and is provided with IC<sub>3</sub> without AE lock circuit.)</li> <li>• VR<sub>5</sub>をR<sub>23</sub>に変更 (調整方法は修理編P.21参照)</li> <li>• R<sub>23</sub>の種類……Table-2参照</li> <li>• VR<sub>4</sub>取付位置変更</li> <li>• C<sub>18</sub>廃止</li> <li>• C<sub>19</sub>をチップタイプに変更 (9565-1514-62, 150PF/25V)</li> <li>• リード線ℓ<sub>29</sub>配線変更 (Page 19-2参照)</li> </ul> <p>(この基板セットはAEロック回路用に変更されたフレキシブル基板にAEロック回路の無いIC<sub>3</sub>を取付けたもので)</p> | 9432-2436-62 | 24KΩ  | 9432-5136-62 | 51KΩ  | 9432-2736-62 | 27KΩ  | 9432-6836-62 | 68KΩ | 9432-3336-62 | 33KΩ | 9432-1046-62 | 100KΩ | 9432-3936-62 | 39KΩ | 9432-2046-62 | 200KΩ |
| 9432-2436-62                                                                                                                                                                                                     | 24KΩ                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | 9432-5136-62 | 51KΩ  |              |       |              |       |              |      |              |      |              |       |              |      |              |       |
| 9432-2736-62                                                                                                                                                                                                     | 27KΩ                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | 9432-6836-62 | 68KΩ  |              |       |              |       |              |      |              |      |              |       |              |      |              |       |
| 9432-3336-62                                                                                                                                                                                                     | 33KΩ                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | 9432-1046-62 | 100KΩ |              |       |              |       |              |      |              |      |              |       |              |      |              |       |
| 9432-3936-62                                                                                                                                                                                                     | 39KΩ                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | 9432-2046-62 | 200KΩ |              |       |              |       |              |      |              |      |              |       |              |      |              |       |




## ■ Flexible P.C. board set for without AE lock

- There are 4 types of flexible P.C. board set without AE lock (2017-0401-01, 2017-0401-02, 2017-0401-03, 2017-0401-82), but only 2017-0401-02 on this page is supplied as a service part.
- For other types, refer to page 38.

## ■ Interchangeability of IC<sub>3</sub> between 2017-4303-01 (non AE lock model) and 2017-4303-32 (AE lock model)

- 2017-4303-32 can be used instead of 2017-4303-01, however, cut off IC<sub>3</sub> pin 10 and 11 to avoid contacting with printed wiring on flexible P.C. board.
- 2017-4303-01 cannot be used instead of 2017-4303-32.


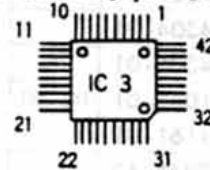


## ■ AEロック回路無しフレキシブル基板について

- AEロック回路無しのフレキシブル基板セットは4種類 (2017-0401-01, 2017-0401-02, 2017-0401-03, 2017-0401-82) ありますが、サービス供給部品はこのページの2017-0401-02のみです。
- 他の種類については、Page 38参照

## ■ AEロック回路無しIC<sub>3</sub> (2017-4303-01) とAEロック回路付IC<sub>3</sub> (2017-4303-32) の互換性について

- 2017-4303-32は2017-4303-01の代りに使用可能 但しIC<sub>3</sub>のピン番号10と11を切断すること。(ハターンに接触しないようにするため)
- 2017-4303-32の代りに2017-4303-01は使用不可

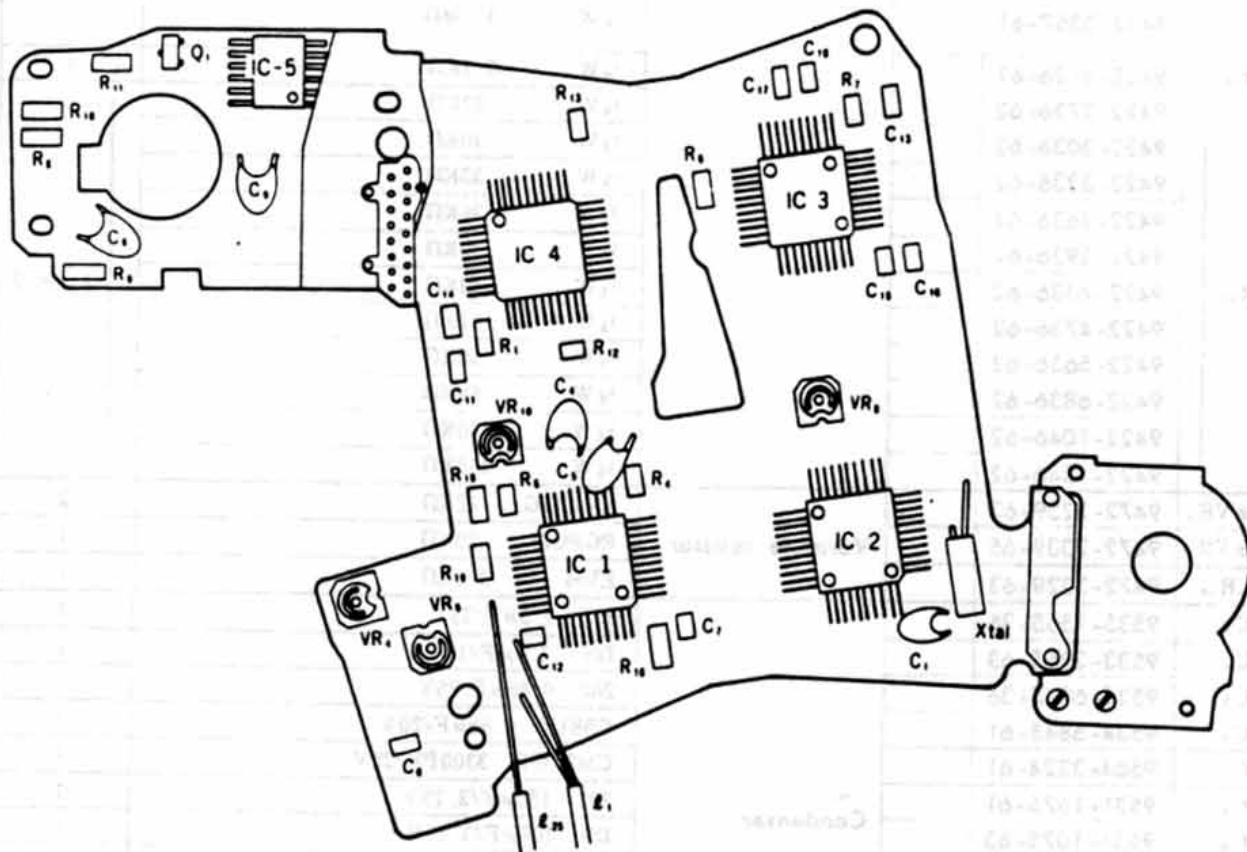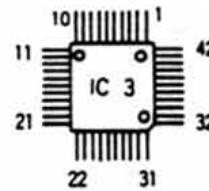

Assy. Part No. 2017-0401-02

Assy. Part Name: Flexible P.C. board set.

フレキシブル基板セット

Elements other than ※-marked are common to those with AE lock circuit.

※印以外の素子はAEロック回路付と共通です

| Symbol                                           | Part No.     | Com         | Part Name                   | Typ.                | Qty.                       |
|--------------------------------------------------|--------------|-------------|-----------------------------|---------------------|----------------------------|
| IC <sub>1</sub>                                  | 2017-4301-01 |             | IC                          | M51885P             | 1                          |
| IC <sub>2</sub>                                  | 2017-4302-01 |             |                             | M51886P             | 1                          |
| ※IC <sub>3</sub>                                 | 2017-4303-01 |             |                             | M51887P             | 1                          |
| IC <sub>4</sub>                                  | 2017-4304-01 |             |                             | HA16526             | 1                          |
| IC <sub>5</sub>                                  | 2017-4305-01 |             |                             | BA6128              | 1                          |
| Q <sub>1</sub>                                   | 9363-1032-01 | 02, 03      | Transistor                  | 2SA1162S (O. Y. G)  | 1                          |
| Xtal                                             | 9373-4161-01 |             | Crystal resonator           | KF38G               | 1                          |
| R <sub>1</sub>                                   | 9422-2046-62 |             | Fixed resistor              | 1/8 W 200KΩ         | 1                          |
| R <sub>2</sub>                                   | 9422-9106-62 |             |                             | 1/8 W 91Ω           | 1                          |
| R <sub>3</sub>                                   | 9432-5626-61 |             |                             | 1/8 W 5.6KΩ         | 1                          |
|                                                  | 9432-6226-61 |             |                             | 1/8 W 6.2KΩ         |                            |
|                                                  | 9432-6826-61 |             |                             | 1/8 W 6.8KΩ         |                            |
|                                                  | 9432-7526-61 |             |                             | 1/8 W 7.5KΩ         |                            |
| R <sub>4</sub>                                   | 9422-3916-62 |             |                             | 1/8 W 390Ω          | 1                          |
| R <sub>7</sub>                                   | 9432-2068-61 |             |                             | 1/8 W 20MΩ          | 1                          |
| R <sub>8</sub>                                   | 9422-3616-62 |             |                             | 1/8 W 360Ω          | 1                          |
| R <sub>9</sub> R <sub>10</sub> R <sub>11</sub>   | 9422-1026-62 |             |                             | 1/8 W 1KΩ           | 3                          |
| R <sub>12</sub>                                  | 9432-2026-61 |             |                             | 1/8 W 2KΩ           | 1                          |
|                                                  | 9432-2426-61 |             |                             | 1/8 W 2.4KΩ         |                            |
|                                                  | 9432-2726-61 |             |                             | 1/8 W 2.7KΩ         |                            |
|                                                  | 9432-3026-61 |             |                             | 1/8 W 3KΩ           |                            |
| R <sub>14</sub>                                  | 9432-3926-61 |             |                             | 1/8 W 3.9KΩ         | 1 or 2                     |
|                                                  | 9432-3357-61 |             |                             | 1/8 W 3.3MΩ         |                            |
|                                                  | 9432-5126-61 |             |                             | 1/8 W 5.1KΩ         |                            |
|                                                  | 9422-2736-62 |             |                             | 1/8 W 27KΩ          |                            |
|                                                  | 9422-3036-62 |             |                             | 1/8 W 30KΩ          |                            |
|                                                  | 9422-3336-62 |             |                             | 1/8 W 33KΩ          |                            |
|                                                  | 9422-3636-62 |             | 1/8 W 36KΩ                  |                     |                            |
|                                                  | 9422-3936-62 |             | 1/8 W 39KΩ                  |                     |                            |
|                                                  | 9422-4336-62 |             | 1/8 W 43KΩ                  |                     |                            |
|                                                  | 9422-4736-62 |             | 1/8 W 47KΩ                  |                     |                            |
| 9422-5636-62                                     |              | 1/8 W 56KΩ  |                             |                     |                            |
| 9422-6836-62                                     |              | 1/8 W 68KΩ  |                             |                     |                            |
| 9422-1046-62                                     |              | 1/8 W 100KΩ |                             |                     |                            |
| 9422-1546-62                                     |              | 1/8 W 150KΩ |                             |                     |                            |
| VR <sub>1</sub> ※VR <sub>2</sub>                 | 9472-2239-63 |             | Variable resistor           | EVM14G 22KΩ         | 2                          |
| ※VR <sub>3</sub>                                 | 9472-2039-65 |             |                             | RGPM44 20KΩ         | 1                          |
| VR <sub>10</sub>                                 | 9472-3329-63 |             |                             | EVM 3.3KΩ           | 1                          |
| C <sub>1</sub>                                   | 9535-1555-36 |             | Condenser                   | 202 1.5μF/35V       | 1                          |
| C <sub>4</sub>                                   | 9533-3355-63 |             |                             | DN 3.3μF/16V        | 1                          |
| ※C <sub>5</sub>                                  | 9535-6845-36 |             |                             | 202 0.68μF/35V      | 1                          |
| C <sub>6</sub>                                   | 9534-6845-61 |             |                             | CS81E 0.68μF/20V    | 1                          |
| C <sub>7</sub>                                   | 9564-3324-61 |             |                             | CM21WR 3300PF/25V   | 1                          |
| C <sub>8</sub>                                   | 9531-1575-61 |             |                             | 202 150μF/3.15V     | 1                          |
| C <sub>9</sub>                                   | 9531-1075-63 |             |                             | DN 100μF/3.15V      | 1                          |
| C <sub>11</sub>                                  | 9565-4738-64 |             |                             | CM22YU 0.047μF/50V  | 1                          |
| C <sub>12</sub>                                  | 9565-0200-61 |             |                             | GR40CK 2PF/50V      | 1                          |
| C <sub>13</sub> C <sub>14</sub> ※C <sub>18</sub> | 9565-1234-61 |             |                             | GR40W5R 0.012μF/50V | 3                          |
| C <sub>15</sub> C <sub>16</sub>                  | 9564-3005-62 |             |                             | CM21CH 30PF/25V     | 2                          |
| C <sub>17</sub>                                  | 9564-1025-61 |             |                             | CM21WR 1000PF/25V   | 1                          |
| ℓ <sub>1</sub>                                   | 2017-4401-02 |             |                             | Lead wire           | Black Junfuron cord ℓ = 33 |
| ℓ <sub>2</sub>                                   | 9391-0507-07 |             | Purple #0.05/7 wires ℓ = 45 |                     | 1                          |



■ Lead wires list (2017-0401-01,2017-0401-02,2017-0401-03)

| Symbol   | Parts No.    | Color  | Type            | Qty |
|----------|--------------|--------|-----------------|-----|
| 1        | 2017-4401-02 | Black  | φ 0.33          | 1   |
| 2        | 2017-4402-02 | Black  | φ 0.90          | 1   |
| 3        | 9391-0507-00 | Black  | φ 0.05/7 φ 0.80 | 1   |
| 4        | 9391-0507-00 | Black  | φ 0.05/7 φ 0.70 | 1   |
| 5        | 9391-0807-00 | Black  | φ 0.08/7 φ 0.40 | 1   |
| 6-1      | 9391-0507-00 | Black  | φ 0.05/7 φ 0.30 | 1   |
| 6-2, 6-3 | 9391-0507-00 | Black  | φ 0.05/7 φ 0.25 | 2   |
| 7        | 9391-0807-01 | Brown  | φ 0.08/7 φ 1.05 | 1   |
| 8        | 9391-0507-01 | Brown  | φ 0.05/7 φ 0.70 | 1   |
| 9        | 9391-0807-01 | Brown  | φ 0.08/7 φ 0.25 | 1   |
| 10       | 9391-0507-02 | Red    | φ 0.05/7 φ 0.90 | 1   |
| 11       | 9391-0507-02 | Red    | φ 0.05/7 φ 0.65 | 1   |
| 12-2     | 9391-0807-02 | Red    | φ 0.08/7 φ 0.25 | 2   |
| 13       | 9391-0507-03 | Orange | φ 0.05/7 φ 0.90 | 1   |
| 14       | 9391-0507-03 | Orange | φ 0.05/7 φ 0.55 | 1   |
| 15       | 9391-0807-03 | Orange | φ 0.08/7 φ 0.45 | 1   |
| 16       | 9391-0507-03 | Orange | φ 0.05/7 φ 0.35 | 1   |
| 17       | 9391-0807-04 | Yellow | φ 0.08/7 φ 1.15 | 1   |
| 18       | 9391-0507-04 | Yellow | φ 0.05/7 φ 0.65 | 1   |
| 19       | 9391-0507-05 | Green  | φ 0.05/7 φ 0.60 | 1   |
| 20       | 9391-0507-05 | Green  | φ 0.05/7 φ 0.25 | 1   |
| 21       | 9391-0507-06 | Blue   | φ 0.05/7 φ 1.20 | 1   |
| 22       | 9391-0507-06 | Blue   | φ 0.05/7 φ 0.65 | 1   |
| 23       | 9391-0807-07 | Purple | φ 0.08/7 φ 0.95 | 1   |
| 24       | 9391-0507-07 | Purple | φ 0.05/7 φ 0.85 | 1   |
| 25       | 9391-0507-07 | Purple | φ 0.05/7 φ 0.45 | 1   |
| 26       | 9391-0807-07 | Purple | φ 0.08/7 φ 0.30 | 1   |
| 27       | 9391-0807-08 | Gray   | φ 0.08/7 φ 0.50 | 1   |
| 29       | 9391-0507-08 | Gray   | φ 0.05/7 φ 0.30 | 1   |
| 30       | 9391-0807-09 | White  | φ 0.08/7 φ 1.45 | 1   |
| 31       | 9391-0807-00 | Black  | φ 0.08/7 φ 1.55 | 1   |
| 32       | 9391-0807-00 | Black  | φ 0.08/7 φ 0.65 | 1   |
| 33       | 9391-0807-00 | Black  | φ 0.08/7 φ 0.55 | 1   |
| 34       | 9391-0807-00 | Black  | φ 0.08/7 φ 0.45 | 1   |
| 35       | 9391-0807-01 | Brown  | φ 0.08/7 φ 0.25 | 1   |
| 36       | 9391-0807-02 | Red    | φ 0.08/7 φ 0.75 | 1   |
| 37       | 9391-0807-02 | Red    | φ 0.08/7 φ 0.35 | 1   |
| 38       | 9391-0807-02 | Red    | φ 0.08/7 φ 0.25 | 1   |
| 39       | 9391-0807-03 | Orange | φ 0.08/7 φ 0.40 | 1   |
| 40       | 9391-0807-04 | Yellow | φ 0.08/7 φ 1.50 | 1   |
| 41       | 9391-0807-05 | Green  | φ 0.08/7 φ 0.40 | 1   |
| 42       | 9391-0807-06 | Blue   | φ 0.08/7 φ 0.45 | 1   |
| 43       | 9391-0807-07 | Purple | φ 0.08/7 φ 1.05 | 1   |
| 44       | 9391-0807-07 | Purple | φ 0.08/7 φ 0.65 | 1   |
| 45       | 9391-0807-07 | Purple | φ 0.08/7 φ 0.50 | 1   |
| 46       | 9391-0807-08 | Gray   | φ 0.08/7 φ 1.40 | 1   |
| 47       | 9391-0807-08 | Gray   | φ 0.08/7 φ 0.75 | 1   |
| 48       | 9391-0807-08 | Gray   | φ 0.08/7 φ 0.55 | 1   |
| 49       | 9391-0807-08 | Gray   | φ 0.08/7 φ 0.60 | 1   |
| 50       | 9391-0807-09 | White  | φ 0.08/7 φ 0.55 | 1   |
| 51       | 9391-0807-09 | White  | φ 0.08/7 φ 0.30 | 1   |
| 52       | 9391-0507-05 | Green  | φ 0.05/7 φ 0.35 | 1   |
| 53       | 9391-0507-02 | Red    | φ 0.05/7 φ 0.25 | 1   |
| 54       | 9391-0507-08 | Gray   | φ 0.05/7 φ 0.25 | 1   |
| 55       | 9391-0807-04 | Yellow | φ 0.08/7 φ 0.80 | 1   |
| 62       | 9391-0807-09 | White  | φ 0.08/7 φ 0.25 | 1   |
| 63       | 9391-0807-00 | Black  | φ 0.08/7 φ 0.25 | 1   |

■ 1 (2017-4401-02) and 2 (2017-4402-02) are supplied with specified length above as service part.

Other lead wires than 1 and 2 are supplied with meter (m) each.

■ 1 (2017-4401-02)、2 (2017-4402-02) は、上記指定の長さで供給します。それ以外は、1m単位で供給します。



INTERCHANGEABLE FOCUSING SCREENS FOR MINOLTA X-700, X-500 & X-570

| Part No. | Part Name                            |         |
|----------|--------------------------------------|---------|
|          | 2017-5851-01 Focusing screen Type P1 | 焦点板 P1型 |
|          | 2017-5852-02 Focusing screen Type P2 | 焦点板 P2型 |
|          | 2017-5853-01 Focusing screen Type Pd | 焦点板 Pd型 |
|          | 2017-5854-01 Focusing screen Type M  | 焦点板 M型  |
|          | 2017-5855-01 Focusing screen Type G  | 焦点板 G型  |
|          | 2017-5856-02 Focusing screen Type S  | 焦点板 S型  |
|          | 2017-5857-01 Focusing screen Type L  | 焦点板 L型  |
|          | 2017-5858-02 Focusing screen Type H  | 焦点板 H型  |

# REPAIR

- The contents of this manual are mainly related to the assembly and adjustment procedures for the 2017.
- Since the procedures mentioned in this manual are for assembly they should be followed in reverse for disassembly.

## ■ Description of symbols

- G** : Grease used & part greased
- O** : Oil used & part oiled
- B** : Adhesive used & part adhered
- T** : Tool used & tool number

## ■ Assembly and adjustment procedures

|                                                                                     | Page |
|-------------------------------------------------------------------------------------|------|
| 1. Body assembly 1 spool, sprocket, winding base plate A                            | 1    |
| ■ Sprocket gear positioning method                                                  | 2    |
| 2. Body assembly 2 winding shaft                                                    | 3    |
| ■ Winding gear positioning method                                                   | 4    |
| ■ Reversion stop lever stop timing adjustment                                       | 4    |
| 3. Body assembly 3 winding base plate B                                             | 5    |
| ■ Overrun eccentric pin adjustment                                                  | 6    |
| ■ Check of winding mechanism                                                        | 7    |
| 4. Front base plate block assembly 1 shutter, mirror box, magnet base plate         | 8    |
| ■ Check of magnet attraction                                                        | 10   |
| 5. Front base plate block assembly 2 finder block, bayonet mount, front cover, etc. | 11   |
| 6. Front base plate block assembly (mounting front base plate block onto body)      | 12   |
| ■ Shutter gear position adjustment                                                  | 13   |
| ■ Shutter charge adjustment                                                         | 14   |
| 7. Flexible P.C board installation                                                  | 15   |
| ■ Body back adjustment                                                              | 17   |
| ■ Finder back adjustment                                                            | 18   |
| ■ MD lever position adjustment                                                      | 19   |
| ■ LED position adjustment                                                           | 20   |
| ■ F No. infinder adjustment                                                         | 20   |
| ■ Exposure adjustment                                                               |      |
| 1. Metering offset adjustment                                                       | 21   |
| 2. ASA inclination adjustment                                                       | 22   |
| 3. Manual SS inclination adjustment                                                 | 23   |
| 4. Manual SS adjustment                                                             | 24   |
| 5. A-auto level adjustment                                                          | 25   |
| 6. LED indication adjustment                                                        | 26   |
| 7. Strobe level adjustment                                                          | 27   |
| 8. Bending point level adjustment                                                   | 29   |
| ■ Check of A mode and P mode                                                        | 30   |
| ■ Check of release lock voltage and LED OFF-voltage                                 | 31   |
| ■ Check of limits at high and low shutter speeds                                    | 31   |
| 8. Installation of external parts                                                   | 32   |
| ■ Shutter block assembly procedure                                                  | 33   |
| ■ Mirror box assembly procedure                                                     | 39   |

## ■ Adjustment and checks to be made

### 1 Body, winding unit

|                                                     | Page |
|-----------------------------------------------------|------|
| ■ Sprocket gear positioning .....                   | 2    |
| ■ Winding gear positioning .....                    | 4    |
| ■ Film counter operation gear positioning .....     | 5    |
| ■ Reversion stop lever stop timing adjustment ..... | 4    |
| ■ Overrun eccentric pin adjustment .....            | 6    |
| ■ Sprocket claw position check .....                | 7    |
| ■ Reversion stop lever timing check .....           | 7    |
| ■ Winding operation lever timing check .....        | 7    |

### 2 Shutter operation

|                                          |        |
|------------------------------------------|--------|
| ■ Shutter gear position adjustment ..... | 13     |
| ■ Shutter charge adjustment .....        | 13     |
| ■ Shutter curtain position check .....   | 35, 36 |
| ■ Mirror magnet attraction check .....   | 10     |
| ■ Release lock voltage check .....       | 31     |
| ■ Synchro X time lag .....               | 38     |

### 3 Shutter speed

|                                  |        |
|----------------------------------|--------|
| ■ Curtain speed adjustment ..... | 24, 38 |
| ■ Manual SS adjustment .....     | 24, 38 |

### 4 Auto exposure

|                                                          |    |
|----------------------------------------------------------|----|
| ■ Metering offset adjustment .....                       | 21 |
| ■ ASA inclination adjustment .....                       | 22 |
| ■ A-auto level adjustment .....                          | 25 |
| ■ Aperture magnet, release magnet attraction check ..... | 10 |
| ■ Check of A mode and P mode (EE, SS) .....              | 30 |
| ■ Check of limits at high and low shutter speeds .....   | 31 |
| ■ Strobe level adjustment (strobe auto) .....            | 27 |
| ■ Bending point level adjustment (strobe auto) .....     | 29 |

### 5 LED indication

|                                      |    |
|--------------------------------------|----|
| ■ MD lever position adjustment ..... | 19 |
| ■ LED position adjustment .....      | 20 |
| ■ LED indication adjustment .....    | 26 |
| ■ LED OFF-voltage check .....        | 31 |


### 6 Viewfinder, focusing

|                                   |    |
|-----------------------------------|----|
| ■ Body back adjustment .....      | 17 |
| ■ Finder back adjustment .....    | 18 |
| ■ Mirror angle adjustment .....   | 41 |
| ■ F No. infinder adjustment ..... | 20 |




# 1 Spool, sprocket, winding base plate A


Fig. 1 3037 spring setting

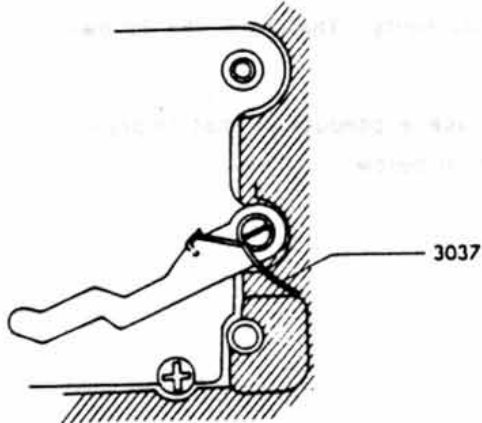


9691-2040-07 G 3340 Sprocket gear shaft  
 Fig. 1 9762-2040-07

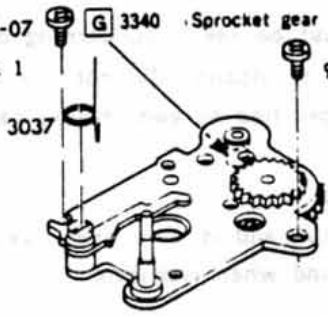

**Winding base plate A**  
 ■ Set it onto the body with the sprocket gear (3055) in position. Take care not to allow gear disengagement.  
 ■ Set the sprocket as shown in Fig. 2, and fit winding base plate A.

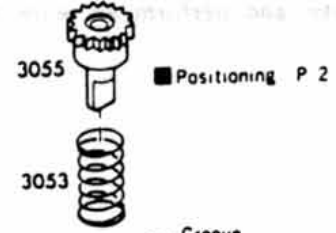

Positioning P 2

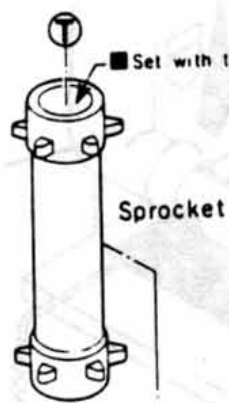


Set with the clutch side up.

Sprocket shaft

Engage with the sprocket clutch, keeping the groove parallel with the body. The bottom claws must be as shown below.


Toward film side

Set in the direction illustrated  
 9721-0200-13

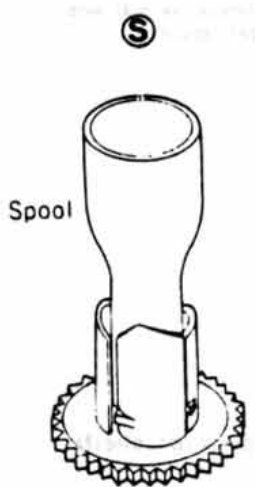


Spool

Fig. 2

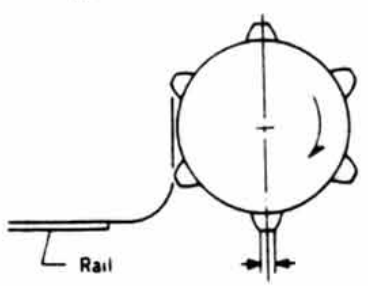

3421

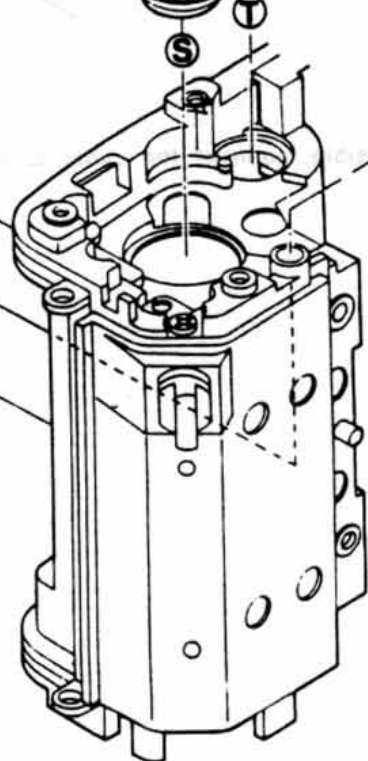

## ■ Precautions


■ The following precautions must be taken concerning all plastic parts.

1. When cleaning, use Flonsolve or alcohol. Do not use thinner, ketone, ether, etc.
2. Secure all parts with the specified screws, taking care not to exert excessive stress to them.


### ■ Handling of the flexible board

The flexible board uses MOS ICs and is very sensitive to static electricity. Therefore, the following points must be kept in mind when repairing.

- When handling the flexible board itself or wiring it to the body, use a conduction mat to prevent static electricity, and perform all work as shown in the illustration below.

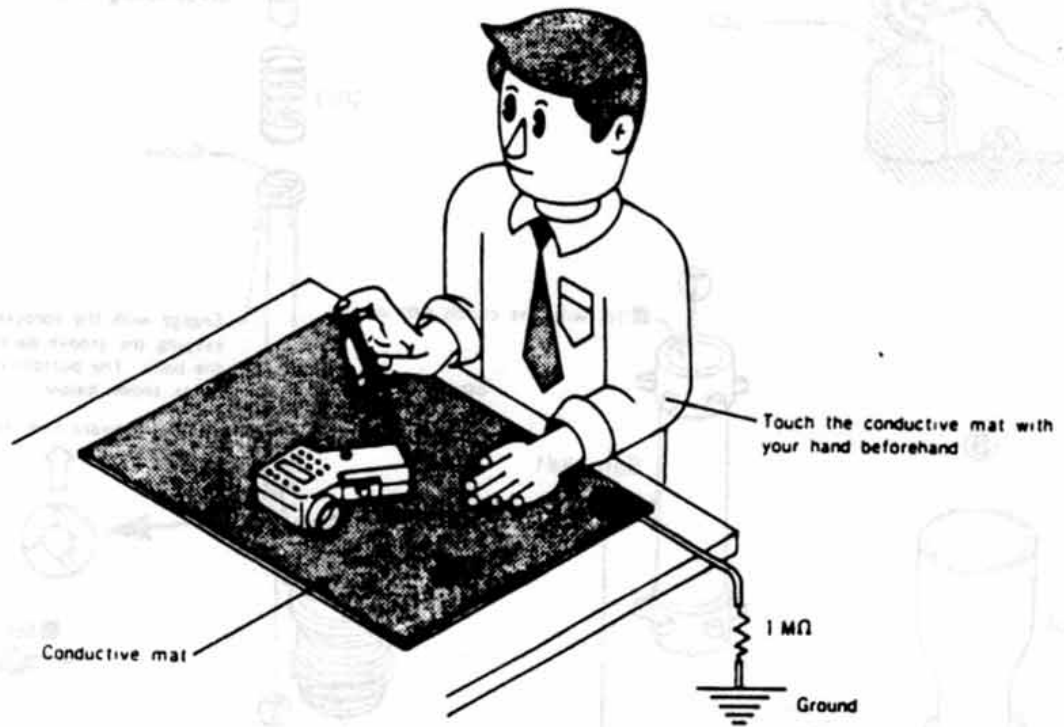


■ When grounding is impossible, connect the cable to a large metal plate (steel desk or shelf).

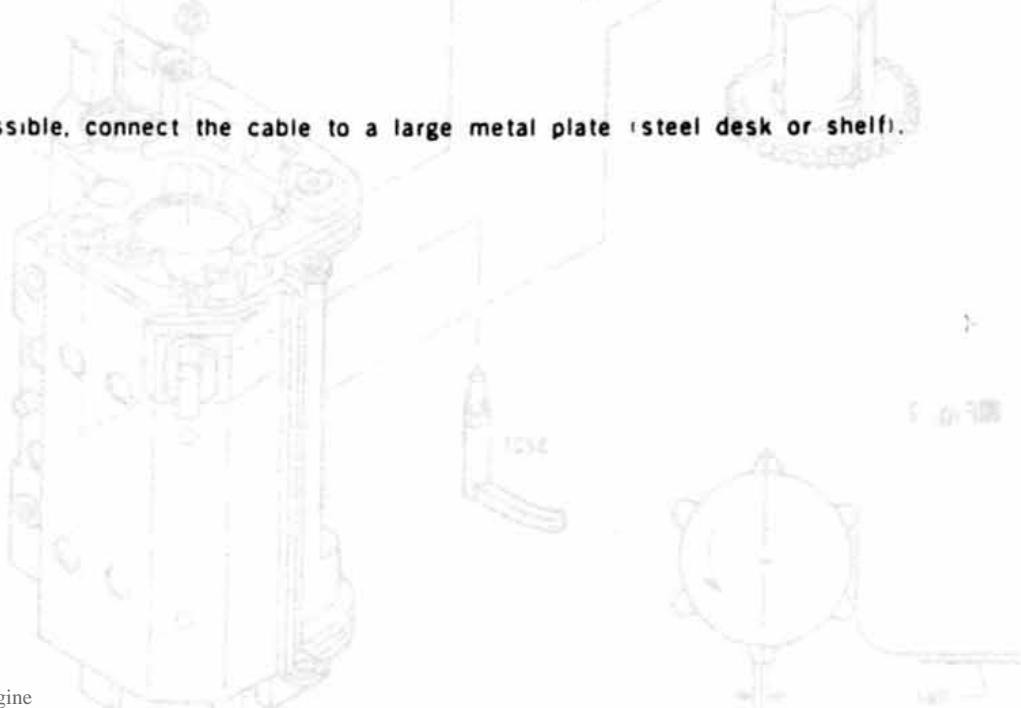

# Sprocket gear positioning procedure

■ Fig. 1

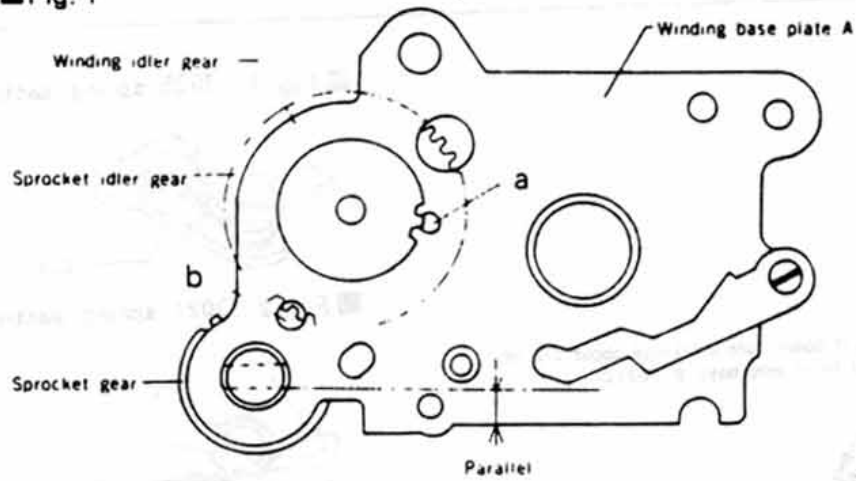


■ Fig. 2



1. With the winding idler gear crest fitted in hole a of winding base plate A and with the sprocket idler gear bottom fitted in hole b, set the sprocket gear so that the shaft under the sprocket gear is parallel with winding base plate A.
2. Then, put a mark on the tooth of the winding idler gear at hole a, as shown in Fig. 2.
  - After marking the winding idler gear, align the mark with hole a and set the sprocket gear as shown in Fig. 1.




# 2 Winding shaft

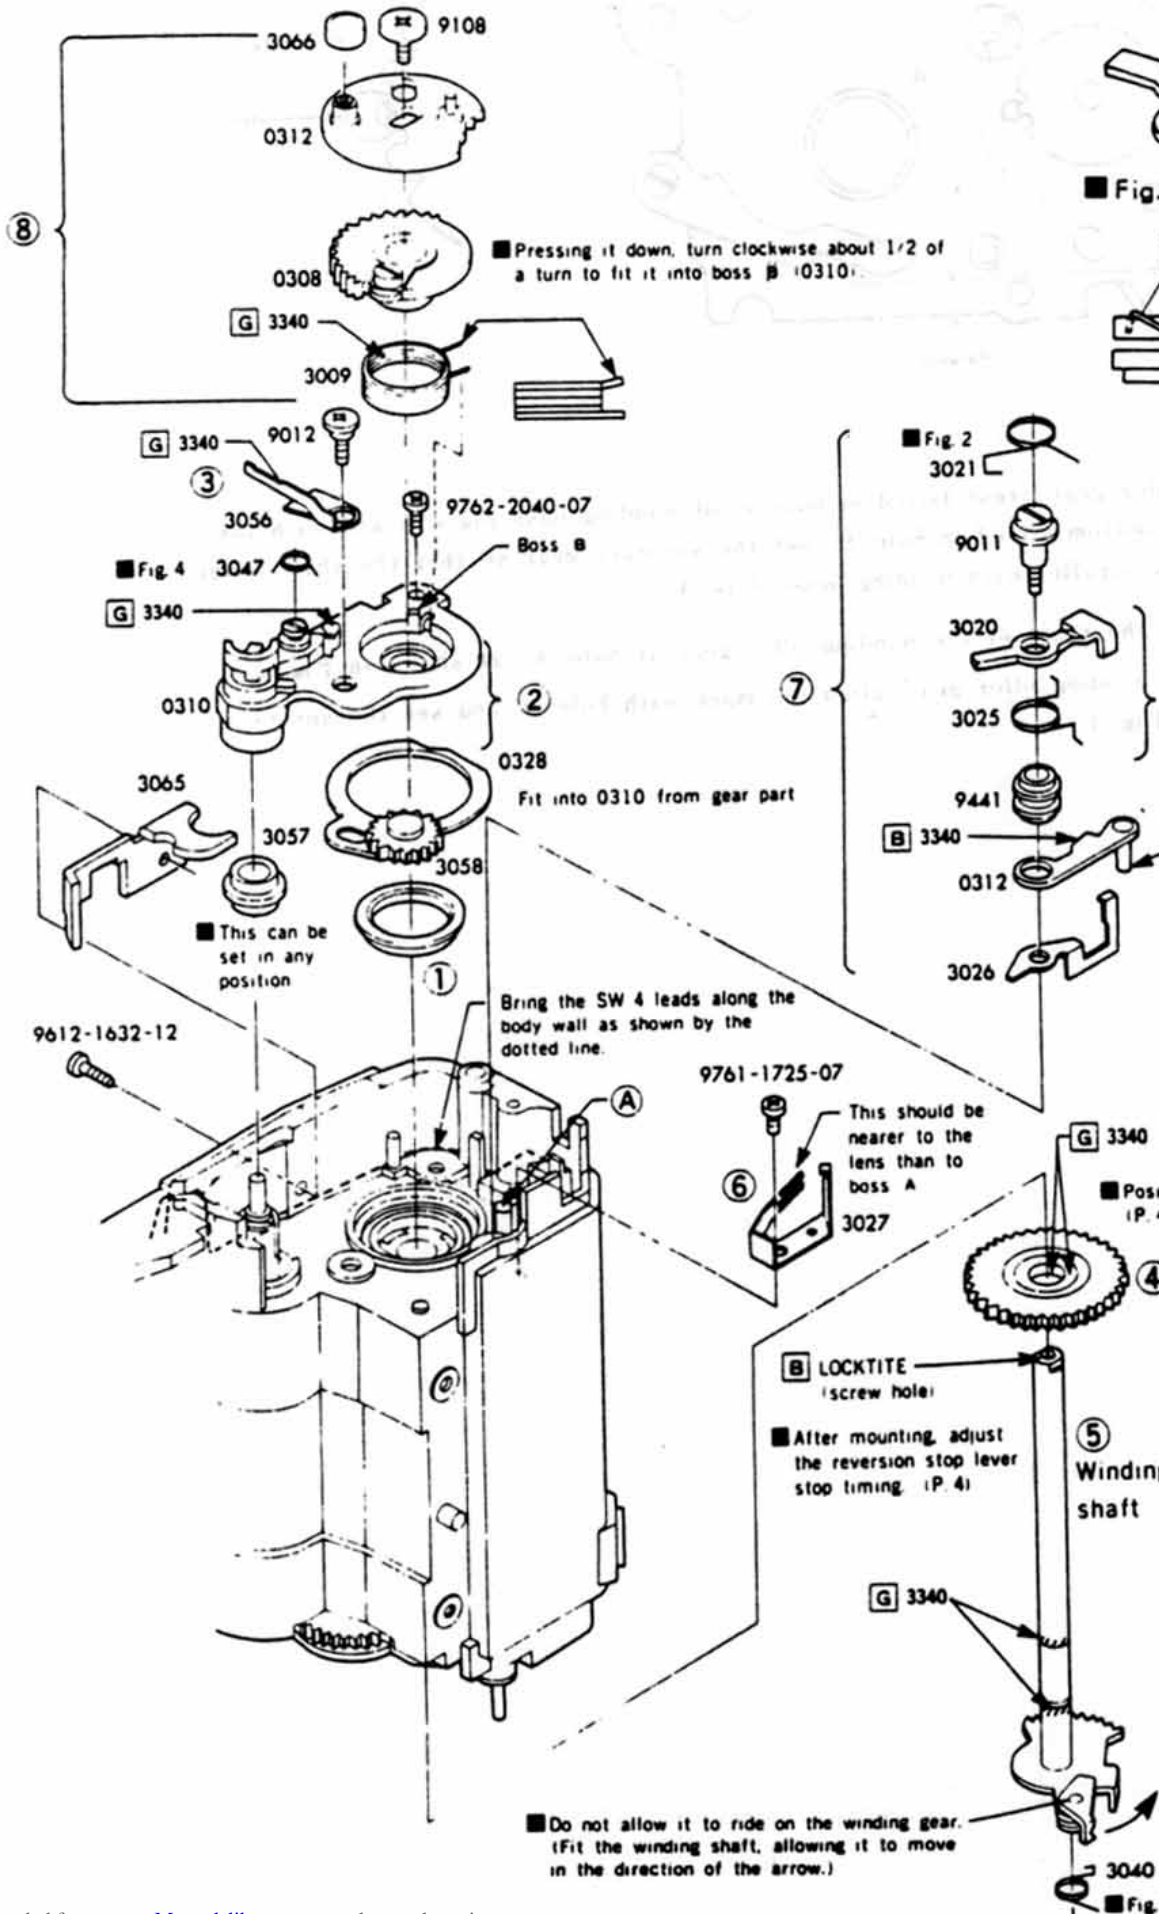


■ Fig. 1 3025 spring setting



■ Fig. 2 3021 spring setting

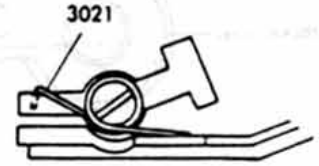

■ Fig. 2 3021

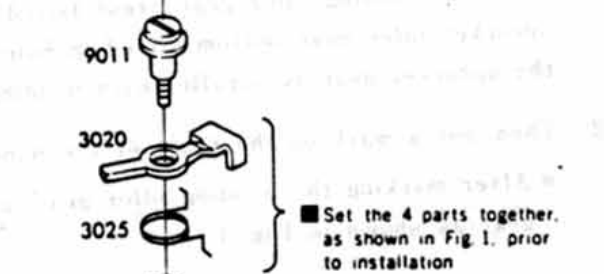

■ Fig. 3 3040 spring setting




■ Fig. 4 3047 spring setting




■ Fig. 3

# Winding gear positioning procedure

■ Fig. 1 Winding idler gear position

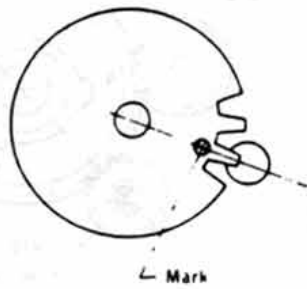

■ Fig. 2

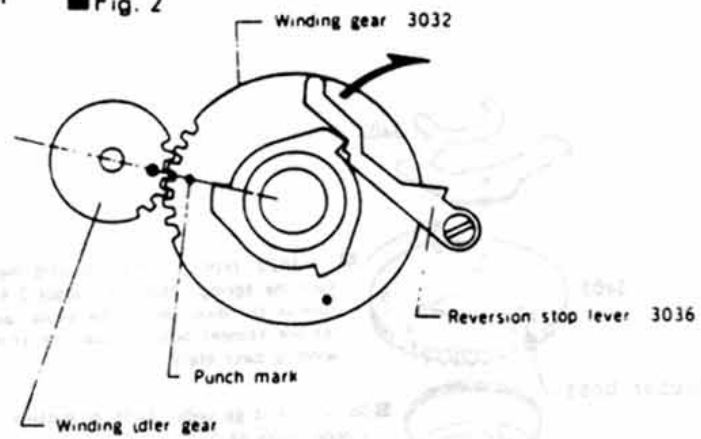


1. Make sure that the winding idler gear is positioned as shown in Fig. 1.
2. Allow 3036 to move in the direction of the arrow, then set the winding gear so that the punch mark of the winding gear is aligned with the mark of the winding idler gear. Fig. 2

## Reversion stop lever stop timing adjustment


1. Position the winding operation plate as shown in Fig. 3, and temporarily set the winding operation lever.
2. With the winding claw and reversion stop lever fitted into the winding gear as shown in Fig. 3, press the winding operation plate in the direction of arrow B while applying a load to the sprocket in the direction of arrow A so that the winding claw is set securely onto the winding gear.

■ Fig. 3

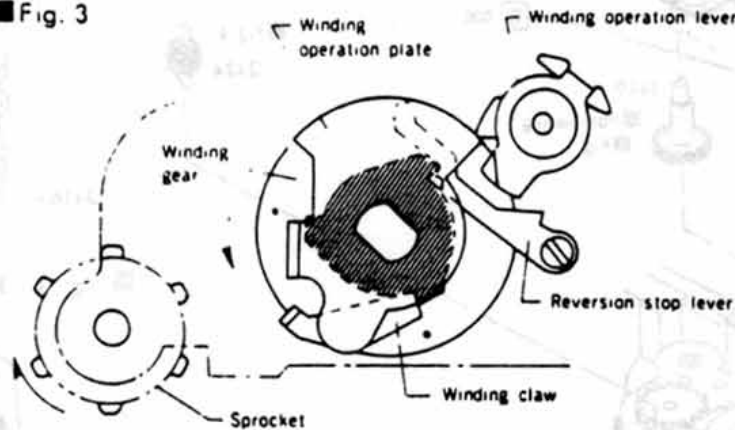


3. Applying a load to the sprocket and winding operation plate as shown by A and B, turn the reversion stop lever shaft until the winding operation lever is disengaged from the winding operation plate. Fig. 4

■ Fig. 4

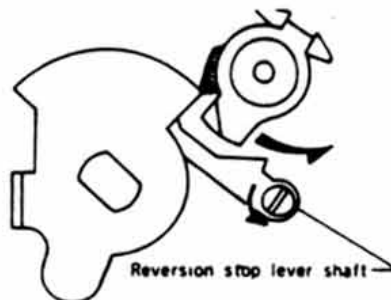

### 3 Winding base plate B

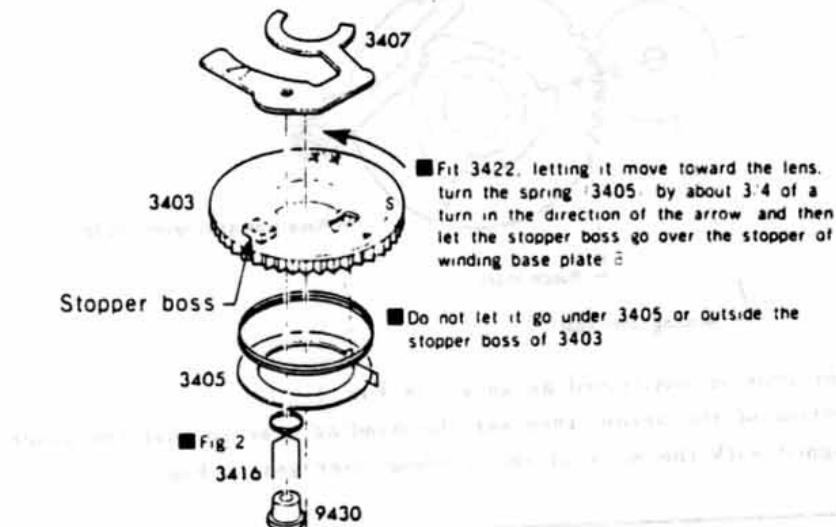

Fit 3422, letting it move toward the lens, turn the spring 3405, by about 3/4 of a turn in the direction of the arrow and then let the stopper boss go over the stopper of winding base plate B

Do not let it go under 3405 or outside the stopper boss of 3403

Positioning Fig 1


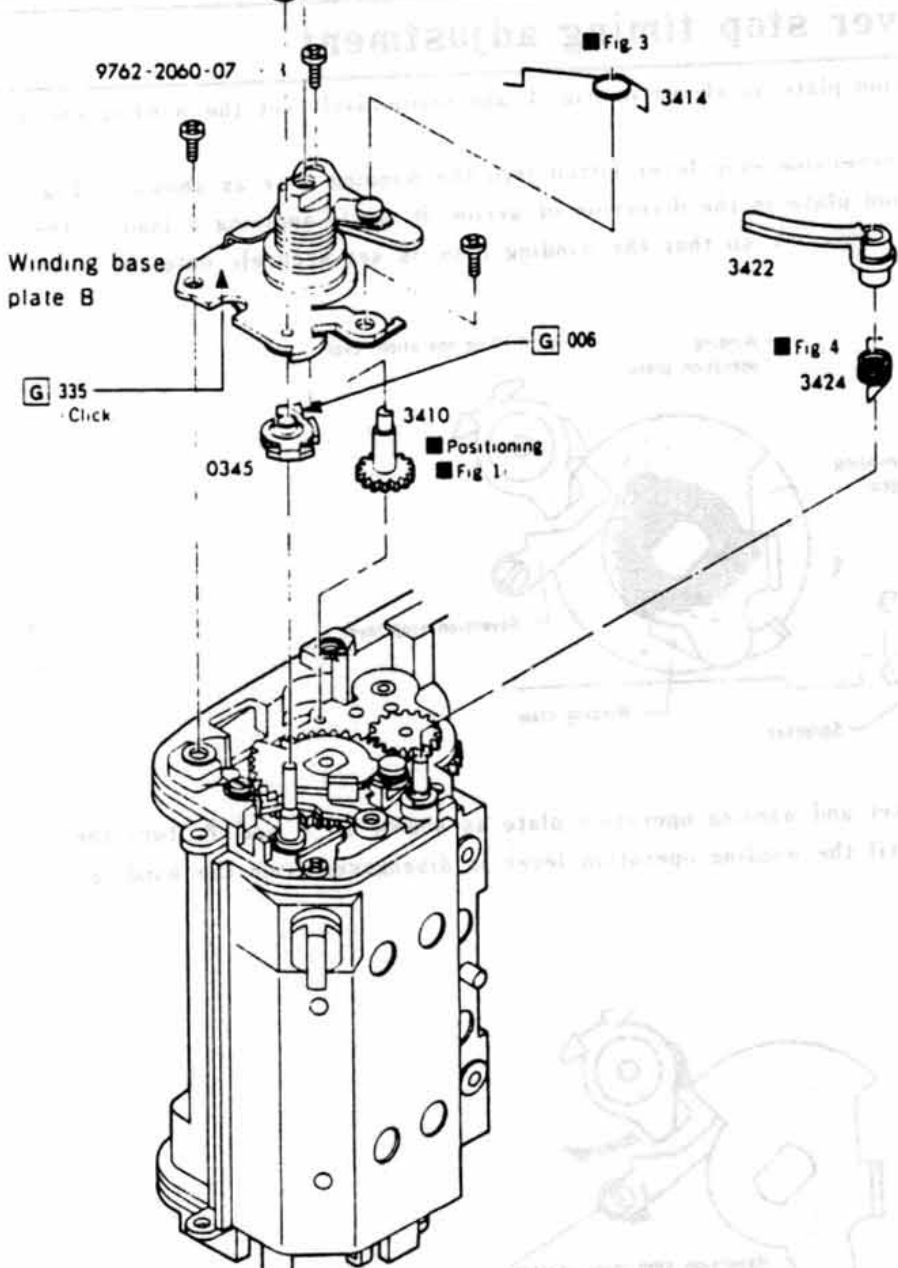


Fig. 1

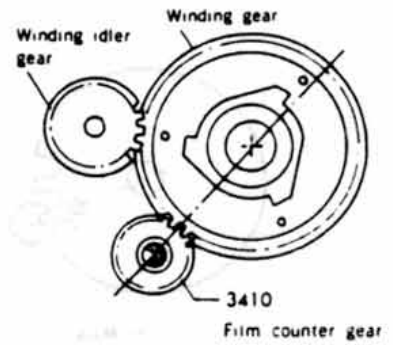

Make sure that the punch mark of the winding gear is correctly facing the center of the winding idler gear and then set 3410 so that the V groove is positioned as shown above

Fig. 2 3416 spring setting

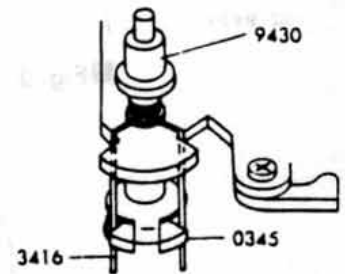


Fig. 3 3414 spring setting



Fig. 4 3424 spring setting




After completion of the assembly work, mount the film advance lever and carry out the adjustments and checks on P. 6, 7.




# ■ Overrun eccentric pin adjustment

1. After winding, hold the film advance lever and turn the eccentric pin (9291) counterclockwise until the sprocket shaft (3052) touches the winding shaft receiver. (Fig. 1)
2. Return the winding lever slightly, and then wind it again to set it in the condition shown in Fig. 2.

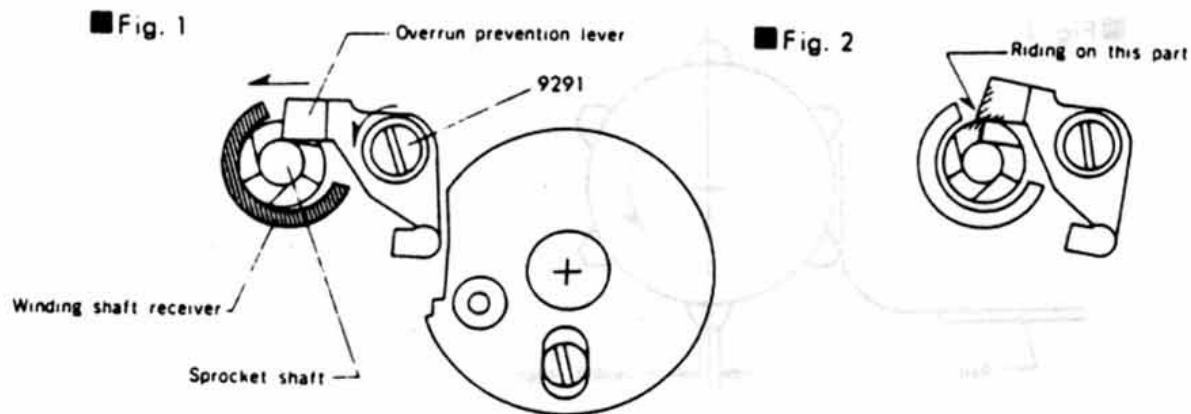

3. Then, shift the sprocket shaft by finger toward the body center to set it in the condition shown in Fig. 3, and slowly turn the eccentric pin (9291) clockwise until the overrun prevention lever is engaged with the ratchet of the sprocket shaft.

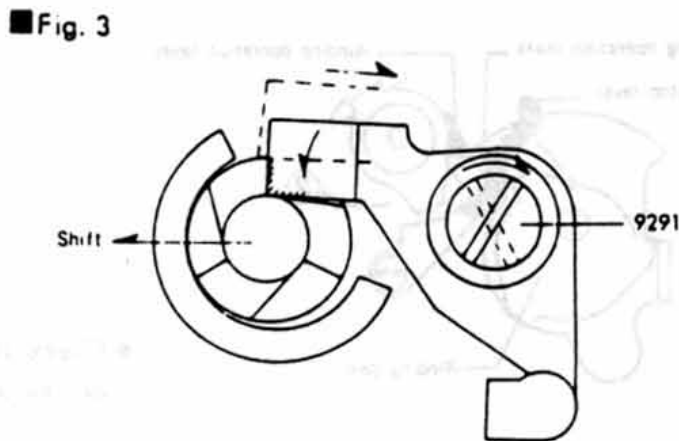


- **Checking adjustment:** During the winding lever operation, the end of the overrun prevention lever should not be caught by the sprocket claw. After winding is completed, the lever should be engaged with the claw.

# Winding mechanism check

## 1 Position of sprocket claws

After winding, hold the winding lever and return the sprocket in the direction of the arrow, as shown in Fig. 1. The sprocket claw positions should then be as illustrated.


Fig. 1

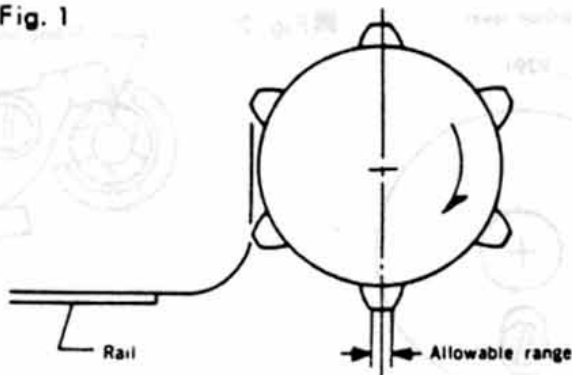

## 2 Reversion stop lever timing

Slowly turn the film advance lever while applying a load to the sprocket. The winding operation lever should disengage from the winding operation plate after (or at the same time) the reversion stop lever begins to engage with the claw of the winding gear.

Fig. 2

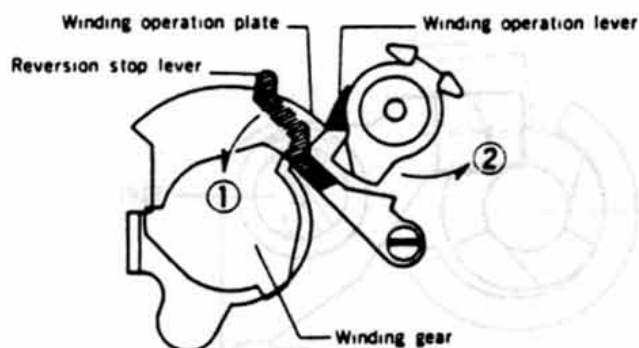


● Check through the clearance of the strap hanger screw.

## 3 Winding operation lever timing

After winding, slowly return the film advance lever. The winding stop lever should enter the 1st stop position of the charge operation plate. Before it enters the 2nd stop position, ① the winding claw should engage with the winding gear claw and ② the winding operation lever should disengage from the winding operation plate. A reversal in the timing of ① and ② is also allowable.

Fig. 3

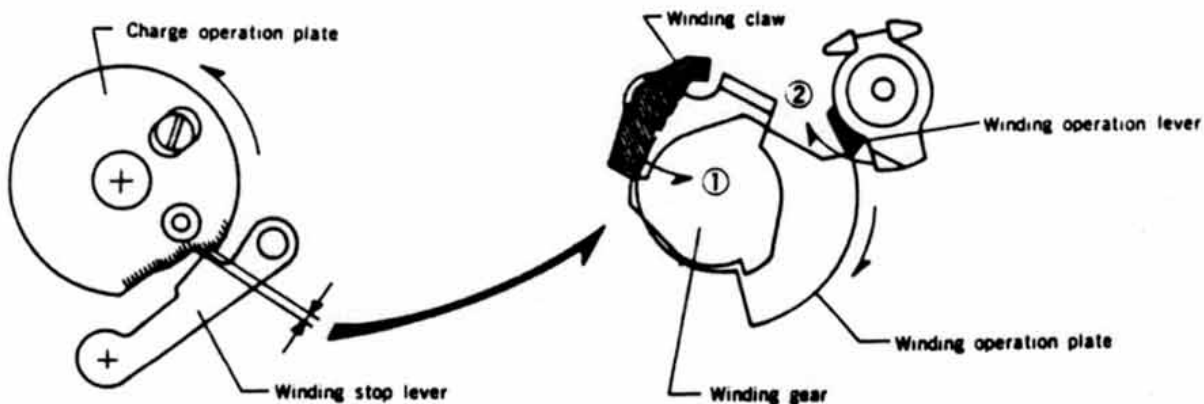

# 4 Front base plate block assembly-1

■ Refer to the arrangement of the lead wires on the next page.

■ Push the release lever in the direction of the arrow to separate the release magnet. Set the mirror box while letting the preset lever go in the direction of arrow A

9612-1675-01

■ Check the release magnet and aperture stop magnet attraction

9613-1675-01

G 3340  
B 3-BOND 14018

9107

2205

Remote control terminal

Front base plate

S 9612-1625-02  
9611-1625-01 (- 3)  
M (- 4)

G 3340

Release lever

Preset lever

9612-1616-02

Mirror box

1008

5038 (- 2)

1014

Fig. 1

1006

2291

LED

4037 (- 2)

AE lock SW

0418









9611-1625-01 (- 2)

MP return lever stopped

■ Mirror angle adjustment  
■ Check mirror magnet attraction P 10  
■ With MP return lever stopped mount the magnet base plate and shutter

■ Install with charge completed


Shutter

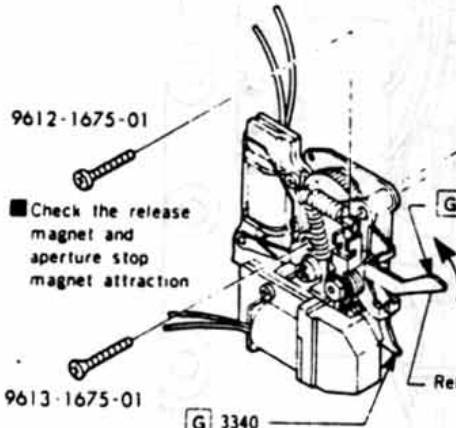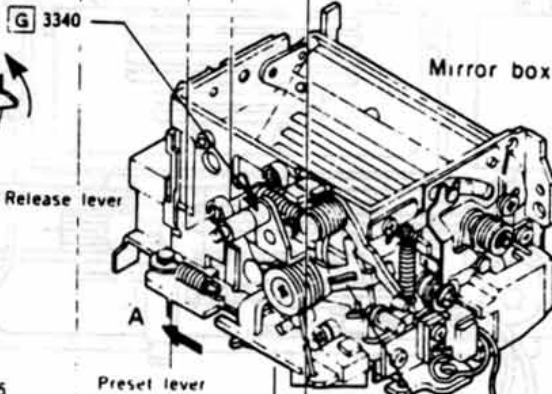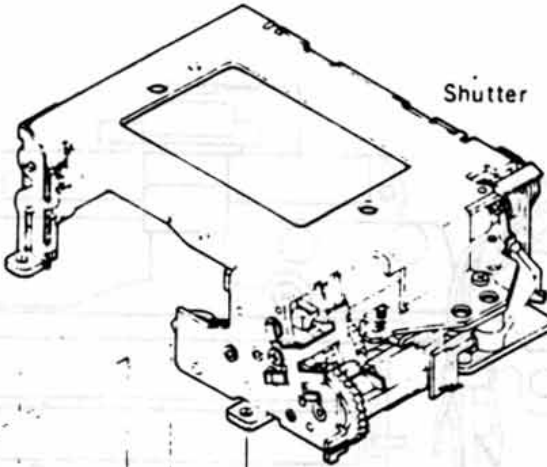




# Arrangement of front base plate lead wires


■ Fig. 1

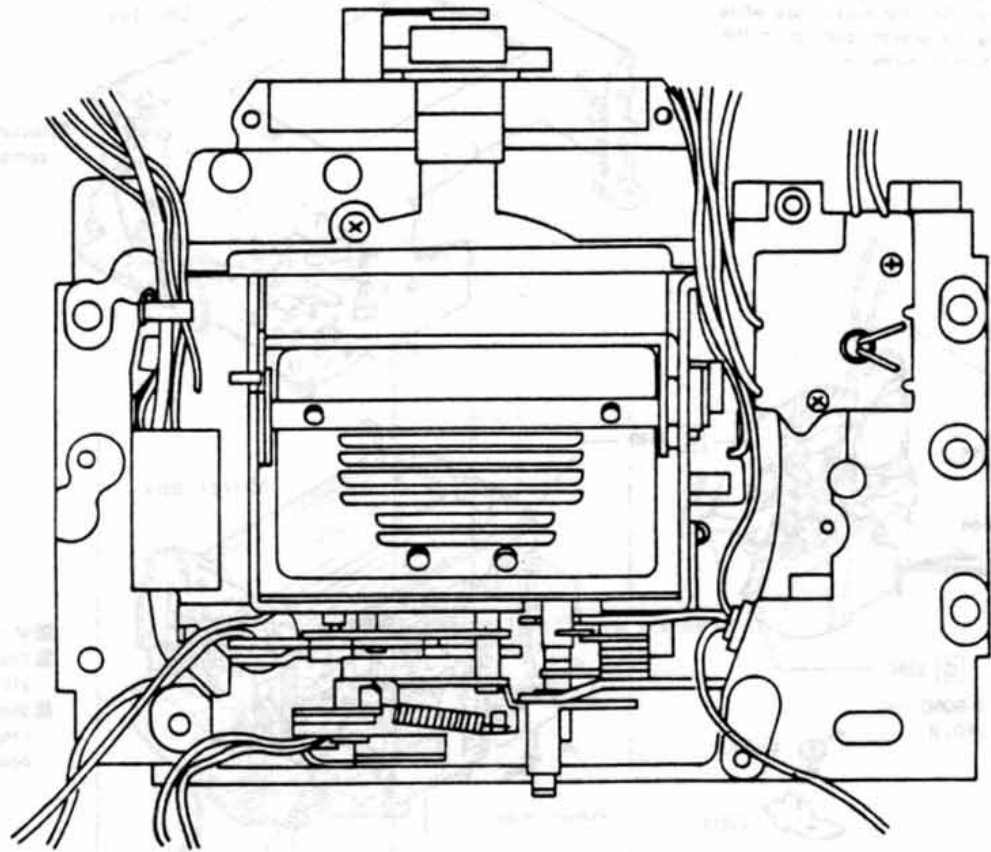

■ Fig. 2

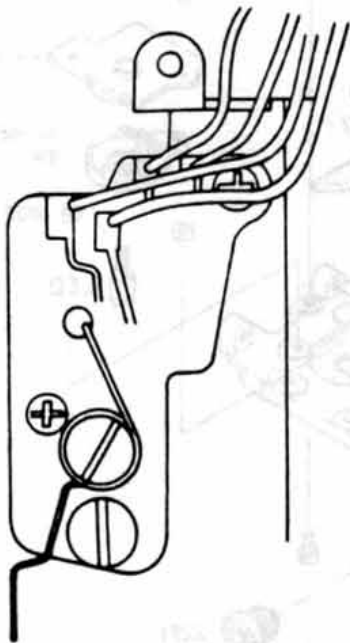

■ Fig. 3

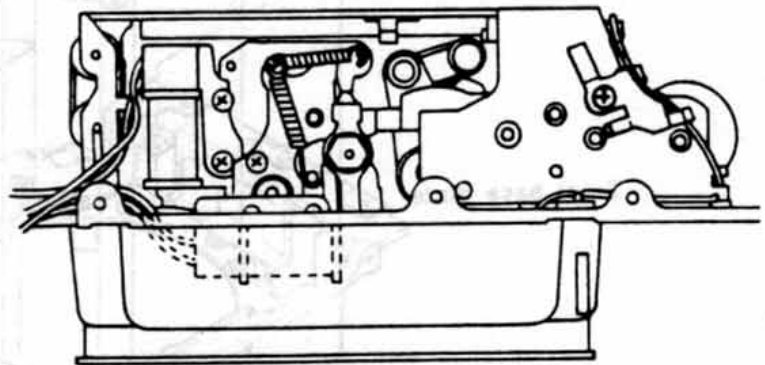


# Magnet attraction check


- **Measuring instruments** : Constant voltage D.C power supply Model 524B, E-1, E-2  
: Dial tension gauge (500g, 300g)

- **Checking procedure**  
T Mirror magnet

■ Fig. 1 Attraction

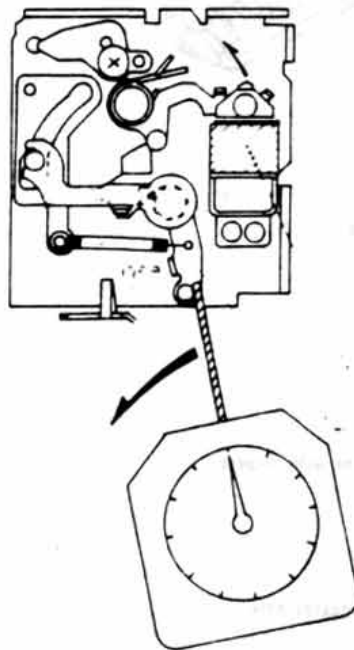


■ Fig. 2 Attraction

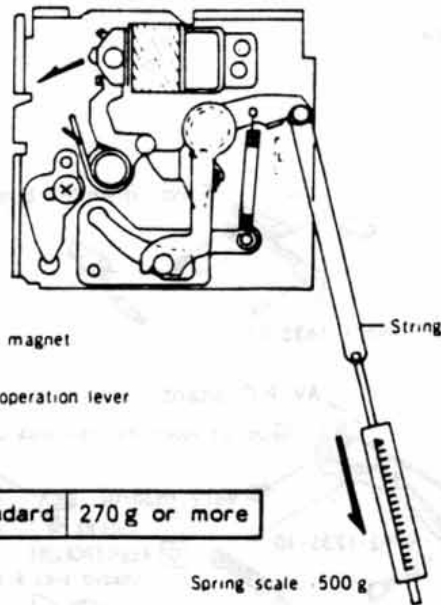

Standard 270 g or more


■ Fig. 3 Separation voltage

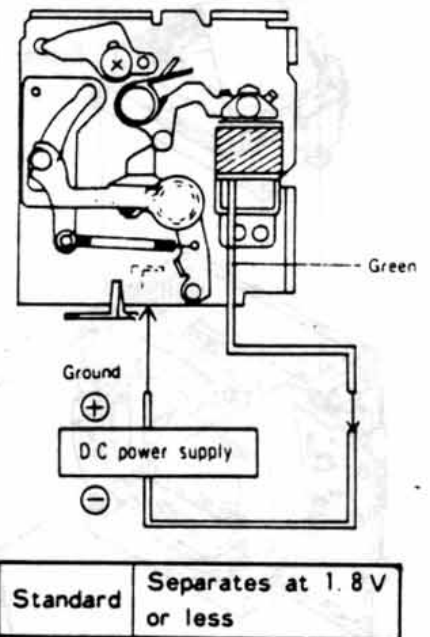

- **Attraction check**...As shown in Fig. 1, set a tension gauge to the pin of the mirror operation lever, and then check the value when the contact piece separates. (If a tension gauge of less than 300g is not available, a spring scale of about 500g can be used as shown in Fig. 2.)
- **Separation voltage check**...As shown in Fig. 3, connect to a D.C power supply and check to see if the contact piece separates at 1.8V or less.


## 2 Release magnet, aperture magnet

■ Fig. 4

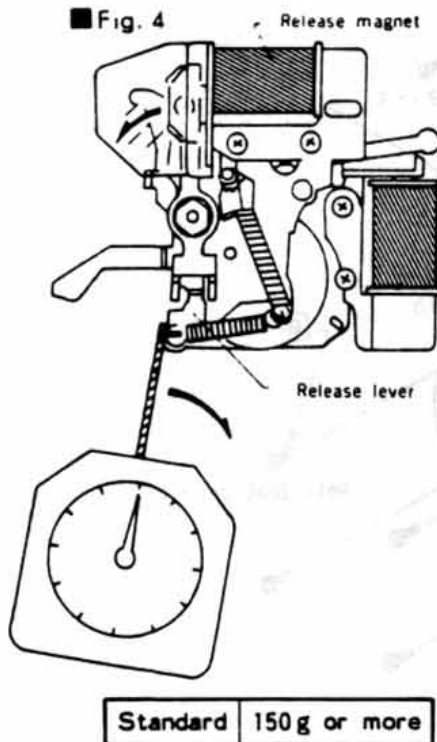


Standard 150 g or more

■ Fig. 5

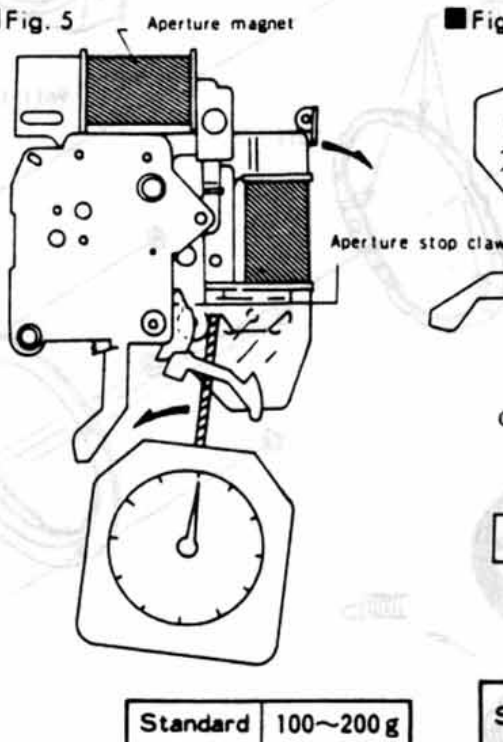

Standard 100~200 g

■ Fig. 6

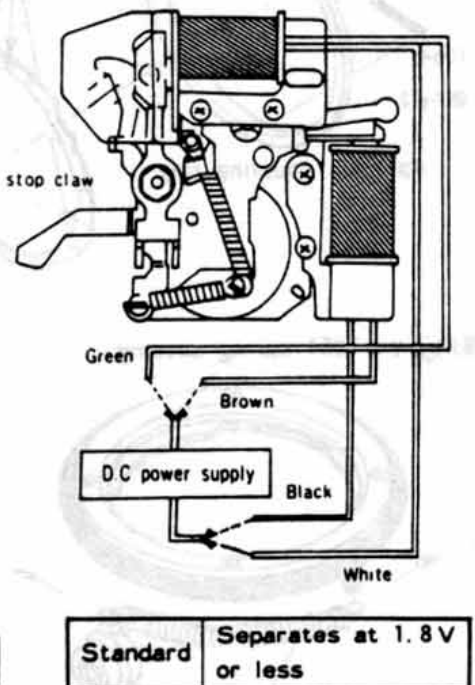

Standard Separates at 1.8 V or less

- During the aperture magnet measurement (both attraction and separation voltage), the release magnet should be separated.



# 5 Front base plate block assembly-2

Fig. 1 4344 spring setting


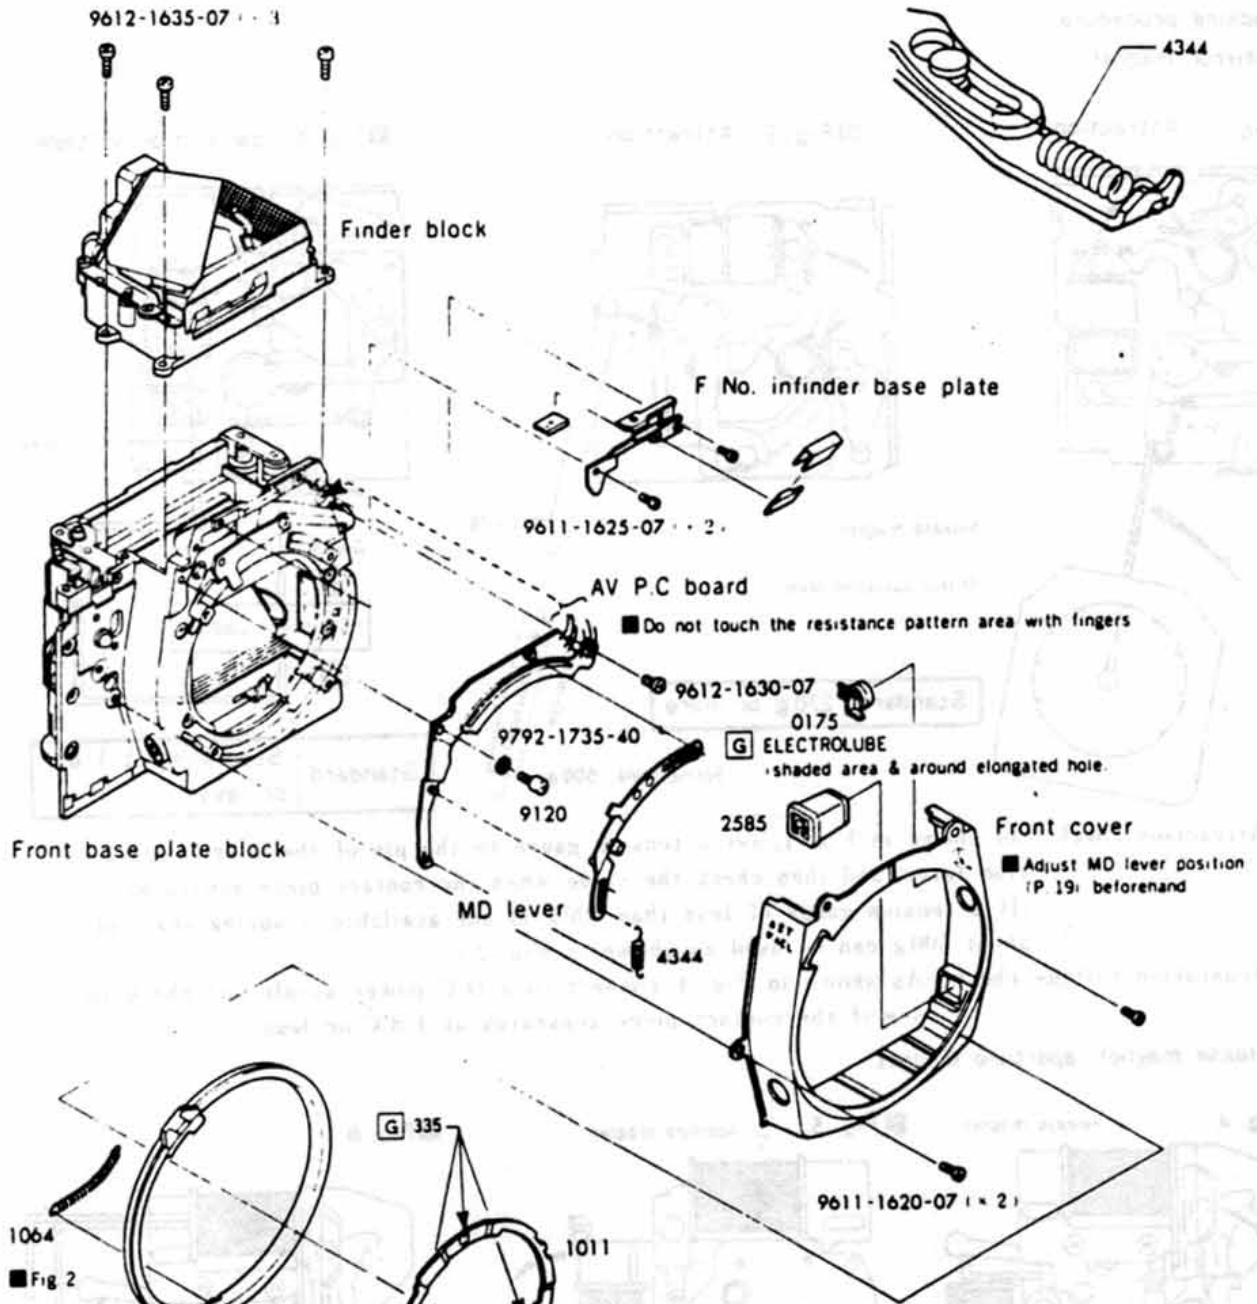


Fig. 2 1064 spring setting






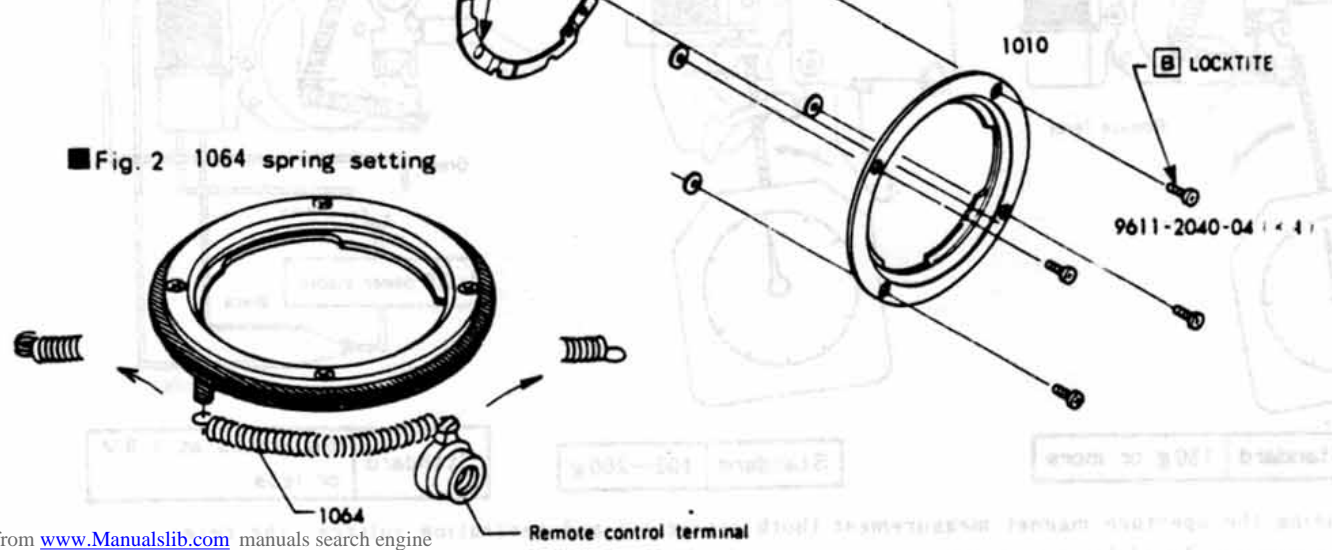

## Shutter gear position adjustment

1. Engage the gears so that the mark of charge gear A faces the center of charge gear C, and tighten 9012. The gear engagement clearance should be 0.1~0.2 mm.


Fig. 1

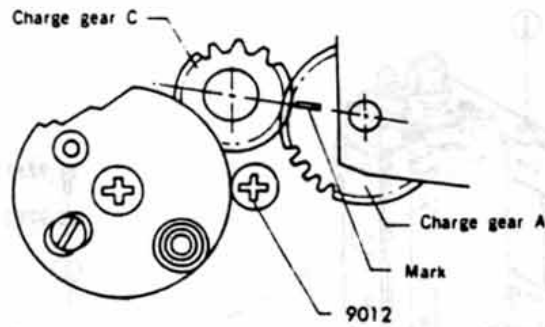


## Shutter release procedure

- In this camera, the mirror operation mechanism is started with the separation of the mirror magnet (M Mag). Therefore, after mounting the shutter block on the body, the shutter cannot be released unless the flexible P.C board is installed with the wiring completed. For this reason, the shutter should be released by the following method when performing any checking or adjustments, such as for winding, mirror box, shutter release, etc., after assembling the front base plate block as shown on P. 8.

1. By using a release tool (2017-0003-75).

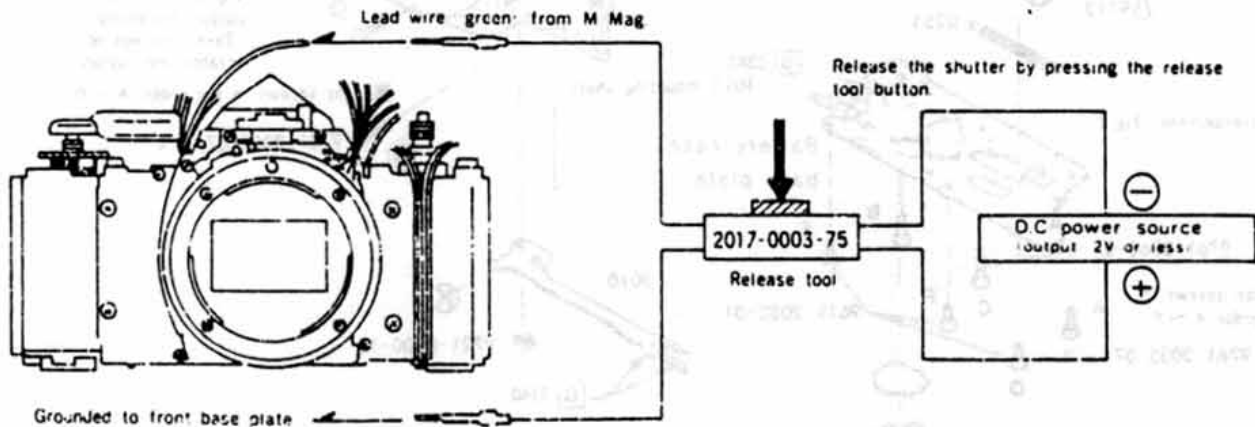

2. By using a battery

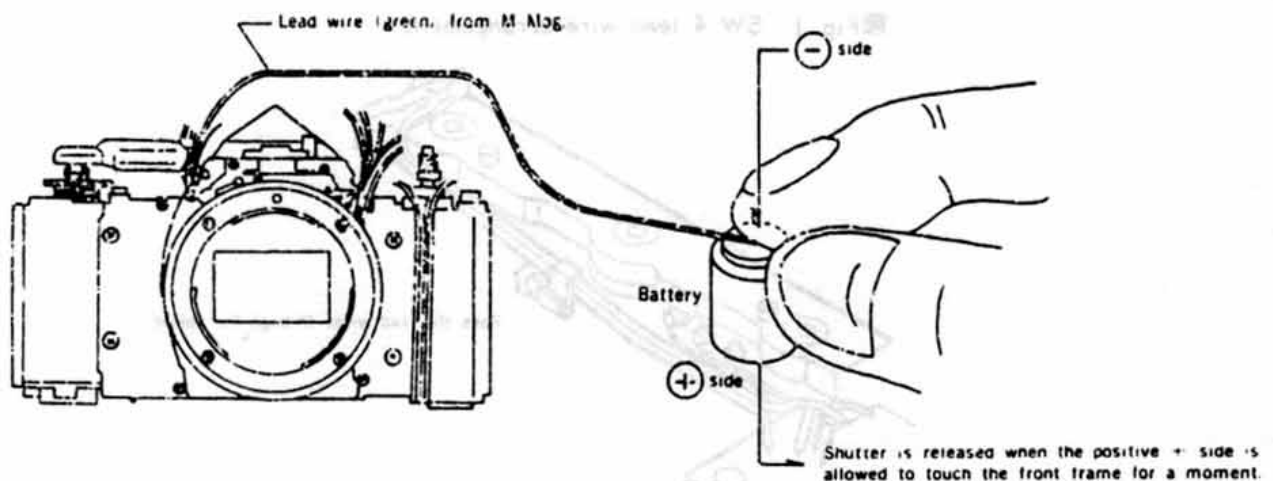


- Caution:** In both methods [1] and [2], supply power until the completion of shutter operation. (Otherwise the shutter tester may fail to give a correct indication.)






# 7 Flexible P.C board installation


- After installing the flexible P.C board and soldering the lead wires, carry out the adjustment of P. 17~31.
- If the shutter block has been disassembled, adjust it before mounting the circuit board.

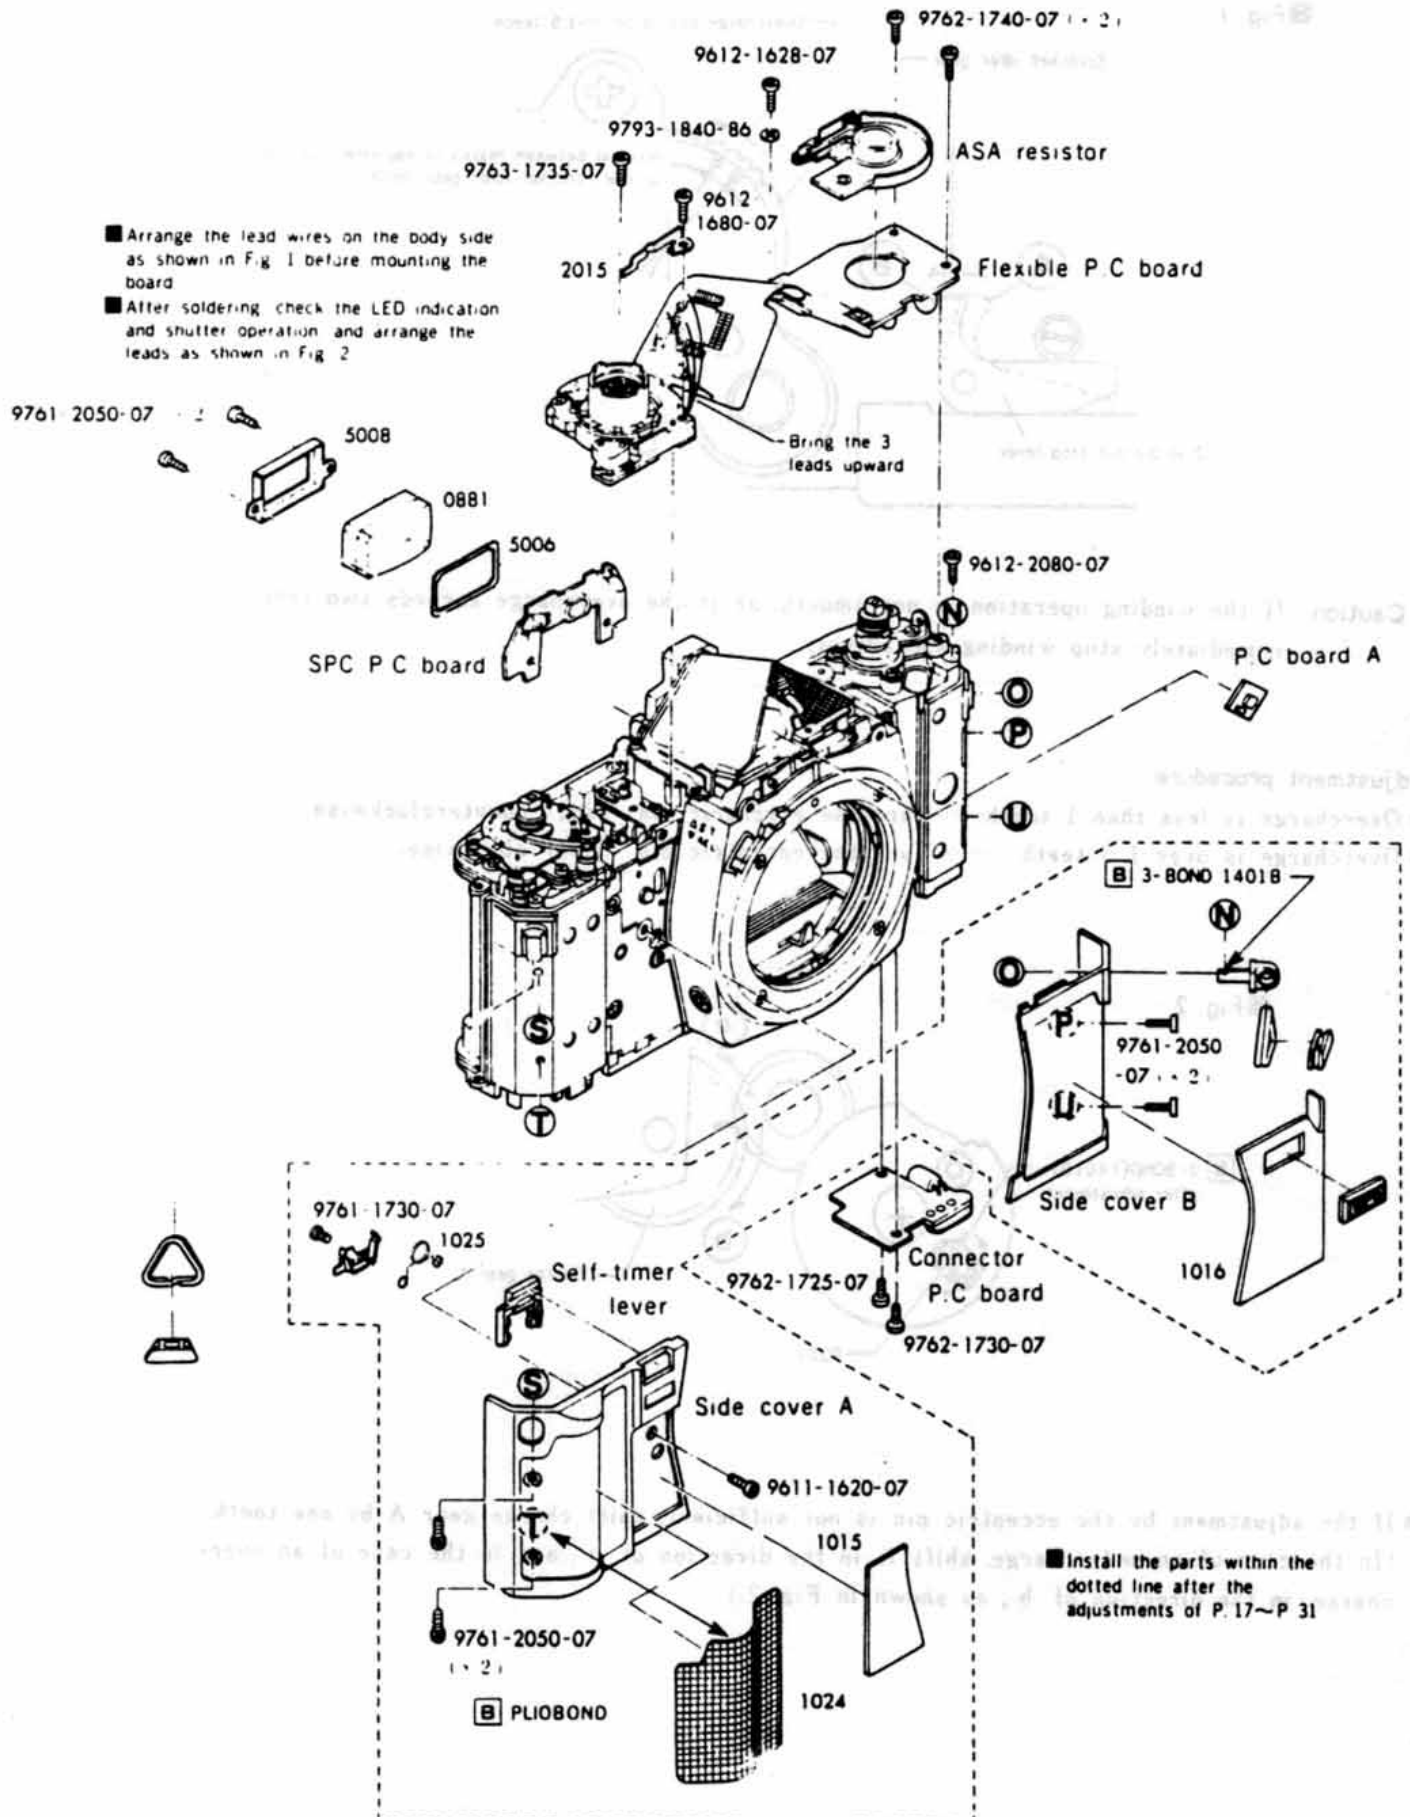

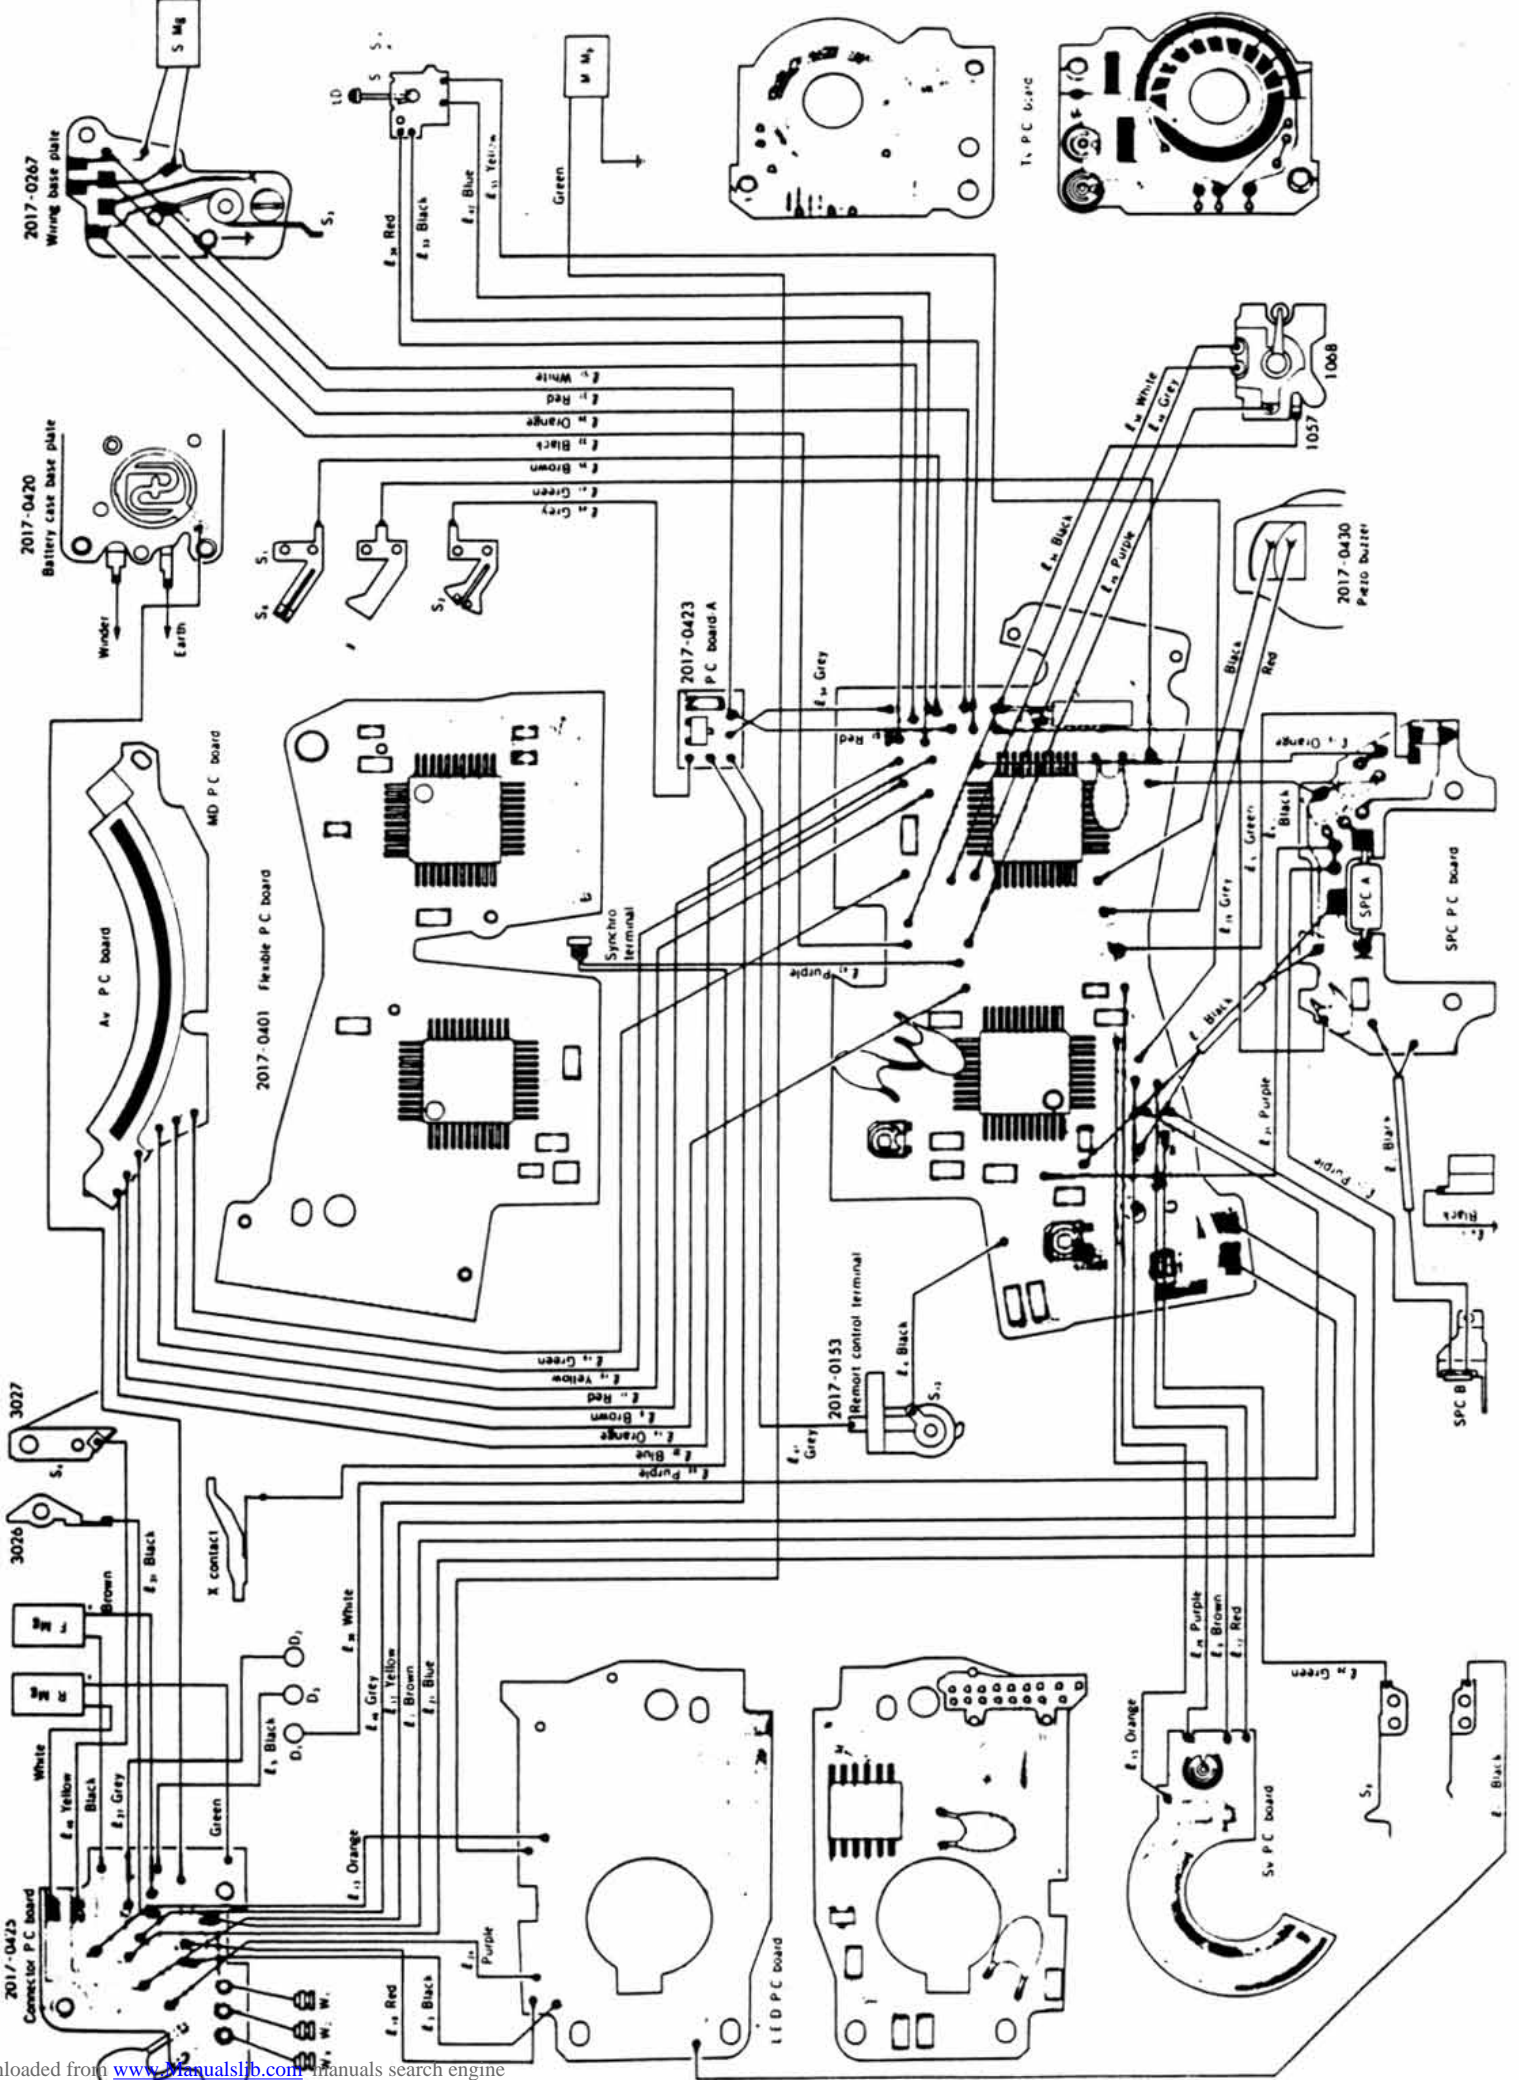




■ Fig. 1

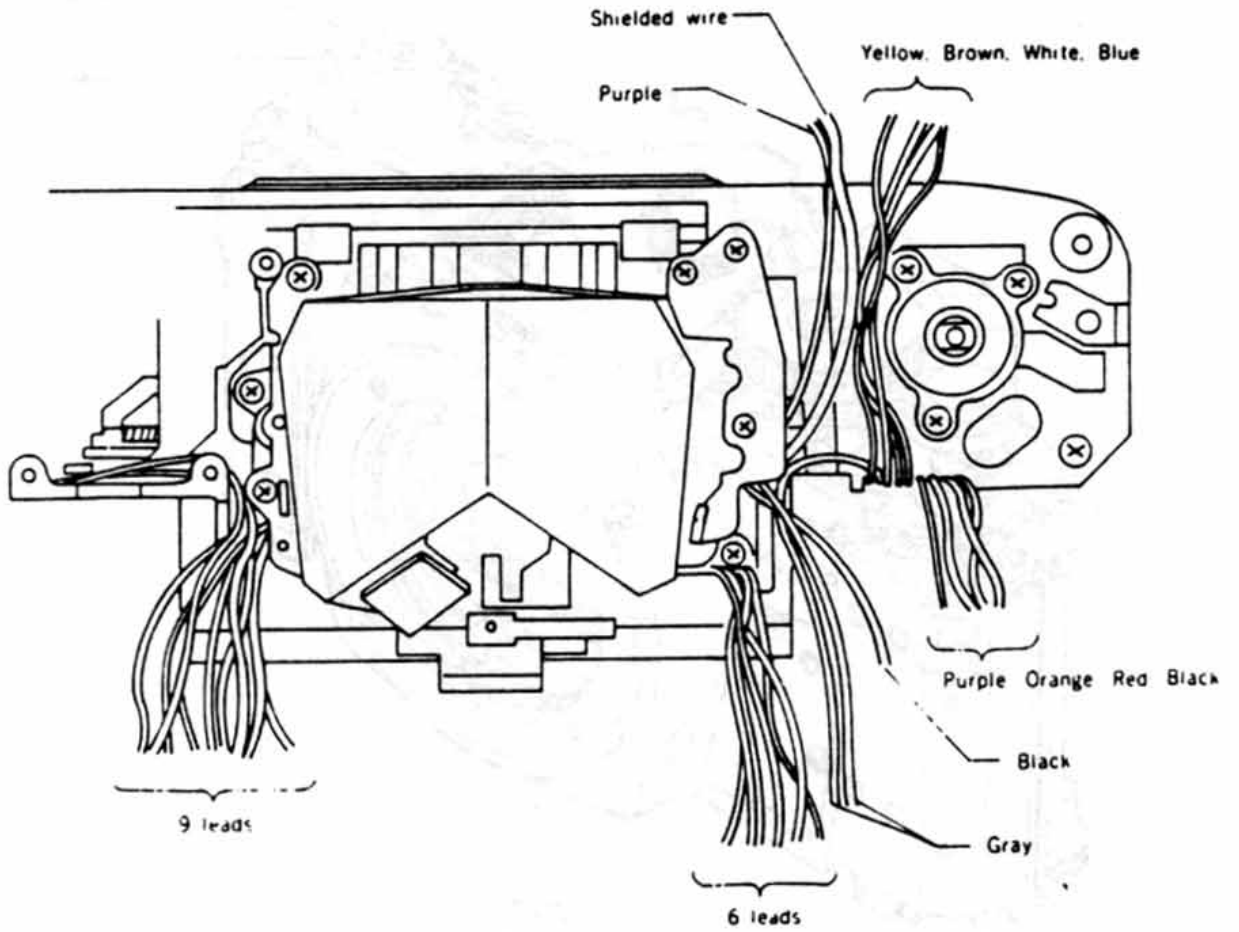


■ Fig. 2

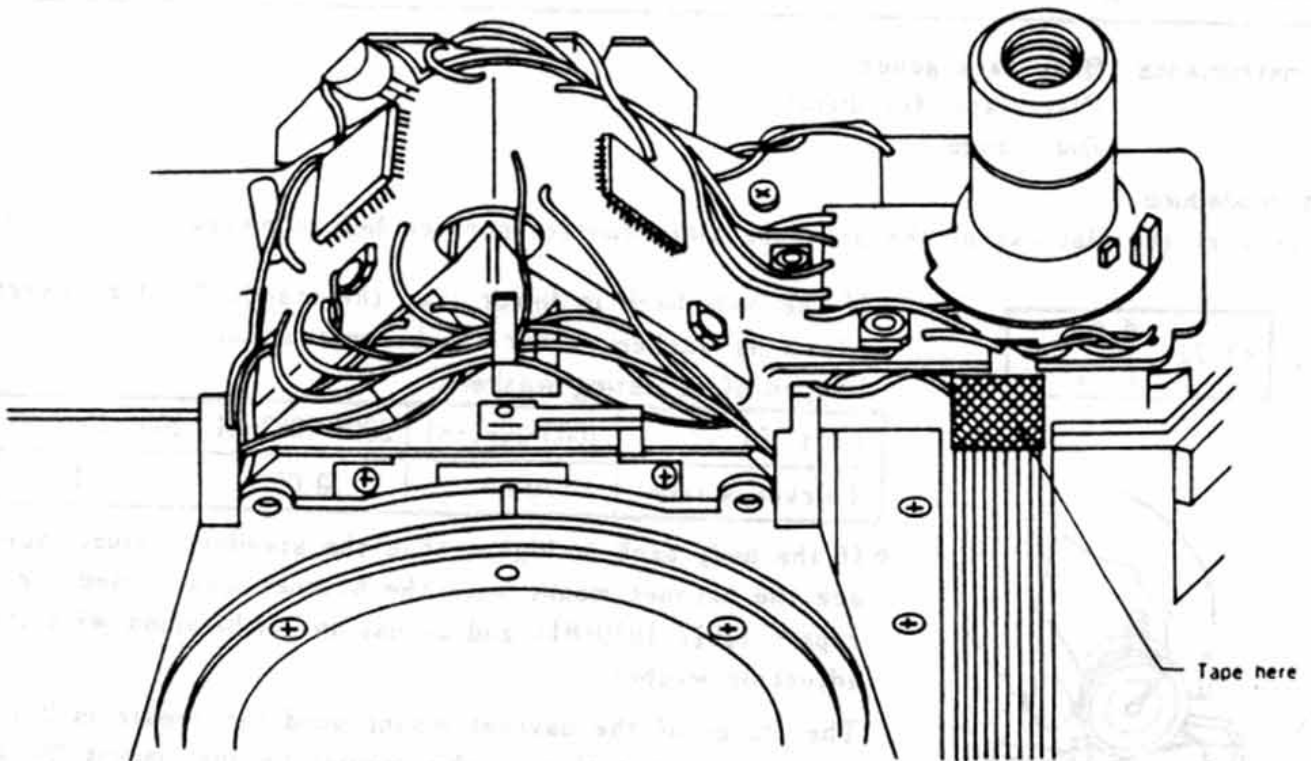



# ■ Preparation for adjustments

Put the camera into the condition shown below before starting adjustment.

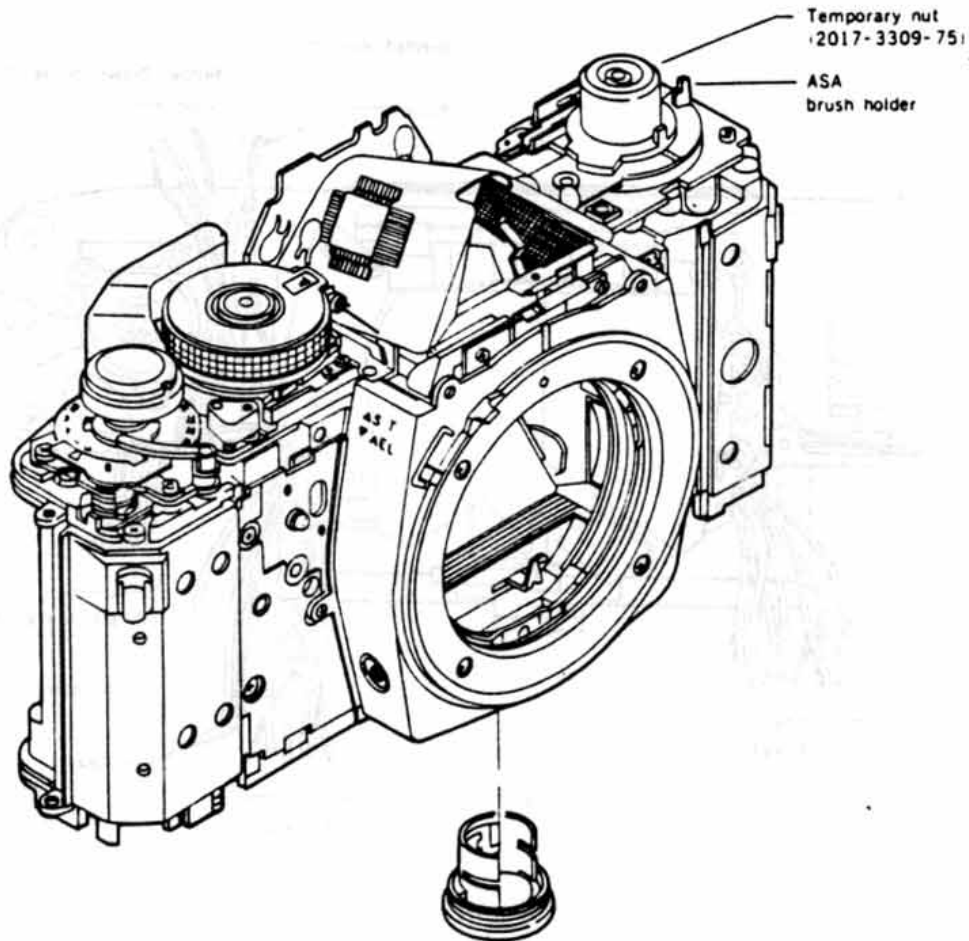

## ■ Body back adjustment


- Measuring instruments : Body back gauge  
: Flat plate (for 2005)  
: Dial gauge

■ Adjustment procedure

Check and correct the flatness of the pressure plate contact surface before measuring the body back.

(Standard)  $43.72 \begin{matrix} +0.01 \\ -0.02 \end{matrix}$  mm

■ Fig. 1

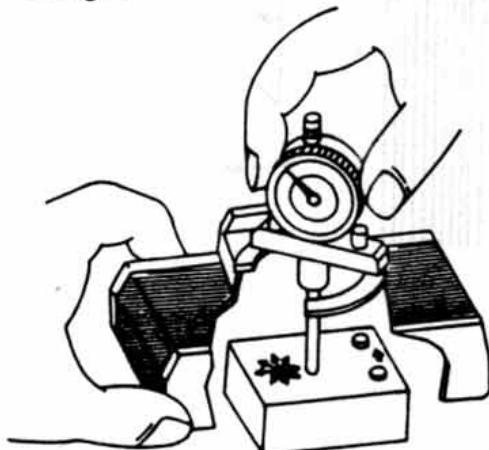

- If the body back is lower than the standard value, insert adjusting washers under the bayonet mount.

(Types of adjusting washers)

| Part No.       | 2005-1061-81 | 2005-1062-81 | 2005-1063-81 |
|----------------|--------------|--------------|--------------|
| Thickness (mm) | 0.02         | 0.05         | 0.1          |

- If the body back is higher than the standard value, replace the bayonet mount with the bayonet mount used for repair (2017-1010-81) and adjust in combination with the adjusting washers.


The flange of the bayonet mount used for repair is 0.1 mm thinner than that of the regular bayonet mount (2017-1010-01).

# Viewfinder back adjustment

- Measuring instruments :** 1000 mm collimator Model RC-1000 [ , □, ▨ ]  
 : Master lens for 051 finder back adjustment (054-5202-79)  
 : Magnifier


## Adjustment procedure

- Set the camera so that the chart image is as shown in Fig. 1, and set the scale of the master lens to 43.565.

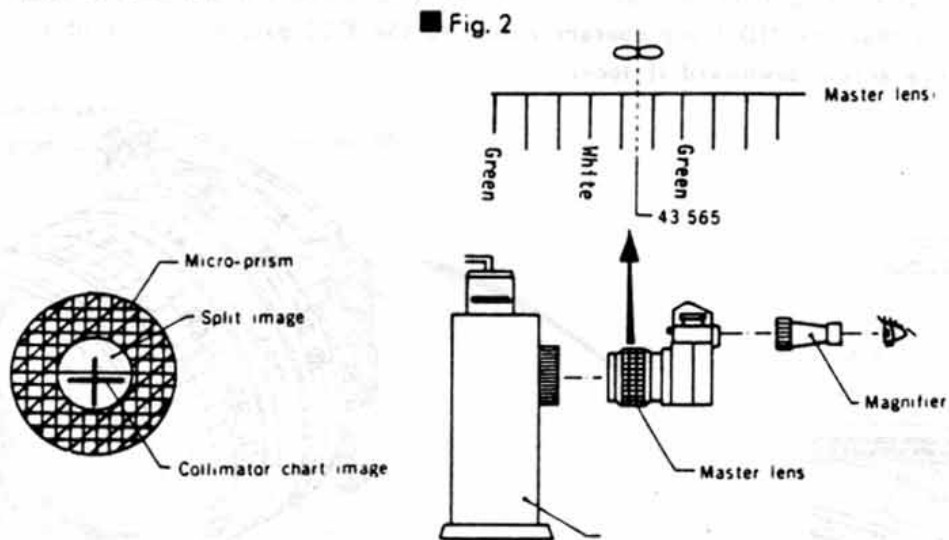


- Make sure that the scale of the master lens is positioned as shown in Fig. 2, and move the 3 adjusting screws of Fig. 3 up and down uniformly to adjust the vertical line of the chart image.

■ Fig. 3

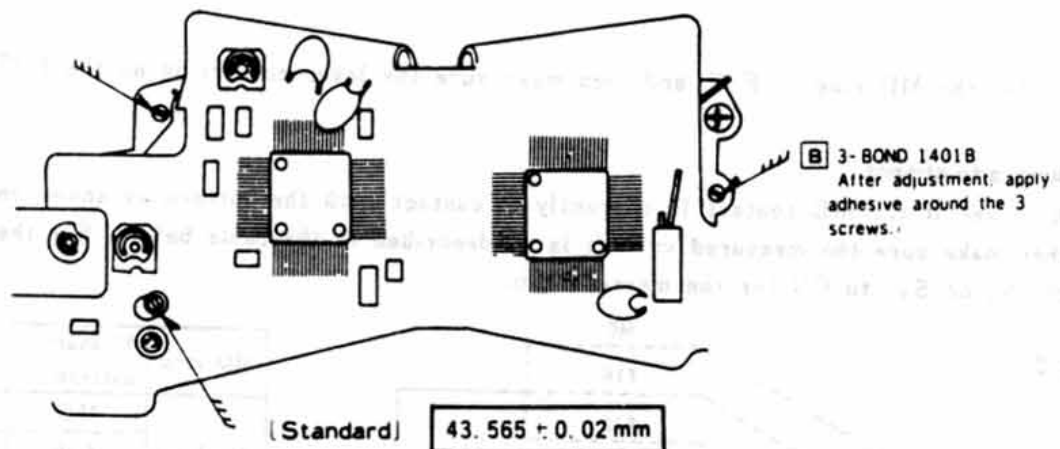

- If the microprism is partially obscure, adjust the vertical balance by using the screws, taking care not to deflect the vertical line of the chart image.

- When the helicoid of the master lens is turned to adjust the focus after operating the shutter several times, the scale position of the master lens should be as follows:

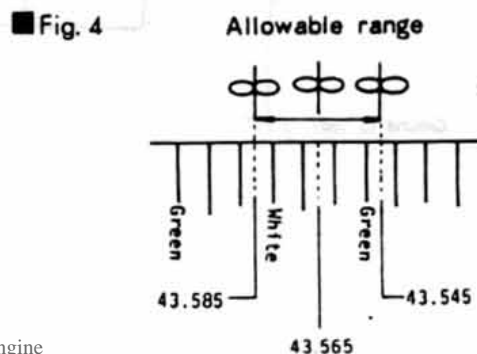


# MD lever position adjustment

- Measuring instruments:** Master lens for A-auto (2005-0002-75)  
 : Digital multimeter (Type 2508, 3476, 2507)

## Adjustment procedure

1. Mount the master lens onto the body and set the MD ring to F 16.
2. Loosen the setscrew (9612-1630-07, 9120) of the AV P.C board and adjust by moving the AV P.C board so that the MD lever contact comes to the F 16 pattern center of the AV P.C board. (Move screw downward if loose)

Fig. 1

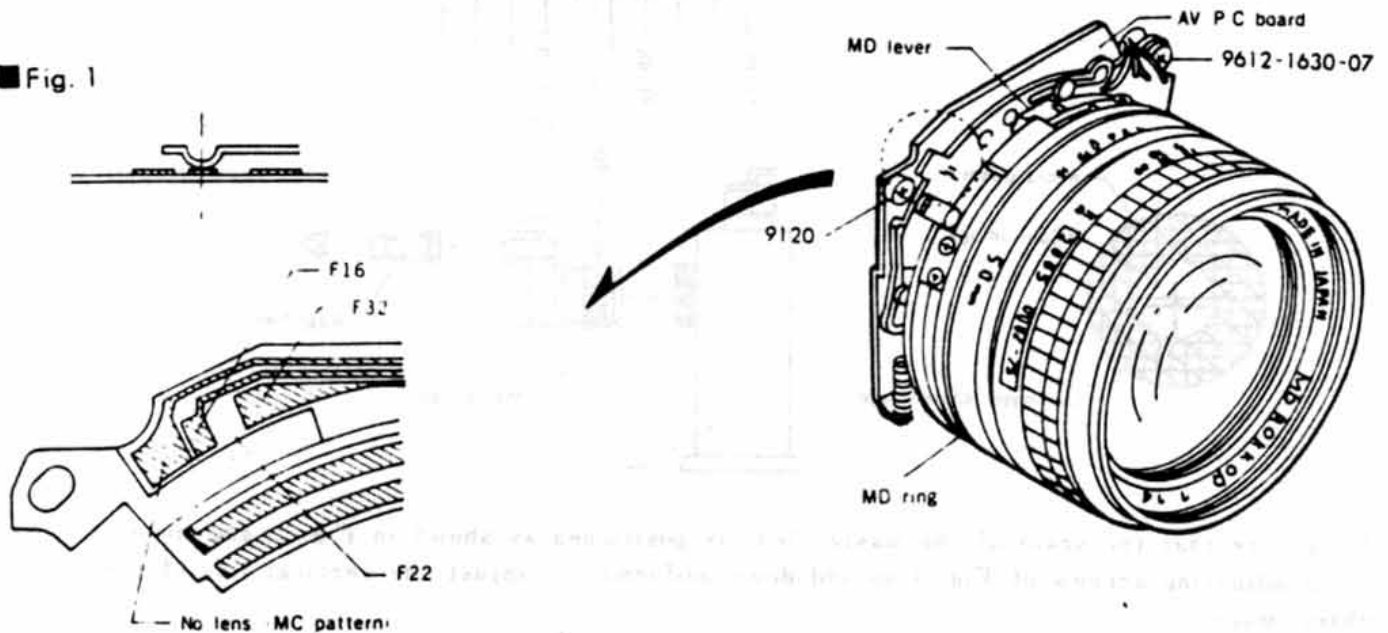


3. Set the MD ring to F 32, and then make sure the lever contact is on the F 32 pattern.

## Checking adjustment

Check to see if the MD contact is correctly in contact with the pattern as shown in Fig. 2, and then make sure the measured voltage is as described in the table below. Set the metering switch ( $S_1$  or  $S_0$ ) to ON for the measurement.

Fig. 2

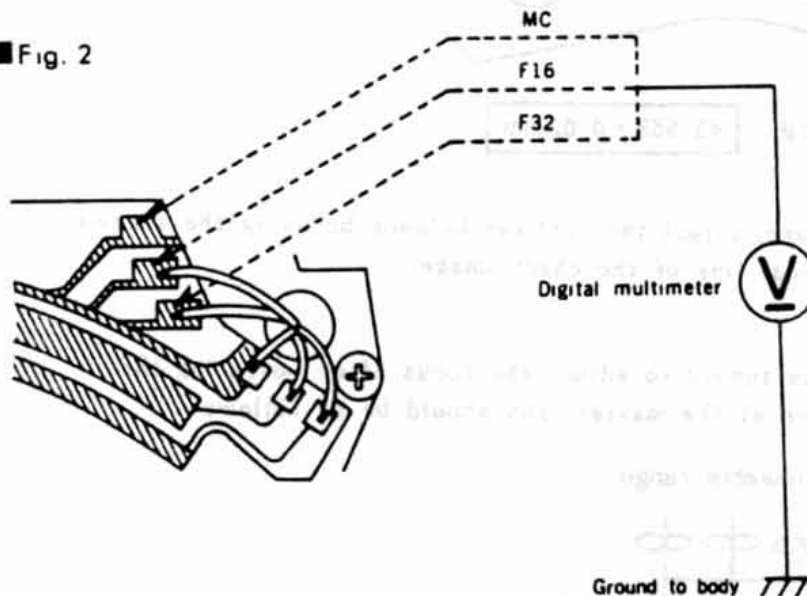

| MD ring | Measuring pattern | Voltage (mV) |
|---------|-------------------|--------------|
| No lens | MC                | 0            |
|         | F 16              | About 800    |
|         | F 32              |              |
| F 16    | MC                | About 800    |
|         | F 16              | 0            |
|         | F 32              | About 800    |
| F 32    | MC                | About 800    |
|         | F 16              |              |
|         | F 32              | 0            |




# LED position adjustment

## Adjustment procedure

- Loosen the 3 screws of the LED P.C board and adjust by moving the LED P.C board so that the LEDs (M to \*) are clearly seen without shading (the letter "P" in particular). Then, tighten screw 1 and check before tightening screws 2 and 3.  
(Turn S<sub>2</sub> ON with pincettes so that the \* LED lights up.)

Fig. 1

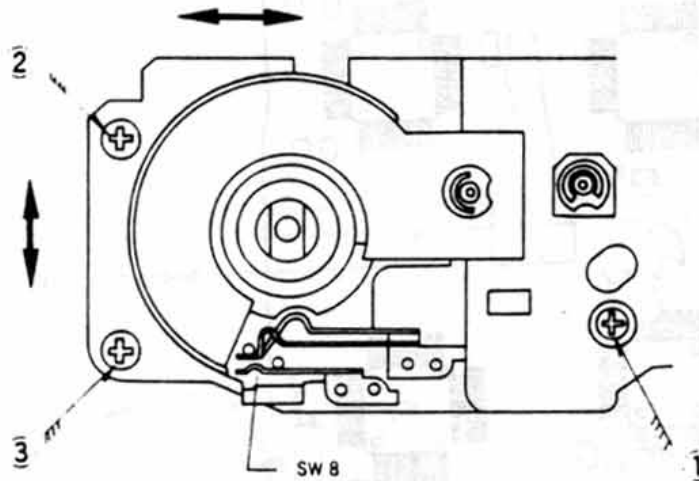


# F No. infinder adjustment

(Standard)

|                |                                                                      |                   |
|----------------|----------------------------------------------------------------------|-------------------|
| Frame position | Height                                                               | $0 < a < b$       |
|                | Width                                                                | Within microprism |
| Aperture value | Should be within frame, adjust letter should be invisible at F 5, 6. |                   |

Fig. 2

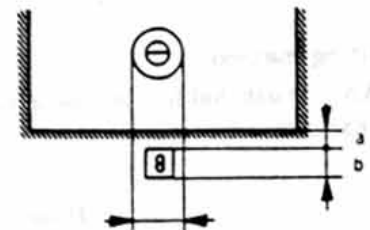

## Adjustment procedure

- Check for deflection, as shown in Fig. 3, and adjust by bending (shifting) the aperture mirror holder and infinder mask in the directions A ~ F shown in Fig. 4.

Fig. 3

(Normal position is shown by thick lines.)


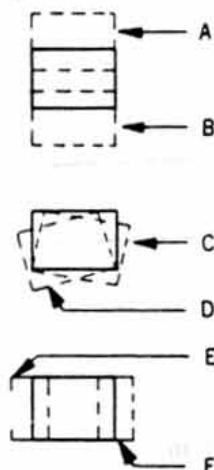


Fig. 4

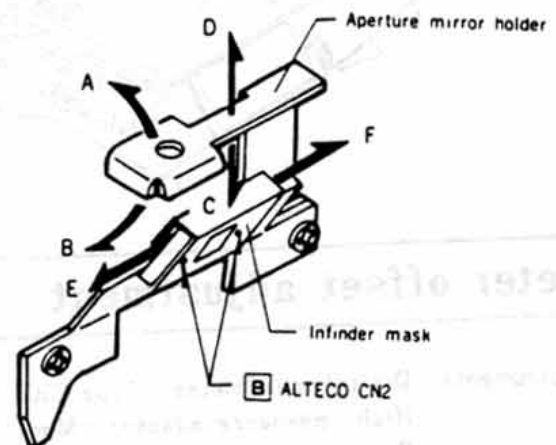


• If the infinder mask is shifted, apply ALTECO CN-2 to it later.

# Exposure adjustment

## Resistor positions and adjustments


Fig. 1

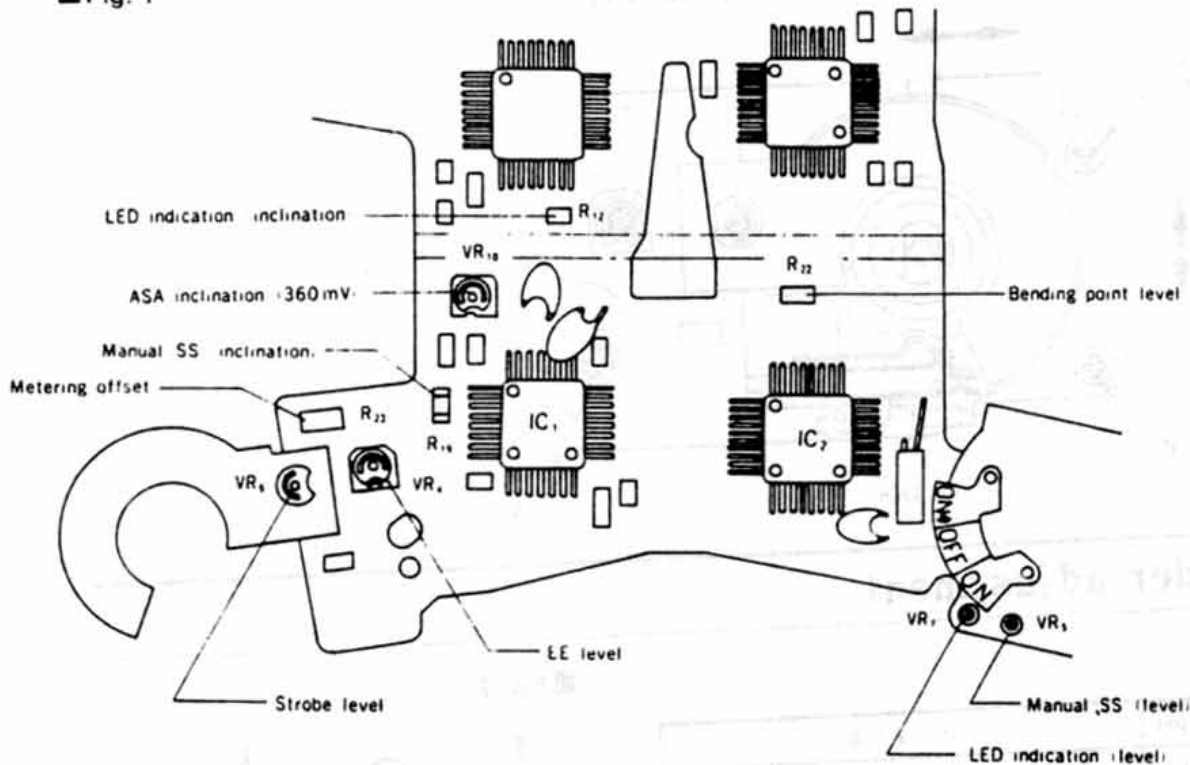

### ASA 100 setting method

Rotate the ASA brush holder in the direction of the arrow until ASA 100 is at the position of the temporary cover stopper.

Fig. 2

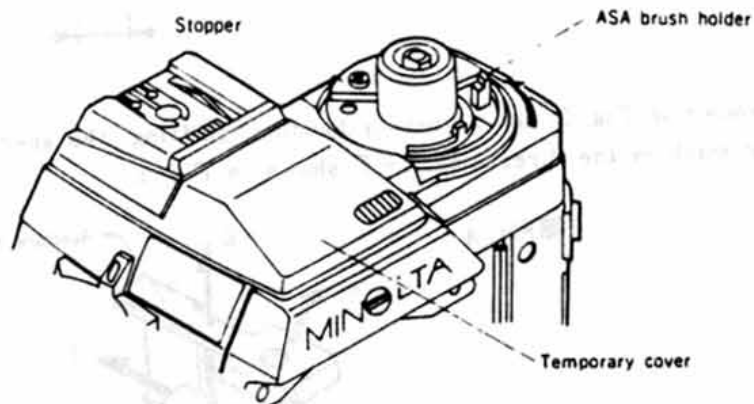

## 1 Light-meter offset adjustment

- Measuring instruments : Digital multimeter (Type 2508, 3476, 2507)
  - : High impedance adaptor (Model HA-1)
  - : Rp resistance selector (Model RS- I, II, III, IV)

### Adjusting procedure

- Solder the 3 leads for measurement, and connect the measuring instruments as shown in Fig. 1 (P. 22). (Make a zero adjustment of the high impedance adaptor.)
- Turn ON the metering switch and measure the voltage at (A) of Fig. 1. Next, check if the voltage at (B) is the voltage at (A)  $\pm 2 \text{ mV}$ . If not, make the adjustment in the following.





### 3 Adjustment of manual SS inclination


■ Measuring instruments : Digital multimeter (Type 2508, 3407, 2507)  
: Rp resistance selector Model RS-I, II, III, IV

■ Adjustment procedure

1. Voltage measurement and standard

- ① Solder the measuring lead wires to terminal ① of IC<sub>1</sub> and ① of IC<sub>2</sub>.
- ② Set the shutter dial to 1 (sec.) and measure the voltage with the metering switch ON.  
(Fig. 1)

■ Fig. 1

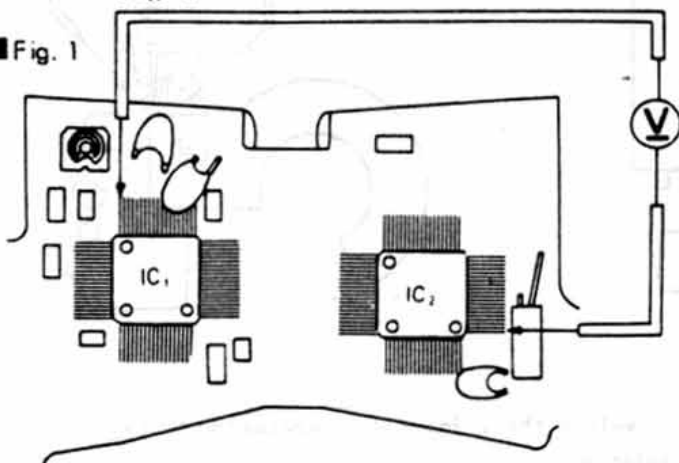

[Standard]  $360 \pm 4 \text{ mV}$

...Ambient temp. should be  $25 \pm 2.5^\circ \text{C}$ .

● Apply the standard values mentioned below according to the ambient temperatures during the measurement.


| Temperature<br>(°C)    | $20 \pm 2.5$ | $25 \pm 2.5$ | $30 \pm 2.5$ |
|------------------------|--------------|--------------|--------------|
| Standard value<br>(mV) | $354 \pm 4$  | $360 \pm 4$  | $366 \pm 4$  |

- ③ If the voltage is outside the standard value, adjust it according to the following procedure.

2. Adjustment

- ① Remove R<sub>19</sub> (if there are two, remove only one) and solder the measuring lead wires.
- ② Connect the Rp resistance selector and, while measuring the voltage as described in section 1, turn the Rp resistance selector so that the voltage becomes the standard value.

■ Fig. 2

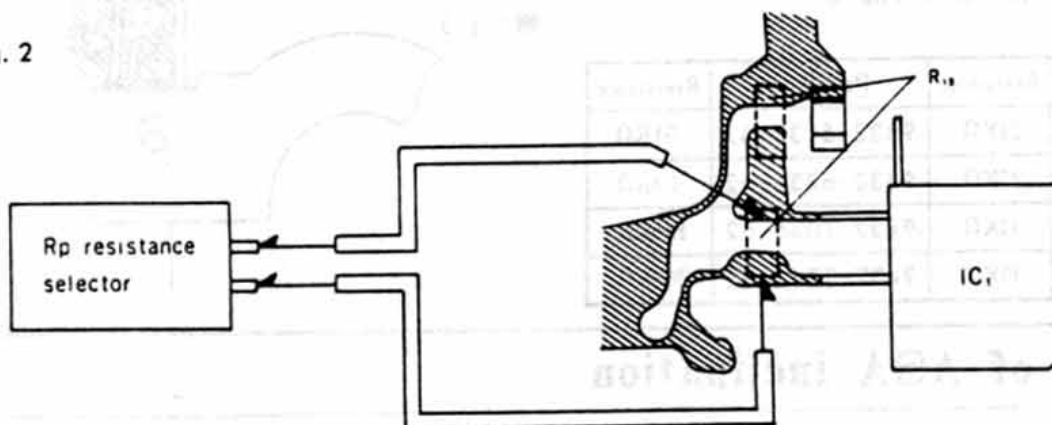

- If the voltage is not at the standard value with the selected resistance, choose a resistance closer to those mentioned in the table below and check the voltage with it.
- If one R<sub>19</sub> is not enough, use two.

In this case, they must be parallel-connected as shown in Fig. 2.

(Types of R<sub>19</sub>)


| Part No.     | Resistance (KΩ) | Part No.     | Resistance (KΩ) |
|--------------|-----------------|--------------|-----------------|
| 9422-2736-62 | 27              | 9422-4736-62 | 47              |
| 9422-3036-62 | 30              | 9422-5636-62 | 56              |
| 9422-3336-62 | 33              | 9422-6836-62 | 68              |
| 9422-3936-62 | 36              | 9422-1046-62 | 100             |
| 9422-3936-62 | 39              | 9422-1546-62 | 150             |
| 9422-4336-62 | 43              |              |                 |

# 4 Manual SS adjustment

■ Measuring instruments: Shutter tester (Model S-2101, FS-1DMN1)

■ Adjustment procedure

■ Fig. 1

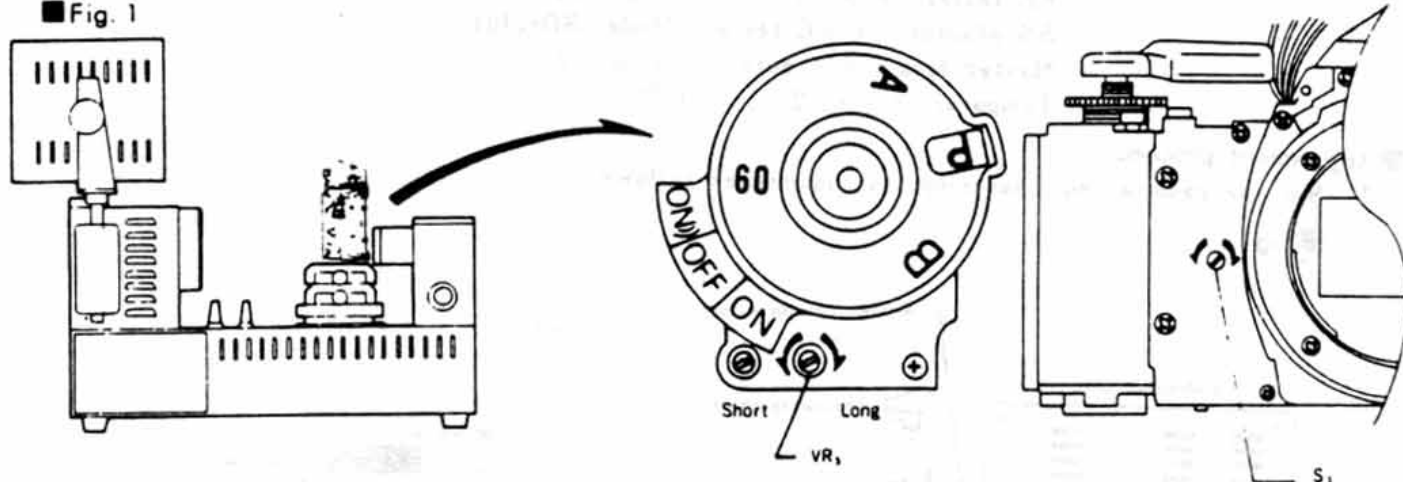

1. Shutter speed adjustment and check (see the table below)


| Step | Item                       | Part adjusted                | Adjustment (check)                                     | Remarks                                                                         |
|------|----------------------------|------------------------------|--------------------------------------------------------|---------------------------------------------------------------------------------|
| 1    | 1/1000 curtain speed check | ---                          | Both 1st & 2nd curtains are within 13 ms.              | If it is more than 13 ms or less than 10 ms, adjust the 2nd curtain speed.      |
| 2    | 1/60 adjustment            | VR                           | 15.6 ms                                                | If it is shorter than 15.6 ms at step 3, check the full opening of the curtain. |
| 3    | 1 sec. check               | ---                          | 812~1231 ms.                                           | If it is not within 812~1231 ms, recheck 1/60 at 12.7~19.2 ms.                  |
| 4    | 1/1000 adjustment          | S <sub>1</sub> eccentric pin | 0.98 ms                                                | -----                                                                           |
| 5    | 1/500 check                | ---                          | 1.48~2.58 ms.                                          | If it is not within 1.48~2.58 ms, recheck 1/1000 at 0.71~1.29 ms.               |
| 6    | X time lag                 |                              | (Range A: 0.4 ms or more)<br>(Range B: 2.4 ms or more) | Check it with SS 1/60 and if it is defective, perform the adjustment on P. 38.  |

- When the exposure unevenness at steps ②~⑤ is over 0.3 EV in both B-A and B-C ranges, and over 0.4 EV in the A-C range, adjust the curtain speed as follows.
- For the shutter speed standard, refer to the inspection standard.


2. Curtain speed adjustment

Adjust by turning the ratchet so that the 1st and 2nd curtain speeds are  $11 \pm 0.3 \text{ ms}$  at 1/1000.

■ Fig. 2 (Increasing the curtain speed)

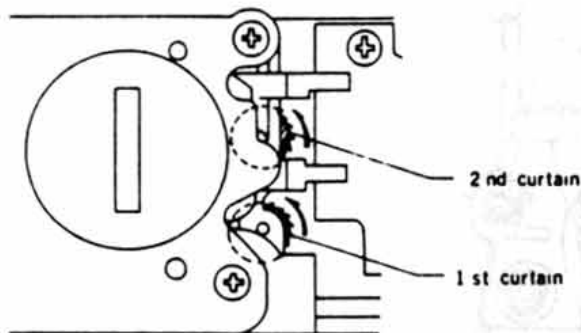

■ Fig. 3 (decreasing the curtain speed)

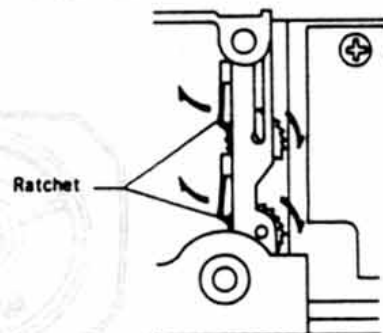

- Remove the battery case base plate to release the ratchet and let it return. (Do not return it completely)
- Return it sufficiently and adjust by slowly increasing the curtain speed.


# 5 A-auto level adjustment

- **Measuring instruments** : Luminance box (Model L-2101, L-222, L-223)  
 : EE tester (Model EE-2101, EE-2111)  
 : SS adaptor for EE tester (Model SD-2101)  
 : Master lens for A-auto (2005-0002-75)  
 : Temporary cover (2017-1301-75)

■ **Adjustment procedure**

1. Set the camera and measuring instruments as follows.

■ Fig. 1

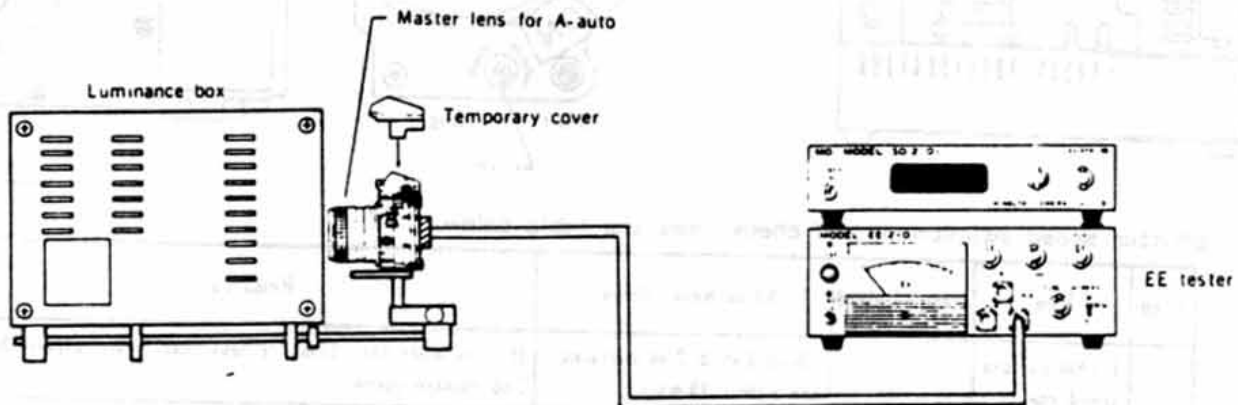


- **Luminance box**  
K value : 1.2  
Luminance : EV 5, 11, 15
- **Camera**  
Shutter dial : A  
ASA : 100  
MD ring : Free
- **EE tester**  
K value dial : 1.2  
ASA dial : 100
- **SD-2101**  
Aperture switch : F 5.6  
Luminance switch : Same as luminance box.

2. Adjust and check as follows:

| Step | Luminance | Shutter speed adjustment | EE level allowable range | Part adjusted            |
|------|-----------|--------------------------|--------------------------|--------------------------|
| 1    | EV 11     | 15.6 ms                  | —                        | VR <sub>4</sub> (Fig. 2) |
| 2    | EV 15     | —                        | ±0.4 EV                  | (Check only)             |
| 3    | EV 5      | —                        | ±0.4 EV                  | (Check only)             |

■ Fig. 2

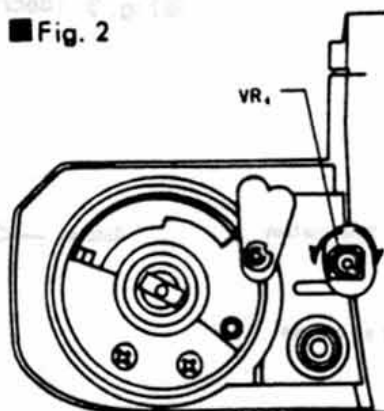

- If it cannot be adjusted by VR<sub>4</sub>, or if the EE level exceeds the allowable range, check to see if the manual shutter speed is correctly adjusted.




# 6 LED indication adjustment

- Measuring instruments : Luminance box Model L-2101, L-222, L-223
  - : Temporary cover 2017-1301-75
  - : Master lens for S-auto 2005-0061-75


## ■ Adjustment procedure

1. Adjust by turning VR; as described in the table below according to the type of luminance box.

■ Fig. 1

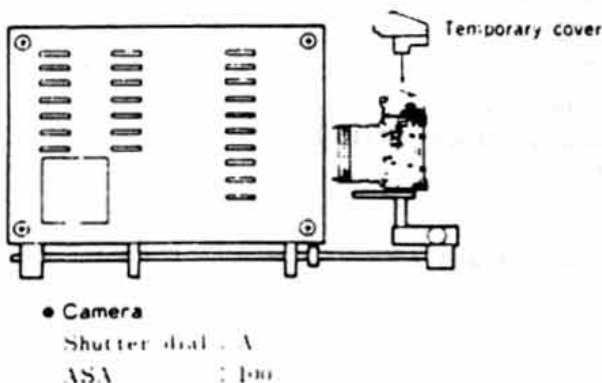

■ Fig. 2

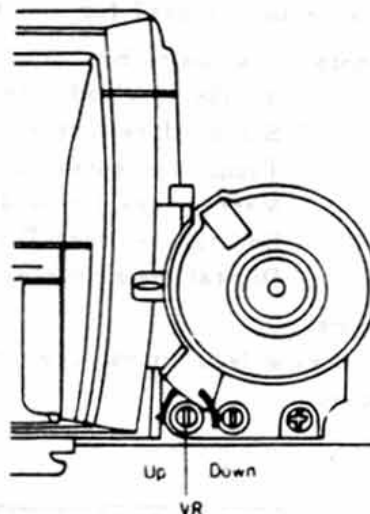

| L-2101                                                                                                     |          |         | L-222, L-223                                                                                                                |          |
|------------------------------------------------------------------------------------------------------------|----------|---------|-----------------------------------------------------------------------------------------------------------------------------|----------|
| Luminance                                                                                                  | Aperture | K value | Luminance setting button                                                                                                    | Aperture |
| EV 10-1/3                                                                                                  | F 5.6    | 1.2     | EV 10.3 C-1 S-SIZE                                                                                                          | F 5.6    |
|                                                                                                            |          |         |                                                                                                                             |          |
| Turn VR; so that only the LED of 30 lights up, and slowly turn VR; until the LED of 15 begins to light up. |          |         | Turn VR; so that only the LED of 30 lights up, and slowly turn VR; counterclockwise until the LED of 60 begins to light up. |          |

## 2. Checking adjustment 1

| L-2101                              |          | L-222, L-223 |          |
|-------------------------------------|----------|--------------|----------|
| Luminance                           | Aperture | Luminance    | Aperture |
| EV 10                               | F 5.6    | EV 11        | F 8      |
|                                     |          |              |          |
| Only the LED of 30 should light up. |          |              |          |

## 2 Other luminance...L-2101, L-222, L-223

| Luminance | Aperture | Allowable LED-ON range (-1 EV) |
|-----------|----------|--------------------------------|
| EV 5      | F 4      | 4                              |
|           |          | 2                              |
| EV 14     | F 5.6    | 1                              |
|           |          | 1000                           |
|           |          | 500                            |
|           |          | 250                            |

- Deflected toward high speed side at EV 14
  - ...Replace the resistor (R<sub>12</sub>) with one of larger resistance.
- Deflected toward low speed side at EV 14
  - ...Replace the resistor (R<sub>12</sub>) with one of smaller resistance.

# 7 Strobe level adjustment

## A Adjustment by luminance box (Model L-2101)


- The Model L-2101 luminance should be used. However, ones with color temperatures ranging from 2600K to 3000K (measured value of the Minolta color meter) at EV 15 can also be used.
- Luminance boxes with long-wavelength cut filters and lamps with cold mirrors cannot be used because of measuring errors. (Ex. Model L-223)
- When no luminance box is used for the adjustment, employ method B on the next page.

- Measuring instruments :
- Luminance box (Model L-2101)
  - Strobe level adjuster (2017-0001-75)
  - Standard reflector (2017-0002-75)
  - Temporary cover (2017-1301-75)
  - Master lens for A-auto (2005-0002-75)
  - Constant voltage D.C power supply (Model 524B E-1, E-2)
  - Digital time counter (Model TC-1)

### ■ Adjustment procedure


1. Solder the measuring lead wires (2 wires) to the camera and connect the measuring instruments as follows:

■ Fig. 1

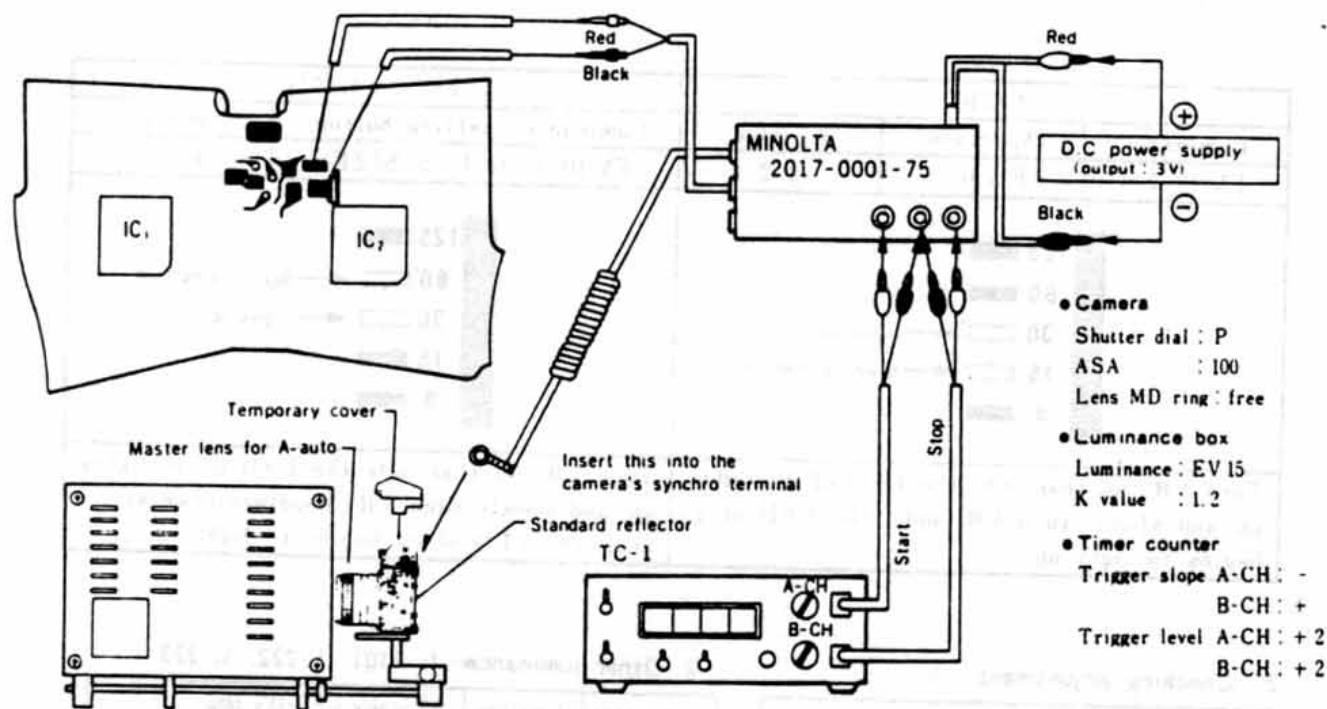

2. With the shutter released, adjust by turning VR<sub>6</sub> so that the indication of the time counter is  $0.63 \pm 0.1$  ms.

■ Fig. 2

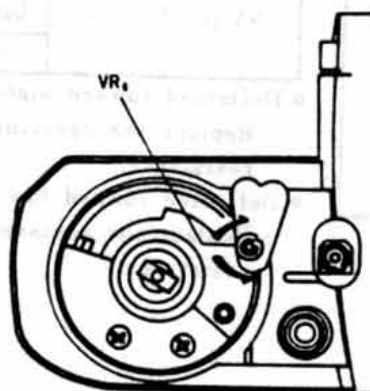




## ⓑ Adjustment by strobo tester (Model ST-III)

Model ST-1 and II cannot be used because non-cord adjustment is impossible.

- Measuring instruments : Strobe tester Model ST-III
- : Standard reflector (2017-0002-75)
- : Master lens for A-auto (2005-0002-75)
- : Temporary cover (2013-1301-75)
- : Reflection paper (1.3m × 2m) (used for adjustment of Minolta AEF series)
- : Exclusive flash (AEF 280PX) (Code No. 8808)

### ■ Preparations


Connect the temporary cover to the body with the lead wires as shown in Fig. 1 on the next page. Set the measuring instruments as shown below.

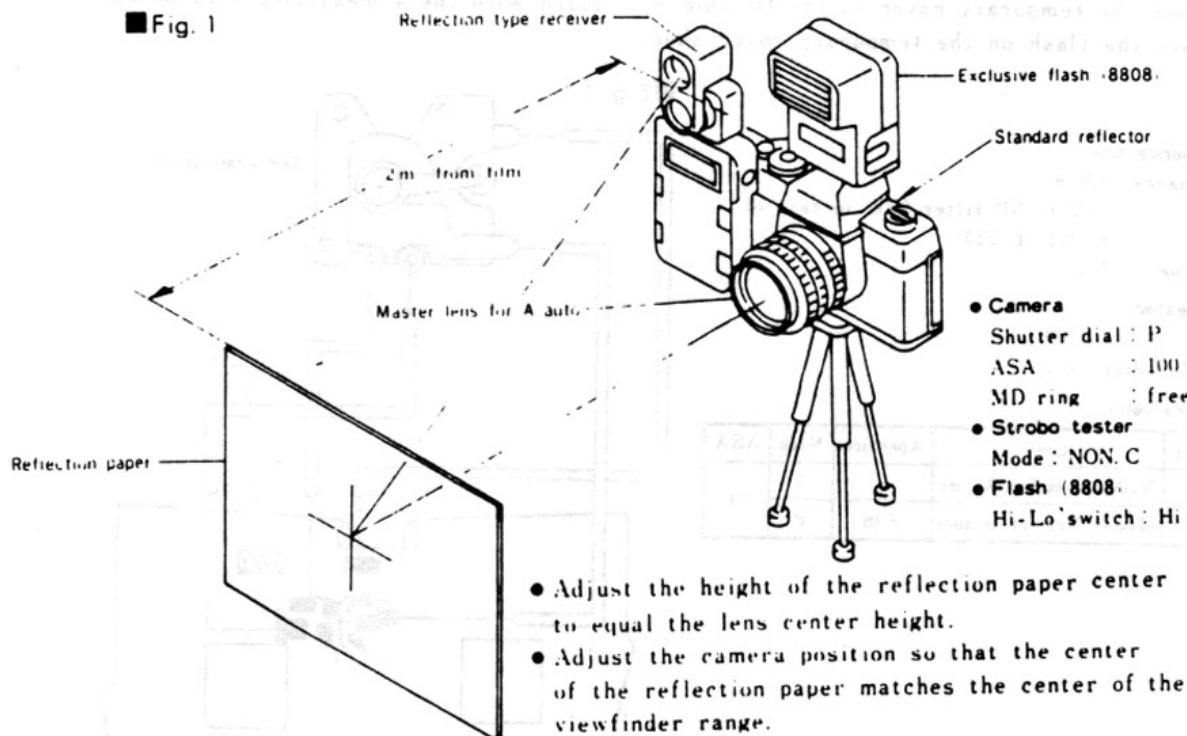

### ■ Adjustment procedure (darken the room to eliminate the influence of external light)

1. Set the flash main switch to ON, and 30 sec. or more after the pilot lamp illuminates, look into the viewfinder of the strobo tester (shown above) from near the flash, and then direct the viewpoint of the view center to the center of the reflection paper. Next release the camera shutter and read the indication of the strobo tester.
2. If the indication of the strobo tester is not within **F 5.6 ± 0.5 EV**, adjust by turning VR<sub>6</sub>. (Fig. 2)

■ Fig. 2

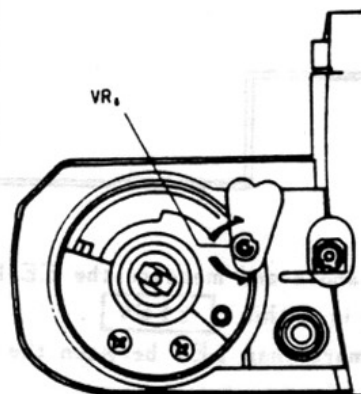

### About the standard reflector:

- Do not stain the reflector by touching it with the hand, etc., or correct measurement will not be possible.
- When the reflection surface is exposed to light, a color change occurs causing changes in the reflection factor. It must be replaced with a new one about once a year. The reflection paper can be replaced; reflection paper is available for this purpose. When placing an order, specify



## 8 Bending point level adjustment

- **Measuring instruments** : Luminance box (Model L-2101, L-222, L-223)  
 : EE tester (Model EE-2101, EE-2111)  
 : Master lens for A-auto (2005-0002-75)  
 : Master lens for S-auto (2005-0001-75)  
 : Temporary cover (2017-1301-75)  
 : Exclusive flash (AEF 280PX...Code No. 8808).

### ■ Adjustment procedure

1. Connect the temporary cover to the flexible P.C board with the 4 measuring lead wires, and set the flash on the temporary cover shoe.


- **Luminance box**  
Luminance : EV 8  
(EV 9 + ND filter 50% in case of L-222, L-223)  
K value : 1.2

- **EE tester**  
ASA : 400  
K value dial : 1.2

#### ● Camera lens

| Step | Lens                   | Aperture | Mode | ASA |
|------|------------------------|----------|------|-----|
| 1)   | Master lens for A-auto | —        | A    | 100 |
| 2)   | Master lens for S-auto | F16      | P    |     |

■ Fig. 1

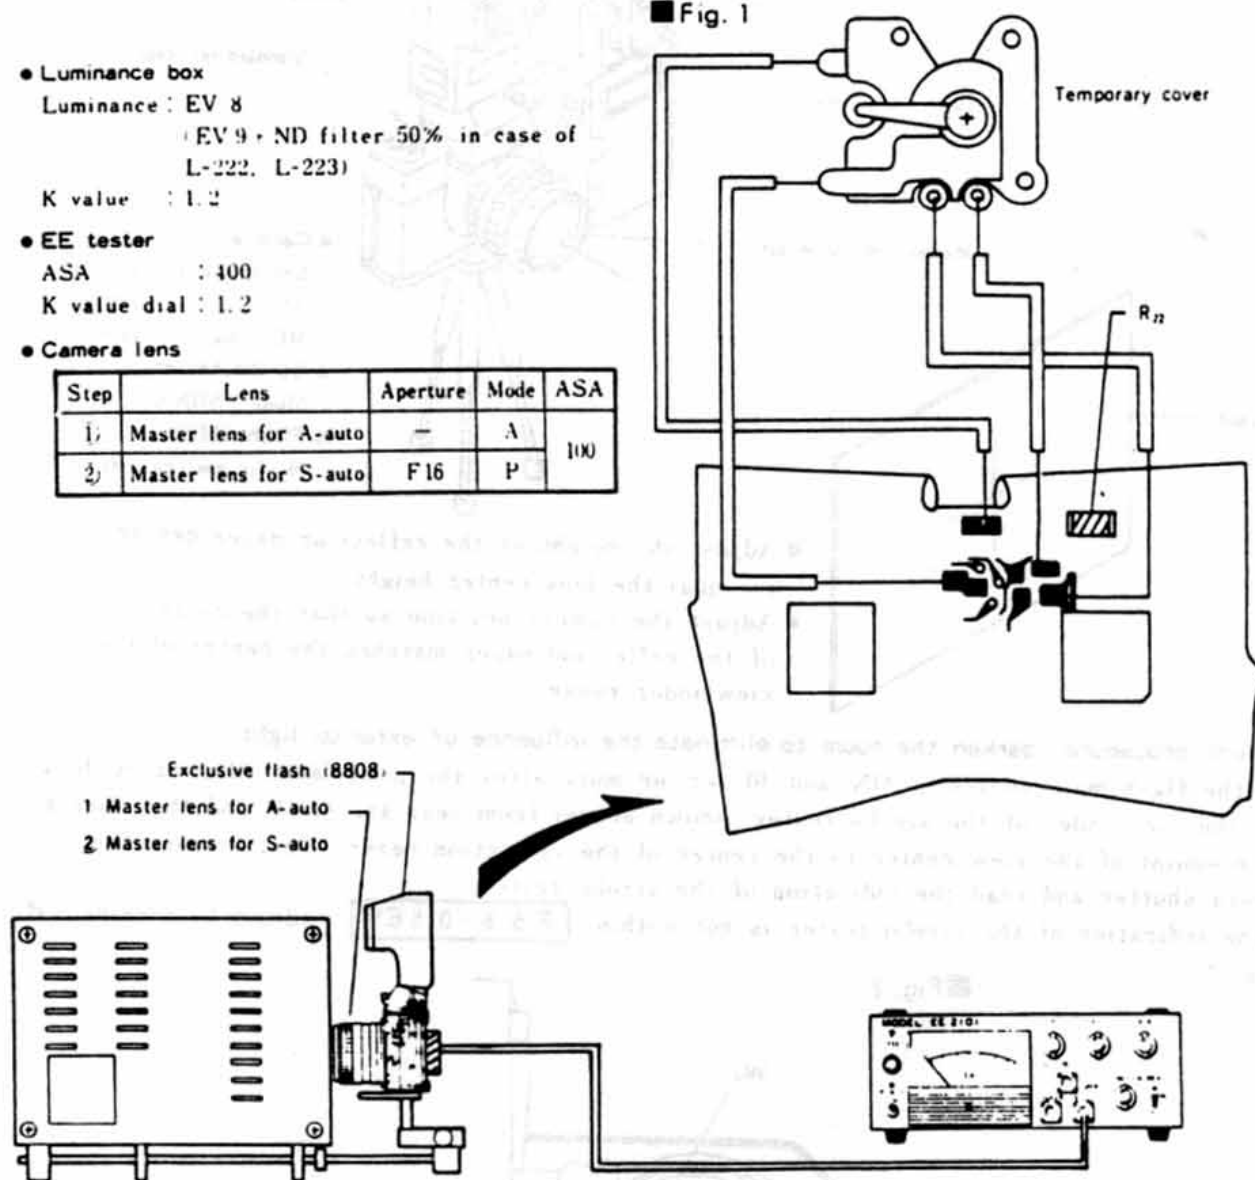

2. Set the camera lens as shown above and measure the EE level in A and P modes. Check to see if the EE level difference is within  $\pm 1 \text{ EV}$ .
3. If the EE level difference is more than 1 EV between the A and P modes, replace R<sub>22</sub> and adjust.

(Type of R<sub>22</sub>)

| Part No.     | Resistance     |
|--------------|----------------|
| 9432-1226-61 | 1.2 K $\Omega$ |
| 9432-3926-61 | 3.9 K $\Omega$ |
| 9432-7526-61 | 7.5 K $\Omega$ |


# Checking A and P modes

- Measuring instruments : Luminance box Model L-2101, L-222, L-223
- : EE tester Model EE-2101, EE-2111
- : SS adaptor for EE tester Model SD-2101
- : Master lens for S-auto 2005-0001-75
- : Temporary cover 2017-1301-75

## ■ Preparations

Set the camera and measuring instruments as follows:

■ Fig. 1

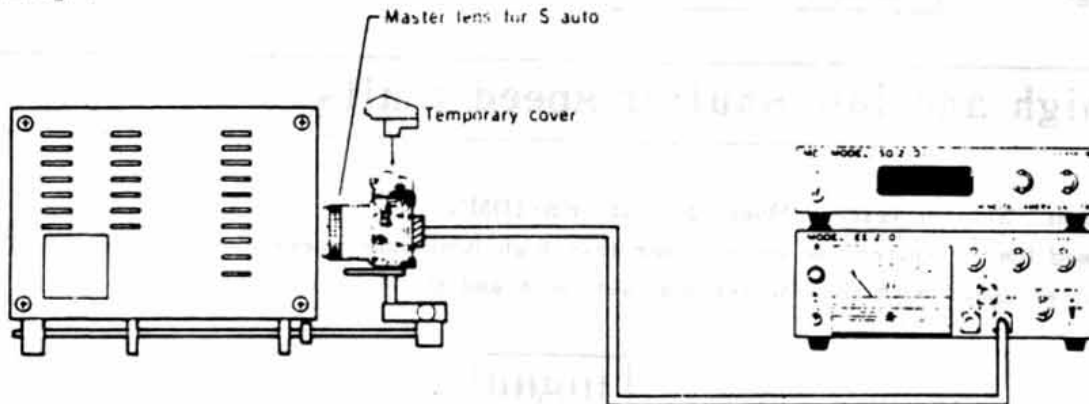

## ■ Checking procedure

1. **A mode**... Check LED indication and EE level as shown in Table 1.

Table-1 (Shutter dial : A, ASA : 100)

| Luminance | Aperture | Allowable range of LED-ON |   |   |   |   | Allowable range of EE level |
|-----------|----------|---------------------------|---|---|---|---|-----------------------------|
| EV 5      | F 4      | 4                         | □ | □ | ■ | ■ |                             |
|           |          | 2                         | ■ | □ | □ | ■ |                             |
|           |          | 1                         | ■ | ■ | □ | □ |                             |
| EV 11     | F 8      | 60                        | □ | □ | ■ | ■ |                             |
|           |          | 30                        | ■ | □ | □ | ■ |                             |
|           |          | 15                        | ■ | ■ | □ | □ |                             |
| EV 14     | F 5.6    | 1000                      | □ | □ | ■ | ■ |                             |
|           |          | 500                       | ■ | □ | □ | ■ |                             |
|           |          | 250                       | ■ | ■ | □ | □ |                             |

2. **P mode**... Check LED Indication, shutter speed, and EE level as shown in Table 2.

Table-2 (Shutter dial : P, ASA : 100, Aperture : F 16)

| Luminance | SD-2101 aperture switch | Allowable LED ON and relative SS |                                  | Allowable range of EE level |
|-----------|-------------------------|----------------------------------|----------------------------------|-----------------------------|
|           |                         | LED ON                           | Allowable range of shutter speed |                             |
| EV 15     | F 8                     | 1000, 500                        | 0.58 ~ 3.28 ms                   | 0 ± 0.8 EV                  |
|           |                         | 500                              | 0.82 ~ 4.65 ms                   |                             |
|           |                         | 500, 250                         | 1.16 ~ 6.57 ms                   |                             |
| * EV 10   | F 2.8                   | 250, 125                         | 2.32 ~ 13.1 ms                   |                             |
|           |                         | 125                              | 3.28 ~ 18.6 ms                   |                             |
|           |                         | 125, 60                          | 4.65 ~ 26.2 ms                   |                             |
| EV 5      | —                       | 30                               | —                                |                             |
|           |                         | 30, 15                           |                                  |                             |
|           |                         | 15                               |                                  |                             |
|           |                         | 15, 8                            |                                  |                             |
|           |                         | 8                                |                                  |                             |

\* EV 11 + ND filter (50%) must be used in case of luminance box L-222, L-223.

# ■ Checking release lock voltage and LED OFF voltage

■ Measuring instruments : Constant voltage D.C power supply (Model 524B, E-1, E-2)  
: Digital multimeter (Model 2508, 3476, 2507)

## ■ Checking procedure

Connect D.C voltage to the camera. (+ ... to battery case contact, - ... ground to battery case base plate)

1 Release lock voltage 

|          |               |
|----------|---------------|
| Standard | 2.10 ± 0.15 V |
|----------|---------------|

2 LED OFF voltage 

|          |               |
|----------|---------------|
| Standard | 2.40 ± 0.15 V |
|----------|---------------|


# ■ Checking high and low shutter speed limits

■ Measuring instrument : Shutter tester Model S-2101, FS-1DMN1

1 High shutter speed limit (shutter speeds in other than high luminance operation in A and P modes)

- Check the shutter speed with the shutter dial set to A and P.

|          |              |
|----------|--------------|
| Standard | 0.69~1.38 ms |
|----------|--------------|

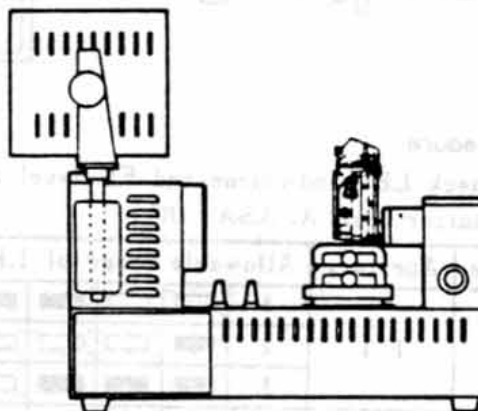

2 Low shutter speed limit (shutter speeds in other than low luminance operation in A and P modes)

- Set the shutter dial to A and P, and then check the exposure time with light to the receiver interrupted.


|          |               |
|----------|---------------|
| Standard | within 5 sec. |
|----------|---------------|

| Shutter speed | Exposure time (ms) | Exposure time (sec) | Exposure time (min) |
|---------------|--------------------|---------------------|---------------------|
| 1/4000        | 0.25               | 0.00025             | 0.0000025           |
| 1/3000        | 0.33               | 0.00033             | 0.0000033           |
| 1/2500        | 0.40               | 0.00040             | 0.0000040           |
| 1/2000        | 0.50               | 0.00050             | 0.0000050           |
| 1/1800        | 0.56               | 0.00056             | 0.0000056           |
| 1/1600        | 0.63               | 0.00063             | 0.0000063           |
| 1/1400        | 0.71               | 0.00071             | 0.0000071           |
| 1/1250        | 0.80               | 0.00080             | 0.0000080           |
| 1/1100        | 0.91               | 0.00091             | 0.0000091           |
| 1/1000        | 1.00               | 0.00100             | 0.0000100           |
| 1/900         | 1.11               | 0.00111             | 0.0000111           |
| 1/800         | 1.25               | 0.00125             | 0.0000125           |
| 1/720         | 1.39               | 0.00139             | 0.0000139           |
| 1/640         | 1.56               | 0.00156             | 0.0000156           |
| 1/560         | 1.79               | 0.00179             | 0.0000179           |
| 1/500         | 2.00               | 0.00200             | 0.0000200           |
| 1/450         | 2.22               | 0.00222             | 0.0000222           |
| 1/400         | 2.50               | 0.00250             | 0.0000250           |
| 1/360         | 2.78               | 0.00278             | 0.0000278           |
| 1/320         | 3.13               | 0.00313             | 0.0000313           |
| 1/280         | 3.57               | 0.00357             | 0.0000357           |
| 1/250         | 4.00               | 0.00400             | 0.0000400           |
| 1/225         | 4.44               | 0.00444             | 0.0000444           |
| 1/200         | 5.00               | 0.00500             | 0.0000500           |
| 1/180         | 5.56               | 0.00556             | 0.0000556           |
| 1/160         | 6.25               | 0.00625             | 0.0000625           |
| 1/140         | 7.14               | 0.00714             | 0.0000714           |
| 1/125         | 8.00               | 0.00800             | 0.0000800           |
| 1/110         | 9.09               | 0.00909             | 0.0000909           |
| 1/100         | 10.00              | 0.01000             | 0.0001000           |
| 1/90          | 11.11              | 0.01111             | 0.0001111           |
| 1/80          | 12.50              | 0.01250             | 0.0001250           |
| 1/72          | 13.89              | 0.01389             | 0.0001389           |
| 1/64          | 15.63              | 0.01563             | 0.0001563           |
| 1/56          | 17.86              | 0.01786             | 0.0001786           |
| 1/50          | 20.00              | 0.02000             | 0.0002000           |
| 1/45          | 22.22              | 0.02222             | 0.0002222           |
| 1/40          | 25.00              | 0.02500             | 0.0002500           |
| 1/36          | 27.78              | 0.02778             | 0.0002778           |
| 1/32          | 31.25              | 0.03125             | 0.0003125           |
| 1/28          | 35.71              | 0.03571             | 0.0003571           |
| 1/25          | 40.00              | 0.04000             | 0.0004000           |
| 1/22.5        | 44.44              | 0.04444             | 0.0004444           |
| 1/20          | 50.00              | 0.05000             | 0.0005000           |
| 1/18          | 55.56              | 0.05556             | 0.0005556           |
| 1/16          | 62.50              | 0.06250             | 0.0006250           |
| 1/14          | 71.43              | 0.07143             | 0.0007143           |
| 1/12.5        | 80.00              | 0.08000             | 0.0008000           |
| 1/11          | 90.91              | 0.09091             | 0.0009091           |
| 1/10          | 100.00             | 0.10000             | 0.0010000           |
| 1/9           | 111.11             | 0.11111             | 0.0011111           |
| 1/8           | 125.00             | 0.12500             | 0.0012500           |
| 1/7.2         | 138.89             | 0.13889             | 0.0013889           |
| 1/6.4         | 156.25             | 0.15625             | 0.0015625           |
| 1/5.6         | 178.57             | 0.17857             | 0.0017857           |
| 1/5           | 200.00             | 0.20000             | 0.0020000           |
| 1/4.5         | 222.22             | 0.22222             | 0.0022222           |
| 1/4           | 250.00             | 0.25000             | 0.0025000           |
| 1/3.6         | 277.78             | 0.27778             | 0.0027778           |
| 1/3.2         | 312.50             | 0.31250             | 0.0031250           |
| 1/2.8         | 357.14             | 0.35714             | 0.0035714           |
| 1/2.5         | 400.00             | 0.40000             | 0.0040000           |
| 1/2.25        | 444.44             | 0.44444             | 0.0044444           |
| 1/2           | 500.00             | 0.50000             | 0.0050000           |
| 1/1.8         | 555.56             | 0.55556             | 0.0055556           |
| 1/1.6         | 625.00             | 0.62500             | 0.0062500           |
| 1/1.4         | 714.29             | 0.71429             | 0.0071429           |
| 1/1.25        | 800.00             | 0.80000             | 0.0080000           |
| 1/1.1         | 909.09             | 0.90909             | 0.0090909           |
| 1/1           | 1000.00            | 1.00000             | 0.0100000           |
| 1/0.9         | 1111.11            | 1.11111             | 0.0111111           |
| 1/0.8         | 1250.00            | 1.25000             | 0.0125000           |
| 1/0.72        | 1388.89            | 1.38889             | 0.0138889           |
| 1/0.64        | 1562.50            | 1.56250             | 0.0156250           |
| 1/0.56        | 1785.71            | 1.78571             | 0.0178571           |
| 1/0.5         | 2000.00            | 2.00000             | 0.0200000           |
| 1/0.45        | 2222.22            | 2.22222             | 0.0222222           |
| 1/0.4         | 2500.00            | 2.50000             | 0.0250000           |
| 1/0.36        | 2777.78            | 2.77778             | 0.0277778           |
| 1/0.32        | 3125.00            | 3.12500             | 0.0312500           |
| 1/0.28        | 3571.43            | 3.57143             | 0.0357143           |
| 1/0.25        | 4000.00            | 4.00000             | 0.0400000           |
| 1/0.225       | 4444.44            | 4.44444             | 0.0444444           |
| 1/0.2         | 5000.00            | 5.00000             | 0.0500000           |
| 1/0.18        | 5555.56            | 5.55556             | 0.0555556           |
| 1/0.16        | 6250.00            | 6.25000             | 0.0625000           |
| 1/0.14        | 7142.86            | 7.14286             | 0.0714286           |
| 1/0.125       | 8000.00            | 8.00000             | 0.0800000           |
| 1/0.11        | 9090.91            | 9.09091             | 0.0909091           |
| 1/0.1         | 10000.00           | 10.00000            | 0.1000000           |




# 8 External parts (completion)


■ Fig. 1

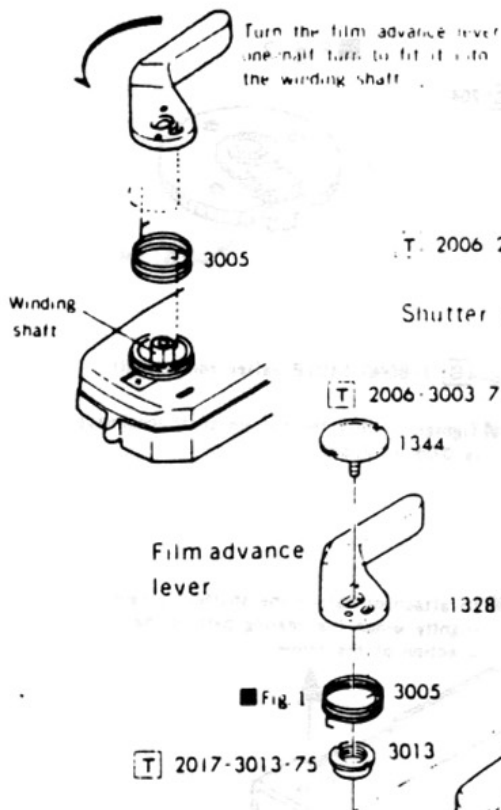

■ Fig. 2

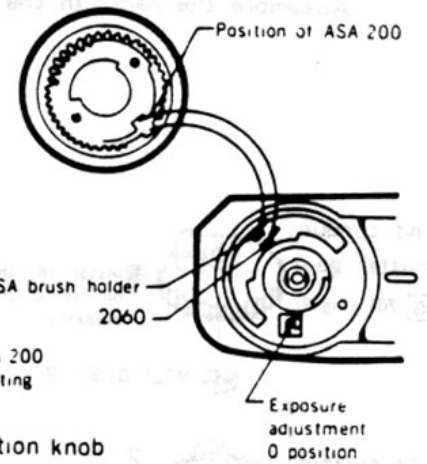

■ Store the slackness of the piezoelectric beeper leads red black on the IC<sub>2</sub> side. Contact with IC causes oscillation.

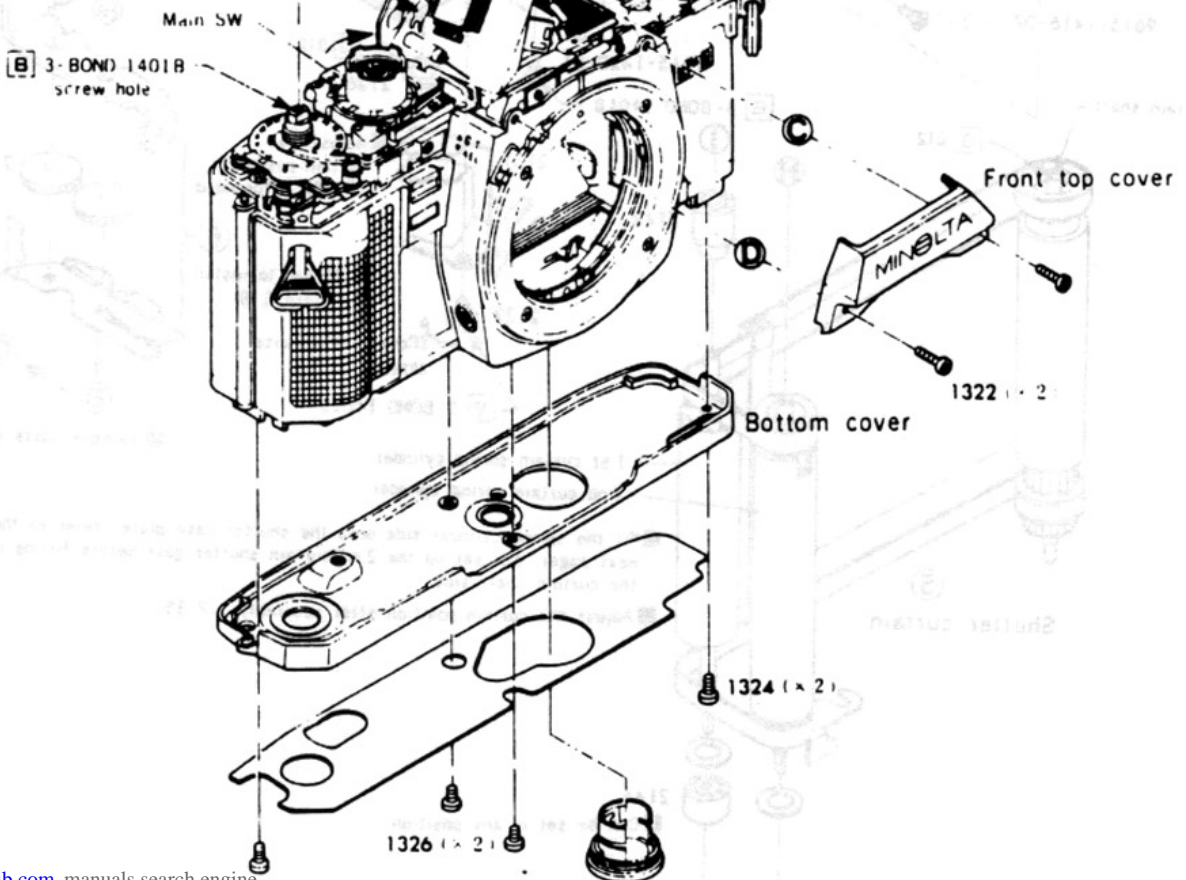


# Shutter assembly-I


Assemble the parts in the order 1 ~ 6

Fig. 1

Fig. 2

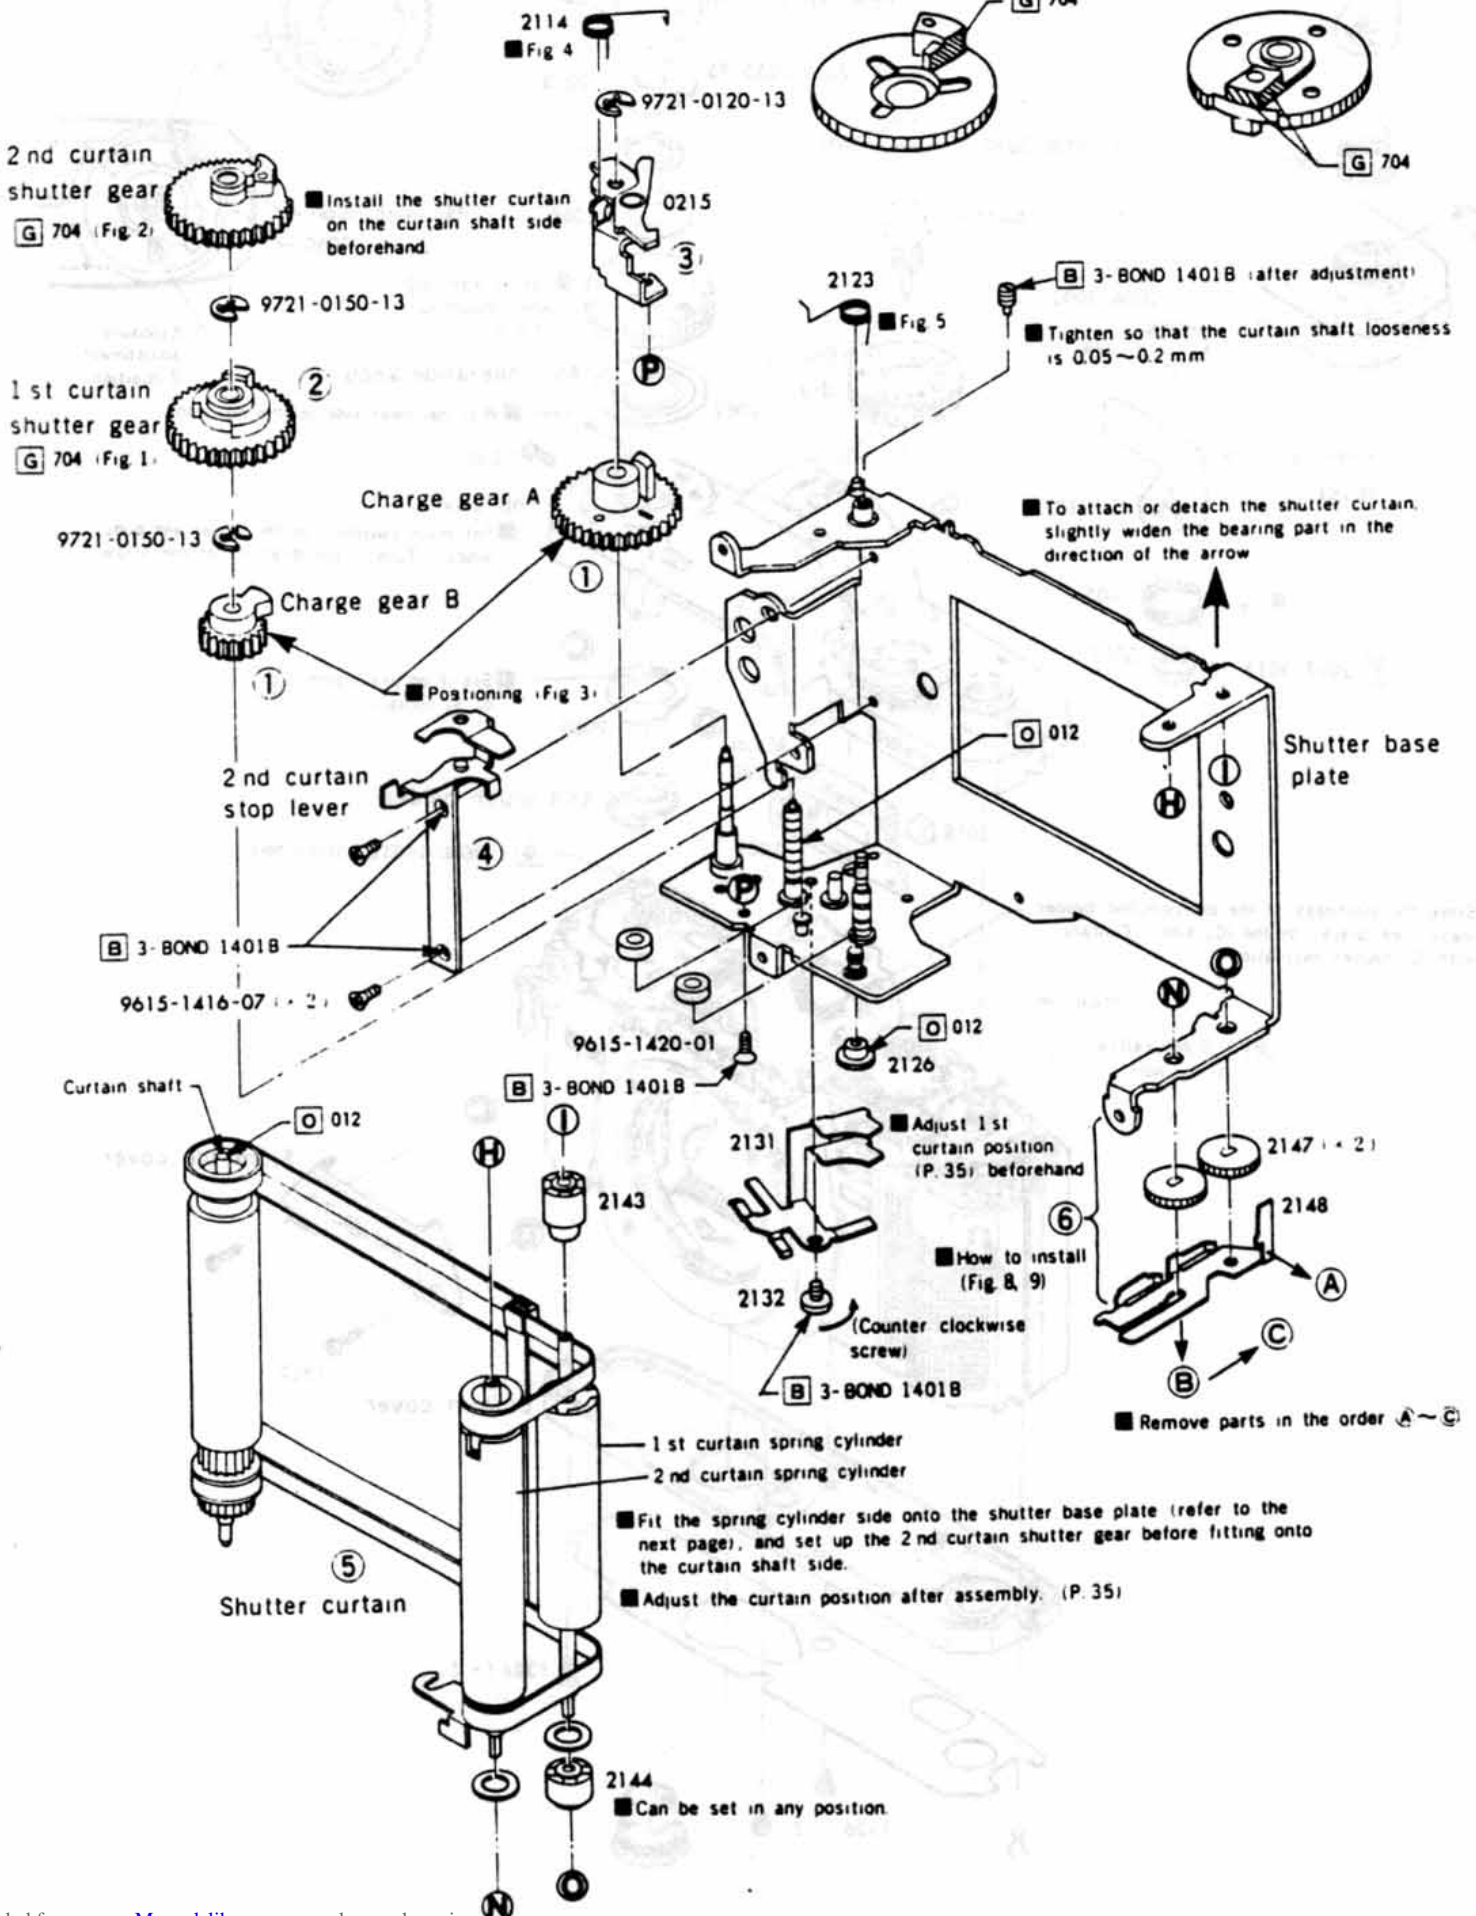




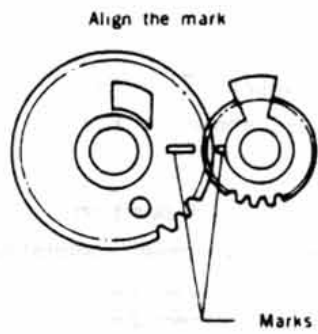


## ■ Shutter curtain mounting procedure (SP cylinder side)

1. Arrange the shutter curtains as shown in Fig. 1 and fit them in the holes of the shutter base plate in the order 1 → 1. When fitting in 4, slightly widen the bearing part of the shutter base plate.


■ Fig. 6

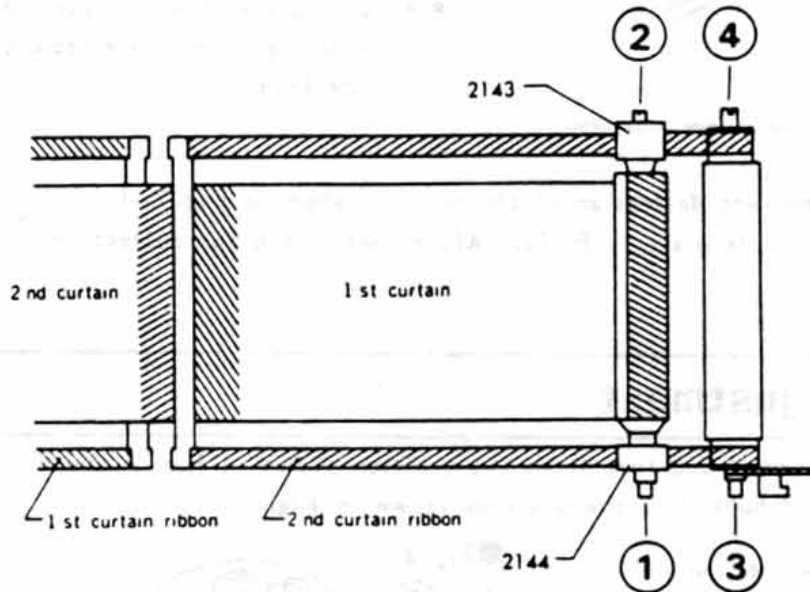

■ Fig. 7

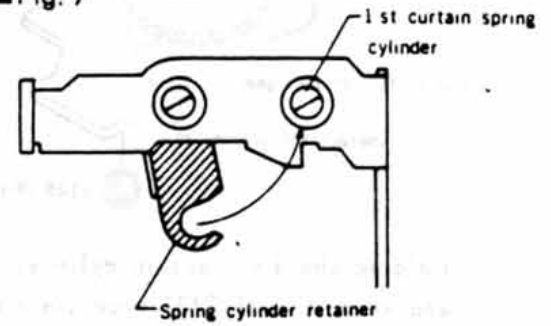


■ Fig. 8

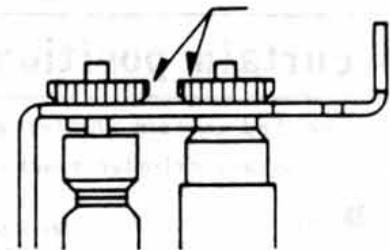

2. Fit the curtain spring retainer into the 1st curtain spring cylinder by turning it in the direction of the arrow shown in Fig. 5.
3. Set the ratchet in the correct position (Fig. 8), and attach the ratchet stop spring. (Fig. 9)

■ Fig. 9

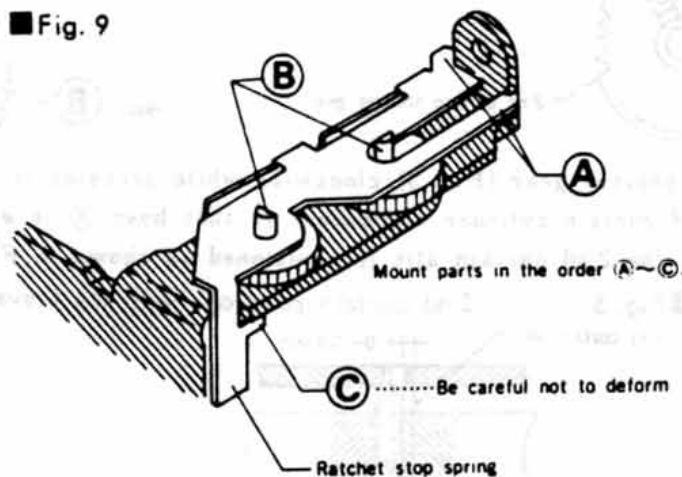





## 1st curtain position adjustment

1. Turn the 2nd curtain cylinder to stop the 2nd curtain halfway. (Fig. 1)
2. Turn the 1st curtain shutter gear counterclockwise until it touches the stopper. Then turn the 1st curtain cylinder counterclockwise to position the 1st curtain slit as shown in Fig. 2.

■ Fig. 1

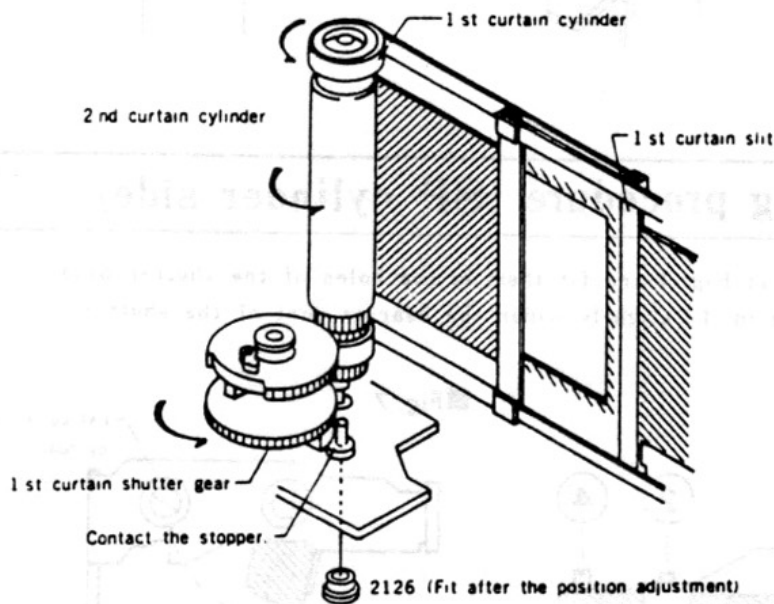

■ Fig. 2 1st curtain position (with its travel completed)

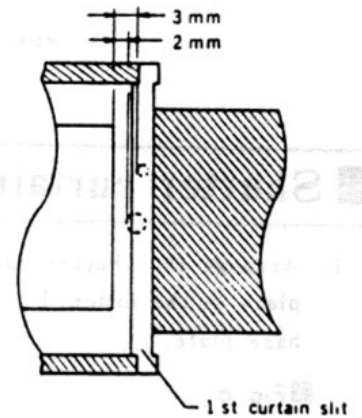


- Adjust so that the 1st curtain slit is positioned 2.5~3 mm from the picture frame.

3. Holding the 1st curtain cylinder to prevent deflection of the position show in Fig. 2, fit 2126 and stop it with 2131 (curtain ribbon guide plate...P. 33). After that, check for deflection of the position (Fig. 2)


## 2nd curtain position adjustment

1. Shift the 2nd curtain shutter gear upward and turn it to the position shown in Fig. 3. Turn the 2nd curtain cylinder clockwise and hold it in the position shown in Fig. 3.

■ Fig. 3

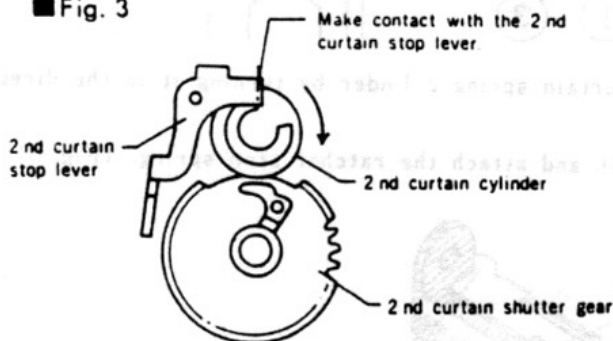


■ Fig. 4

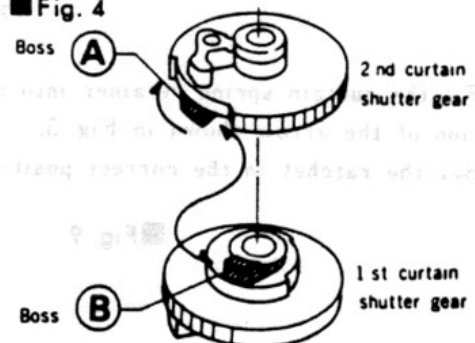

2. Turn the 2nd curtain shutter gear (Fig. 3) clockwise while pressing it down (slightly applying a force to the 2nd curtain cylinder clockwise) so that boss A is engaged with boss B.
3. Check to be sure that the 2nd curtain slit is positioned as shown in Fig. 5.


■ Fig. 5 2nd curtain position (with its travel completed)

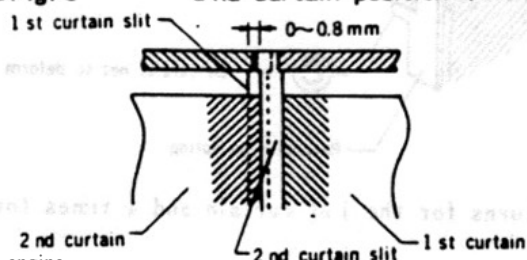


# ■ Checking curtain stop position (with winding completed)

## 1 1st curtain stop position

■ Fig. 1 Slit remaining in picture frame

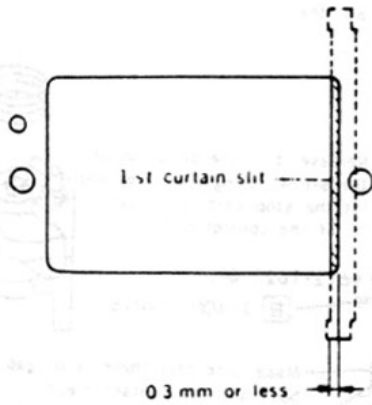


■ Fig. 2 Overlapping of the curtains

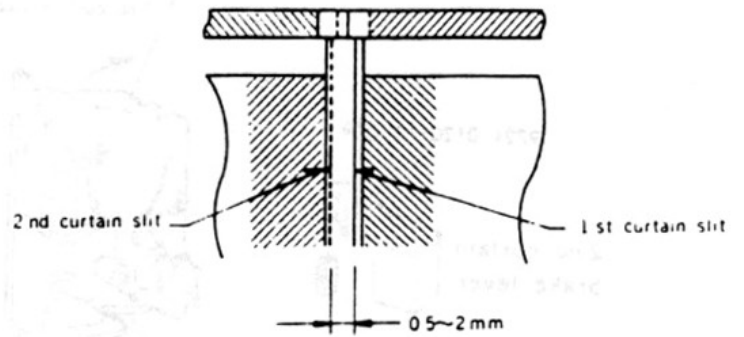

## 2 2nd curtain stop position


(check while letting the 1st curtain travel.)

■ Fig. 3 Deflection from reference hole

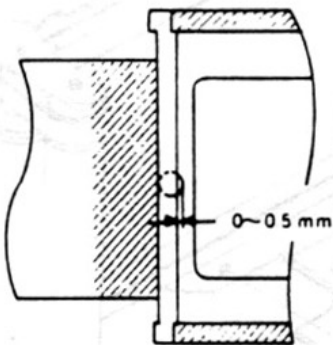


## 3 Curtain tilt (deflection from picture frame)

■ Fig. 4


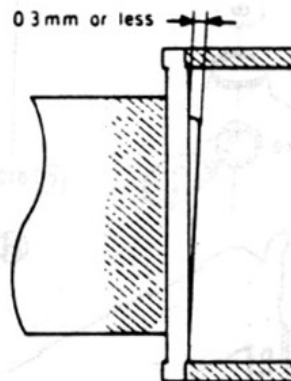


- Check both 1st and 2nd curtains at the edges of the picture frame.

# Shutter assembly-II

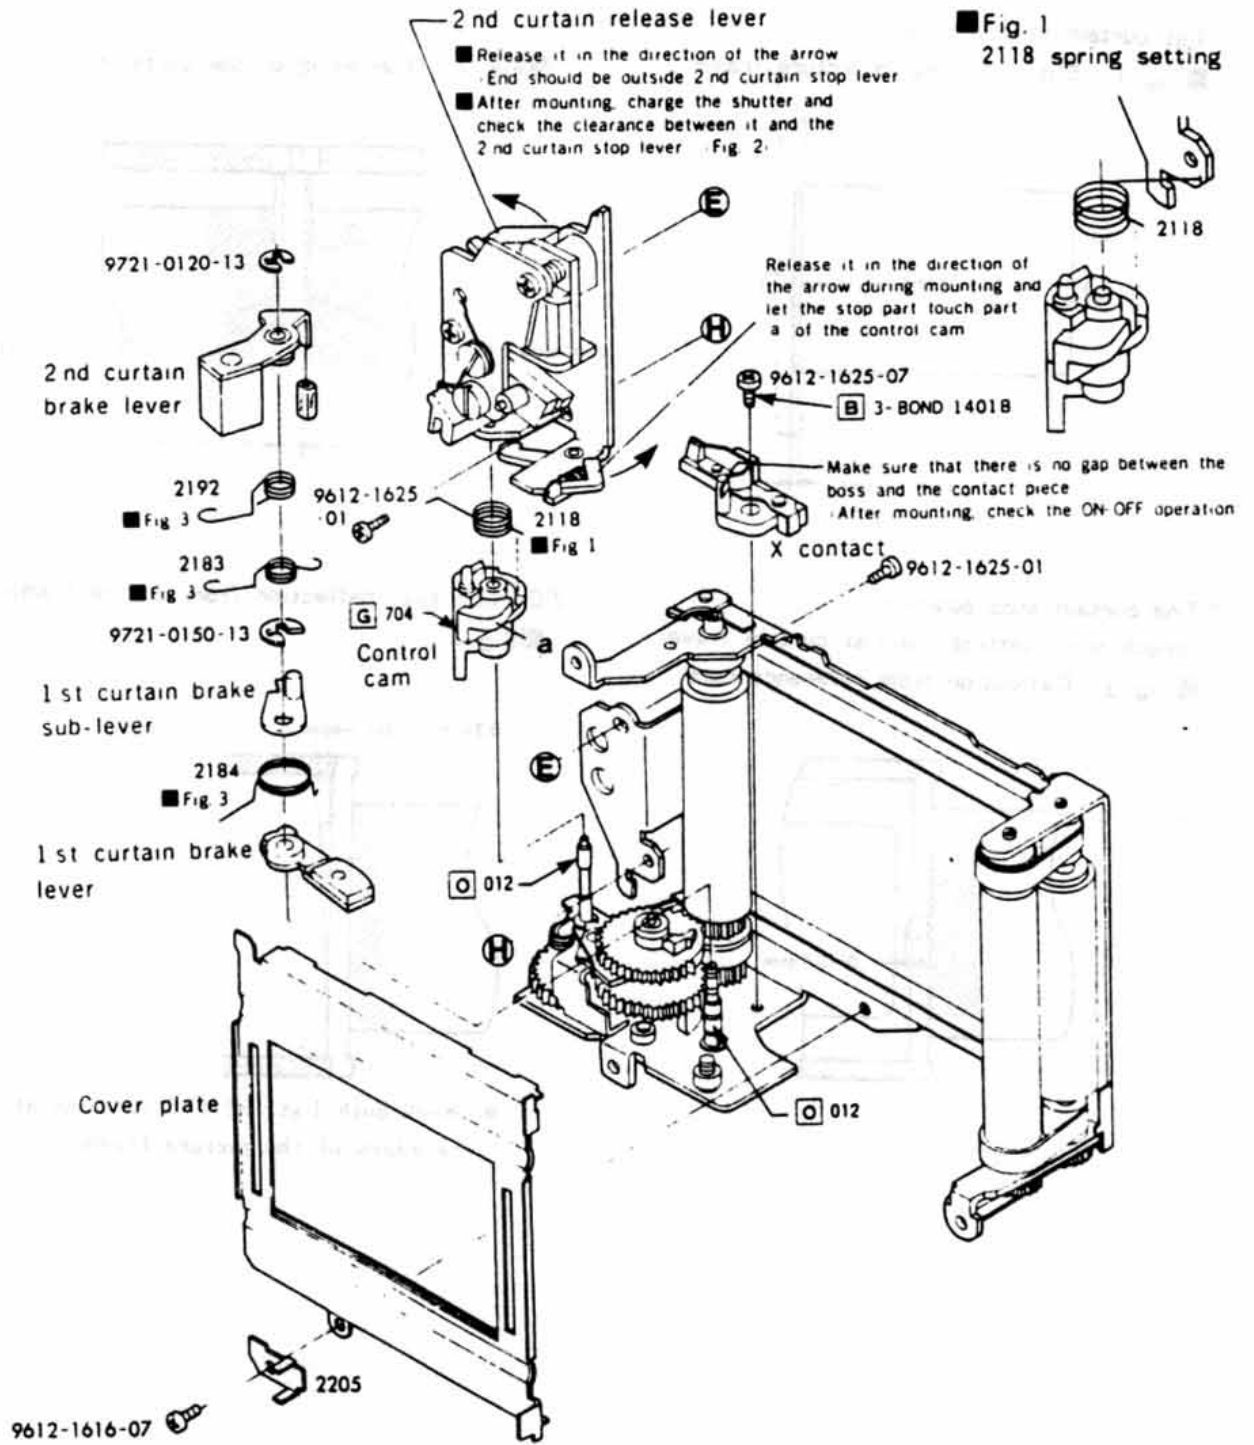

■ Fig. 2

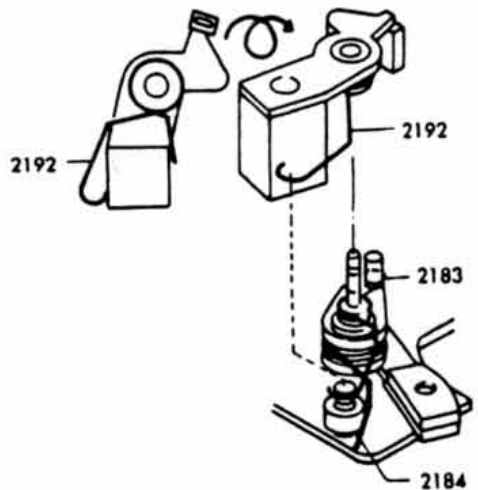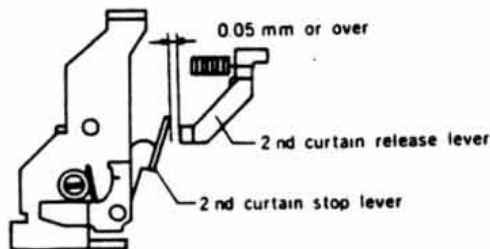




# Shutter block adjustment

- Measuring instruments :** Camera standard tester Model ST-5101  
 : Shutter tester Model S-2101, FS-1DMN4

**Preparations**


1. Mount the shutter onto the front base plate block and install it onto the body as shown in Fig. 1.
2. Connect the tester as shown in Fig. 2.

Fig. 1

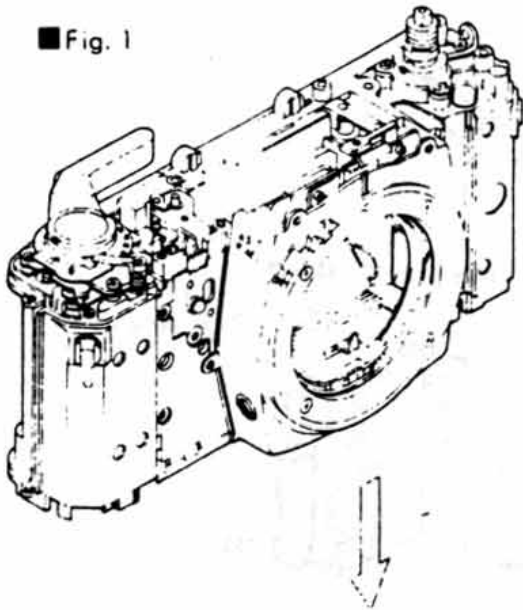

Operate the shutter as described on P.13

Fig. 2

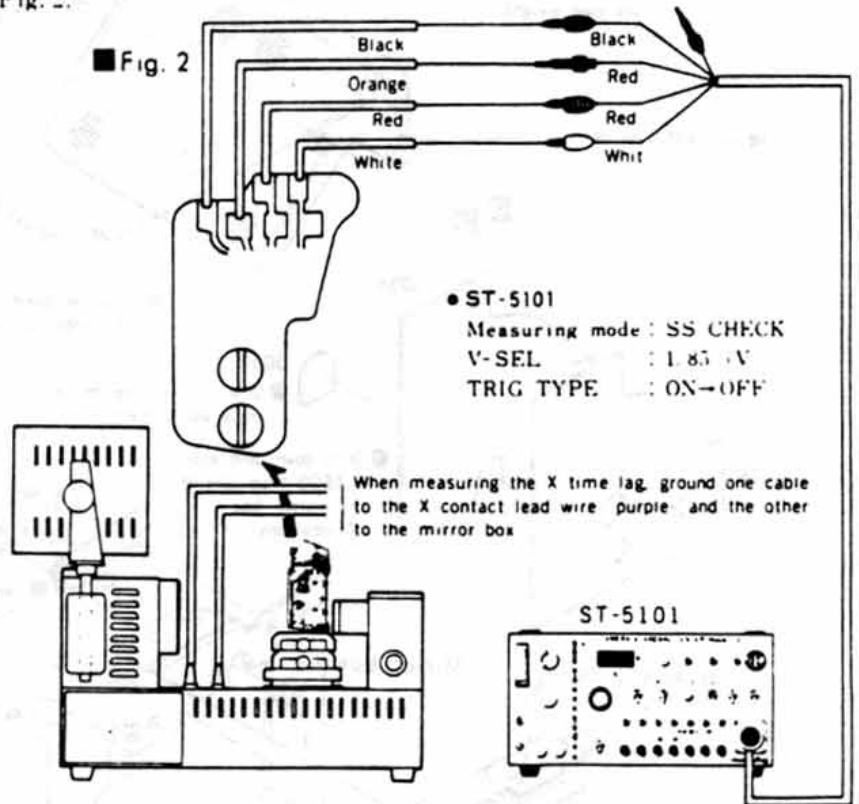

**Adjustment procedure**

**1 Curtain speed adjustment**

1. Set the SS-SEL. of ST-5101 to 1000 and adjust by turning the curtain spring cylinder shaft so that both curtain speeds are **11 - 0.3 ms**. (Fig. 3)

- When the curtain is not open, shift SS-SEL to 60 and make a rough adjustment beforehand so that both curtain speeds are about 12 ms, and then adjust again with the SS-SEL. set to 1000.


**2 Shutter speed adjustment**

1. With the SS-SEL. set to 1000, release the shutter and adjust by turning the S<sub>1</sub> eccentric pin so that the shutter tester indicates **0.98 ms**. (Fig. 4)

**3 X time lag adjustment**

1. Connect the synchro cord of the shutter tester to the camera. (Fig. 2)
2. With the SS-SEL. set to 60, release the shutter and check to be sure that the speed is **0.4 ms or more in range A and 2.4 ms or more in range B**.  
 To make the adjustment, bend the end of the X contact.

Fig. 3

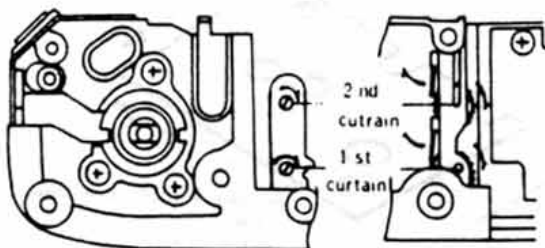

● Increasing the curtain speed

● Decreasing the curtain speed

Fig. 4



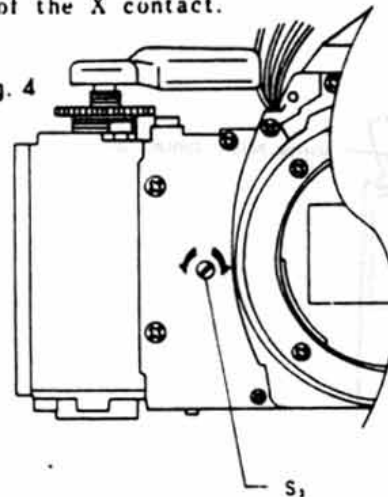


Fig. 5

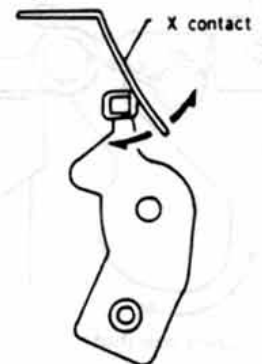

# Mirror box assembly- I

• Dilute one part of anti-diffusion agent (FC-721) with ten parts of solvent (FC-77).

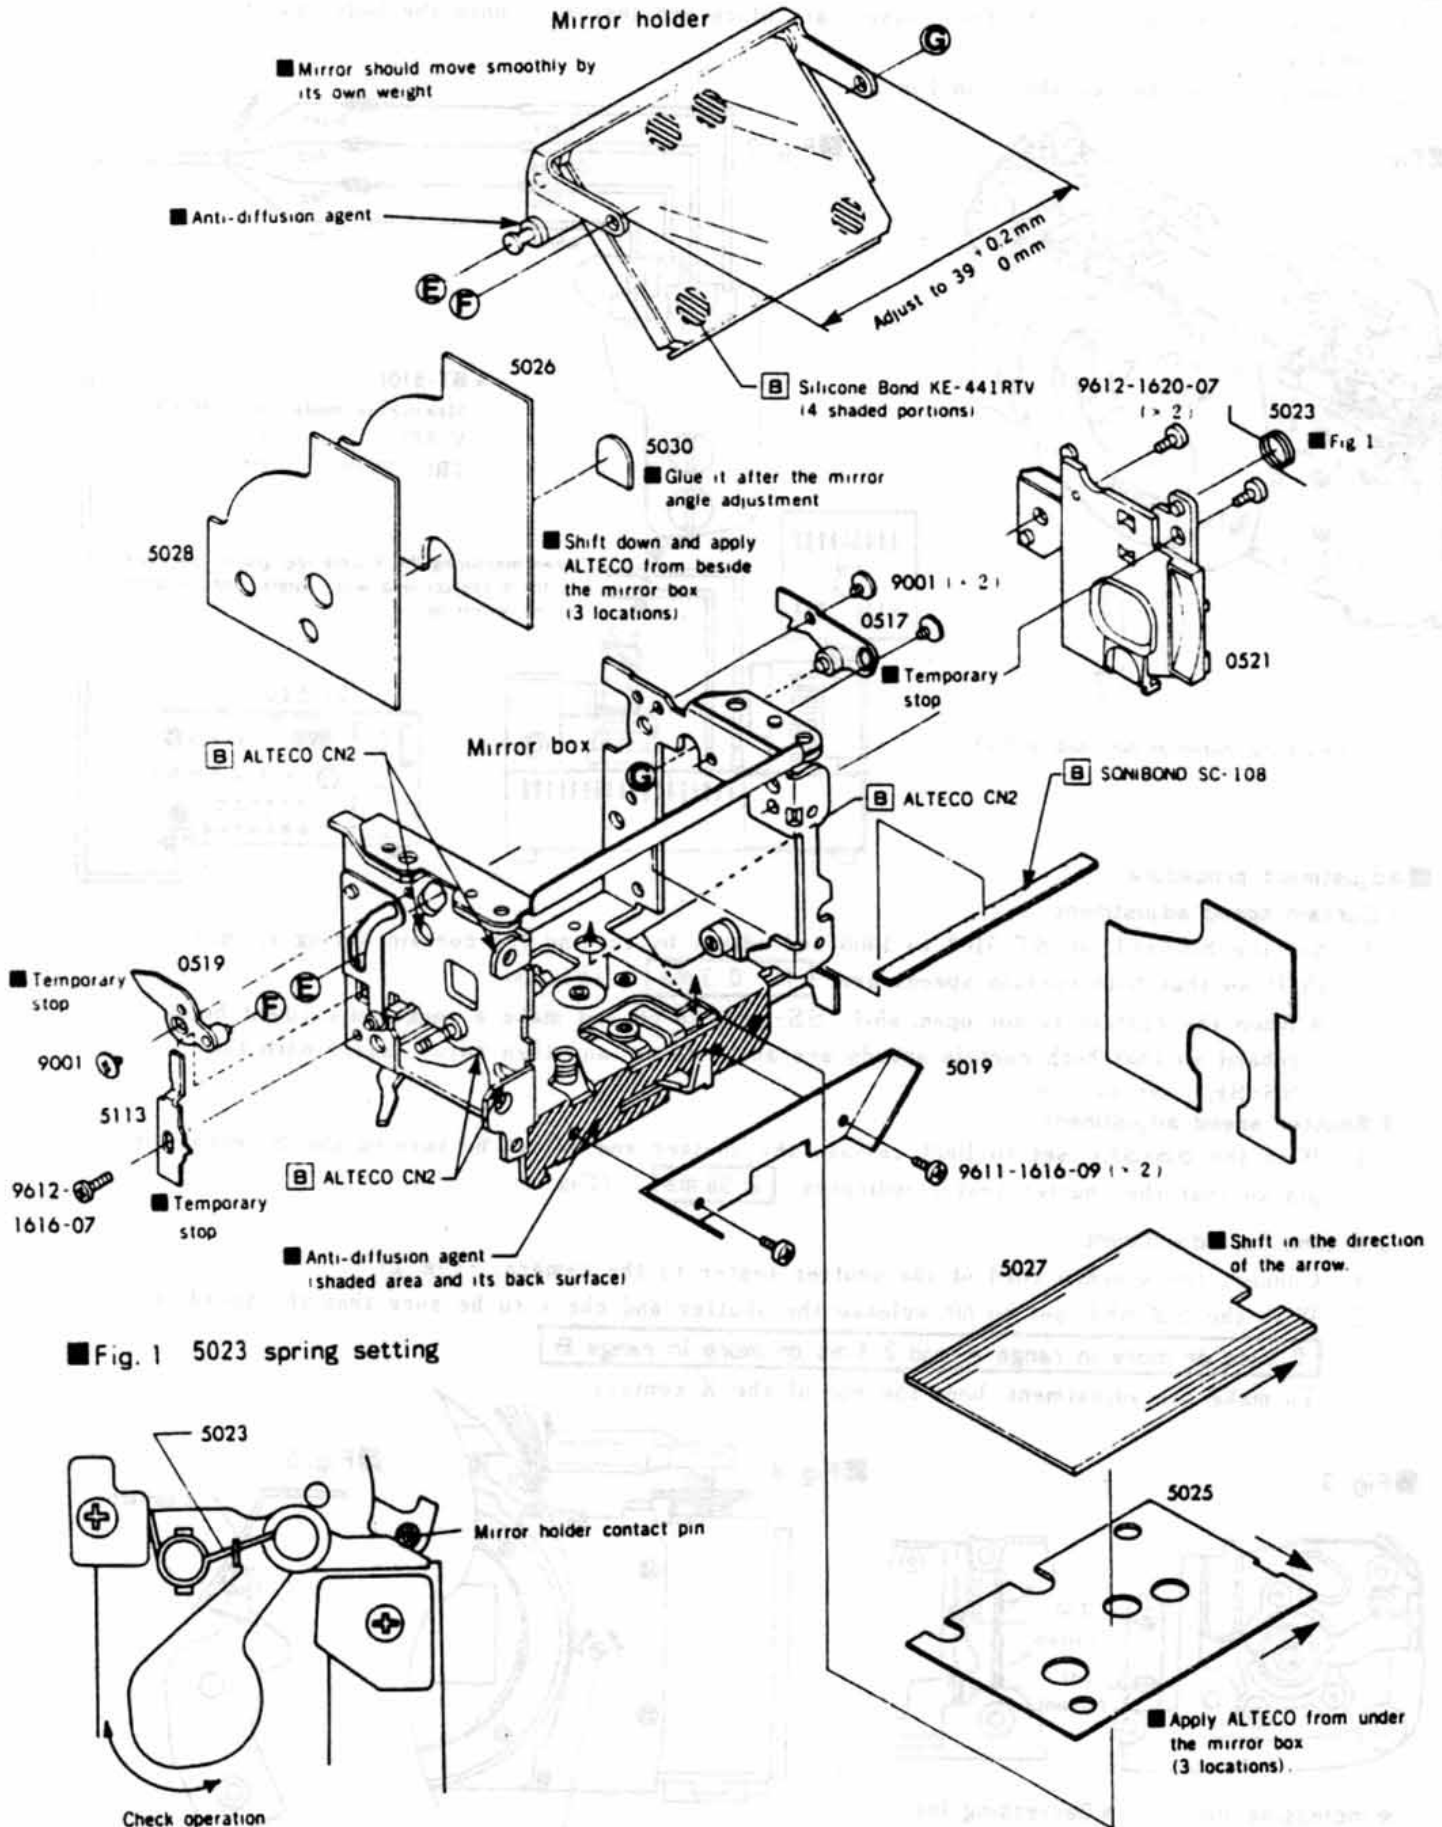



# Mirror box assembly - II

After the completion of assembly, adjust the mirror angle as described on the next page.

Fig. 1 2519 spring setting

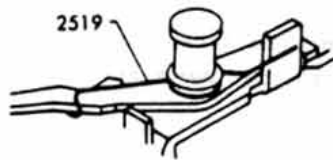


Fig. 2 2517, 2520 spring setting




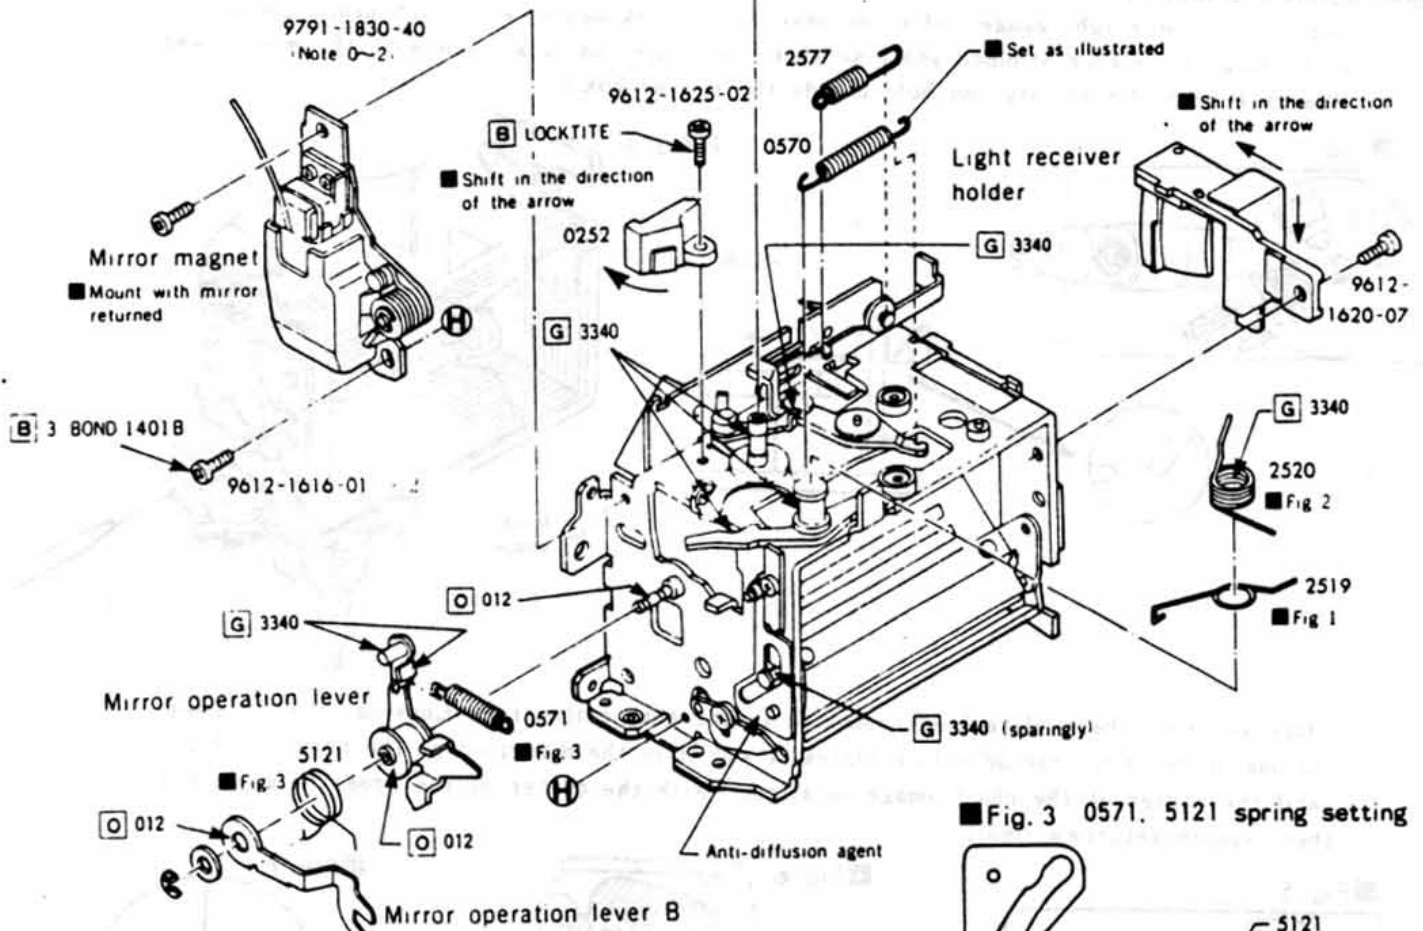


Fig. 3 0571, 5121 spring setting

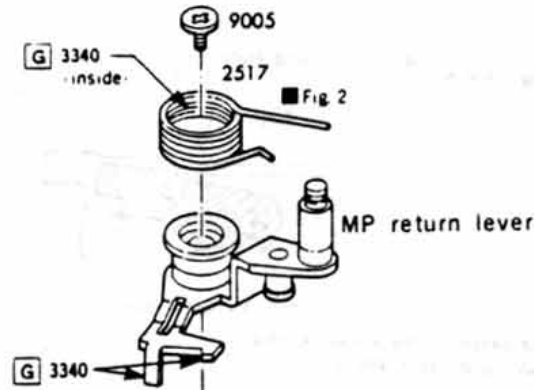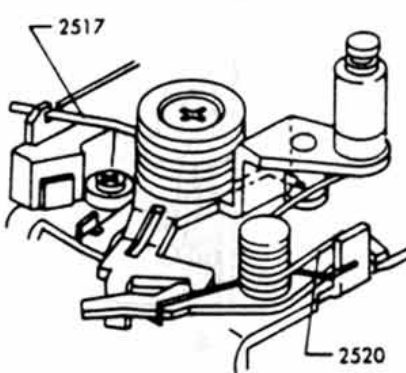

**Note:** Regarding the washers under mirror magnet, two washers or one washer or no washer are used depending on the attraction of magnet.

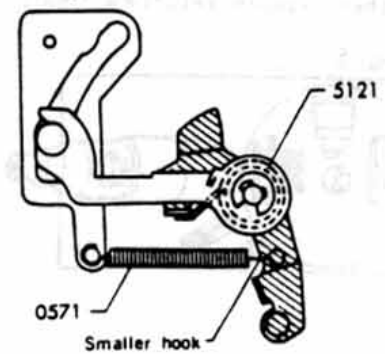


# Mirror angle adjustment

■ Measuring instrument : Mirror angle adjuster (Model MA-III. □)

## ■ Preparations


1. Mount the mirror box on the front base plate.
2. Loosen the setscrew (9001) of mirror adjusting plate A and B, position them as shown in Fig. 1, and then slightly tighten 9001. Completely shift the mirror sub-stopper down as shown in Fig. 2.
3. Set the front base plate block onto the mirror angle adjuster.

■ Fig. 1

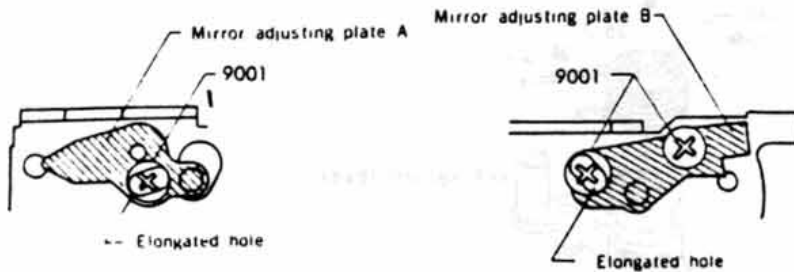

● Position 9001 at the center of the elongated hole for both mirror adjusting plates A and B


■ Fig. 2

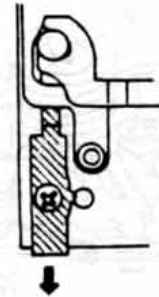


## ■ Adjustment procedure

1. Set the mirror height gauge and front base plate block opposite to each other and adjust by turning the mirror stopper shaft so that the gauge end is aligned with the mirror end. (Insert a screwdriver into the hole beside the mirror box.)

■ Fig. 3

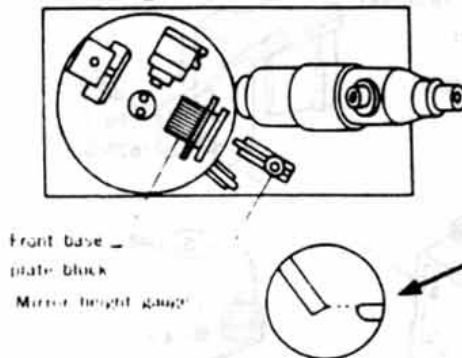


■ Fig. 4

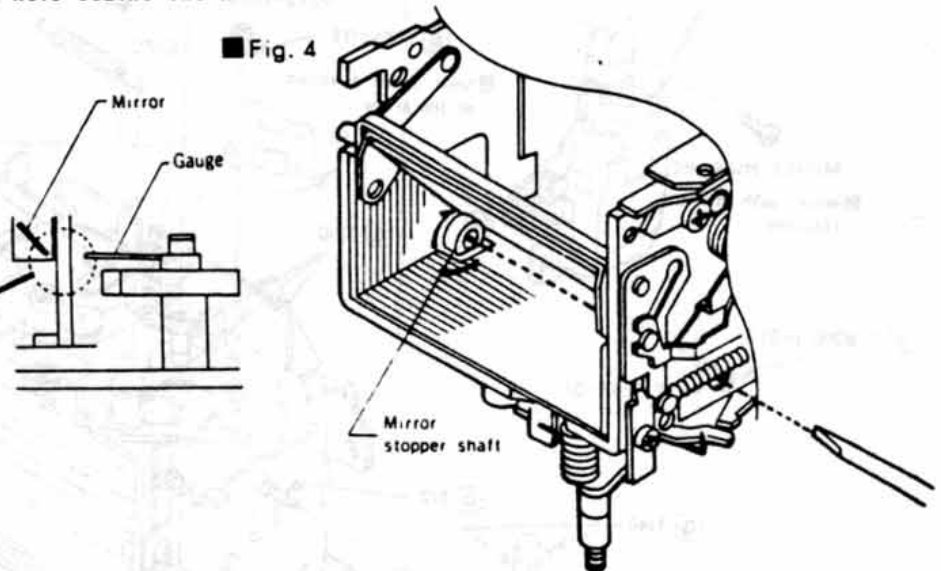


2. Place the front base plate block opposite to the auto collimator. Looking into the auto collimator, move mirror adjusting plates A and B in the direction of the arrow in Fig. 6 until the center of the chart image is aligned with the center of the cross (Fig. 7), and then tighten setscrew (9001).



■ Fig. 5

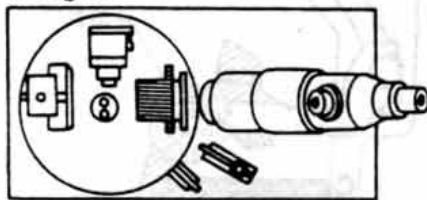

■ Fig. 6

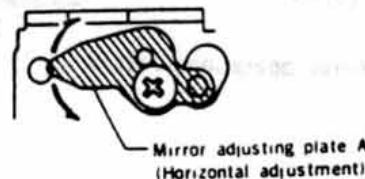


■ Fig. 7

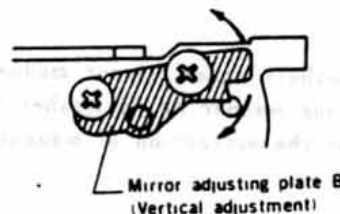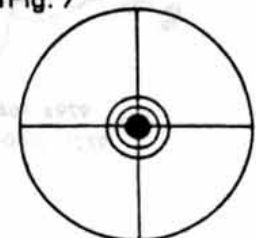

3. Push up the mirror sub-stopper until its end lightly touches the mirror operation lever pin, and then tighten the setscrew.


■ Fig. 8

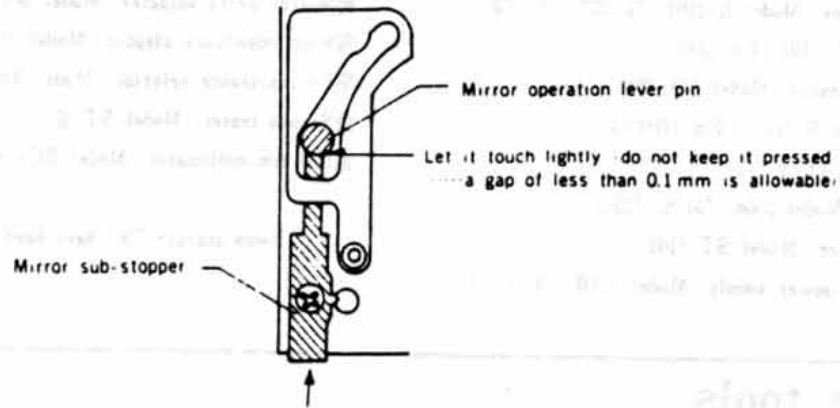

1. Operate the mirror several times and make sure that the chart image is within the standard


$45^\circ \pm 10'$

■ Fig. 9

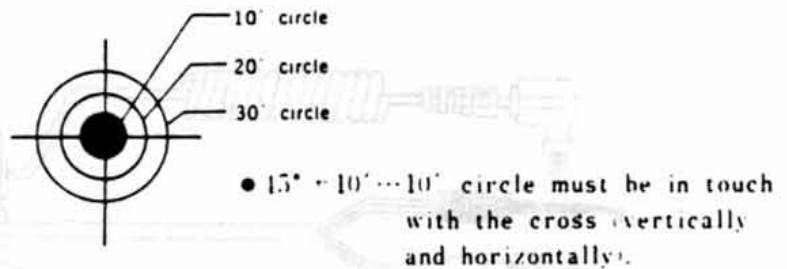

- If it is not within the standard  $15' \pm 10'$ , perform adjustments 1-3 again.

5. After completing the adjustment, apply screw-lock (3-BOND 1101B) to the screw head of mirror adjusting plates A, B, and the mirror sub-stopper, and adhere the flare prevention sheet B (5030...P. 39)

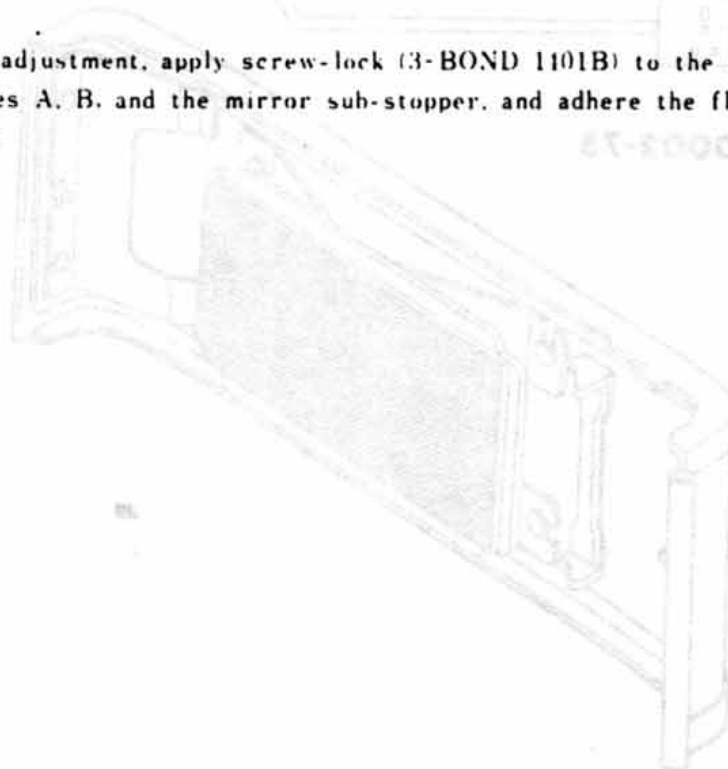

## ■ Measuring instruments

■ Standard luminance box Model L-2101, \*L-222, \*L-223

■ EE tester Model EE-2101, EE-2111

■ SS adaptor for EE tester Model SD-2101

■ Shutter tester Model S-2101, \*FS-1DMN4

■ Time counter Model TC-1

■ Digital multimeter Model 2508, \*3476, \*2507

■ Camera standard tester Model ST-5101

■ Constant voltage DC power supply Model 521B, \*E-1, \*E-2

■ Mirror angle adjuster Model MA-□, \*□

■ High impedance adaptor Model HA-1

■ Rp resistance selector Model RS-N, \*□, \*□, \*□

■ Strobe tester Model ST-□


■ 1000 mm collimator Model RC-1000 □, \*□, \*□

(Items marked "\*" have been discontinued)

## ■ Exclusive tools


### ■ Tool No. 2017-0001-75

Strobe level adjuster

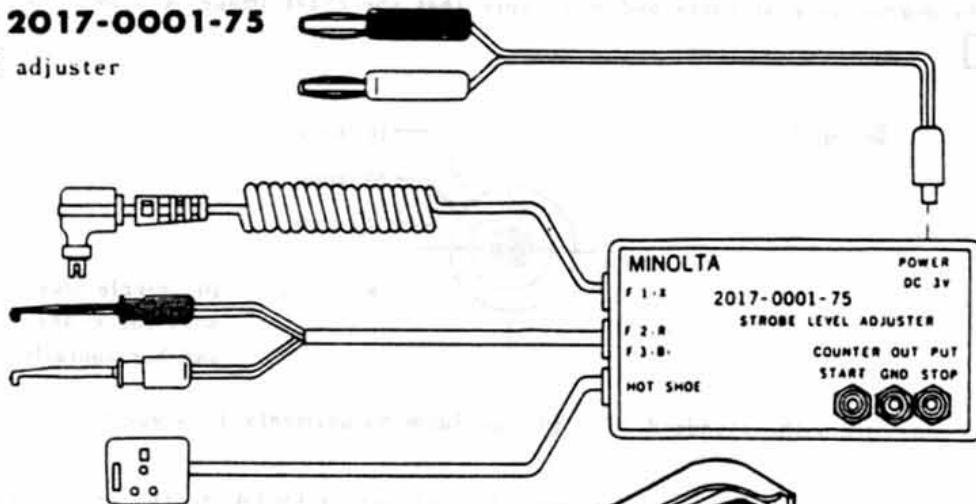


### ■ Tool No. 2017-0002-75

Standard reflector

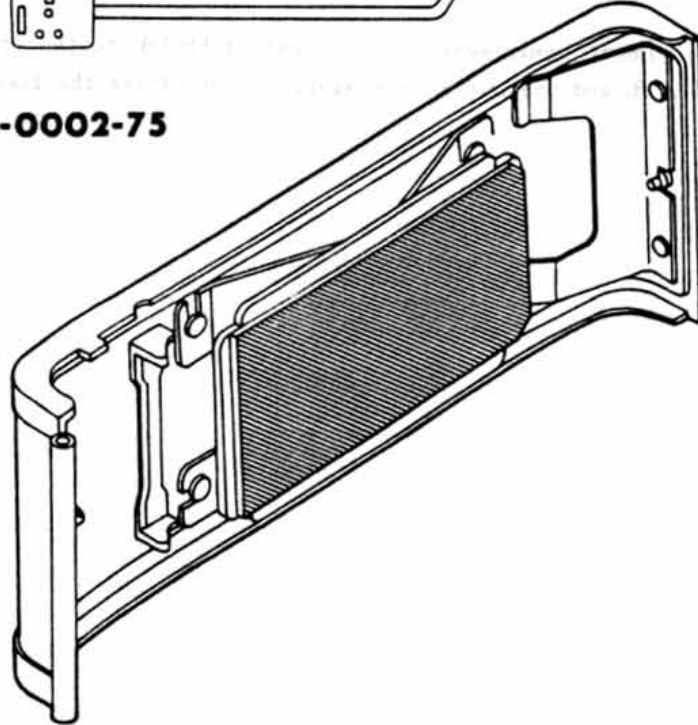

### ■ Tool No. 2017-0003-75


Release tool

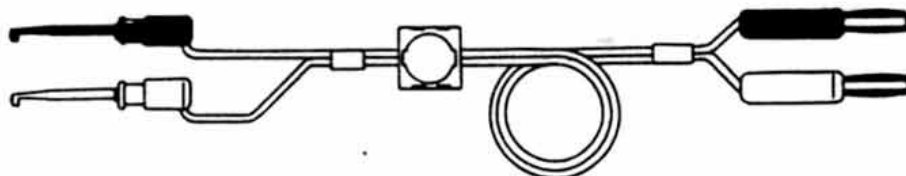




## ■ Tool No. 2017-1301-75

Temporary cover

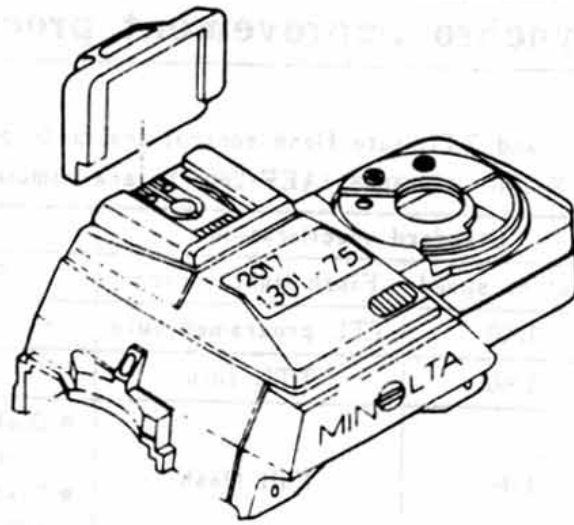

## ■ Tool No. 2017-3013-75

Top cover nut wrench



## ■ Tool No. 2017-3309-75

Temporary nut



## ■ Tools used in common

### ■ Tool No. 2005-0001-75

Master lens for S-auto

### ■ Tool No. 2005-0002-75

Master lens for A-auto

### ■ Tool No. 054-5202-79

Master lens for 051 finder  
back adjustment

### ■ Tool No. 2006-2020-75

Shutter button pressure spanner

### ■ Tool No. 2019-2053-75

ASA dial nut spanner

### ■ Tool No. 2006-3003-75

Winding lever pressure spanner

### ■ Body back gage

### ■ Flat plate (for 2005)

### ■ Dial gauge

### ■ Reflection paper

1.3 m × 2 m

Seamless paper # 22

Suprior make

### ■ Dial tension gauge

500 g, 300 g

## ■ Sub materials

### ■ Grease

- #3340
- #335
- #704
- #006

### ■ Oil

- #012

### ■ Adhesives

- 3-BOND 1101B
- PLIOBOND
- Silicon-bond KE-141RTV
- ALTECO CN2
- LOCTITE
- SONIBOND SC-108

### ■ Cleaner

- FLONSOLVE

### ■ Anti-diffusion agent

- FC-721

(Dilute with solvent FC-77 by 1 : 10)

# Slow synchro improvement procedure

## Purpose


Slow synchro and TTL auto flash control are made possible for flash photography in M mode, when 2017 (X-700) and 8808 (AEF-280PX) are combined.

| Mode | Standard specification |                     | Improved specifications                                                                                                                     |                     |
|------|------------------------|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------|---------------------|
|      | Shutter speed          | Flash light control | Shutter speed                                                                                                                               | Flash light control |
| P    | 1/60                   | TTL programed auto  | 1/60                                                                                                                                        | TTL programed auto  |
| A    | 1/60                   | TTL auto            | 1/60                                                                                                                                        | TTL auto            |
| M    | 1/60                   | Full flash          | <ul style="list-style-type: none"><li>● Dial position 1~60<br/>...set position speed</li><li>● Dial position 125~<br/>1000...1/60</li></ul> | TTL auto            |

## Improvement procedure


1. Remove the top cover, shutter dial shaft (0276) and main switch guide (0412).

Fig. 1

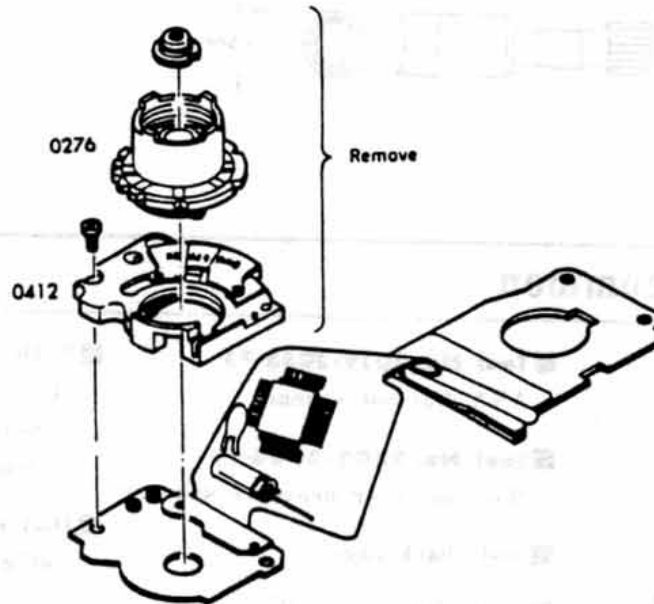

2. Shortcircuit between the terminals of IC-2 ③⑥ and ③⑦ on the flexible circuit board by solder ① of Fig. 2), and cut off pattern ② of Fig. 2 by using a cutter.

Fig. 2

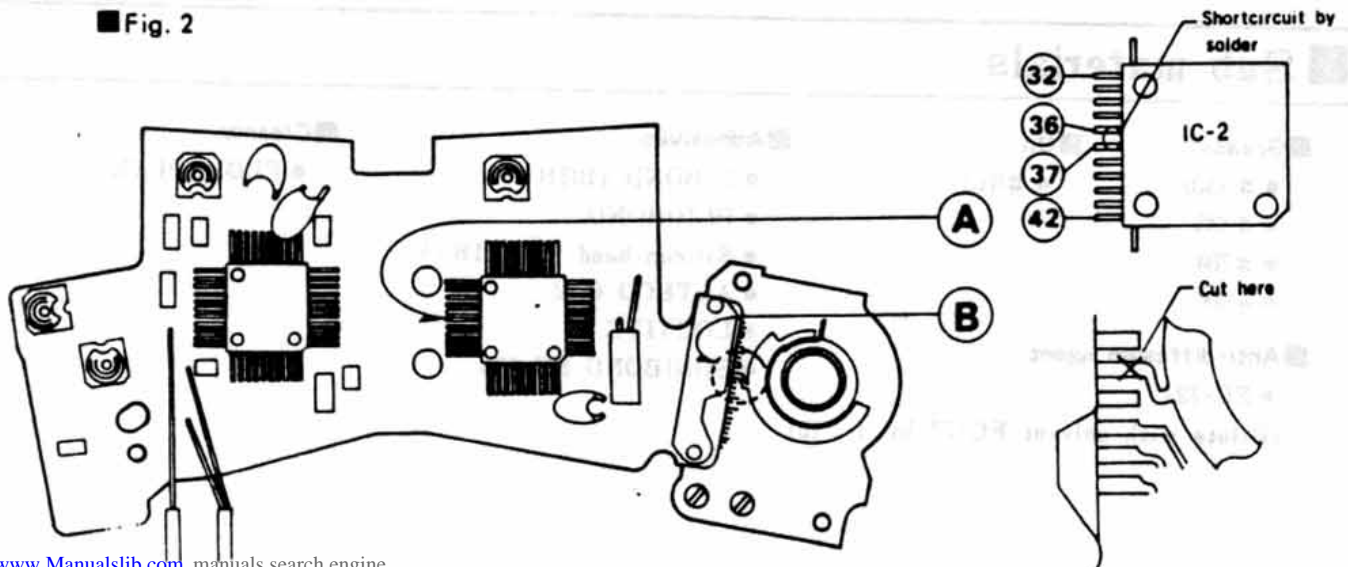


# ■ Focusing plate replacement procedure

■ For view finder cleaning without camera disassembly or focusing plate replacement follow the procedure given below.

## ■ Removal

Insert the tweezers between the focusing plate and focusing plate holder A. Slightly tilt the tweezers to raise the focusing plate for removal.


■ Fig. 1

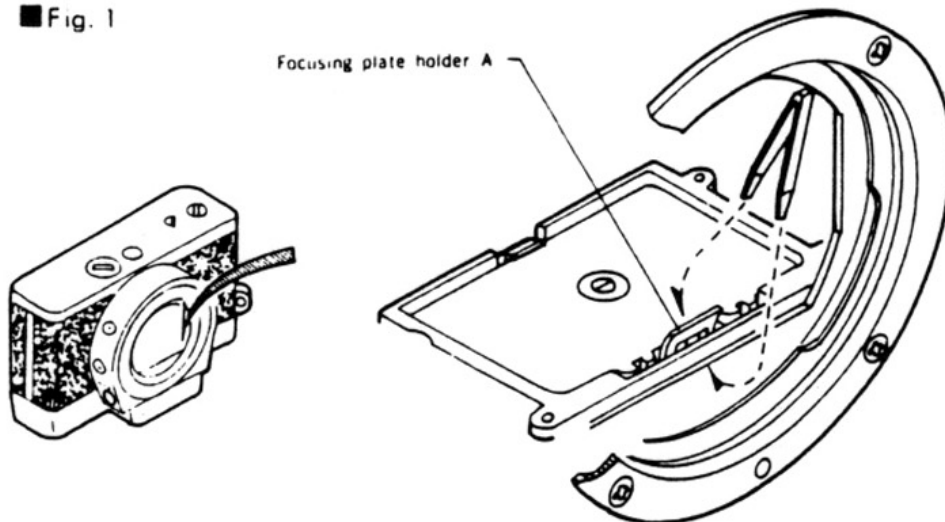

## ■ Mounting

Hold the focusing plate as illustrated; fit part A onto the bend of focusing plate holder B; press down arrow-marked part B; and insert projection C into the hold of focusing plate holder A.

■ Fig. 2

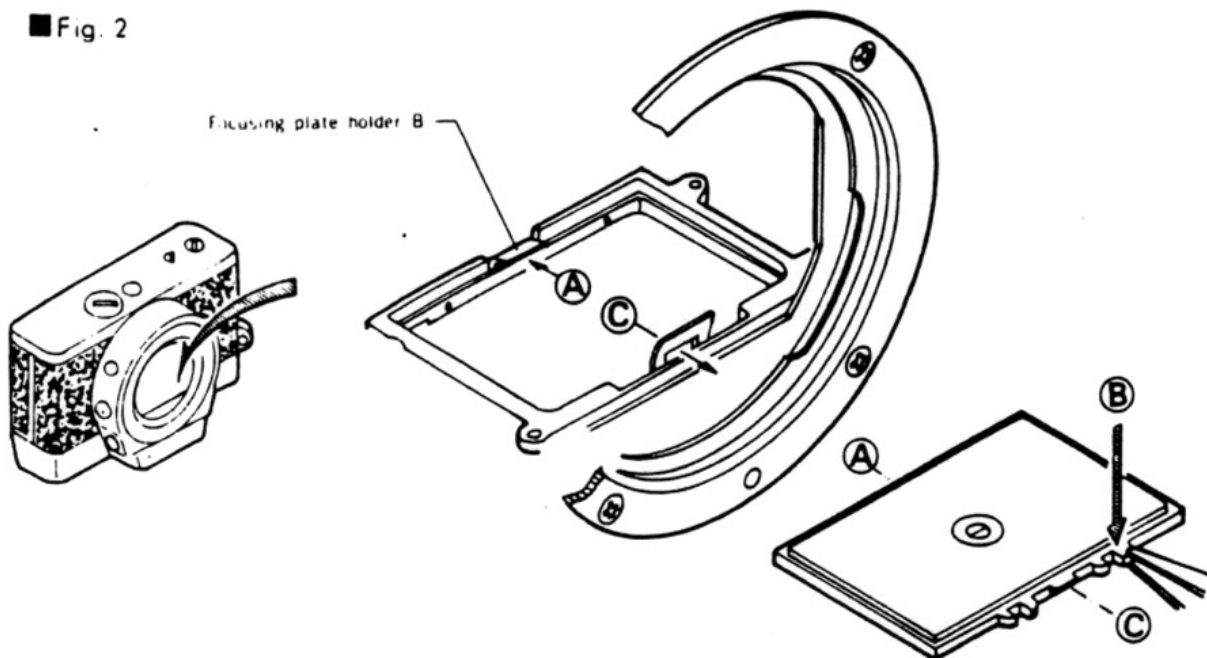

## ■ Mounting check




After mounting the focusing plate, check that the view finder back and EE level are correctly positioned.









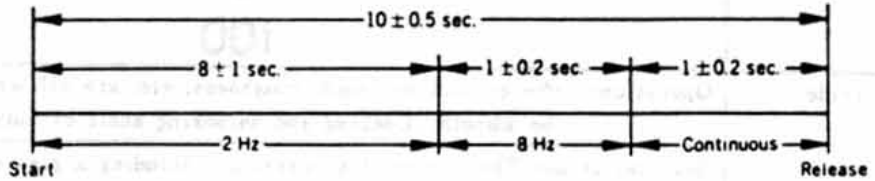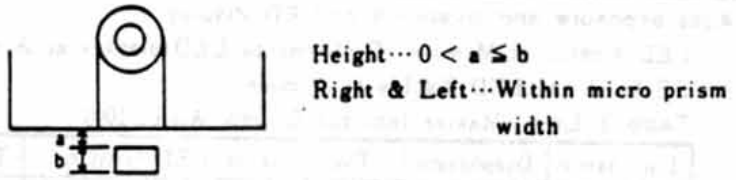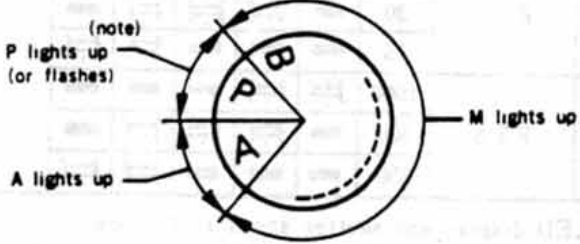

| Check Item  | Checkpoint        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|-------------|-------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Self-timer  | Lever             | Operation.....There shall be no roughness, squeak, etc. Click feeling.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|             | Timer function    | <ul style="list-style-type: none"> <li>● Setting the lever to "OFF" after starting shall stop operation.</li> <li>● With main SW. in ON))) position, the pulsating beeper shall sound.</li> <li>● ON/OFF cycle of the lamp (LED) and beeper shall satisfy the following time chart:</li> </ul>                                                                                                                                                                                                                                                                                              |
| Finder      | View              | Inclination of image, coincidence, fading on one side.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
|             | Diaphragm display | <p>Diaphragm display shall be within the frame, and the adjacent character shall not be in sight at F5.6.</p> <p>Display frame position...As illustrated.</p>                                                                                                                                                                                                                                                                                                                                                                                                                               |
| LED display |                   | <p>At normal shooting...Mode display LED lights up within the range as illustrated, and the speed display LED shall indicate a proper shutter speed in any case.</p>  <p><b>NOTES :</b> With MD lens installed, P lights up at MIN. diaphragm setting.<br/> : P flashes at settings other than MIN. diaphragm, with other than MD lens or MD lens installed.</p>                                                                                                                                                                                                                          |
|             |                   | <p>At electric flash shooting...</p> <p>① When AEF-280PX (8808) is installed;</p> <ul style="list-style-type: none"> <li>● 60 LED shall flash for each mode, when the flash is charged.</li> <li>● Mode display shall not disappear at P mode. (For A, M modes, mode display shall disappear when the flash is charged.)</li> <li>● 60 LED, when dimmed at A and P modes, shall flash one second at 8 Hz immediately after shooting.</li> </ul> <p>② When X series electric flashes other than the 8808 are installed;</p> <ul style="list-style-type: none"> <li>● For each mode, 60 LED shall flash when the flash is charged, and mode display shall disappear.</li> </ul> |
|             |                   | <p>Others.....</p> <ul style="list-style-type: none"> <li>● The display shall light up for 15 seconds after the metering switch (S<sub>0</sub> or S<sub>1</sub>) is ON. The display, however, shall disappear when the metering switch is OFF in 15 seconds after it is turned ON.</li> <li>● Immediately the self-timer operates and is released, the display shall disappear.</li> <li>● More than the 3 shutter speed display LEDs shall not light up.</li> <li>● High luminance alarm (▲) and low luminance alarm (▼) shall flash independently. (Shall not light up simultaneously with "1000" or "1" LED)</li> </ul>                                                    |

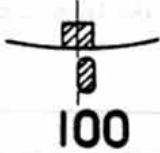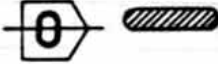

| Check Item    | Checkpoint | Description                                                                                                                                                                                                                                                                                                          |
|---------------|------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Auto exposure | ASA dial   | Operation.....There shall be no touch or contact, roughness, etc., and the dial shall rotate smoothly, and shall engage with the lock groove securely.                                                                                                                                                               |
|               |            | Dial deviation...The center of the index shall fall on the dial scale including a play.<br>                                                                                                                                        |
|               | Override   | Operation.....No contact or touch, roughness, etc. are allowed, and the rotation shall be smooth. Locking and unlocking shall be sure.<br>Dial deviation...The center of a character including a play shall fall on the index.<br> |
|               |            | Alarm LED...LED (*) inside the finder shall flash in case of movement over $\pm 0.5$ step. (Be ware of $+0.5$ step position in particular.)                                                                                                                                                                          |

□ Auto exposure and tolerance of LED display

- LED display at M mode...Conforms to LED display at A mode as shown in Table 1 below:
- EE level and LED display at A mode.

Table-1 (Lens : Master lens for S-auto, ASA : 100)

| Luminance | Diaphragm | Tolerance of LED lighting |  |  |  |  |  | Tolerance of EE level |
|-----------|-----------|---------------------------|--|--|--|--|--|-----------------------|
| EV 5      | F 4       | 4                         |  |  |  |  |  | 0 $\pm$ 0.8EV         |
|           |           | 2                         |  |  |  |  |  |                       |
|           |           | 1                         |  |  |  |  |  |                       |
| EV 11     | F 8       | 60                        |  |  |  |  |  |                       |
|           |           | 30                        |  |  |  |  |  |                       |
|           |           | 15                        |  |  |  |  |  |                       |
| EV 14     | F 5.6     | 1000                      |  |  |  |  |  |                       |
|           |           | 500                       |  |  |  |  |  |                       |
|           |           | 250                       |  |  |  |  |  |                       |



- EE level, LED display and shutter speed at P mode.


.....Check the following, also using SS adaptor (Model SD-2101) for EE tester.

Table-2 (Lens : Master lens for S-auto, ASA : 100, diaphragm : F 16)

| Luminance | SD-2101 diaphragm changing SW. | Tolerance lighting LED and SS for lighting position |                                  | Tolerance of EE level |
|-----------|--------------------------------|-----------------------------------------------------|----------------------------------|-----------------------|
|           |                                | Lighting LED                                        | Allowable range of shutter speed |                       |
| EV 15     | F 8                            | 1000, 500                                           | 0.69~3.28 ms                     | 0 $\pm$ 0.8EV         |
|           |                                | 500                                                 | 0.82~4.65 ms                     |                       |
|           |                                | 500, 250                                            | 1.16~6.57 ms                     |                       |
| * EV 10   | F 2.8                          | 250, 125                                            | 2.32~13.1 ms                     |                       |
|           |                                | 125                                                 | 3.28~18.6 ms                     |                       |
|           |                                | 125, 60                                             | 4.65~26.2 ms                     |                       |
| EV 5      | —                              | 30                                                  | Not specified                    |                       |
|           |                                | 30, 15                                              |                                  |                       |
|           |                                | 15                                                  |                                  |                       |
|           |                                | 15, 8                                               |                                  |                       |
|           |                                | 8                                                   |                                  |                       |

\*EV 10 : In case the luminance box is L-222 and L-223, EV 11+ND filter is used. (50%)
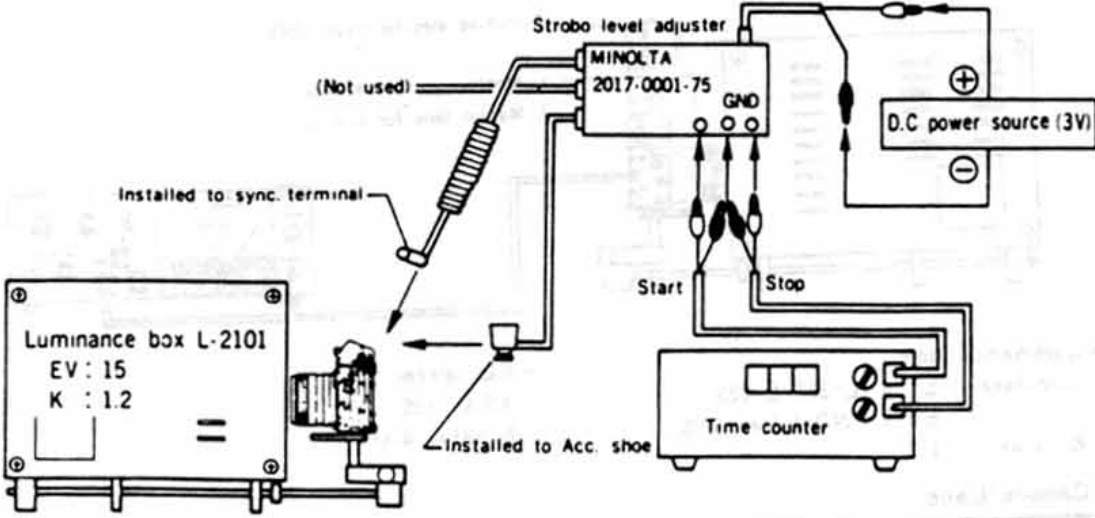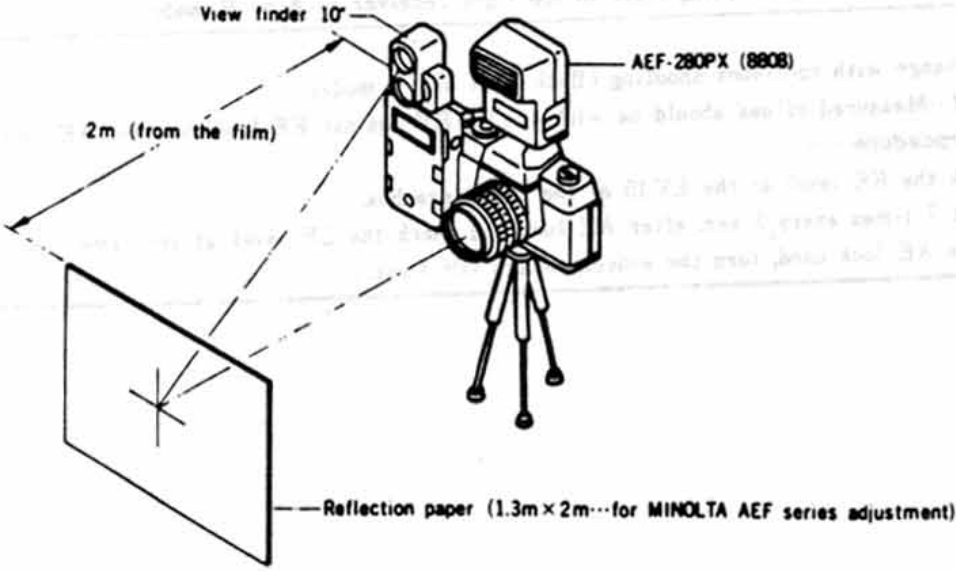
| Check Item    | Checkpoint                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Auto exposure | <p>② Electric flash dimmer performance</p> <p>1. Check by a luminance box (When the luminance box is other than L-2101, check in the following No. 2 methods.)</p> <ul style="list-style-type: none"> <li>● Standard...The time counter display shall be within the range of <b>0.36 to 1.1 ms</b>.<br/>(±0.8 EV for 0.63 ms reference value)</li> <li>● Checking procedures...Set up a camera and measuring instruments as illustrated below to observe the time counter display when the shutter is released.</li> </ul> |  <ul style="list-style-type: none"> <li>● Camera <ul style="list-style-type: none"> <li>: Installation master lens for A-auto</li> <li>: Standard reflecting plate (2017-0002-75) installation</li> <li>Shutter dial : P</li> <li>ASA : 100</li> </ul> </li> <li>● Time counter (TC-1) <ul style="list-style-type: none"> <li>TRIG. slope A-CH : ⊖</li> <li>B-CH : ⊕</li> <li>TRIG. level A-CH : + 2</li> <li>B-CH : + 2</li> </ul> </li> </ul>              |
|               | <p>2. Checking by strobo tester (Model ST-III)</p> <ul style="list-style-type: none"> <li>● Standard...Strobo tester display shall be within the range of <b>F 5.6±0.8 EV</b>.</li> <li>● Checking procedures...Set up a camera and measuring instruments as illustrated below and release the shutter 30 seconds after the pilot lamp of the electric flash lights up to observe the display of the electric flash.</li> </ul>                                                                                            |  <ul style="list-style-type: none"> <li>● Camera <ul style="list-style-type: none"> <li>: Installation master lens for A-auto</li> <li>: Standard reflector (2017-0002-75) installation</li> <li>Shutter dial : P</li> <li>ASA : 100</li> </ul> </li> <li>● Strobe tester <ul style="list-style-type: none"> <li>MODE : NON. C</li> </ul> </li> <li>● Electric flash <ul style="list-style-type: none"> <li>Hi-Low changing SW : Hi</li> </ul> </li> </ul> |
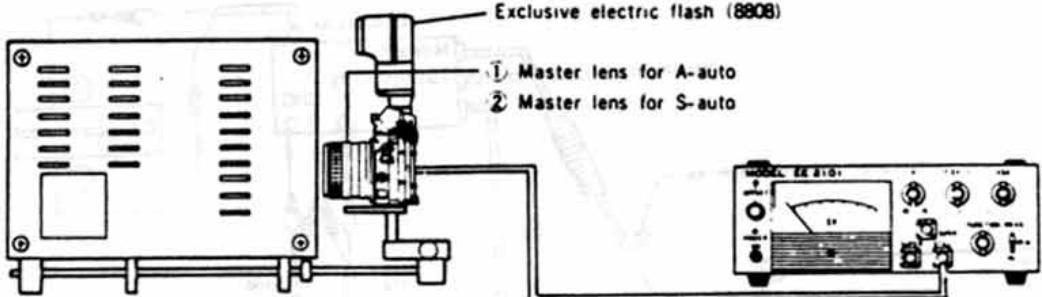
| Check Item    | Checkpoint                                                                                                                                                                                                                                                                                                                                                                                                             | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |          |      |           |      |     |   |                        |   |   |     |   |                        |      |   |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------|------|-----------|------|-----|---|------------------------|---|---|-----|---|------------------------|------|---|
| Auto exposure | <p>③ Electric flash program performance</p> <ul style="list-style-type: none"> <li>● Standard...EE level difference at A and P modes shall be within <b>1 EV</b> under the following conditions:</li> <li>● Checking procedures : Install an exclusive electric flash (8808) to a camera and release the shutter after the electric flash charging completes to check EE level difference at A and P modes.</li> </ul> |  <p>Exclusive electric flash (8808)</p> <p>① Master lens for A-auto</p> <p>② Master lens for S-auto</p> <ul style="list-style-type: none"> <li>● Luminance box<br/>Luminance : EV 8 (L-222/L-223;<br/>EV 9 + ND filter 50%)<br/>K value : 1.2</li> <li>● EE tester<br/>ASA : 400<br/>K value dial : 1.2</li> </ul> <p>● Camera/Lens</p> <table border="1" data-bbox="365 951 1104 1098"> <thead> <tr> <th>Sequence</th> <th>Lens</th> <th>Diaphragm</th> <th>Mode</th> <th>ASA</th> </tr> </thead> <tbody> <tr> <td>1</td> <td>Master lens for A-auto</td> <td>—</td> <td>A</td> <td rowspan="2">100</td> </tr> <tr> <td>2</td> <td>Master lens for S-auto</td> <td>F 16</td> <td>P</td> </tr> </tbody> </table> | Sequence | Lens | Diaphragm | Mode | ASA | 1 | Master lens for A-auto | — | A | 100 | 2 | Master lens for S-auto | F 16 | P |
| Sequence      | Lens                                                                                                                                                                                                                                                                                                                                                                                                                   | Diaphragm                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Mode     | ASA  |           |      |     |   |                        |   |   |     |   |                        |      |   |
| 1             | Master lens for A-auto                                                                                                                                                                                                                                                                                                                                                                                                 | —                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | A        | 100  |           |      |     |   |                        |   |   |     |   |                        |      |   |
| 2             | Master lens for S-auto                                                                                                                                                                                                                                                                                                                                                                                                 | F 16                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | P        |      |           |      |     |   |                        |   |   |     |   |                        |      |   |
|               | ④ High/Low speed limit                                                                                                                                                                                                                                                                                                                                                                                                 | <ol style="list-style-type: none"> <li>1. High-speed limit:<br/>The exposure time shall be within <b>0.69 to 1.38 ms</b> at high-luminance interlocking at A and P modes. (Check by the shutter tester at A or P mode.)</li> <li>2. Low-speed limit:<br/>The exposure time shall be within <b>5 seconds</b> at low-luminance interlocking at A and P modes. (Check by interrupting light to the light receiver at A or P mode.)</li> </ol>                                                                                                                                                                                                                                                                                                                                                         |          |      |           |      |     |   |                        |   |   |     |   |                        |      |   |
|               | ⑤ AE lock                                                                                                                                                                                                                                                                                                                                                                                                              | <p>Exposure change with continuous shooting (Both of A and P mode)</p> <ul style="list-style-type: none"> <li>● Standard...Measured values should be within <math>\pm 0.6</math> EV against EE level without AE lock.</li> <li>● Check procedure..... <ol style="list-style-type: none"> <li>1. Check the EE level at the EV 15 of the luminance box.</li> <li>2. Shoot 7 times every 5 sec. after AE lock and check the EE level at the same time. (When AE lock used, turn the sencer switch ON first.)</li> </ol> </li> </ul>                                                                                                                                                                                                                                                                   |          |      |           |      |     |   |                        |   |   |     |   |                        |      |   |



| Check Item                | Checkpoint                                                                                                                                                                                                                                                                                                                                        | Description                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Focus                     | Mirror                                                                                                                                                                                                                                                                                                                                            | Angle.....45' ± 10'                                                                                                                                                                                                                                                                                                                                            |
|                           |                                                                                                                                                                                                                                                                                                                                                   | Operation.....There shall be no play, two-step movement, improper timing, bounds within the image plane, etc.                                                                                                                                                                                                                                                  |
|                           |                                                                                                                                                                                                                                                                                                                                                   | Inclination... Shall be within 0.4 mm for the light shield plate in the up position.                                                                                                                                                                                                                                                                           |
|                           |                                                                                                                                                                                                                                                                                                                                                   | SPC-B shutter... Shall be open when the mirror is up. (Check with B.)                                                                                                                                                                                                                                                                                          |
|                           | Body back<br>(Pressure plate back)                                                                                                                                                                                                                                                                                                                | 43.72 <sup>+0.01</sup> <sub>-0.02</sub> mm (from the pressure plate margin to the lens mounting surface)                                                                                                                                                                                                                                                       |
|                           | Finder back                                                                                                                                                                                                                                                                                                                                       | 43.565 ± 0.025 mm                                                                                                                                                                                                                                                                                                                                              |
| Others                    | MD, MC levers                                                                                                                                                                                                                                                                                                                                     | Operation.....There shall exist no roughness, contact or touch, abnormal sound, etc.                                                                                                                                                                                                                                                                           |
|                           | Lens removal and installation                                                                                                                                                                                                                                                                                                                     | Check removal and installation torque (light or heavy), lock, unlock, play.                                                                                                                                                                                                                                                                                    |
|                           | Back cover                                                                                                                                                                                                                                                                                                                                        | Opening and closing... Back cover shall float spontaneously when the rewind knob is pulled up. There shall be no remarkable play when back cover is closed.                                                                                                                                                                                                    |
|                           | Pressure plate                                                                                                                                                                                                                                                                                                                                    | There shall be no distortion, protrusion, concave, foreign matter attachments, etc.                                                                                                                                                                                                                                                                            |
|                           | Battery chamber                                                                                                                                                                                                                                                                                                                                   | Contact ..... There shall be no abrasion, corrosion, stains, etc.                                                                                                                                                                                                                                                                                              |
|                           | Compatibility with accessories                                                                                                                                                                                                                                                                                                                    | <ul style="list-style-type: none"> <li>● Interchangeability with Multi-Function Back (8744)<br/>...With 8744 installed, continuous shooting and camera control functions by 8744 shall be performed.</li> <li>● Interchangeability with Motor Drive 1 (8740) and Auto Winder G (8731-200)<br/>...With 8740 and 8743 installed, check the functions.</li> </ul> |
| Voltage regulations, etc. | <ul style="list-style-type: none"> <li>● Release lock voltage.....2.10 ± 0.15 V</li> <li>● LED light-off voltage .....2.40 ± 0.15 V</li> <li>● Current drain at LED lighting (at light measuring) ...12 mA or less</li> <li>● Leak current at main SW. ON .....10 μA or less</li> <li>● Leak current at main SW. OFF .....2 μA or less</li> </ul> |                                                                                                                                                                                                                                                                                                                                                                |

# TROUBLE-SHOOTING

## 1. Use of Trouble-shooting

This trouble-shooting chart describes symptoms and causes of troubles found on the camera side.

Even when trouble is found on the camera side, its cause is not always attributable to the malfunction of the camera in relation to the exchangeable lens, winder, motor drive and exclusive flash. Therefore, use this trouble-shooting chart upon confirmation of trouble on the camera after checking combined performance with the accessories according to claim contents.

## 2. Description

1. This Trouble Shooting Chart is classified mainly into PART I and PART II, which can be used properly depending your desire.


### PART I

- Provides you with significant points of troubles (symptoms, causes), including contents for PART II.

### PART II

- Provides you with detailed trouble causes, including proper measures, adjustments, and check points etc.
  - Also provides you with checking method by YES-NO answering so that you can find out cause easily.
2. Trouble described here is due to a single case only. Trouble due to a plurality of causes should be checked collectively on the basis of the causes listed in this chart.

## 3. Repair Procedure (With no LEDs lighting, first see next page to check battery power.)

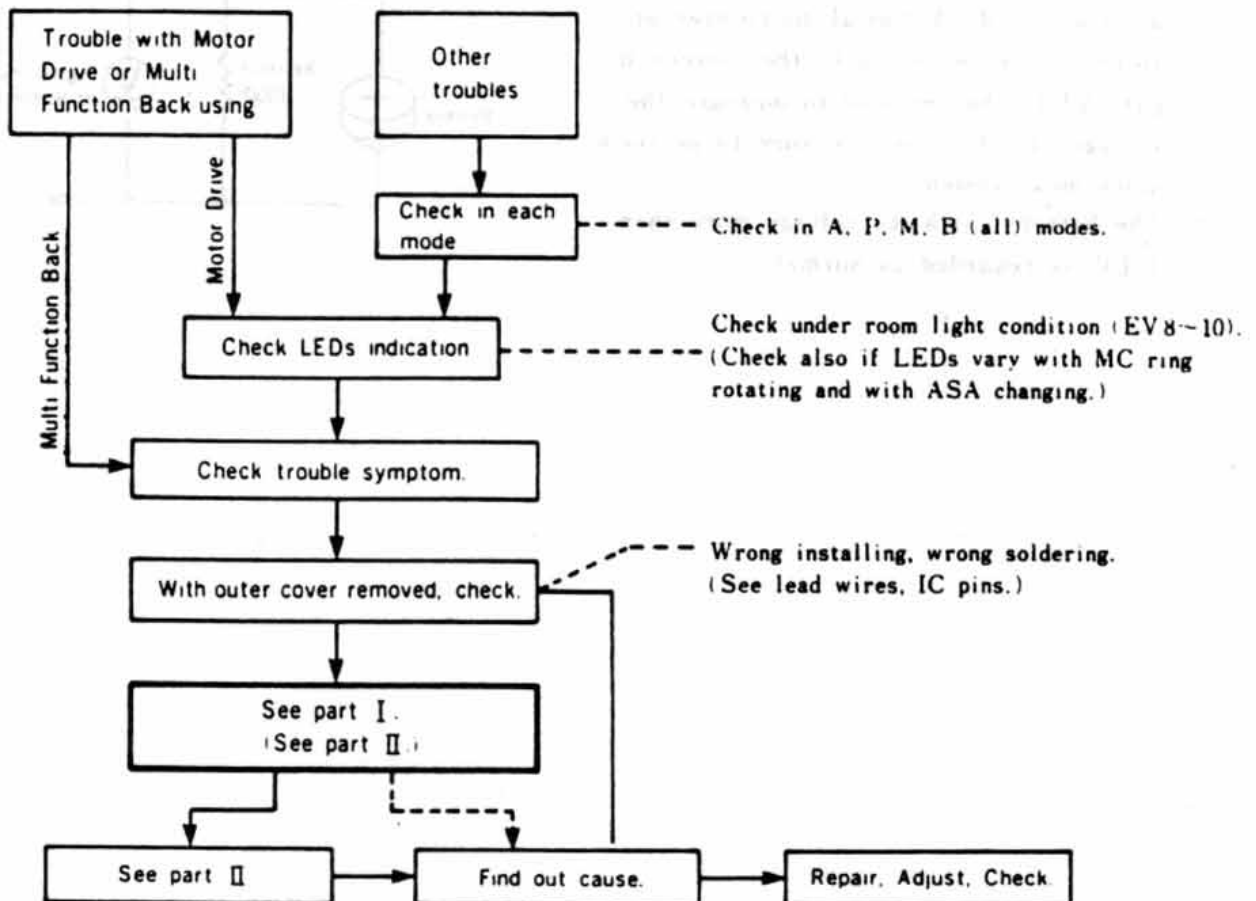

- In case that trouble symptom is not re-occurred.

In case that trouble symptom is not re-occurred when checking trouble with about 50-shutter-releasing before repair.


Find out cause against trouble symptom, which was pointed out by user, following PART 1, and check related parts.

## 4. Servicing Precautions

1. Check voltage using digital multi meter (but not necessarily when input impedance is more than  $10\text{M}\Omega$ ).
2. Use circuit tester whose voltage is 3V or less to check circuit connection.
3. Trouble is most unlikely to occur in electronic parts, such as ICs, diodes, transistors, resistors, and capacitors. Therefore, check the cause of trouble, with the focus on the defective soldering of lead wires and electrical parts, and switching contacts.
4. When checking soldered or plated parts, avoid pressing the parts or pulling lead wires unnecessarily.
5. Since voltage measuring parts are narrow, mount a pin or something similar at the tip of an alligator clip for measurement.
6. When measuring switching patterns, special care should be taken so that the patterns out-side switch operation are free from flaws. For switch contacts, measure their base, which is not directly affected by contact pressure.
7. Be sure to turn off the power switch before removing electrical parts (when a constant-voltage regulated power supply is used).
8. The ideal temperature range for the soldering iron tip is  $290^{\circ}\text{C}$  to  $310^{\circ}\text{C}$ . If the temperature is higher, however, perform soldering quickly. Also, be sure to clean the tip when soldering.

## 5. Battery Capacity Check

1. A  $100\Omega$  resistor is paralleled with the battery at normal temperature ( $25 \pm 2.5^{\circ}\text{C}$ ), as illustrated. A digital multimeter or voltmeter is connected to the battery in parallel to the resistor to measure the voltage. In this case, be sure to perform quick measurement.
2. The battery, with its voltage more than 1.1V, is regarded as normal.

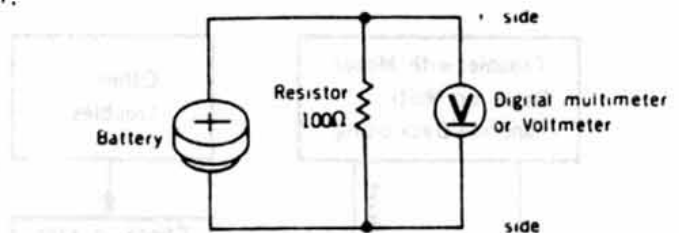



# INDEX

| <b>1 PART I</b>                                                    | <b>Page</b> |
|--------------------------------------------------------------------|-------------|
| 1. Shutter is not released .....                                   | 1           |
| 2. Shutter is released when returning the film advance lever ..... | 2           |
| 3. Shutter operation failure .....                                 | 2           |
| 4. F-stop operation failure .....                                  | 4           |
| 5. Self-timer operation failure .....                              | 4           |
| 6. AE lock .....                                                   | 4           |
| 7. Piezo buzzer .....                                              | 4           |
| 8. Shutter release lock .....                                      | 4           |
| 9. Viewfinder LEDs .....                                           | 5           |
| 10. Operation failure using exclusive flash (AEF 280PX) .....      | 6           |
| 11. Operation failure using Motor Drive 1 (MD-1) .....             | 6           |
| 12. Operation failure using Multi Function Back (MFB) .....        | 6           |
| 13. Electrical current leakage .....                               | 6           |

For light leakage, refer to P. 36~P. 37.

|                        |             |
|------------------------|-------------|
| <b>2 PART II</b> ..... | <b>7~37</b> |
|------------------------|-------------|

(To find the defective symptom/page, try it on PART I)

|                                                        |           |
|--------------------------------------------------------|-----------|
| <b>3</b> Checking procedure of Switches, Magnets ..... | <b>38</b> |
| <b>4</b> Switches function .....                       | <b>42</b> |
| <b>5</b> IC pin voltage .....                          | <b>43</b> |


■ Wiring Schematic Diagram

■ Substantial Circuit Diagram

■ Circuit Diagram

# U Trouble-shooting chart PART I

## 1. Shutter is not released.

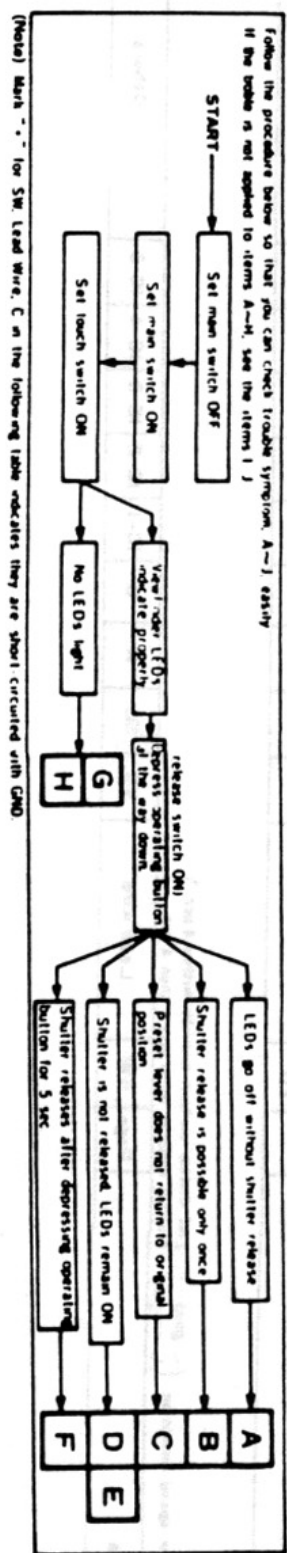

ABBREVIATIONS  
This P.C. board  
P.W.

Female P.C. board  
Printed Wiring

OTHERS  
For the symbols after page 1.  
P.W. (1, 2)..... Joint A, B.....  
(or A, B.....) means symbols on Wiring Schematic Diagram

| Symptom                                                                                                                                                                                                                                                                                                                     | Page | SW | Lead wire                                                   | VR | SL | R | C | IC-1 | IC-2 | IC-3   | IC-4 | IC-5  | Others                                                                                                                                                   |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|----|-------------------------------------------------------------|----|----|---|---|------|------|--------|------|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>① Shutter is not released in any mode.</b>                                                                                                                                                                                                                                                                               |      |    |                                                             |    |    |   |   |      |      |        |      |       |                                                                                                                                                          |
| <b>A</b><br>• Viewfinder LEDs light up properly with touch switch (S <sub>1</sub> ) ON<br>• After release switch (S <sub>2</sub> ) ON LEDs go off, and light up properly again with touch switch ON effect. ("Mirror steps up.")                                                                                            | 9    | 3  | 39(Orange)                                                  |    | 3  |   |   |      |      | 7      |      |       | Shutter mechanical failure (See P. 12)                                                                                                                   |
| <b>B</b><br>• Shutter is released only once each time changing main switch (S <sub>1</sub> ) ON-OFF-ON<br>• Viewfinder LEDs light up properly with touch switch (S <sub>2</sub> ) ON when winding up completely, but go off when releasing shutter.                                                                         | 9    | 4  | 17, 40(Yellow)                                              |    | 11 |   |   |      |      | 1      |      |       |                                                                                                                                                          |
| <b>C</b><br>• By release switch (S <sub>1</sub> ) ON, preset lever travels, but not return to original position.<br>• Viewfinder LEDs light up properly with touch switch (S <sub>2</sub> ) ON, and go off with release switch (S <sub>1</sub> ) ON. But they light up properly with touch switch ON after touch switch OFF | 9    |    | SL:3(Green)                                                 |    | 3  |   | 9 |      |      | 10     |      | 2, 11 | Joint R:disconnection                                                                                                                                    |
| <b>D</b><br>• Shutter can be released by remote control switch (S <sub>1</sub> )<br>• Viewfinder LEDs light up properly with touch switch ON, but remain ON even with release switch ON.                                                                                                                                    | 10   | 2  | 41(Green)<br>49(Grey)                                       |    |    |   |   |      |      |        |      |       |                                                                                                                                                          |
| <b>E</b><br>• Shutter is not released neither by release switch (S <sub>1</sub> ) ON nor by remote control switch (S <sub>2</sub> ) even with main switch (S <sub>1</sub> ) changing ON-OFF-ON<br>• Viewfinder LEDs light up properly with touch switch ON, but do not go off even with release switch.                     | 10   | 4  | • 17, • 40(Yellow)<br>53(Red), 54(Grey)                     |    | 20 |   |   |      |      | 2      |      |       | • Shutter mechanical failure. See P. 12)<br>• Q1: defect<br>• Shutter coil between connector P.C. board P.W. (D) and 45<br>• Flat P.W. (D) and top cover |
| <b>F</b><br>• Shutter is released when keeping operating button depressed for about 5 sec.<br>• Viewfinder LEDs light up when keeping operating button depressed for 2-3 sec.                                                                                                                                               | 10   |    |                                                             |    |    |   |   |      |      | 39, 39 |      |       | XL                                                                                                                                                       |
| <b>② Shutter is not released and no viewfinder LEDs light up in any mode.</b>                                                                                                                                                                                                                                               |      |    |                                                             |    |    |   |   |      |      |        |      |       |                                                                                                                                                          |
| <b>G</b><br>• Excessive current flows using D.C. power supply.<br>• Battery drains sharply.)                                                                                                                                                                                                                                | 11   |    | • 82, • 36, • 37, • 38<br>• 51, • 12-2, • 10, • 50<br>(Red) |    |    |   |   |      |      | 36, 37 |      |       |                                                                                                                                                          |
| <b>H</b><br>• Power is not supplied using D.C. power supply.                                                                                                                                                                                                                                                                | 11   | 6  | 39, 10(Red)<br>3, 1(Black)                                  |    |    |   |   |      |      | 37     |      | 1     | • Battery chamber: contact failure<br>• Joint V, Y, (D), J: disconnection                                                                                |
| <b>③ Others.</b>                                                                                                                                                                                                                                                                                                            |      |    |                                                             |    |    |   |   |      |      |        |      |       |                                                                                                                                                          |
| <b>I</b><br>• Shutter is not released continuously. (Needing 2-5 sec. for each shutter releasing)<br>• Viewfinder LEDs are normal.                                                                                                                                                                                          | 11   |    |                                                             |    |    |   |   |      |      |        |      | 12    |                                                                                                                                                          |
| <b>J</b><br>• Shutter is not released by remote control switch (S <sub>1</sub> ).<br>• (Normal operation with operating button depressing)<br>• Viewfinder LEDs are normal.                                                                                                                                                 | 11   | 13 | 41(Black)<br>47(Grey)                                       |    |    |   |   |      |      |        |      |       |                                                                                                                                                          |



2. Shutter is released when returning film advance lever.

| Symptom |                                                        | Page | SW          | Lead wire         | VR | SL | R | C | IC-1 | IC-2 | IC-3 | IC-4 | IC-5 | Others                                                                                                                              |
|---------|--------------------------------------------------------|------|-------------|-------------------|----|----|---|---|------|------|------|------|------|-------------------------------------------------------------------------------------------------------------------------------------|
| A       | Shutter is released when returning film advance lever. | 14   | * 2<br>* 11 | * 17, * 19 (Grey) |    |    |   |   |      |      |      |      |      | <ul style="list-style-type: none"> <li>* Remote control terminal shortcircuit</li> <li>* W, P, W shortcircuit with G, N1</li> </ul> |

3. Shutter operation failure L Low speed limitation (L: good..... 2nd shutter curtain travels within 4 sec. L: no good Shutter remains open more than 4 sec.)

| Symptom               |                                                                                                                                                                                                 | Page | SW  | Lead wire                                                                                    | VR            | SL     | R | C           | IC-1                 | IC-2 | IC-3 | IC-4 | IC-5 | Others                                                            |
|-----------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|-----|----------------------------------------------------------------------------------------------|---------------|--------|---|-------------|----------------------|------|------|------|------|-------------------------------------------------------------------|
| ① Shutter stays open. |                                                                                                                                                                                                 |      |     |                                                                                              |               |        |   |             |                      |      |      |      |      |                                                                   |
| A                     | (L: no good) Viewfinder LEDs are normal.                                                                                                                                                        | 14   |     | * S1 (White)                                                                                 |               |        |   | * 11        | 21                   |      | 20   |      |      | Printed wiring disconnection between IC-1 (P) and IC-3 (Q)        |
| B                     | (L: no good) Only "M" lights up for mode indication. "Δ" blinks for metered shutter speed.                                                                                                      | 14   |     |                                                                                              |               |        |   |             |                      | 16   |      |      |      | Joint (P) disconnection                                           |
| C                     | Shutter stays open unless touch switch (S.) OFF (finger off operating button) Viewfinder LEDs are normal.                                                                                       | 14   | * 3 | * 39 (Orange)<br>S16 (Blue)                                                                  |               | 24, 25 |   |             |                      |      |      |      |      | IC-6 (D) disconnection                                            |
| D                     | (L: good) Viewfinder LEDs are normal.                                                                                                                                                           | 15   |     |                                                                                              |               |        |   | * 5<br>* 6  | 17                   | 30   |      |      |      |                                                                   |
| E                     | (L: good) Shutter operates almost normal when LED shows 1/15-1/1000 sec. (Or slow shutter speed) (L: good) Under-range LED "∇" blinks in any mode, or slower shutter speed indicates in P mode. | 15   |     | * B, * 3 (Brown)<br>S1 (Purple) 15 (Orange)<br>S2, * 2 (Green)<br>S1 (Black) 22, * 25 (Blue) | 2, 10<br>4, 9 |        |   | 2, 17<br>12 | 8, 3, 1<br>6, 39 (4) |      |      |      |      | * U, or SFC-A cold soldering<br>* AV resistor VR, contact failure |
| G                     | (L: good) Under-range LED "∇" blinks in P, M, B modes (Normal in A mode)                                                                                                                        | 16   |     |                                                                                              |               |        |   | 2           |                      |      |      |      |      |                                                                   |
| H                     | (L: good) Under-range LED "∇" blinks in P mode (Normal in A, M, B modes)                                                                                                                        | 16   |     | * 29 (Grey)                                                                                  |               |        |   |             |                      |      | 17   |      |      |                                                                   |
| I                     | (L: good) Viewfinder LEDs are normal.                                                                                                                                                           | 16   |     |                                                                                              |               |        |   | 5           |                      |      |      |      |      |                                                                   |
| J                     | (L: good) Shutter stays open with AE locked. Viewfinder LEDs are normal                                                                                                                         | 16   |     | 39 (Grey)<br>4-21 (Black)                                                                    |               |        |   | 2           |                      |      | 19   |      |      |                                                                   |
| K                     | Shutter stays open occasionally or slower shutter speed. Viewfinder LEDs are normal.                                                                                                            | 16   |     |                                                                                              |               |        |   |             |                      |      |      |      |      | SL-2: excessive over-charge                                       |
| L                     | (L: good) Over-range LED "Δ" blinks in any mode.                                                                                                                                                | 16   |     |                                                                                              |               |        |   |             | 31, 33               |      |      |      |      | Joint (P) disconnection                                           |
| M                     | (AE is slightly over in A, P modes) (L: good) Under-range LED "∇" blinks, or slow shutter speed indicates in A, M, B modes. Viewfinder LEDs indicate slower shutter speed in P mode.            | 16   |     |                                                                                              |               |        |   |             |                      |      |      |      |      | Joint (C) disconnection                                           |
| N                     | (L: good) Viewfinder LEDs are normal.                                                                                                                                                           | 16   |     |                                                                                              | 1             |        |   |             |                      | 11   |      |      |      | * TV brush VR, contact failure<br>Joint (R) disconnection         |
| O                     | Shutter stays open at one of shutter speed settings. (L: good) Viewfinder LEDs are normal.                                                                                                      | 17   |     |                                                                                              | 1             |        |   |             |                      |      |      |      |      | * TV resistor VR, dirt<br>* TV brush deformation                  |



**Symptom**

**Page**

**SW**

**Lead wire**

**VR**

**SL**

**R**

**C**

**IC-1**

**IC-2**

**IC-3**

**IC-4**

**IC-5**

**Others**

**② Shutter curtains travel in high speed, or without slit.**

| Mode                  | Trouble without slit:                                                                                                       | 17 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------|----|-----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| A A P M B             | No viewfinder LEDs light up in any mode.                                                                                    | 17 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| B A P M B             | (Sometimes with slit) Over-range LED "Δ" blinks and mode indicator "M" lights up in any mode.                               | 17 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| C A P M B             | (Sometimes with slit) Viewfinder LEDs other than mode indicator do not light up.                                            | 17 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| D A P M B             | Viewfinder LEDs are normal.                                                                                                 | 17 | 6   |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| E A P M B             | (In A, P, M modes, for 1/20-1 sec. shutter operation approx. 20 ms slower.) Viewfinder LEDs are normal.                     | 18 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| Travel in high speed: |                                                                                                                             |    |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| F A P M B             | Viewfinder LEDs are normal.                                                                                                 | 18 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| G A P B               | Over-range LED "Δ" blinks or LEDs show faster shutter speed in any mode.                                                    | 18 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| H A P B               | Under-range LED "▽" blinks, or LEDs show slower shutter speed in A, M, B modes or in P mode LEDs show slower shutter speed. | 18 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| I A B                 | Mode indicator "M" lights up in A mode.                                                                                     | 18 | 5-3 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| J A B                 | Viewfinder LEDs are normal.                                                                                                 | 18 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| K P B                 | Under-range LED "▽" blinks only in P mode.                                                                                  | 19 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| L P B                 | Mode indicator "M" lights up in P mode.                                                                                     | 19 | 5-2 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| M B                   | Under-range LED "▽" blinks in any mode.<br>Full aperture in P mode.                                                         | 19 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| N B                   | Over-range LED "Δ" blinks in any mode.                                                                                      | 19 |     |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| O B                   | (Or 1 sec. shutter opening unnecessary) Viewfinder LEDs are normal.                                                         | 19 | 5-1 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

**③ Others**

| Mode  | (Partly shutter speed failure.)<br>Viewfinder LEDs are normal. <th>19</th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> <th></th> | 19 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|-------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| A M B | (Partly shutter speed failure.)<br>Viewfinder LEDs are normal.                                                                                                                                                                                                 | 19 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| B M B | Shutter speed 1/1000 and 1/500 sec. become 1 sec., and 1-1/250 sec. become 1/1000 sec.<br>Viewfinder LEDs are normal. (AE is error in A mode. Normal in P mode.)                                                                                               | 20 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| C M B | Shutter speed becomes slower under bright condition, faster under low light condition.<br>Viewfinder LEDs are normal. (AE is error in A, P modes.)                                                                                                             | 20 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

**④ Auto exposure error in A, P modes.**

| Mode    |          |    |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
|---------|----------|----|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|--|
| A A P B | AE error | 20 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |
| B A P B | AE under | 20 |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |  |

Joint U, W, X: disconnection

IC-9, 10, 11, 12: disconnection

ASA contact (VR<sub>1</sub>): contact failure  
SFC A, B: short-circuit with GND  
ASA contact (VR<sub>2</sub>): contact failure

Joint ①: disconnection

Joint ②: disconnection

Joint ③: disconnection

TV (VR<sub>1</sub>): brush deformation  
TV (VR<sub>2</sub>): resistor ball on (rear of resistor)  
TV (VR<sub>3</sub>): contact holder not strong installing

Refer to "Full aperture in A, P modes."  
Refer to "Full aperture in A, P modes."

#### 4. Diaphragm stop operation failure

| Symptom                                                                                                                                                                                                | Page | SW | Lead wire                                    | VR | SL   | R | C          | IC-1 | IC-2         | IC-3   | IC-4 | IC-5  | Others                                                            |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|----|----------------------------------------------|----|------|---|------------|------|--------------|--------|------|-------|-------------------------------------------------------------------|
| A Fall aperture in A, P, M, B modes.<br>Viewfinder LEDs are normal.                                                                                                                                    | 21   |    | SL-1(Green, White)<br>SL-2(Purple)           |    | 1, 2 |   | 10<br>- 10 |      | 5            | 36     |      | 10, 3 | IC-5, defect<br>Joint S, disconnection                            |
| B Fall aperture in P mode.<br>Viewfinder LEDs are normal.                                                                                                                                              | 21   |    | M(Orange)                                    |    |      | 3 |            |      | 23           |        |      |       |                                                                   |
| C F-stop does not function in P mode.<br>Viewfinder LEDs are normal.<br>Fall aperture under dark conditions (about EV7 or less).<br>Stop does not operate under bright conditions (about EV7 or more). | 22   |    | SL-2(Black, Brown)<br>SL-3(Orange) 2X(Black) |    | 2    |   | 8<br>- 3   |      | 25, 27<br>33 | 27, 33 |      | 9, 4  | F-stop also, BP (1/2),<br>disconnection<br>Joint T, disconnection |
| D Smaller aperture (about 2 EV) in P mode.<br>Viewfinder LEDs are normal.                                                                                                                              | 22   |    |                                              |    |      |   |            |      | 28           | 29     |      |       | Shortcircuit between A and P mode<br>P.W. on TV P.C. board        |
| E F-stop functions in A mode.<br>Mode indicator "A" lights up in P mode.                                                                                                                               | 22   |    |                                              |    |      |   |            |      |              |        |      |       |                                                                   |

#### 5. Self-timer operation failure

| Symptom                                                                     | Page | SW | Lead wire         | VR | SL | R | C | IC-1   | IC-2 | IC-3 | IC-4 | IC-5 | Others                                              |
|-----------------------------------------------------------------------------|------|----|-------------------|----|----|---|---|--------|------|------|------|------|-----------------------------------------------------|
| A Self-timer does not operate. (Self-timer does not delay shutter release.) | 23   | 10 | 2X(Blue)          |    |    |   |   |        |      | 17   |      |      | Self-timer plate: screw loosened                    |
| B Self-timer operates always.                                               | 23   | 10 | 2X(Blue)          |    |    |   |   |        |      |      |      |      |                                                     |
| C Self-timer operates without LED blinking.                                 | 23   |    | 3X(Black) 3X(Red) |    |    | 4 |   | 24, 25 |      | 15   |      |      | Self-timer LED: defect or cold soldering            |
| D Self-timer LED remains ON with main switch (S <sub>1</sub> ) ON.          | 23   |    | 2X(Black)         |    |    |   |   |        |      |      |      |      | C <sub>1</sub> -R and R <sub>1</sub> : shortcircuit |

#### 6. AE lock failure

| Symptom                                                                                                                          | Page | SW | Lead wire           | VR | SL | R | C | IC-1 | IC-2 | IC-3 | IC-4 | IC-5 | Others |
|----------------------------------------------------------------------------------------------------------------------------------|------|----|---------------------|----|----|---|---|------|------|------|------|------|--------|
| A Unlocked                                                                                                                       | 23   | 14 | 5X(Yellow)          |    |    |   |   |      |      | 11   |      |      |        |
| B AE remains locked.                                                                                                             | 23   | 14 | 5X(Yellow)          |    |    |   |   |      |      |      |      |      |        |
| C With AE locked (S <sub>1</sub> ON), shutter stays open in A, P modes.                                                          | 25   |    | 4-2(Black) 2X(Grey) |    |    |   | 2 |      | 19   |      |      |      |        |
| D With AE locked (S <sub>1</sub> ON), viewfinder LEDs indications is held and shutter speed varies according to light condition. | 25   |    |                     |    |    |   |   |      | 34   | 10   |      |      |        |

#### 7. Piezo buzzer failure

| Symptom                                                               | Page | SW | Lead wire         | VR | SL | R | C | IC-1 | IC-2 | IC-3 | IC-4 | IC-5 | Others                 |
|-----------------------------------------------------------------------|------|----|-------------------|----|----|---|---|------|------|------|------|------|------------------------|
| A No beeping for slow-shutter-speed warning for self-timer.           | 24   |    | BZ(Black) BZ(Red) |    |    |   |   |      |      | 8    |      |      | Joint ③: disconnection |
| B No beeping for slow-shutter-speed warning. (Normal for self-timer). | 24   |    |                   |    |    |   |   |      |      | 9    | 34   |      |                        |

#### 8. Shutter lock failure

| Symptom                                                       | Page | SW | Lead wire | VR | SL | R | C | IC-1 | IC-2 | IC-3 | IC-4 | IC-5 | Others |
|---------------------------------------------------------------|------|----|-----------|----|----|---|---|------|------|------|------|------|--------|
| A Viewfinder LEDs remain ON with 2.4 V, and OFF with 2.05 V.  | 24   |    |           |    |    |   |   | 22   |      | 19   |      |      |        |
| B Shutter lock does not operate with 2.05 V/locks with 1.4 V. | 24   |    |           |    |    |   |   | 23   |      | 18   |      |      |        |



### 9. Viewfinder LED indication failure (In case that other troubles (Shutter is not released, Shutter stays open, Shutter curtain travel is high) speed, or without set, Flash operates improperly) are accompanied refer to the related pages.

|                                | Symptom                                                                                                                                                                                                                    | Page | SW   | Lead wire             | VR | SL | R  | C | KC-1 | KC-2 | KC-3 | KC-4            | KC-5 | Others                     |
|--------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|------|-----------------------|----|----|----|---|------|------|------|-----------------|------|----------------------------|
| <b>① No lighting LED.</b>      |                                                                                                                                                                                                                            |      |      |                       |    |    |    |   |      |      |      |                 |      |                            |
| A                              | No LEDs light.                                                                                                                                                                                                             | 25   |      |                       |    |    |    |   |      |      |      | 9               |      | Insufficient battery power |
| B                              | No LEDs light with touch switch (S <sub>1</sub> ) ON.<br>o LEDs light up with release switch (S <sub>2</sub> ) ON after shutter release.                                                                                   | 25   | 0, 1 | 3K(Brown)             |    |    |    |   |      |      | 42   |                 |      |                            |
| C                              | o LEDs for external SS do not light up.<br>o LEDs indication and exposure-adjustment LED (+/-) indication are normal.                                                                                                      | 25   |      |                       |    | 11 |    |   |      |      | 41   | 23              |      |                            |
| D                              | Made indicators (A, M) do not light up.                                                                                                                                                                                    | 25   |      |                       |    | 9  |    |   |      |      |      |                 |      |                            |
| E                              | No LEDs light with touch switch of MD-1 ON.                                                                                                                                                                                | 25   |      | 7(Brown)              |    |    |    |   |      |      |      |                 |      | W: contact failure         |
| F                              | One of LEDs does not light up.                                                                                                                                                                                             | 26   | 8    | 6-11(Black) 2K(Green) |    |    | 10 |   |      |      |      | 1-4, 9<br>35-44 |      | J: lens A-Q disconnection  |
| <b>② LEDs remain lighting.</b> |                                                                                                                                                                                                                            |      |      |                       |    |    |    |   |      |      |      |                 |      |                            |
| A                              | LEDs remain ON with main switch (S <sub>0</sub> ) ON.                                                                                                                                                                      | 26   | 0, 1 | 7, 3K(Brown)          |    |    |    |   |      |      |      |                 |      |                            |
| B                              | o LEDs remain ON after touch switch (S <sub>1</sub> ) is ON.<br>o LEDs remain ON for 15 sec. after shutter release.<br>Exposure-adjustment LED (+/-) remains lighting with exposure-adjustment controller in "0" position. | 26   |      |                       |    | 7  | 13 |   |      |      |      |                 |      |                            |
| <b>③ With AEF 280PX used.</b>  |                                                                                                                                                                                                                            |      |      |                       |    |    |    |   |      |      |      |                 |      |                            |
| A                              | Made indicator "P" does not light up, "60" LED (an FDC) does not blink, and flash fires fully in flash P mode.                                                                                                             | 27   |      | 4K(Cray)              |    |    |    |   |      |      |      |                 |      | F: contact failure         |
| B                              | Made indicator "P" does not light up in flash P mode.                                                                                                                                                                      | 27   |      |                       |    |    |    |   | 28   |      |      | 29              |      |                            |
| C                              | With flash fully charged, X-type shutter speed does not change to 1/80 sec. automatically. (Metered SS LED remains ON. Flash fires with slower shutter speed than 1/80 sec.)                                               | 27   |      | 5K(White)             |    |    |    |   | 35   | 25   |      | 28              |      | F: contact failure         |
| <b>④ Others.</b>               |                                                                                                                                                                                                                            |      |      |                       |    |    |    |   |      |      |      |                 |      |                            |
| A                              | Viewfinder LEDs light up with touch switch (S <sub>1</sub> ) ON, even with main switch (S <sub>0</sub> ) OFF.                                                                                                              | 27   | 6    |                       |    |    |    |   |      |      |      |                 |      |                            |
| B                              | o Over-range LED "Δ" blinks in A, P, M, B modes.<br>o Made indication is normal.                                                                                                                                           | 27   |      |                       | 7  |    |    |   |      |      |      | 15              |      | J: lens M disconnection    |
| C                              | Viewfinder LEDs above about 1/2 EV slower shutter speed.                                                                                                                                                                   | 27   |      | 2L, 2K(Purple)        |    |    |    |   |      |      |      |                 |      |                            |
| Q                              | o Under-range LED "Δ" blinks in A, M, B modes.<br>o LEDs above 1/4-1/8 shutter speeds in P mode.                                                                                                                           | 28   |      | 2K(Blue)              |    |    |    |   |      |      |      |                 |      |                            |
| E                              | o Under-range LED "▽" blinks in A, M, B modes.<br>o Normal in P mode.                                                                                                                                                      | 28   |      |                       |    |    |    |   |      | 8    |      | 13              |      |                            |
| F                              | Made indicator "M" lights up, operating as A mode with A mode setting.                                                                                                                                                     | 28   |      |                       |    |    |    |   |      |      |      | 25              |      |                            |
| G                              | o Under-range LED "▽" blinks in P mode.<br>o LEDs light properly or slow slower shutter speed (about 1 EV) in A, M, B modes.                                                                                               | 28   |      |                       |    |    |    |   |      | 6    |      | 14              |      |                            |
| H                              | Made indicator "M" lights up, operating as P mode with P mode setting.                                                                                                                                                     | 28   |      |                       |    |    |    |   |      |      |      | 27              |      |                            |
| I                              | Made indicator "P" remains ON, set blinding, with setting other than minimum aperture in P mode.                                                                                                                           | 28   | 7-1  | 1K(Green)             |    |    |    |   |      |      |      | 24              |      |                            |
| J                              | Made indicator "P" blinks with minimum aperture setting in P mode.                                                                                                                                                         | 28   |      |                       |    |    |    |   |      |      |      |                 |      |                            |
| K                              | o Made indicator "P" remains ON, set blinding, with setting other than minimum aperture.<br>o Exposure-adjustment LED (+/-) does not light up.<br>o Metered SS LED does not change properly with ASA, aperture changing.   | 28   |      |                       |    |    |    |   |      |      | 14   | 28              |      |                            |



10. Operation failure using exclusive flash unit (AEF 280PX)

| Symptom                                                                                                                                           | Page | SW         | Lead wire                         | VR | SL       | R  | C | IC-1   | IC-2   | IC-3 | IC-4 | IC-5 | Others                                                                                                                |
|---------------------------------------------------------------------------------------------------------------------------------------------------|------|------------|-----------------------------------|----|----------|----|---|--------|--------|------|------|------|-----------------------------------------------------------------------------------------------------------------------|
| Flash does not fire. Shutter stays open.                                                                                                          | 29   | 11, 12     | 4, 44, (5) Purple                 |    |          |    |   |        |        |      |      |      | Hot shoe contact failure<br>Sync terminal defect                                                                      |
| Flash does not fire. Shutter stays open. Mode indicator and "60" LED (as FDC) blink at 2 Hz with flash charged completely.                        | 29   |            | 32, 34 (Black)                    |    |          |    |   |        |        |      |      |      |                                                                                                                       |
| Shutter operates without slit even though flash fires with "60" LED (as FDC) blinking.                                                            | 29   |            |                                   | 6  |          | 14 |   |        |        |      |      |      |                                                                                                                       |
| Always flash fires fully without blinking "60" LED (as FDC). (Time counter does not indicate normally, long when checking strobe level.)          | 29   |            | 2 (Black)<br>23, 26, 26 (Purple)  |    |          | 9  |   |        |        |      |      |      | SPC-B defect                                                                                                          |
| Always flash fires fully without blinking "60" LED (as FDC). Aperture stops down to minimum, without mode indicator "P" lighting in flash P mode. | 30   |            | 46, 48 (Grey)                     |    |          | 7  |   | 31     |        |      |      |      | F <sub>1</sub> contact failure                                                                                        |
| Flash firing is extremely short time. (Time counter indicates short.)                                                                             | 30   |            |                                   |    | 16<br>14 |    |   | 10, 11 | 40     |      |      |      | SPC-B shortcircuit                                                                                                    |
| "60" LED does not blink with flash fully charged. (Shutter speed does not change to 1/60 sec automatically.)                                      | 30   |            | 56, 56 (White)                    |    |          |    |   | 35     | 25     | 28   |      |      | F <sub>1</sub> contact failure                                                                                        |
| Always full aperture in flash P mode. Viewfinder LEDs are normal.                                                                                 | 30   |            |                                   | 8  | 2        | 22 |   | 35     | 20, 39 |      |      |      | SL-2: insufficient attraction                                                                                         |
| Apertures cannot be controlled properly in flash P mode. Viewfinder LEDs are normal.                                                              | 30   | 7-2<br>7-3 | 11 - 11 (Red)<br>14 - 14 (Yellow) |    |          |    |   | 12, 13 |        |      |      |      |                                                                                                                       |
| "60" LED (as FDC) does not blink. Always full aperture in flash P mode.                                                                           | 31   |            |                                   |    |          |    |   | 39     |        |      |      |      |                                                                                                                       |
| Flash firing is not controlled correctly.                                                                                                         | 31   |            | 6-3 (Black)                       |    |          |    |   |        |        |      |      |      | SPC-B shutter operation failure                                                                                       |
| Flash fires but with slow sync in A, P, M modes.                                                                                                  | 31   |            |                                   |    |          |    |   | 38     |        |      |      |      |                                                                                                                       |
| Flash firing is controlled automatically, blinking "60" LED (as FDC) in M mode.                                                                   | 31   |            |                                   |    |          |    |   |        |        |      |      |      | Joint ⊕ disconnection                                                                                                 |
| Mode indicator "P" does not indicate in flash P mode.                                                                                             | 31   |            |                                   |    |          |    |   | 28     |        | 29   |      |      |                                                                                                                       |
| Flash unit is not charged.                                                                                                                        | 31   | 12         | 63, 44, (5) Purple                |    |          |    |   |        |        |      |      |      | W: same polarity shortcircuit<br>P <sub>1</sub> and P <sub>2</sub> shortcircuit<br>B: poor electrical characteristics |

11. Operation failure using Motor Drive 1 (MD-1).

| Symptom                          | Page | SW | Lead wire     | VR | SL | R | C | IC-1 | IC-2 | IC-3 | IC-4 | IC-5 | Others                                                                                                                                                                 |
|----------------------------------|------|----|---------------|----|----|---|---|------|------|------|------|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Shutter is not released by MD-1. | 32   |    | 48 (Grey)     |    |    |   |   |      |      |      |      |      | W: contact failure                                                                                                                                                     |
| No LEDs light when using MD-1.   | 32   |    | 7 (Brown)     |    |    |   |   |      |      | 1    |      |      | W <sub>1</sub> : contact failure<br>W <sub>2</sub> : pin riveting failure<br>W <sub>3</sub> : rubber contact shortcircuit with CND<br>W <sub>4</sub> : contact failure |
| Winding is impossible by MD-1.   | 32   |    | 21, 21 (Blue) |    |    |   |   |      |      | 12   |      |      |                                                                                                                                                                        |

12. Operation failure using Multi Function Back (MFB).

| Symptom                                                               | Page | SW | Lead wire                              | VR | SL | R        | C | IC-1 | IC-2 | IC-3 | IC-4 | IC-5 | Others                                                                                                                                 |
|-----------------------------------------------------------------------|------|----|----------------------------------------|----|----|----------|---|------|------|------|------|------|----------------------------------------------------------------------------------------------------------------------------------------|
| Data is not imprinted.                                                | 32   |    | 38 - 30, 62 - 62 (White)<br>12-2 (Red) |    |    | 27<br>28 |   |      |      | 28   |      |      | Q <sub>1</sub> : defect or disconnection                                                                                               |
| Shutter is not released by MFB                                        | 32   |    | 21, 46 (Grey)                          |    |    |          |   |      |      |      |      |      | f <sub>1</sub> (Grey) and f <sub>2</sub> (Black): wrong soldering<br>f <sub>3</sub> (Blue) and f <sub>4</sub> (White): wrong soldering |
| Shutter is released when returning film advance lever, with MFB using | 33   |    |                                        |    |    |          |   |      |      |      |      |      | f <sub>5</sub> (Blue) and f <sub>6</sub> (White): wrong soldering                                                                      |
| Data is imprinted after 2nd shutter curtain travels completely.       | 33   |    |                                        |    |    |          |   |      |      |      |      |      | Circuit misoperation (Needing P.C. board C)                                                                                            |
| Data is imprinted by changing main switch ON-OFF-ON slowly.           | 33   |    |                                        |    |    |          |   |      |      |      |      |      |                                                                                                                                        |

13. Leak current trouble.

| Symptom                                                                         | Page | SW | Lead wire | VR | SL | R | C          | IC-1 | IC-2 | IC-3 | IC-4 | IC-5 | Others |
|---------------------------------------------------------------------------------|------|----|-----------|----|----|---|------------|------|------|------|------|------|--------|
| Battery drains sharply. (Excessive leak current)<br>Camera operation is normal. | 34   |    |           |    |    |   | 8, 9<br>10 |      |      |      |      |      |        |

## 2 Trouble-shooting chart PART II

### ■ Description of Trouble-Shooting Chart PART II

| Check items | Cause | Measures | Part position | Adjustment |
|-------------|-------|----------|---------------|------------|
| ●           | ●     | ●        | ●             | ●          |

※ 1

Checking method similar to conventional YES-NO system. Easy to find significant cause.

Description of general repairing methods other than cold-soldering/shortcircuit with lead wire.

● Against cold-soldering, absorb previous solder first, re-solder then.

※ 1

Normally, mentioned in the order of high frequency. Thick letters show the cause which needs special care.

※ 2

Defective parts positions are showed (coordinate) on Wiring Schematic Diagram.

※ 3

Description of required items of adjustment or checking after measures are taken.

※ 1 ● Flex P.W. number and joint part symbol, for voltage check, are the same as that on the Wiring Schematic Diagram.

● Voltage should be checked after winding up completely, with body connected to GND and metering switch ( $S_0$  or  $S_1$ ) turned ON.

※ 2 Find the part position by coordinate on the Wiring Schematic Diagram-D even though 4 Wiring Schematic Diagrams, A~D, are available.

(For the Wiring Schematic Diagram other than -D, symbol (A), (B), or (C) is described.)

※ 3 By numbers and symbols, find out the relevant adjustment items using the following table, perform the adjustment and checking referring Service Manual Repair Guide.



## ■ Items for adjustment, checking after defective parts repaired

- When replacing flex P.C. board set, perform the marked ( ) adjustment/checking in the A column.
- When replacing shutter block, perform the marked ( ) adjustment/checking in the B column.

| Number on adjustment column in the Symbol Trouble-Shooting Chart |   |        | Items for adjustment, checking                   | Page on Repair Guide |
|------------------------------------------------------------------|---|--------|--------------------------------------------------|----------------------|
| A                                                                | B | Number |                                                  |                      |
|                                                                  |   |        | <b>Body, winding unit</b>                        |                      |
|                                                                  |   | 1      | Sprocket gear positioning                        | 2                    |
|                                                                  |   | 2      | Winding gear positioning                         | 4                    |
|                                                                  |   | 3      | Film counter operation gear positioning          | 5                    |
|                                                                  |   | 4      | Reversion stop lever stop timing adjustment      | 4                    |
|                                                                  |   | 5      | Overrun eccentric pin adjustment                 | 6                    |
|                                                                  |   | 6      | Sprocket claw position check                     | 7                    |
|                                                                  |   | 7      | Reversion stop lever timing check                | 7                    |
|                                                                  |   | 8      | Winding operation lever timing check             | 7                    |
|                                                                  |   |        | <b>Shutter operation</b>                         |                      |
|                                                                  |   | 9      | Shutter gear position adjustment                 | 13                   |
|                                                                  |   | 10     | Shutter charge adjustment                        | 13                   |
|                                                                  |   | 11     | Shutter curtain position check                   | 35, 36               |
|                                                                  |   | 12     | Mirror magnet attraction check                   | 10                   |
|                                                                  |   | 13     | Release lock voltage check                       | 31                   |
|                                                                  |   | 14     | Synchro X time lag                               | 38                   |
|                                                                  |   |        | <b>Shutter speed</b>                             |                      |
|                                                                  |   | 15     | Curtain speed adjustment                         | 24, 38               |
|                                                                  |   | 16     | Manual SS adjustment                             | 24, 38               |
|                                                                  |   |        | <b>Auto exposure</b>                             |                      |
|                                                                  |   | 17     | Metering offset adjustment                       | 22                   |
|                                                                  |   | 18     | ASA inclination adjustment                       | 22                   |
|                                                                  |   | 19     | A-auto level adjustment                          | 25                   |
|                                                                  |   | 20     | Aperture magnet, release magnet attraction check | 10                   |
|                                                                  |   | 21     | Check of A mode and P mode (EE, SS)              | 30                   |
|                                                                  |   | 22     | Check of limits at high and low shutter speeds   | 31                   |
|                                                                  |   | 23     | Strobe level adjustment (strobe auto)            | 27                   |
|                                                                  |   | 24     | Bending point level adjustment (strobe auto)     | 29                   |
|                                                                  |   |        | <b>LED indication</b>                            |                      |
|                                                                  |   | 25     | MD lever position adjustment                     | 19                   |
|                                                                  |   | 26     | LED position adjustment                          | 20                   |
|                                                                  |   | 27     | LED indication adjustment                        | 26                   |
|                                                                  |   | 28     | LED OFF-voltage check                            | 31                   |
|                                                                  |   |        | <b>Viewfinder, focusing</b>                      |                      |
|                                                                  |   | 29     | Body back adjustment                             | 17                   |
|                                                                  |   | 30     | Finder back adjustment                           | 18                   |
|                                                                  |   | 31     | Mirror angle adjustment                          | 41                   |
|                                                                  |   | 32     | F No. infinder adjustment                        | 20                   |



# 1. Shutter is not released.

## ① Shutter is not released in any mode.

- A.** Viewfinder LEDs light up properly with touch switch ( $S_2$ ) ON. With release switch ( $S_1$ ) ON LEDs go off, and light up properly again with touch switch ON after changing main switch ( $S_4$ ) ON→OFF→ON. (Incl. "Mirror stays up".)


| Check items                                                               | Cause                                                      | Measures                                                                         | Part position | Adjustment |
|---------------------------------------------------------------------------|------------------------------------------------------------|----------------------------------------------------------------------------------|---------------|------------|
|                                                                           | Mechanical trouble                                         | See P. 12                                                                        |               |            |
| These causes are not applied to body whose circuit base plate B has IC-6. | $S_2$ : contact failure                                    | Clean $S_2$ , or replace wiring base plate set (0267) and trigger contact (2166) | M-3           | 16, 19, 27 |
|                                                                           | $P_{39}$ (Orange): disconnection<br>IC-3(7): disconnection | Replace shutter block.                                                           | K-3           | B          |

- B.** Shutter is released only once each time changing main switch ( $S_4$ ) ON→OFF→ON. Viewfinder LEDs light up properly with touch switch ( $S_2$ ) ON when winding up completely, but go off when releasing shutter.

| Check items | Cause                                                                                       | Measures                                                                         | Part position | Adjustment |
|-------------|---------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------|---------------|------------|
|             | $S_4$ : contact failure                                                                     | Clean adjust $S_4$ bending.<br>Adjust winding stop lever-A set (0312) operation. | E-1           |            |
|             | $P_{17}$ (Yellow), $P_{40}$ (Yellow): disconnection                                         |                                                                                  | E-2           |            |
|             | $R_{13}$ : disconnection (By depressing operating button quickly, shutter may be released.) |                                                                                  | H-3           |            |
|             | IC-3(3): disconnection                                                                      |                                                                                  |               |            |

- C.** By release switch ( $S_1$ ) ON, preset lever travels, but not return to original position. Viewfinder LEDs light up properly with touch switch ( $S_2$ ) ON, and go off with release switch ( $S_1$ ) ON. But they light up properly with touch switch ON after touch switch OFF.

| Check items                                                                                                    | Cause                                                                                                   | Measures                                                      | Part position | Adjustment |
|----------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|---------------------------------------------------------------|---------------|------------|
| Shutter is released when connecting lead wire (Green) of SL-3 with body (GND) by battery.<br>See figure below. | Yes<br>$C_7$ : cold soldering or shortcircuit or defect                                                 | Replace $C_7$ , or re-solder                                  | B-7           |            |
|                                                                                                                | No<br>Joint R: disconnection<br>IC-5(2) or (1): disconnection<br>IC-3(3): disconnection<br>IC-5: defect | Replace IC-5                                                  |               |            |
|                                                                                                                | SL-3 (0523): dirt or defect                                                                             | Clean attraction surface or replace mirror magnet set (0523). | N-4           | 20         |
|                                                                                                                | Lead wire (Green) of SL-3 (0523): disconnection                                                         | Re-solder or connect lead wire<br>Replace SL-3 (0523)         | M-4           | 20         |

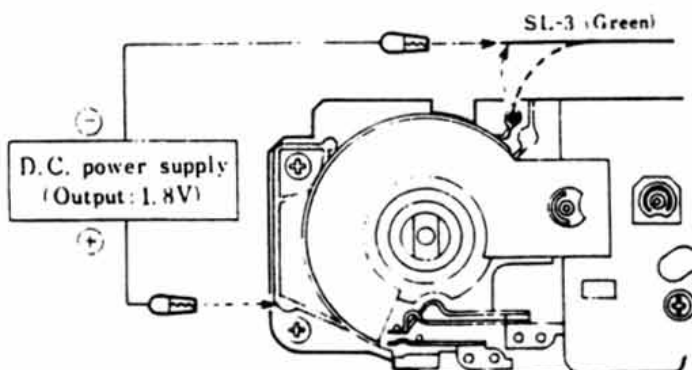

Disconnect SL-3 lead wire (Green), connect it to + end of DC power supply (output: 1.8 V).

Shutter releasing, when contacting + end of DC power supply to GND as shown in left figure after winding completion, means "YES".

**D.** Shutter can be released by remote control switch (S<sub>13</sub>). Viewfinder LEDs light up properly with touch switch ON, but remain ON even with release switch ON.

| Check items | Cause                                       | Measures                                    | Part position | Adjustment |
|-------------|---------------------------------------------|---------------------------------------------|---------------|------------|
|             | ℓ <sub>41</sub> (Green): disconnection      |                                             | K-6           |            |
|             | ℓ <sub>49</sub> (Grey): disconnection       |                                             | K-4           |            |
|             | S <sub>2</sub> : contact failure (See P.38) | Replace shutter dial base plate set (0274). | J-4           |            |

**E.** Shutter is not released neither by release switch (S<sub>2</sub>) ON nor by remote control switch (S<sub>13</sub>) even with main switch (S<sub>1</sub>) changing ON→OFF→ON. Viewfinder LEDs light up properly with touch switch ON, but do not go off even with release switch.

| Check items                                                                                                                         | Cause                                                                                                                                                                                                                                          | Measures                                                                                    | Part position                | Adjustment |
|-------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------|------------------------------|------------|
| Check voltage of flex P.W. ③ (ℓ <sub>17</sub> (Yellow)).<br>Winding completely<br>---1.5V or more<br>After shutter release<br>---0V | <b>Mechanical trouble</b><br>S <sub>4</sub> : remains ON. (See P.38)                                                                                                                                                                           | See P. 12<br>Adjust operation of winding stop lever A set (0312), bending of contact or so. | E-1                          |            |
|                                                                                                                                     | ℓ <sub>17</sub> (Yellow), ℓ <sub>49</sub> (Yellow) and GND: shortcircuit<br>Lead wire (White) of SL-1 and ℓ <sub>17</sub> (Yellow) shortcircuit<br>Flex P.W. ③ and top cover: shortcircuit (With top cover removed, camera operates normally.) | Re-solder or replace connecting P.C. board (0425).<br>Re-solder or stick isolation tape.    | D-5<br>E-2<br>D-5            |            |
| Only for body with P.C. board A employed.                                                                                           | IC-3(2): disconnection<br>ℓ <sub>53</sub> (Red): disconnection<br>ℓ <sub>54</sub> (Grey): disconnection<br>Q <sub>3</sub> : cold soldering or defect<br>R <sub>20</sub> : cold soldering or defect                                             |                                                                                             | ©I-6<br>©J-6<br>©I-5<br>©J-5 |            |

**F.** Shutter is released when keeping operating button depressed for about 5 sec. Viewfinder LEDs light up when keeping operating button depressed for 2~3 sec.

| Check items | Cause                                   | Measures    | Part position | Adjustment |
|-------------|-----------------------------------------|-------------|---------------|------------|
|             | XL legs: cold soldering or shortcircuit |             | I-7           |            |
|             | XL: defect                              | Replace XL. | I-7           |            |
|             | IC-3(2) or (3): disconnection           |             |               |            |





② Shutter is not released and no viewfinder LEDs light up in any mode.

G. Excessive current flows using DC power supply. (Battery drains sharply.)

| Check items                                                                     | Cause                                                | Measures | Part position | Adjustment |
|---------------------------------------------------------------------------------|------------------------------------------------------|----------|---------------|------------|
| Excessive current flows with S <sub>6</sub> ON. (Normal in OFF position)        | Shortcircuit between GND and lead wire (Red) of BZ   |          | J- 8          |            |
|                                                                                 | Shortcircuit between GND and P <sub>36</sub> (Red)   |          | L- 3          |            |
|                                                                                 | Shortcircuit between GND and P <sub>37</sub> (Red)   |          | K- 4          |            |
|                                                                                 | Shortcircuit between GND and P <sub>38</sub> (Red)   |          | H- 1          |            |
|                                                                                 | Shortcircuit between GND and P <sub>33</sub> (Red)   |          | ⒸI- 6         |            |
|                                                                                 | Shortcircuit between GND and P <sub>10</sub> (Red)   |          | A- 3          |            |
| Excessive current flows with S <sub>6</sub> ON. (Normal with S <sub>4</sub> ON) | Shortcircuit between GND and P <sub>12-2</sub> (Red) |          | G- 7          |            |
|                                                                                 | Shortcircuit between GND and P <sub>58</sub> (Red)   |          | ⒷG- 7         |            |
|                                                                                 | IC-1 (Ⓐ) and (Ⓓ): disconnection                      |          |               |            |

H. Power is not supplied using DC power supply.

| Check items                                                       | Cause                                                                      | Measures                                                  | Part position | Adjustment |  |
|-------------------------------------------------------------------|----------------------------------------------------------------------------|-----------------------------------------------------------|---------------|------------|--|
| Check voltage between lead wire (Red) of SL-4 (P.W. Ⓓ) and GND 3V | Contact failure in battery chamber<br>P <sub>38</sub> (Red): disconnection | Clean contact or replace.<br>Battery case base plate set. | H- 1          |            |  |
|                                                                   |                                                                            |                                                           |               |            |  |
| Check voltage of LED P.C. board P.W. Ⓓ 0V                         | P <sub>10</sub> (Red): disconnection                                       |                                                           |               |            |  |
|                                                                   |                                                                            |                                                           |               |            |  |
| Check voltage of C <sub>4</sub> (GND) 0V                          | S <sub>6</sub> : contact failure (See P. 39)                               | Clean and adjust S <sub>6</sub> .                         | M- 6          |            |  |
|                                                                   | Joint Y: disconnection                                                     |                                                           |               |            |  |
|                                                                   | Joint Ⓓ: disconnection                                                     |                                                           |               |            |  |
|                                                                   | Joint Ⓔ: disconnection                                                     |                                                           |               |            |  |
| Check voltage of C <sub>4</sub> (GND) 0V                          | P <sub>3</sub> (Black): disconnection<br>Joint Ⓔ: disconnection            |                                                           | A- 4          |            |  |
|                                                                   |                                                                            |                                                           |               |            |  |
|                                                                   |                                                                            |                                                           |               |            |  |
| Check voltage of C <sub>4</sub> (GND) 0V                          | IC-5 (Ⓙ): disconnection                                                    |                                                           |               |            |  |
|                                                                   | IC-3 (Ⓚ): disconnection                                                    |                                                           |               |            |  |

③ Others.

I. Shutter is not released continuously. (Needing 2~5 sec. for next shutter releasing). Viewfinder LEDs are normal.

| Check items | Cause                   | Measures | Part position | Adjustment |
|-------------|-------------------------|----------|---------------|------------|
|             | IC-5 (Ⓙ): disconnection |          |               |            |

J. Shutter is not released by remote control switch (S<sub>13</sub>). (Normal operation with operating button depressing). Viewfinder LEDs are normal.

| Check items | Cause                                         | Measures                           | Part position | Adjustment |
|-------------|-----------------------------------------------|------------------------------------|---------------|------------|
|             | S <sub>13</sub> : contact failure (See P. 40) | Clean or replace S <sub>13</sub> . | F- 6          |            |
|             | P <sub>47</sub> (Grey): disconnection         |                                    | E- 6          |            |
|             | P <sub>4</sub> (Black): disconnection         |                                    | F- 6          |            |



## ■ Shutter mechanism failure (Shutter is not released)

A. When returning film advance lever after winding completion, shutter curtains also return to original position (uncharged position).

| Check items | Cause                                  | Measures                | Part position | Adjustment |
|-------------|----------------------------------------|-------------------------|---------------|------------|
|             | Under-charge                           | Adjust shutter charging |               | 10         |
|             | Winding shaft (0338): riveting loosens | Replace winding shaft   |               |            |

B. Shutter curtain does not travel completely (metal part is visible).


| Check items                                                                                         | Cause                                                     | Measures              | Part position | Adjustment |
|-----------------------------------------------------------------------------------------------------|-----------------------------------------------------------|-----------------------|---------------|------------|
| Shutter curtains cannot be travelled completely. Next winding is possible after 2nd curtain pushed. | Yes → 2nd shutter curtain cannot be travelled completely. | See *1 on next page.  |               |            |
|                                                                                                     | Ribbon: disengagement                                     | See *2 on next page.  |               |            |
|                                                                                                     | Ribbon: catching                                          | See *2 on next page.  |               |            |
| No →                                                                                                | 1st shutter curtain brake: defect                         | Replace shutter block |               | B          |

C. Charge coupler does not return with winding completion.

| Check items | Cause                                          | Measures             | Part position | Adjustment |
|-------------|------------------------------------------------|----------------------|---------------|------------|
|             | Winding operation lever set operation failure. | See *3 on next page. |               | 7, 8       |



D. Others

| Check items      | Cause                                                           | Measures                                                   | Part position | Adjustment       |
|------------------|-----------------------------------------------------------------|------------------------------------------------------------|---------------|------------------|
| Mirror stays up. | SL-3: insufficient attraction                                   | Clean attraction surface, or replace SL-3.                 | N-4           | 12               |
|                  | Charge lever (3010): bending                                    | Adjust or replace.                                         |               |                  |
|                  | Charge lever: disengagement from charge lever roller (9443).    | Adjust or replace charge lever, or charge lever roller.    |               |                  |
|                  | Mirror holder set: riveting pin is out of position.             | Replace mirror holder.                                     |               | 30, 31<br>19, 21 |
|                  | Mirror holder: foreign part in it.                              | Remove foreign part.                                       |               | 30, 31<br>19, 21 |
|                  | MP return lever set (0256): stopping failure (See figure below) | Adjust 0256 looseness, or replace 0256, or mirror box set. |               | 30, 31<br>19, 21 |
|                  | MP return lever: looseness of riveted shaft (See figure below)  | Replace mirror box set.                                    |               | 30, 31<br>19, 21 |

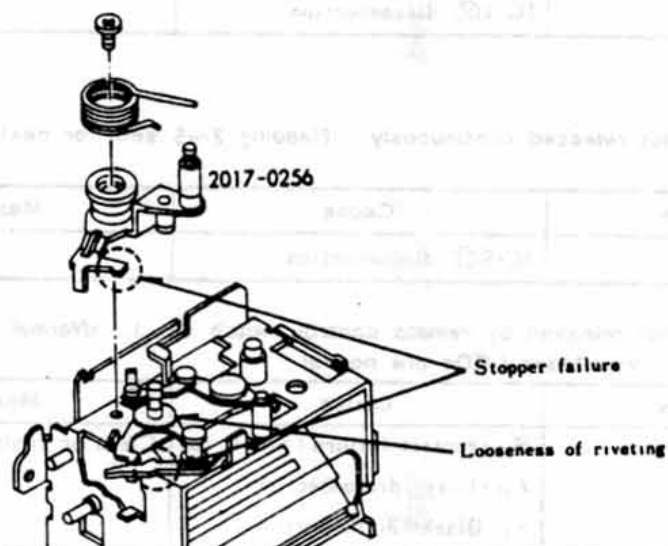


※ 1. 2nd curtain does not travel completely.

- Use 3 washers (t=0.2mm) between front base plate and shutter block installing position to prevent the catching of MP return lever shaft and shutter cover plate.
- Stick the shutter light shield plate as illustrated because there is possibility of light leakage when using washers.

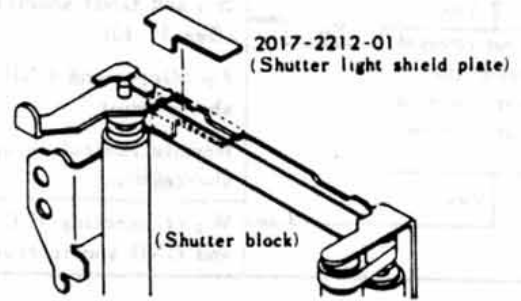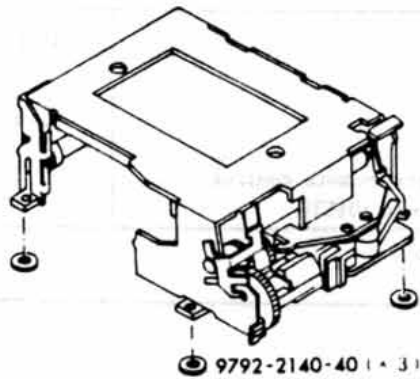


※ 2. Disengagement or catching of shutter ribbon.

- Replace with new shutter block, however, repair as following method for minor trouble.
- Use ribbon guide plate-B to prevent the 1st curtain catching with 2nd curtain shutter gear.

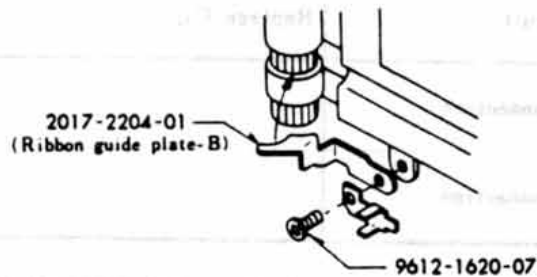

※ 3. Measures against operation failure of winding operation lever.

- Clean the winding operation lever and the holder.
- Adjust the spring (3416) shape or replace it.

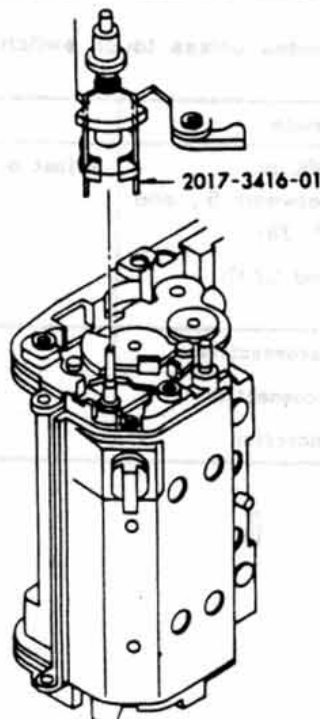



## 2. Shutter is released when returning film advance lever.

### A. Shutter is released when returning film advance lever.

| Check items                                                                                             | Cause                                                                                    | Measures                                    | Part position | Adjustment |
|---------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------|---------------------------------------------|---------------|------------|
| Shutter is not released when returning film advance lever with $\ell_{46}$ (Grey) on flex disconnected. | No → $\ell_{46}$ (Grey) and GND: shortcircuit<br>$S_2$ and GND: shortcircuit (See P. 38) | Replace shutter dial base plate set (0274). | K-4           |            |
|                                                                                                         | Yes →                                                                                    |                                             |               |            |
| Shutter is not released when returning film advance lever flex with $\ell_{47}$ (Grey) on disconnected. | No → $S_{13}$ and GND: shortcircuit (See P. 40)                                          | Replace remote control terminal (0153).     | E-6           | E-6        |
|                                                                                                         | Yes → $\ell_{47}$ (Grey) and GND: shortcircuit                                           |                                             |               |            |
|                                                                                                         | Yes → Remote control terminal: shortcircuit                                              |                                             |               |            |
|                                                                                                         | $W_2$ (connecting P.C. board) and GND: shortcircuit                                      | Re-solder.                                  |               |            |

## 3. Shutter operation failure.

### ① Shutter stays open.

#### A. Shutter stays open in A, P, M, B modes. (L: no good) Viewfinder LEDs are normal.

| Check items                | Cause                                                                                       | Measures                                       | Part position | Adjustment |
|----------------------------|---------------------------------------------------------------------------------------------|------------------------------------------------|---------------|------------|
| Check battery consumption. | While metering (with $S_8$ ON)<br>About 21.5 mA → $\ell_{51}$ (White) and GND: shortcircuit | Replace $C_{11}$ .                             | L-5           |            |
|                            | → $C_{11}$ : shortcircuit                                                                   |                                                | G-4           |            |
|                            | While metering (with $S_8$ ON)<br>About 9~13.5 mA (normal) →                                | IC-1 ①: disconnection<br>IC-3 ②: disconnection |               |            |

#### B. Shutter stays open in A, P, M, B modes. (L: no good) Only "M" lights up for mode indication. "Δ" blinks for metered shutter speed.

| Check items | Cause                                           | Measures | Part position | Adjustment |
|-------------|-------------------------------------------------|----------|---------------|------------|
|             | Joint E: disconnection<br>IC-2 ③: disconnection |          |               |            |

#### C. Shutter stays open in A, P, M, B modes unless touch switch ( $S_9$ ) OFF: finger off operating button. Viewfinder LEDs are normal.

| Check items                                       | Cause                                                                                              | Measures                  | Part position | Adjustment |
|---------------------------------------------------|----------------------------------------------------------------------------------------------------|---------------------------|---------------|------------|
|                                                   | $S_3$ remains ON, or shortcircuit between $S_3$ and GND. (See P. 38)                               | Adjust or replace $S_3$ . | M-3           | 16, 19     |
|                                                   | $\ell_{39}$ (Orange) and GND: shortcircuit                                                         |                           | K-3           |            |
| Only for body with circuit base plate B employed. | $R_{24}$ or $R_{25}$ : disconnection<br>$\ell_{38}$ (Blue): disconnection<br>IC-6 ④: disconnection |                           | ⓑ G-7         |            |



**D. Shutter stays open in A, P, M modes. (L: good) Viewfinder LEDs are normal.**

| Check items                                                                  | Cause                                                            | Measures                 | Part position | Adjustment |
|------------------------------------------------------------------------------|------------------------------------------------------------------|--------------------------|---------------|------------|
| Check voltage of C <sub>5</sub> + 0.9~1.35 V with S <sub>2</sub> ON (normal) | Yes → C <sub>4</sub> or C <sub>5</sub> : disconnection or defect | Re-solder or replace.    | G-6           | 19, 27     |
|                                                                              | C <sub>4</sub> : shortcircuit                                    | Replace C <sub>4</sub> . | F-8           | 19, 27     |
|                                                                              | IC-1 ⑰: disconnection                                            |                          |               |            |
|                                                                              | IC-2 ⑳: disconnection                                            |                          |               |            |
| No →                                                                         |                                                                  |                          |               |            |

**E. Shutter stays open in A, P, M modes. (L: good) (But shutter operates almost normal when LED shows 1/15~1/1000 sec.) Viewfinder LEDs are normal.**

| Check items | Cause                   | Measures                 | Part position | Adjustment |
|-------------|-------------------------|--------------------------|---------------|------------|
|             | C <sub>4</sub> : defect | Replace C <sub>4</sub> . | F-8           | 19, 27     |
|             | C <sub>5</sub> : defect | Replace C <sub>5</sub> . | G-6           | 19, 27     |

**F. Shutter stays open or slow shutter speed in A, P modes. (L: good) Under-range LED "▽" blinks in any mode, or slower shutter speed indicates in P mode.**

| Check items                                           | Cause                                                                  | Measures                                           | Part position | Adjustment |
|-------------------------------------------------------|------------------------------------------------------------------------|----------------------------------------------------|---------------|------------|
| Check voltage of C <sub>4</sub> +                     | 0.05 V or less → VR <sub>10</sub> : disconnection or contact failure   | Re-solder or replace VR <sub>10</sub> .            | G-6           | 18, 19, 27 |
|                                                       | ℓ <sub>8</sub> (Brown) and GND: shortcircuit                           |                                                    | E-4           |            |
|                                                       | ℓ <sub>9</sub> (Brown) and GND: shortcircuit                           |                                                    | E-8           |            |
|                                                       | IC-1 ⑧: shortcircuit                                                   |                                                    |               |            |
| 0.05~0.12 V →                                         | VR <sub>4</sub> : disconnection or contact failure                     | Re-solder or replace VR <sub>4</sub> .             | F-7           | 19, 27     |
|                                                       | IC-1 ③ or ④: disconnection                                             |                                                    |               |            |
| 2.0 V or more →                                       | IC-1 ⑥: disconnection                                                  |                                                    |               |            |
|                                                       | 0.12~2.0 V →                                                           |                                                    |               |            |
| Check voltage of Q <sub>2</sub> collector About 55 mV | No → ℓ <sub>25</sub> (Purple): disconnection                           |                                                    | G-8           |            |
|                                                       | ℓ <sub>32</sub> (Green): disconnection or shortcircuit with GND        |                                                    | J-9           |            |
|                                                       | Q <sub>2</sub> : disconnection of emitter or collector                 | Re-solder.                                         | I-9           |            |
|                                                       | Q <sub>2</sub> and GND: shortcircuit                                   | Re-solder.                                         | I-9           |            |
|                                                       | Q <sub>2</sub> : defect                                                | Replace                                            | I-9           |            |
|                                                       | R <sub>2</sub> : defect or disconnection                               | Re-solder or replace.                              | I-9           |            |
|                                                       | IC-1 ⑲: disconnection                                                  |                                                    |               |            |
|                                                       | Yes → AV (VR <sub>2</sub> ): contact failure or shortcircuit with GND. | Clean AV (VR <sub>2</sub> ), re-solder, or adjust. | H-2           | 19, 27     |
|                                                       | ℓ <sub>15</sub> (Orange): disconnection                                |                                                    | C-8           |            |
|                                                       | ℓ <sub>1</sub> (Black): disconnection                                  |                                                    | G-8           |            |
|                                                       | SPC-A: cathode disconnection or defect                                 | Re-solder or replace.                              | H-9           | 19, 27     |
|                                                       | SPC-A: shortcircuit between anode and cathode                          | Re-solder.                                         | H-9           |            |
|                                                       | ℓ <sub>22</sub> (Blue): disconnection or shortcircuit with GND         |                                                    | E-2           |            |
| R <sub>17</sub> : disconnection                       |                                                                        | H-9                                                |               |            |
| C <sub>12</sub> : shortcircuit                        | Replace C <sub>12</sub> .                                              | G-7                                                |               |            |
| IC-1 ⑩: disconnection                                 |                                                                        |                                                    |               |            |

**G.** Shutter stays open in A, P modes. (L: good) Under-range LED "▽" blinks in P, M, B modes (Normal in A mode).

| Check items | Cause                                   | Measures   | Part position | Adjustment |
|-------------|-----------------------------------------|------------|---------------|------------|
|             | C <sub>2</sub> †: shortcircuit with GND | Re-solder. | H- 9          |            |

**H.** Shutter stays open in A, P modes (L: good). Under-range LED "▽" blinks in P mode (Normal in A, M, B modes).

| Check items | Cause                                                                   | Measures | Part position | Adjustment |
|-------------|-------------------------------------------------------------------------|----------|---------------|------------|
|             | ℓ <sub>29</sub> (Grey): shortcircuit with GND.<br>IC-2 ⑬: disconnection |          | H- 8          |            |

**I.** Shutter stays open in A, P modes (L: good). Viewfinder LEDs are normal.

| Check items | Cause                             | Measures             | Part position | Adjustment |
|-------------|-----------------------------------|----------------------|---------------|------------|
|             | C <sub>3</sub> legs: shortcircuit | Re-solder or adjust. | G- 6          |            |

**J.** Shutter stays open with AE locked in A, P modes. Viewfinder LEDs are normal.

| Check items | Cause                                   | Measures | Part position | Adjustment |
|-------------|-----------------------------------------|----------|---------------|------------|
|             | ℓ <sub>29</sub> (Grey): disconnection   |          | H- 8          |            |
|             | C <sub>2</sub> : disconnection          |          | H- 9          |            |
|             | ℓ <sub>h-2</sub> (Black): disconnection |          | I- 9          |            |
|             | IC-2 ⑭: disconnection                   |          |               |            |

**K.** Shutter stays open occasionaly or slower shutter speed in P mode. Viewfinder LEDs are normal.

| Check items | Cause                       | Measures                                   | Part position | Adjustment |
|-------------|-----------------------------|--------------------------------------------|---------------|------------|
|             | SL-2: excessive over-charge | Replace magnetic release base plate (0534) | D- 1          | 20         |

**L.** Shutter stays open in "M" mode. Over-range LED "△" blinks in any mode.

| Check items             | Cause                                 | Measures | Part position | Adjustment |
|-------------------------|---------------------------------------|----------|---------------|------------|
| Check voltage of IC-1 ⑩ | About 1.8 V → Joint ⑥: disconnection  |          |               |            |
|                         | 2.5 V or more → IC-1 ⑪: disconnection |          |               |            |
|                         | 0.2 V or less → IC-1 ⑫: disconnection |          |               |            |

**M.** Shutter stays open in M mode. (AE is slightly over in A, P modes). Under-range LED "▽" blinks, or slow shutter speed indicates in A, M, B modes. Viewfinder LEDs indicate slower shutter speed in P mode.

| Check items | Cause                  | Measures | Part position | Adjustment |
|-------------|------------------------|----------|---------------|------------|
|             | Joint ⑦: disconnection |          |               |            |

**N.** Shutter stays open in M mode. (L: good) Viewfinder LEDs are normal.

| Check items | Cause                                           | Measures                  | Part position | Adjustment |
|-------------|-------------------------------------------------|---------------------------|---------------|------------|
|             | TV contact (VR <sub>1</sub> ): contact failure. | Clean and adjust contact. | M- 7          | 16, 19     |
|             | Joint ⑧: disconnection                          |                           |               |            |
|             | IC-2 ⑮: disconnection                           |                           |               |            |



O. Shutter stays open at one of shutter speed settings in M mode. Viewfinder LEDs are normal.

| Check items | Cause                                | Measures                | Part position | Adjustment |
|-------------|--------------------------------------|-------------------------|---------------|------------|
|             | TV VR <sub>1</sub> : dirt on surface | Clean.                  | M-7           | 16, 19     |
|             | TV contact: deformation              | Adjust contact bending. | M-7           | 16, 19     |

② Shutter curtains travel in high speed, or without slit.

A. Shutter curtains travel without slit in A, P, M, B modes. No viewfinder LEDs light up in any mode.

| Check items                                   | Cause                                                                                                                                           | Measures                                    | Part position | Adjustment |
|-----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------|---------------|------------|
| Power is not supplied with S <sub>a</sub> ON. | Joint U disconnection<br>Joint W disconnection<br>Joint X disconnection<br>IC-5 5 disconnection<br>IC-5 8 disconnection<br>IC-3 5 disconnection |                                             |               |            |
| About 80 mA flows with S <sub>a</sub> ON.     | C- and top cover GND: shortcircuit                                                                                                              | Check top cover isolation sheet, re-solder. | H-7           | 23         |
| About 8 mA flows with S- OFF.                 | IC-3 Red and GND: shortcircuit                                                                                                                  |                                             | B 1-6         |            |

B. Shutter curtains travel without slit in A, P, M, B modes. Sometimes with slit. Over-range LED "Δ" blinks and mode indicator "M" lights up in any mode.

| Check items | Cause                                                                   | Measures | Part position | Adjustment |
|-------------|-------------------------------------------------------------------------|----------|---------------|------------|
|             | IC-2 2 <sup>+</sup> disconnection<br>IC-1 15 <sup>+</sup> disconnection |          |               |            |

C. Shutter curtains travel without slit in A, P, M, B modes. Sometimes with slit. Viewfinder LEDs other than mode indicator do not light up.

| Check items | Cause                             | Measures | Part position | Adjustment |
|-------------|-----------------------------------|----------|---------------|------------|
|             | IC-3 6 <sup>+</sup> disconnection |          |               |            |

D. Shutter curtains travel without slit in A, P, M, B modes. Viewfinder LEDs are normal.

| Check items                                                                         | Cause                                                                                                                                                                      | Measures                                            | Part position | Adjustment |
|-------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------|---------------|------------|
| Shutter stays open when releasing with flex P.W. 5-31 White shortcircuited with GND | No → 2nd curtain stopper: failure                                                                                                                                          | Replace shutter or 2nd curtain stop lever set 0229. |               | B          |
|                                                                                     | Shutter: under-charge                                                                                                                                                      | Adjust amount of shutter charge.                    |               | 10         |
| Yes ↓                                                                               | SL-4: dirt on attraction surface or defect                                                                                                                                 | Clean shutter magnet, or replace shutter.           | N-2           | B          |
|                                                                                     | f <sub>37</sub> Red: disconnection<br>f <sub>31</sub> White: disconnection                                                                                                 |                                                     | K-4<br>L-5    |            |
| Check voltage of IC-2 11 <sup>+</sup> at 1/30 shutter dial setting. About 1.2V      | No → S <sub>a</sub> contact failure                                                                                                                                        | Clean or adjust contact bending.                    |               |            |
|                                                                                     | TV contact: contact failure                                                                                                                                                | Clean or adjust contact bending.                    | M-7           | 16, 19     |
|                                                                                     | TV P.C. board: defect                                                                                                                                                      | Replace flex P.C. board set 0401.                   | M-7           | A          |
| Yes ↓                                                                               | IC-1 11 <sup>+</sup> , 13 <sup>+</sup> , 15 <sup>+</sup> : disconnection<br>IC-2 10 <sup>+</sup> : disconnection<br>IC-3 21 <sup>+</sup> , 23 <sup>+</sup> : disconnection |                                                     |               |            |



**E.** Shutter curtains travel without slit in A, P, M, B modes. (In A, P, M modes, for 1/30-1 sec shutter approx. 20ms slower.) Viewfinder LEDs are normal.

| Check items                                       | Cause                                   | Measures | Part position | Adjustment |
|---------------------------------------------------|-----------------------------------------|----------|---------------|------------|
| Only for body with circuit base plate B employed. | IC-1 (12): disconnection                |          | Ⓑ G-7         |            |
|                                                   | ℓ <sub>59</sub> (Red): disconnection    |          | Ⓑ H-7         |            |
|                                                   | ℓ <sub>57</sub> (Yellow): disconnection |          | K-7           |            |
|                                                   | ℓ <sub>39</sub> (Orange): disconnection |          | Ⓑ G-7         |            |
|                                                   | ℓ <sub>60</sub> (Black): disconnection  |          |               |            |
|                                                   | IC-6 (7): disconnection                 |          |               |            |
|                                                   | IC-6 (9): disconnection                 |          |               |            |
|                                                   | IC-6 (12): disconnection                |          |               |            |
|                                                   | IC-6 (13): disconnection                |          |               |            |

**F.** Shutter curtains travel in high speed in A, P, M modes. Viewfinder LEDs are normal.

| Check items | Cause                                    | Measures              | Part position | Adjustment |
|-------------|------------------------------------------|-----------------------|---------------|------------|
|             | C <sub>4</sub> : disconnection or defect | Re-solder or replace. | F-8           | 19, 21     |
|             | IC-1 (13): disconnection                 |                       |               |            |

**G.** Shutter curtains travel in high speed in A, P modes. Over-range LED "Δ" blinks or LEDs show faster shutter speed in any mode

| Check items                                                                                                                                                                                           | Cause                                                                                     | Measures                 | Part position | Adjustment |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|--------------------------|---------------|------------|
| <div style="border: 1px solid black; padding: 2px; display: inline-block;">Check voltage of IC-1 (6)</div><br><div style="margin-left: 20px;"> <p>→ About 2.8 V</p> <p>→ About 1.4 - 2.0 V</p> </div> | ASA contact (VR <sub>1</sub> ): contact failure                                           | Clean or adjust contact. | B-8           | 19, 21, 27 |
|                                                                                                                                                                                                       | ℓ <sub>9</sub> (Brown): disconnection                                                     |                          | E-8           |            |
|                                                                                                                                                                                                       | ℓ <sub>12</sub> (Red): disconnection                                                      |                          | D-8           |            |
|                                                                                                                                                                                                       | ℓ <sub>12</sub> (Red) and GND: shortcircuit (There is a possibility of LED "▽" blinking.) |                          | D-8           |            |
|                                                                                                                                                                                                       | IC-1 (5): disconnection                                                                   |                          |               |            |
|                                                                                                                                                                                                       | ℓ <sub>14</sub> (Orange): disconnection                                                   |                          | E-8           |            |
|                                                                                                                                                                                                       | ℓ <sub>1</sub> (Black) and GND: shortcircuit                                              |                          | G-8           |            |
|                                                                                                                                                                                                       | ℓ <sub>2</sub> (Black) and GND: shortcircuit                                              |                          | G-9           |            |
|                                                                                                                                                                                                       | Cathode of SPC-A and GND: shortcircuit                                                    |                          | H-9           |            |
|                                                                                                                                                                                                       | Cathode of SPC-B and GND: shortcircuit                                                    |                          | E-10          |            |
| SPC-B and SPC-B cover: shortcircuit                                                                                                                                                                   |                                                                                           | E-10                     |               |            |

**H.** Shutter curtains travel in high speed in A, P modes. Under-range LED "▽" blinks, or LEDs show slower shutter speed in A, M, B modes. In P mode LEDs show slower shutter speed.

| Check items | Cause                                           | Measures                     | Part position | Adjustment |
|-------------|-------------------------------------------------|------------------------------|---------------|------------|
|             | ASA contact (VR <sub>1</sub> ): contact failure | Clean or adjust ASA contact. | B-8           | 19, 21, 27 |
|             | ℓ <sub>4</sub> (Brown): disconnection           |                              | E-4           |            |
|             | ℓ <sub>14</sub> (Orange) and GND: shortcircuit  |                              | E-3           |            |
|             | ℓ <sub>15</sub> (Orange) and GND: shortcircuit  |                              | C-8           |            |

I. Shutter curtains travel in high speed in A mode. Mode indicator "M" lights up in A mode.

| Check items | Cause                                                                    | Measures                 | Part position | Adjustment |
|-------------|--------------------------------------------------------------------------|--------------------------|---------------|------------|
|             | S <sub>5-1</sub> : contact failure (See P. 38)<br>Joint ①: disconnection | Clean or adjust contact. | N-6           |            |

J. Shutter curtains travel in high speed in A mode. Viewfinder LEDs are normal.

| Check items | Cause                | Measures | Part position | Adjustment |
|-------------|----------------------|----------|---------------|------------|
|             | IC-2④: disconnection |          |               |            |

K. Shutter curtains travel in high speed in P mode. Under-range LED "▽" blinks only in P mode.

| Check items | Cause                | Measures | Part position | Adjustment |
|-------------|----------------------|----------|---------------|------------|
|             | IC-2③: disconnection |          |               |            |

L. Shutter curtains travel in high speed in P mode. Mode indicator "M" lights up in P mode.

| Check items | Cause                                                                    | Measures                 | Part position | Adjustment |
|-------------|--------------------------------------------------------------------------|--------------------------|---------------|------------|
|             | S <sub>5-2</sub> : contact failure (See P. 38)<br>Joint ②: disconnection | Clean or adjust contact. | M-6           |            |

M. Shutter curtains travel in high speed in M mode. Under-range LED "▽" blinks in any mode.  
(Full aperture in P mode.)

| Check items | Cause                                                                                               | Measures                                                | Part position | Adjustment |
|-------------|-----------------------------------------------------------------------------------------------------|---------------------------------------------------------|---------------|------------|
|             | VR <sub>3</sub> : disconnection (contact failure)<br>Joint ④: disconnection<br>IC-1⑩: disconnection | Re-solder, clean or replace flex P.C. board set (0401). | M-7           | A          |

N. Shutter curtains travel in high speed in M mode. Over-range LED "△" blinks in any mode.

| Check items | Cause                                                | Measures   | Part position | Adjustment |
|-------------|------------------------------------------------------|------------|---------------|------------|
|             | VR <sub>7</sub> : the both ends are short-circuited. | Re-solder. |               | 27         |

O. Shutter curtains travel in high speed (or 1 sec. shutter opening occasionaly) in B mode. Viewfinder LEDs are normal.

| Check items | Cause                                                                                            | Measures                 | Part position | Adjustment |
|-------------|--------------------------------------------------------------------------------------------------|--------------------------|---------------|------------|
|             | S <sub>5-1</sub> : contact failure (See P. 38)<br>Joint ③: disconnection<br>IC-3④: disconnection | Clean or adjust contact. | M-6           |            |


### ③ Others.

A. Partly shutter speed failure in M mode. Viewfinder LEDs are normal.

| Check items | Cause                                | Measures                                                | Part position | Adjustment |
|-------------|--------------------------------------|---------------------------------------------------------|---------------|------------|
|             | TV contact (VR-1): deformation       | Adjust contact or replace TV contact holder set (0404). | M-7           | 16, 19, 27 |
|             | TV resistor (resistor value): defect | Replace flex P.C. board set (0401).                     | M-7           | A          |



**B.** Shutter speed 1/1000 and 1/500 sec. become 1 sec., and 1-250 sec. become 1/1000 sec. in M mode. Viewfinder LEDs are normal. (AE is over in A mode. Nomal in P mode.)
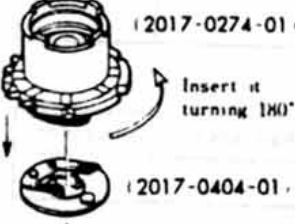
| Check items                                                                       | Cause                                           | Measures         | Part position | Adjustment |
|-----------------------------------------------------------------------------------|-------------------------------------------------|------------------|---------------|------------|
|  | TV contact holder set (0404) : wrong installing | See left figure. |               | 16. 19. 27 |

**C.** Shutter speed becomes slower under bright conditions, faster under low light condition in M mode. Viewfinder LEDs are normal. (AE is over in A, P modes.)

| Check items | Cause                                            | Measures | Part position | Adjustment |
|-------------|--------------------------------------------------|----------|---------------|------------|
|             | IC-1 ⑤ : disconnection<br>IC-2 ④ : disconnection |          |               |            |

**③ Auto exposure error in A, P modes.**

**A. AE over in A, P modes.**

| Check items | Cause                                           | Measures                                     | Part position | Adjustment |
|-------------|-------------------------------------------------|----------------------------------------------|---------------|------------|
|             | Adjustment failure                              | Readjust following "Repair Guide" P.21~P.25. |               |            |
|             | F <sub>15</sub> (Orange): disconnection         |                                              | C-8           |            |
|             | VR <sub>4</sub> : disconnection                 |                                              | F-7           | 19. 27     |
|             | VR <sub>9</sub> by IC-1 ② : disconnection       |                                              | Ⓐ F-7         |            |
|             | VR <sub>9</sub> : contact failure               | Clean or replace VR <sub>9</sub> .           | Ⓐ F-7         | 17. 19. 27 |
|             | R <sub>23</sub> : disconnection                 |                                              | F-7           |            |
|             | R <sub>19</sub> : disconnection                 |                                              | G-7           |            |
|             | IC-1 ② : disconnection                          |                                              |               |            |
|             | IC-1 ⑦ : disconnection                          |                                              |               |            |
|             | IC-2 ④ : disconnection                          |                                              |               |            |
|             | IC-3 ⑩ : disconnection                          |                                              |               |            |
|             | Others: See "Shutter stays open in A, P modes". |                                              |               |            |


**B. AE under in A, P modes.**

| Check items | Cause                                                | Measures                                       | Part position | Adjustment |
|-------------|------------------------------------------------------|------------------------------------------------|---------------|------------|
|             | Adjustment failure                                   | Readjust following "Repair Guide" P. 21~P. 25. |               |            |
|             | VR <sub>4</sub> : the both ends are short-circuited. | Re-solder or replace VR <sub>4</sub> .         | F-7           | 19. 27     |
|             | VR <sub>9</sub> (IC-1 ① side): disconnection         |                                                | Ⓐ F-7         | 17. 19. 27 |
|             | R <sub>5</sub> : disconnection                       |                                                | G-6           |            |
|             | IC-1 ① : disconnection                               |                                                |               |            |
|             | IC-1 ⑦ : disconnection                               |                                                |               |            |
|             | IC-1 ⑨ : disconnection                               |                                                |               |            |
|             | IC-2 ⑨ : disconnection                               |                                                |               |            |
|             | Others: See "Shutter curtains travel in high speed". |                                                |               |            |



## 4. Diaphragm stop operation failure.

### A. Full aperture in A, P, M, B modes. Viewfinder LEDs are normal.

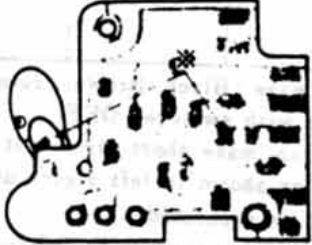
| Check items                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | Cause                                          | Measures                                                 | Part position | Adjustment |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|----------------------------------------------------------|---------------|------------|
| <p>Check voltage of C<sub>10</sub> + 3.0 V</p> <p>Yes → Only preset lever operates by shortcircuit between C<sub>10</sub> + and GND. See figure below.</p> <p>No → Operates slightly</p> <p>Check voltage of LED P.C. board P.W. (19) (P<sub>24</sub>) (Purple) 2.8 V</p> <p>Yes →</p> <p>No →</p> <p>Check voltage of IC-2 (5) About 2.8 V</p> <p>Yes →</p> <p>No →</p> <p>※ Short-circuit using tweezers or so.</p>  | SL-1: defect (See P. 41)                       | Replace magnetic release base plate (0534).              | C-1           | 20         |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | SL-1: lead wire (Green or White) disconnection | Connect lead wire or magnetic release base plate (0534). | C-1           |            |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | C <sub>10</sub> : disconnection                | Replace magnetic release base plate (0534).              | A-2           | 20         |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | SL-2: dirt on attraction surface.              | Clean attraction surface.                                | D-1           | 20         |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | SL-2: insufficient attraction.                 | Replace magnetic release base plate (0534)               | D-1           | 20         |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | l <sub>24</sub> (Purple): disconnection        |                                                          | B-4           |            |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | C <sub>10</sub> : shortcircuit                 | Re-solder, or replace connecting P.C. board (0425).      | A-2           |            |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | l <sub>24</sub> (Purple) and GND: shortcircuit |                                                          | B-4           |            |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | IC-5 (10): disconnection                       |                                                          |               |            |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | IC-5: defect                                   | Replace IC-5.                                            |               |            |
| IC-5 (3): defect                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |                                                |                                                          |               |            |
| Joint S: disconnection                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |                                                |                                                          |               |            |
| IC-3 (5): disconnection                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                |                                                          |               |            |
| IC-2 (5): disconnection                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                |                                                          |               |            |

### B. Full aperture in P mode. Viewfinder LEDs are normal.

| Check items | Cause                                   | Measures | Part position | Adjustment |
|-------------|-----------------------------------------|----------|---------------|------------|
|             | l <sub>16</sub> (Orange): disconnection |          | I-9           |            |
|             | C <sub>3</sub> (→): disconnection       |          | I-9           |            |
|             | IC-2 (23): disconnection                |          |               |            |

C. F-stop does not function in P mode. Viewfinder LEDs are normal. Full aperture under dark conditions (about EV 7 or less). Stop down to min. aperture under bright conditions (about EV 7 or more).

| Check items                                                                               | Cause                                                                                                                                                                                                                                                                          | Measures                                       | Part position     | Adjustment           |
|-------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------|-------------------|----------------------|
| Check if SL-2 is separated by applying 1.8 V after SL-1 separation.<br>See figure below.  | No<br>SL-2: lead wire (Brown or Black) disconnection                                                                                                                                                                                                                           | Connect lead wire.                             | D-1               |                      |
|                                                                                           | Yes<br>SL-2: defect (See P. 41)                                                                                                                                                                                                                                                | Replace magnetic release base plate (0534).    | D-1               | 20                   |
| Check if SL-2 is separated by shortcircuit between IC-5(9) and GND after SL-1 separation. | No<br>Aperture stop claw spring: disengagement                                                                                                                                                                                                                                 | Connect spring (5137)                          | D-1               | 20                   |
|                                                                                           | Yes<br>$\ell_{13}$ (Orange): disconnection<br>$\ell_{13}$ (Orange) and GND: shortcircuit<br>$C_8$ : disconnection<br>IC-5(9): disconnection                                                                                                                                    |                                                | B-3<br>B-3<br>C-7 |                      |
| Check voltage of $C_1$<br>0 V                                                             | No<br>$\ell_{h-2}$ (Black): disconnection<br>P.W. on SPC P.C. board: disconnection                                                                                                                                                                                             | Connect P.W.<br>Replace SPC P.C. board (0436). | I-9<br>H-9<br>H-9 |                      |
|                                                                                           | Yes<br>Decreasing voltage from 1V little by little.<br>$C_1+$ and GND: shortcircuit<br>Joint T: disconnection<br>IC-2(25): disconnection<br>IC-2(27): disconnection<br>IC-2(31): disconnection<br>IC-5(4): disconnection<br>IC-3(27): disconnection<br>IC-3(31): disconnection |                                                | I-9               | 17. 18. 19<br>21. 27 |

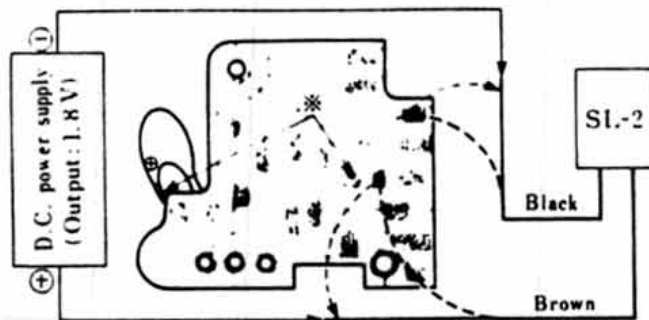

1. Disconnect SL-2 lead wire (Black, Brown), connect it to DC power supply with switched OFF.
2. After winding completion, make short-circuit at marked (\*) positions as shown in left figure using tweezers so that SL-1 is separated.
3. When you could hear clicking sound with DC power supply switched ON, SL-2 should be separated.

D. Smaller aperture (about 2 EV) in P mode. Viewfinder LEDs are normal.

| Check items | Cause                                              | Measures | Part position | Adjustment |
|-------------|----------------------------------------------------|----------|---------------|------------|
|             | IC-2(25): disconnection<br>IC-3(29): disconnection |          |               |            |

E. F-stop functions in A mode. Mode indicator "A" lights up in P mode.

| Check items              | Cause                                                           | Measures   | Part position | Adjustment |
|--------------------------|-----------------------------------------------------------------|------------|---------------|------------|
| <br>— A mode<br>— P mode | A and P modes printed wirings (on TV P.C. board): shortcircuit. | Re-solder. | M-7           | 21         |



## 5. Self-timer operation failure.

### A. Self-timer does not operate. (Self-timer does not delay shutter release.)

| Check items                                                                                              | Cause | Measures                                                                                                                     | Part position     | Adjustment |
|----------------------------------------------------------------------------------------------------------|-------|------------------------------------------------------------------------------------------------------------------------------|-------------------|------------|
| Check if self-timer operates by shutter releasing after shortcircuit between flex P.W. 8 (Blue) and GND. | No →  | ℓ <sub>12</sub> (Blue): disconnection<br>S <sub>10</sub> : contact failure (See P. 39)<br>Self-timer plate screw: looseness. | L-6<br>M-3<br>M-3 |            |
|                                                                                                          | Yes → | IC-3 (17): disconnection                                                                                                     |                   |            |
|                                                                                                          |       |                                                                                                                              |                   |            |
|                                                                                                          |       |                                                                                                                              |                   |            |

### B. Self-timer operates always.

| Check items | Cause                                        | Measures                     | Part position | Adjustment |
|-------------|----------------------------------------------|------------------------------|---------------|------------|
|             | S <sub>10</sub> : remains ON (See P. 39)     | Re-solder or adjust contact. | M-3           |            |
|             | ℓ <sub>12</sub> (Blue) and GND: shortcircuit |                              | L-6           |            |

### C. Self-timer operates without LED blinking.

| Check items                                                             | Cause | Measures                                                                                                           | Part position | Adjustment |
|-------------------------------------------------------------------------|-------|--------------------------------------------------------------------------------------------------------------------|---------------|------------|
| Self LED lights up by shortcircuit between flex P.W. 9 (Black) and GND. | No →  | Self LED: cold soldering or defect<br>ℓ <sub>33</sub> (Black) or ℓ <sub>34</sub> (Red): disconnection              | L-3           |            |
|                                                                         | Yes → | R <sub>4</sub> : disconnection<br>IC-1 (24): disconnection<br>IC-1 (25): disconnection<br>IC-3 (15): disconnection | H-7           |            |
|                                                                         |       |                                                                                                                    |               |            |
|                                                                         |       |                                                                                                                    |               |            |
|                                                                         |       |                                                                                                                    |               |            |

### D. Self-timer LED remains ON with main switch (S<sub>4</sub>) ON.

| Check items | Cause                                              | Measures                                             | Part position | Adjustment |
|-------------|----------------------------------------------------|------------------------------------------------------|---------------|------------|
|             | C <sub>5</sub> † and R <sub>4</sub> : shortcircuit | Adjust bending of C <sub>5</sub> legs, or re-solder. | G-6           |            |
|             | ℓ <sub>33</sub> (Black) and GND: shortcircuit      |                                                      | L-3           |            |

## 6. AE lock failure.

### A. Unlocked.

| Check items | Cause                                         | Measures                 | Part position | Adjustment |
|-------------|-----------------------------------------------|--------------------------|---------------|------------|
|             | S <sub>14</sub> : contact failure (See P. 40) | Clean or adjust contact. | M-3           |            |
|             | ℓ <sub>35</sub> (Yellow): disconnection       |                          | L-7           |            |
|             | IC-3 (11): disconnection                      |                          |               |            |

### B. AE remains locked.

| Check items | Cause                                                                                    | Measures                     | Part position | Adjustment |
|-------------|------------------------------------------------------------------------------------------|------------------------------|---------------|------------|
|             | S <sub>14</sub> remains ON, or shortcircuit between S <sub>14</sub> and GND. (See P. 40) | Re-solder or adjust contact. | M-3           |            |
|             | ℓ <sub>35</sub> (Yellow) and GND: shortcircuit                                           |                              | L-7           |            |

C. With AE locked (S<sub>1</sub>, ON), shutter stays open in A. P modes.

| Check items | Cause                                    | Measures | Part position | Adjustment |
|-------------|------------------------------------------|----------|---------------|------------|
|             | ℓ <sub>11-2</sub> (Black): disconnection |          | I- 9          |            |
|             | ℓ <sub>28</sub> (Grey): disconnection    |          | H- 8          |            |
|             | C <sub>2</sub> : disconnection           |          | H- 9          |            |
|             | IC-2 ⑨: disconnection                    |          |               |            |

D. With AE locked (S<sub>1</sub>, ON), viewfinder LEDs indication is held and shutter speed varies according to light condition.

| Check items | Cause                 | Measures | Part position | Adjustment |
|-------------|-----------------------|----------|---------------|------------|
|             | IC-2 ⑩: disconnection |          |               |            |
|             | IC-3 ⑩: disconnection |          |               |            |

## 7. Piezo buzzer failure

A. No beeping for slow-shutter-speed warning, for self-timer.

| Check items | Cause                                                              | Measures | Part position | Adjustment |
|-------------|--------------------------------------------------------------------|----------|---------------|------------|
|             | Black lead wire on buzzer: disconnection or shortcircuit with GND. |          | J- 8          |            |
|             | Red lead wire on buzzer: disconnection                             |          | J- 8          |            |
|             | Joint ⑧: disconnection                                             |          |               |            |
|             | IC-3 ⑧: disconnection                                              |          |               |            |

B. No beeping for slow-shutter-speed warning. (Normal for self-timer)

| Check items | Cause                 | Measures | Part position | Adjustment |
|-------------|-----------------------|----------|---------------|------------|
|             | IC-3 ⑨: disconnection |          |               |            |
|             | IC-4 ⑩: disconnection |          |               |            |

## 8. Shutter lock failure.

A. Viewfinder LEDs remain ON with 2.4 V, and OFF with 2.05 V.

| Check items | Cause                 | Measures | Part position | Adjustment |
|-------------|-----------------------|----------|---------------|------------|
|             | IC-1 ⑫: disconnection |          |               |            |
|             | IC-3 ⑬: disconnection |          |               |            |

B. Shutter lock does not operate with 2.05 V/locks with 1.4 V.

| Check items | Cause                 | Measures | Part position | Adjustment |
|-------------|-----------------------|----------|---------------|------------|
|             | IC-1 ⑫: disconnection |          |               |            |
|             | IC-3 ⑬: disconnection |          |               |            |



## 9. Viewfinder LED indication failure.

In case that other troubles (Shutter is not released. Shutter stays open. Shutter curtains travel in high speed, or without slit. F-stop operates improperly.) are accompanied refer to the related pages.

### ① No lighting LED.

#### A. No LEDs light.

| Check items | Cause                                                   | Measures          | Part position | Adjustment |
|-------------|---------------------------------------------------------|-------------------|---------------|------------|
|             | Insufficient battery voltage<br>IC-4 (9): disconnection | Replace batteries |               |            |

#### B. No LEDs light with touch switch (S<sub>0</sub>) ON. LEDs light up with release switch (S<sub>2</sub>) ON after shutter release.

| Check items | Cause                                                                                                 | Measures                               | Part position | Adjustment |
|-------------|-------------------------------------------------------------------------------------------------------|----------------------------------------|---------------|------------|
|             | S <sub>0</sub> : contact failure<br>P <sub>35</sub> (Brown): disconnection<br>IC-3 (4): disconnection | Replace shutter release button (0281). | J-3<br>K-3    |            |

#### C. LEDs for metered SS do not light up. Mode indication and exposure-adjustment LED (+/-) indication are normal.

| Check items | Cause                                                                                 | Measures | Part position | Adjustment |
|-------------|---------------------------------------------------------------------------------------|----------|---------------|------------|
|             | R <sub>11</sub> : disconnection<br>IC-3 (4): disconnection<br>IC-4 (2): disconnection |          | B-6           |            |

#### D. Mode indicators (A, M) do not light up.

| Check items | Cause                          | Measures | Part position | Adjustment |
|-------------|--------------------------------|----------|---------------|------------|
|             | R <sub>9</sub> : disconnection |          | B-7           |            |

#### E. No LEDs light with touch switch of MD-1 ON.

| Check items | Cause                                 | Measures                                                        | Part position | Adjustment |
|-------------|---------------------------------------|-----------------------------------------------------------------|---------------|------------|
|             | W <sub>1</sub> : contact failure      | Clean W <sub>1</sub> contact, or replace connecting P.C. board. | A-3           |            |
|             | P <sub>7</sub> (Brown): disconnection |                                                                 | D-6           |            |

**F. One of LEDs does not light up.**

| No lighting LED | Cause         |                  |                                              | Measures                          | Part position | Adjustment |
|-----------------|---------------|------------------|----------------------------------------------|-----------------------------------|---------------|------------|
|                 | Joint         | Pin No. of IC- 4 | Other                                        |                                   |               |            |
| ▽               | A             | ⑧                |                                              |                                   |               |            |
|                 | Disconnection | Disconnection    |                                              |                                   |               |            |
| 1               | B             | ⑦                |                                              |                                   |               |            |
| 1/2             | C             | ⑥                |                                              |                                   |               |            |
| 1/4             | D             | ⑤                |                                              |                                   |               |            |
| 1/8             | E             | ④                |                                              |                                   |               |            |
| 1/15            | F             | ③                |                                              |                                   |               |            |
| 1/30            | G             | ②                |                                              |                                   |               |            |
| 1/60            | H             | ①                |                                              |                                   |               |            |
| 1/125           | I             | ④                |                                              |                                   |               |            |
| 1/250           | J             | ④                |                                              |                                   |               |            |
| 1/500           | K             | ④                |                                              |                                   |               |            |
| 1/1000          | L             | ④                |                                              |                                   |               |            |
| △               | M             | ③                |                                              |                                   |               |            |
| P               | N             | ③                | R <sub>8</sub> : disconnection               |                                   | A- 6          |            |
| A               | O             | ③                |                                              |                                   |               |            |
| M               | P             | ③                |                                              |                                   |               |            |
| +/-             | Q             | ③                | S <sub>8</sub> : contact failure (See P. 39) | Clean and adjust contact bending. | C- 9          |            |
|                 |               | ⑩                | ℓ <sub>6-1</sub> (Black): disconnection      |                                   | B- 9          |            |
|                 |               |                  | ℓ <sub>20</sub> (Green): disconnection       |                                   | D- 9          |            |
|                 |               |                  | R <sub>10</sub> : disconnection              |                                   | A- 6          |            |

**② LEDs remain lighting.**

**A. LEDs remain ON with main switch (S<sub>1</sub>) ON.**

| Check items | Cause                                           | Measures                                      | Part position | Adjustment |
|-------------|-------------------------------------------------|-----------------------------------------------|---------------|------------|
|             | ℓ <sub>7</sub> (Brown) and GND: shortcircuit    |                                               | D- 6          |            |
|             | ℓ <sub>33</sub> (Brown) and GND: shortcircuit   |                                               | K- 3          |            |
|             | S <sub>8</sub> and GND: shortcircuit            | Replace shutter release button (0281).        | J- 3          |            |
|             | S <sub>1</sub> and GND: shortcircuit (See P.38) | Repalce shutter speed dial base plate (0274). | J- 3          |            |

**B. LEDs remain ON after touch switch (S<sub>2</sub>) is ON. LEDs remain ON for 15 sec. after shutter release.**

| Check items                                | Cause                           | Measures | Part position | Adjustment |
|--------------------------------------------|---------------------------------|----------|---------------|------------|
| (LED lighting may not be held for 15 sec.) | C <sub>13</sub> : disconnection |          | I- 3          |            |
|                                            | R <sub>7</sub> : disconnection  |          | I- 3          |            |

**C. Exposure-adjustment LED (+/-) remains blinking with exposure-adjustment controller in "0" position.**

| Check items | Cause                                         | Measures                | Part position | Adjustment |
|-------------|-----------------------------------------------|-------------------------|---------------|------------|
|             | S <sub>8</sub> : remains ON (See P.39)        | Bend contact to adjust. | C- 9          |            |
|             | ℓ <sub>20</sub> (Green) and GND: shortcircuit |                         | D- 9          |            |



③ With AEF 280PX used.

A. Mode indicator "P" does not light up. "60" LED (as FDC) does not blink, and flash fires fully in flash P mode.

| Check items | Cause                                                                                             | Measures               | Part position | Adjustment |
|-------------|---------------------------------------------------------------------------------------------------|------------------------|---------------|------------|
|             | F <sub>1</sub> : contact failure<br>ℓ <sub>48</sub> (Grey) disconnection or shortcircuit with GND | Clean F <sub>1</sub> . | K-8           |            |

B. Mode indicator "P" does not light up in flash P mode.

| Check items | Cause                                                | Measures | Part position | Adjustment |
|-------------|------------------------------------------------------|----------|---------------|------------|
|             | IC-2 (28): disconnection<br>IC-4 (29): disconnection |          |               |            |

C. With flash fully charged, X-sync shutter speed does not change to 1/60 sec. automatically. (Metered SS LED remains ON. Flash fires with slower shutter speed than 1/60 sec.)

| Check items | Cause                                                                                                                                                                                    | Measures               | Part position | Adjustment |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------|---------------|------------|
|             | F <sub>2</sub> : contact failure<br>ℓ <sub>50</sub> (White) disconnection, or shortcircuit with GND.<br>IC-2 (35): disconnection<br>IC-3 (35): disconnection<br>IC-4 (36): disconnection | Clean F <sub>2</sub> . | K-8           |            |

④ Others.

A. Viewfinder LEDs light up with touch switch (S<sub>2</sub>) ON, even with main switch (S<sub>1</sub>) OFF.

| Check items | Cause                                                         | Measures                | Part position | Adjustment |
|-------------|---------------------------------------------------------------|-------------------------|---------------|------------|
|             | S <sub>1</sub> : remains ON (bending of contact). (See P. 39) | Adjust contact bending. | M-6           |            |

B. Over-range LED "Δ" blinks in A, P, M, B modes. Mode indication is normal.

| Check items | Cause                                              | Measures                            | Part position | Adjustment |
|-------------|----------------------------------------------------|-------------------------------------|---------------|------------|
|             | VR <sub>7</sub> : contact failure                  | Clean or Adjust contact bending.    | M-7           | 27         |
|             |                                                    | Replace flex P.C. board set (0401). |               | A          |
|             | Joint M: disconnection<br>IC-4 (15): disconnection |                                     |               |            |

C. Viewfinder LEDs show about 1/2 EV slower shutter speed.

| Check items | Cause                                          | Measures | Part position | Adjustment |
|-------------|------------------------------------------------|----------|---------------|------------|
|             | ℓ <sub>23</sub> (Purple) and GND: shortcircuit |          | F-9           |            |
|             | ℓ <sub>25</sub> (Purple) and GND: shortcircuit |          | G-8           |            |

**D.** Under-range LED "▽" blinks in A, M, B modes. LEDs show 1/4~1/8 shutter speeds in P mode.

| Check items | Cause                                 | Measures | Part position | Adjustment |
|-------------|---------------------------------------|----------|---------------|------------|
|             | f <sub>22</sub> (Blue): disconnection |          | E- 2          |            |

**E.** Under-range LED "▽" blinks in A, M, B modes. Normal in P mode.

| Check items | Cause                                              | Measures | Part position | Adjustment |
|-------------|----------------------------------------------------|----------|---------------|------------|
|             | IC-2 (8): disconnection<br>IC-4 (1): disconnection |          |               |            |

**F.** Mode indicator "M" lights up, operating as A mode with A mode setting.

| Check items | Cause                    | Measures | Part position | Adjustment |
|-------------|--------------------------|----------|---------------|------------|
|             | IC-4 (25): disconnection |          |               |            |

**G.** Under-range LED "▽" blinks in P mode. LEDs light properly or show slower shutter speed (about 1 EV) in A, M, B modes.

| Check items | Cause                                              | Measures | Part position | Adjustment |
|-------------|----------------------------------------------------|----------|---------------|------------|
|             | IC-2 (6): disconnection<br>IC-4 (1): disconnection |          |               |            |

**H.** Mode indicator "M" lights up, operating as P mode with P mode setting.

| Check items | Cause                    | Measures | Part position | Adjustment |
|-------------|--------------------------|----------|---------------|------------|
|             | IC-4 (25): disconnection |          |               |            |

**I.** Mode indicator "P" remains ON, not blinking, with setting other than minimum aperture in P mode.

| Check items | Cause                                                                                                              | Measures                 | Part position | Adjustment |
|-------------|--------------------------------------------------------------------------------------------------------------------|--------------------------|---------------|------------|
|             | S <sub>7</sub> : contact failure (See P. 39)<br>f <sub>19</sub> (Green): disconnection<br>IC-4 (29): disconnection | Clean or adjust contact. | F- 3          | 25         |

**J.** Mode indicator "P" blinks with minimum aperture setting in P mode.

| Check items | Cause                                                                                                               | Measures                                     | Part position | Adjustment |
|-------------|---------------------------------------------------------------------------------------------------------------------|----------------------------------------------|---------------|------------|
|             | S <sub>7</sub> : remains ON, or shortcircuit with GND. (See P. 39)<br>f <sub>19</sub> (Brown) and GND: shortcircuit | Adjust contact bending or MD lever position. | I- 2<br>F- 3  | 25         |

**K.** Mode indicator "P" remains ON, not blinking, with setting other than minimum aperture. Exposure-adjustment LED (+/-) does not light up. Metered SS LED does not change properly with ASA, aperture changing.

| Check items | Cause                                                | Measures | Part position | Adjustment |
|-------------|------------------------------------------------------|----------|---------------|------------|
|             | IC-3 (13): disconnection<br>IC-4 (26): disconnection |          |               |            |



# 10. Operation failure using exclusive flash unit (AEF 280 PX)

## A. Flash does not fire. Shutter stays open. LEDs light properly.

| Check items                                                                           | Cause                                | Measures                                   | Part position | Adjustment |
|---------------------------------------------------------------------------------------|--------------------------------------|--------------------------------------------|---------------|------------|
| Flash does not fire using neither sync terminal nor hot shoe                          | Sync terminal: cold soldering        | Re-solder.                                 |               | 14         |
|                                                                                       | $\phi_{44}$ (Purple): disconnection  |                                            | E-4           | 14         |
|                                                                                       | $S_{12}$ : defect (See P. 40)        | Clean $S_{12}$ , adjust contact bending    | D-2           | 14         |
|                                                                                       |                                      | Replace shutter (or X-contact plate 0207). |               | B          |
| Flash does not fire using sync terminal                                               | Sync terminal: cold soldering        | Re-solder.                                 | H-4           | 14         |
|                                                                                       | Sync terminal: defect                | Replace sync terminal (2291).              | H-4           | 14         |
| Flash does not fire using hot shoe                                                    | Hot shoe ( $F_1$ ): contact failure  | Clean $F_1$ .                              | L-8           |            |
|                                                                                       | $S_{11}$ : cannot be ON. (See P. 40) | Clean or adjust $S_{11}$ .                 | L-8           |            |
| Check if signal X-contact ON: is given on flex P.W. 15. See P. 40 for $S_{12}$ check: | Yes                                  |                                            | L-8           |            |
|                                                                                       | No                                   |                                            | H-6           |            |
|                                                                                       | $\phi_{43}$ (Purple): disconnection  |                                            | H-6           |            |

## B. Flash does not fire. Shutter stays open. Mode indicator and "60" LED (as FDC) blinks at 2 Hz with flash charged completely.

| Check items | Cause                              | Measures | Part position | Adjustment |
|-------------|------------------------------------|----------|---------------|------------|
|             | $\phi_{32}$ (Black): disconnection |          | L-2           |            |
|             | $\phi_{34}$ (Black): disconnection |          | L-9           |            |

## C. Shutter operates without slit even though flash fires with "60" LED (as FDC) blinking.

| Check items | Cause                   | Measures | Part position | Adjustment |
|-------------|-------------------------|----------|---------------|------------|
|             | IC-1 (8): disconnection |          |               |            |

## D. Always flash fires fully without blinking "60" LED (as FDC). (Time counter does not indicate normally long when checking strobe level.

| Check items | Cause                                                         | Measures                                                    | Part position | Adjustment |
|-------------|---------------------------------------------------------------|-------------------------------------------------------------|---------------|------------|
|             | $VR_6$ : contact failure                                      | Adjust contact bending, or replace ASA resistor set (0249). | C-8           | 23         |
|             | $\phi_2$ (Black): disconnection                               |                                                             | G-9           |            |
|             | SPC-B: defect                                                 | Replace light receptor (0584).                              | E-10          | 23         |
|             | $\phi_{26}$ (Purple): disconnection or shortcircuit with GND. |                                                             | D-8           |            |
|             | $\phi_{23}$ (Purple): disconnection                           |                                                             | F-9           |            |
|             | $C_7$ : shortcircuit                                          |                                                             | H-7           |            |
|             | $C_7$ : defect                                                | Replace $C_7$ .                                             | H-7           | 23         |
|             | IC-1 (9): disconnection                                       |                                                             |               |            |

E. Always flash fires fully without blinking "60" LED (as FDC). Aperture stops down to minimum, without mode indicator "P" lighting in flash P mode.

| Check items | Cause                                                          | Measures               | Part position | Adjustment |
|-------------|----------------------------------------------------------------|------------------------|---------------|------------|
|             | F <sub>3</sub> : contact failure                               | Clean F <sub>3</sub> . |               |            |
|             | ℓ <sub>18</sub> (Grey): disconnection or shortcircuit with GND |                        | K-8           |            |
|             | IC-2 ⑩: disconnection                                          |                        |               |            |

F. Flash firing is extremely in short time. (Time counter indicates short.)

| Check items | Cause                                               | Measures                           | Part position | Adjustment |
|-------------|-----------------------------------------------------|------------------------------------|---------------|------------|
|             | C <sub>7</sub> : disconnection                      |                                    | H-7           | 23         |
|             | SPC-B: shortcircuit                                 | Replace light receptor set (0584). | E-10          | 23         |
|             | R <sub>18</sub> : disconnection                     |                                    | H-8           |            |
|             | R <sub>14</sub> : the both ends are shortcircuited. | Re-solder.                         | C-8           |            |
|             | IC-1 ⑩: disconnection                               |                                    |               |            |
|             | IC-1 ⑪: disconnection                               |                                    |               |            |
|             | IC-2 ⑭: disconnection                               |                                    |               |            |

G. "60" LED does not blink with flash fully charged. (Shutter speed does not change to 1/60 sec. automatically.)

| Check items                                                                               | Cause                                                            | Measures               | Part position | Adjustment |
|-------------------------------------------------------------------------------------------|------------------------------------------------------------------|------------------------|---------------|------------|
| Check if flash is fired with faster than 1/125 of metered SS indication in A and P modes. | No firing. → F <sub>2</sub> : contact failure                    | Clean F <sub>2</sub> . |               |            |
|                                                                                           | ℓ <sub>30</sub> (White): disconnection or shortcircuit with GND. |                        | K-8           |            |
|                                                                                           | IC-2 ⑮: disconnection                                            |                        |               |            |
|                                                                                           | IC-3 ⑮: disconnection                                            |                        |               |            |
|                                                                                           | Fired → IC-4 ⑮: disconnection                                    |                        |               |            |

H. Always full aperture in flash P mode. Viewfinder LEDs are normal.

| Check items                   | Cause                                                                        | Measures                                    | Part position | Adjustment |
|-------------------------------|------------------------------------------------------------------------------|---------------------------------------------|---------------|------------|
| Full aperture in P mode also. | SL-2: insufficient attraction                                                | Replace magnetic release base plate (0534). | D-1           | 20         |
|                               | R <sub>22</sub> (VR <sub>8</sub> on previous type flex board): disconnection |                                             | I-6           | 24         |
|                               | IC-1 ⑮: disconnection                                                        |                                             |               |            |
|                               | IC-2 ⑳: disconnection                                                        |                                             |               |            |

I. Aperture cannot be controlled properly in flash P mode. Viewfinder LEDs are normal.

| Check items | Cause                                                             | Measures                  | Part position | Adjustment |
|-------------|-------------------------------------------------------------------|---------------------------|---------------|------------|
|             | MD lever: irregular position                                      |                           |               | 25         |
|             | S <sub>7-3</sub> , S <sub>7-2</sub> : contact failure (See P. 40) | Clean and adjust contact. | I-2           | 25         |
|             | ℓ <sub>11</sub> (Red): disconnection or shortcircuit with GND.    |                           | E-3           |            |
|             | ℓ <sub>18</sub> (Yellow): disconnection or shortcircuit with GND. |                           | F-2           |            |
|             | IC-2 ⑫: disconnection                                             |                           |               |            |
|             | IC-2 ⑬: disconnection                                             |                           |               |            |



**J. "60" LED (as FDC) does not blink. Always full aperture in flash P mode.**

| Check items | Cause                    | Measures | Part position | Adjustment |
|-------------|--------------------------|----------|---------------|------------|
|             | IC-2 (29): disconnection |          |               |            |

**K. Flash firing is not controlled correctly.**

| Check items | Cause                            | Measures                                                   | Part position | Adjustment |
|-------------|----------------------------------|------------------------------------------------------------|---------------|------------|
|             | SPC-B: shutter operation failure | Adjust operation, or replace mirror box side plate (0521). |               | 23         |
|             | SPC-B shutter: bouncing          | Replace light receptor set (0584).                         |               | 23         |
|             | F 8-1 (Black): disconnection     |                                                            | F-10          |            |

**L. Flash fires but with slow sync in A, P, M modes.**

| Check items | Cause                    | Measures | Part position | Adjustment |
|-------------|--------------------------|----------|---------------|------------|
|             | IC-2 (28): disconnection |          |               |            |

**M. Flash firing is controlled automatically, blinking "60" LED (as FDC) in M mode.**

| Check items | Cause                    | Measures | Part position | Adjustment |
|-------------|--------------------------|----------|---------------|------------|
|             | Joint (F): disconnection |          |               |            |

**N. Mode indicator "P" does not indicate in flash P mode.**

| Check items | Cause                    | Measures | Part position | Adjustment |
|-------------|--------------------------|----------|---------------|------------|
|             | IC-2 (29): disconnection |          |               |            |
|             | IC-4 (29): disconnection |          |               |            |

**O. Flash unit is not charged.**

| Check items                                                                                      | Cause                                            | Measures                                                    | Part position | Adjustment |
|--------------------------------------------------------------------------------------------------|--------------------------------------------------|-------------------------------------------------------------|---------------|------------|
| Sync terminal is short-circuited even though lead wire of hot shoe on top cover<br>No →<br>Yes → | Related hot shoe connection: shortcircuit        |                                                             |               |            |
|                                                                                                  | Top cover: isolation sheet is disengaged.        | Install top cover isolation sheet (4256).                   |               | 14         |
|                                                                                                  | F <sub>1</sub> and F <sub>3</sub> : shortcircuit | Re-solder.                                                  |               |            |
|                                                                                                  | Sync terminal: shortcircuit                      | Replace sync terminal (2291).                               | H-4           | 14         |
|                                                                                                  | S <sub>12</sub> : shortcircuit (See P. 40)       | Adjust X-contact bending, or replace X contact plate (0207) |               | 14         |
|                                                                                                  |                                                  | Replace shutter.                                            |               | B          |
|                                                                                                  | f <sub>43</sub> (Purple) and GND: shortcircuit   |                                                             | H-6           |            |
| f <sub>44</sub> (Purple) and GND: shortcircuit                                                   |                                                  | E-4                                                         |               |            |
| f <sub>45</sub> (Purple) and GND: shortcircuit                                                   |                                                  | L-8                                                         |               |            |

## 11. Operation failure using Motor Drive 1 (MD-1).

### A. Shutter is not released by MD-1.

| Check items | Cause                                        | Measures                                                        | Part position | Adjustment |
|-------------|----------------------------------------------|-----------------------------------------------------------------|---------------|------------|
|             | W <sub>2</sub> : contact or riveting failure | Clean W <sub>2</sub> , or replace connecting P.C. board (0425). | A-3           |            |
|             | ℓ <sub>44</sub> (Grey): disconnection        |                                                                 | C-3           |            |

### B. No LEDs light when using MD-1.

| Check items | Cause                                     | Measures                                                        | Part position | Adjustment |
|-------------|-------------------------------------------|-----------------------------------------------------------------|---------------|------------|
|             | W <sub>1</sub> : contact/riveting failure | Clean W <sub>1</sub> , or replace connecting P.C. board (0425). | A-3           |            |
|             | ℓ <sub>7</sub> (Brown): disconnection     |                                                                 | D-6           |            |
|             | IC-3(1): disconnection                    |                                                                 |               |            |

### C. Winding is impossible by MD-1.

| Check items                           | Cause                                                                      | Measures                                                        | Part position | Adjustment |
|---------------------------------------|----------------------------------------------------------------------------|-----------------------------------------------------------------|---------------|------------|
| LED (Pilot Light) of MD-1 remains ON. | Yes → Winder signal pin and riveted part of battery case GND: shortcircuit | Replace battery case base plate (0420).                         | K-1           |            |
|                                       | No → Winder signal pin and ℓ <sub>31</sub> (Black): shortcircuit           |                                                                 | D-2           |            |
|                                       | W <sub>3</sub> : contact/riveting failure                                  | Clean W <sub>3</sub> , or replace connecting P.C. board (0425). | A-3           |            |
|                                       | ℓ <sub>21</sub> (Blue): disconnection, or shortcircuit with GND.           |                                                                 | D-7           |            |
|                                       | IC-3(2): disconnection                                                     |                                                                 |               |            |

## 12. Operation failure using Multi Function Back (MFB).

### A. Data is not imprinted.

| Check items                               | Cause                                                             | Measures              | Part position | Adjustment |
|-------------------------------------------|-------------------------------------------------------------------|-----------------------|---------------|------------|
| Only for body with P.C. board C employed. | ℓ <sub>30</sub> (White): disconnection, or shortcircuit with GND. |                       | E-7           |            |
|                                           | IC-3(3): disconnection                                            |                       |               |            |
|                                           | ℓ <sub>62</sub> (White): disconnection, or shortcircuit with GND. |                       | G-7           |            |
|                                           | ℓ <sub>12-2</sub> (Red): disconnection                            |                       | G-7           |            |
|                                           | Q <sub>4</sub> : disconnection or defect                          | Re-solder or replace. | G-7           |            |
|                                           | R <sub>27</sub> : shortcircuit                                    |                       | G-7           |            |
|                                           | R <sub>26</sub> : disconnection                                   |                       | G-7           |            |

### B. Shutter is not released by MFB.

| Check items | Cause                                 | Measures | Part position | Adjustment |
|-------------|---------------------------------------|----------|---------------|------------|
|             | ℓ <sub>27</sub> (Grey): disconnection |          | D-2           |            |
|             | ℓ <sub>46</sub> (Grey): disconnection |          | D-2           |            |



**C. Shutter is released when returning film advance lever, with MFB using.**


| Check items | Cause                                                    | Measures   | Part position | Adjustment |
|-------------|----------------------------------------------------------|------------|---------------|------------|
|             | $f_{27}$ (Grey) and $f_{18}$ (Black):<br>Wrong soldering | Re-solder. | C- 2<br>D- 2  |            |

**D. Data is imprinted after 2nd shutter curtain travels completely.**

| Check items | Cause                                                                  | Measures   | Part position | Adjustment |
|-------------|------------------------------------------------------------------------|------------|---------------|------------|
|             | $f_{21}$ (Blue) and $f_{26}$ (White) on<br>flex board: wrong soldering | Re-solder. | D- 7<br>E- 7  |            |

**E. Data is imprinted by changing main switch ON→ OFF→ ON slowly.**

| Check items | Cause                               | Measures                    | Part position | Adjustment |
|-------------|-------------------------------------|-----------------------------|---------------|------------|
|             | Electrical circuit:<br>misoperation | Employ P.C. board C (0407). | H- 7          |            |

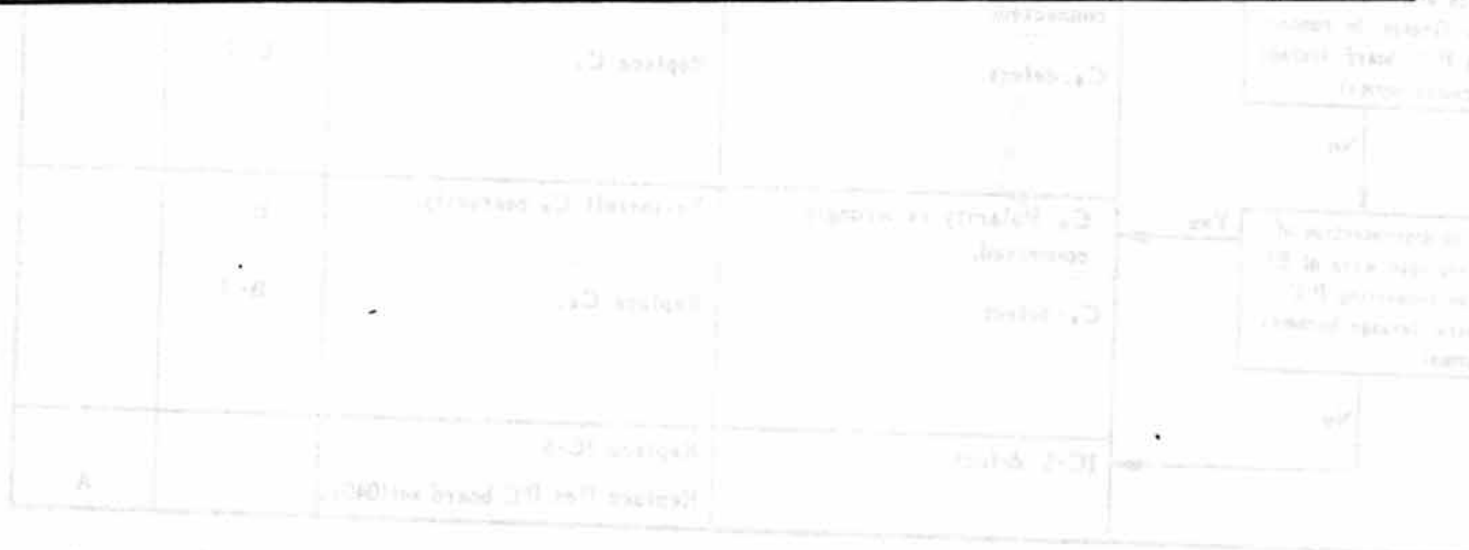

### 13. Leak current trouble.

Against troubles that camera works properly but battery power drains sharply, first check leak current as procedure on next page to judge camera condition.

**A. Battery drains sharply. (Excessive leak current) Camera operation is normal.**

| Check items                                                                               | Cause                                                                                           | Measures                                          | Part position   | Adjustment |
|-------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|---------------------------------------------------|-----------------|------------|
| With disconnection of $r_{20}$ (Purple) by connecting P.C. board, leakage becomes normal. | Yes →<br>$C_{10}$ : polarity is wrongly connected.                                              | Re-install $C_{10}$ correctly.                    | A- 2            |            |
|                                                                                           | $C_{10}$ : defect.                                                                              | Replace connecting P.C board (0425).              | A- 2            |            |
| No ↓                                                                                      | With disconnection of $r_{13}$ (Orange) by connecting P.C. board, leakage becomes normal.       | Yes →<br>$C_8$ : polarity is wrongly connected.   | C- 7            |            |
|                                                                                           |                                                                                                 | $C_8$ : defect.                                   | Replace $C_8$ . | C- 7       |
| No ↓                                                                                      | With disconnection of green lead wire of SL-3 by connecting P.C. board, leakage becomes normal. | Yes →<br>$C_9$ : Polarity is wrongly connected.   | B- 7            |            |
|                                                                                           |                                                                                                 | $C_9$ : defect                                    | Replace $C_9$ . | B- 7       |
| No ↓                                                                                      | IC-5: defect                                                                                    | Replace IC-5.<br>Replace flex P.C board set(0401) |                 | A          |

- In case that camera does not work properly, find out cause according to defective symptoms other than current leakage.
- When checking current leakage, make sure that viewfinder LEDs should not be ON with touch switch OFF.



## ■ Checking procedure of leak current amount.



### ■ Standard

| Main SW. ( $S_1$ ) | Tolerance               |
|--------------------|-------------------------|
| ON                 | $10\mu\text{A}$ or less |
| OFF                | $2\mu\text{A}$ or less  |

### ■ Checking methods

#### Ⓐ When using Ampere meter (pico-or micro-ampere meter)

Leave touch switch OFF.

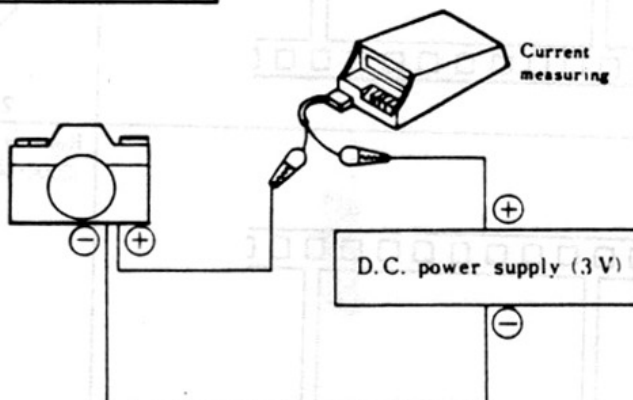
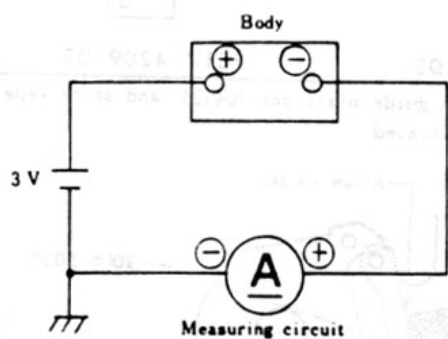


#### Ⓑ When using volt-meter

1. Connect camera and measuring instruments as shown in figure. Employ resistor ( $10\text{K}\Omega$ ) whose rating is within  $\pm 10\%$ .

Caution: Camera cannot be operated under condition shown below.

Leave touch switch OFF.

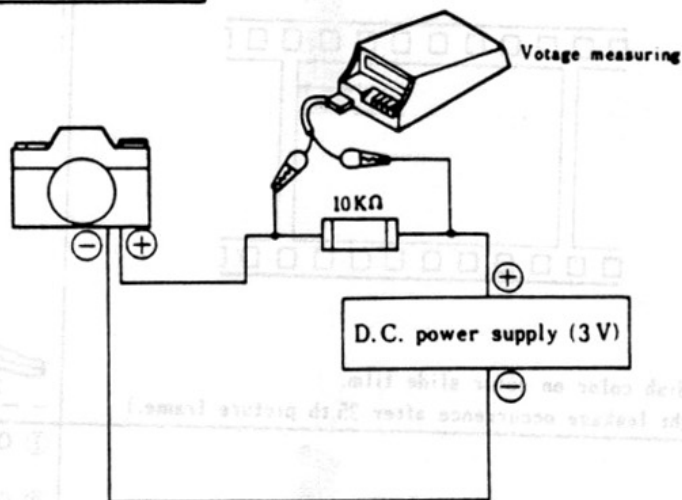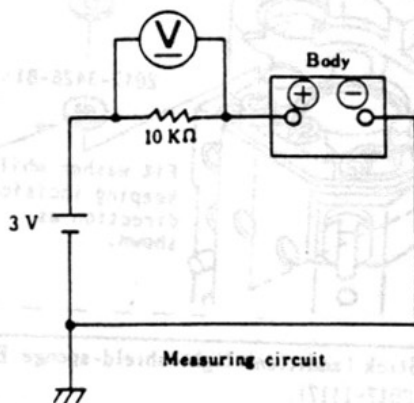

2. Wait about 1 minute to read stable value when checking voltage.






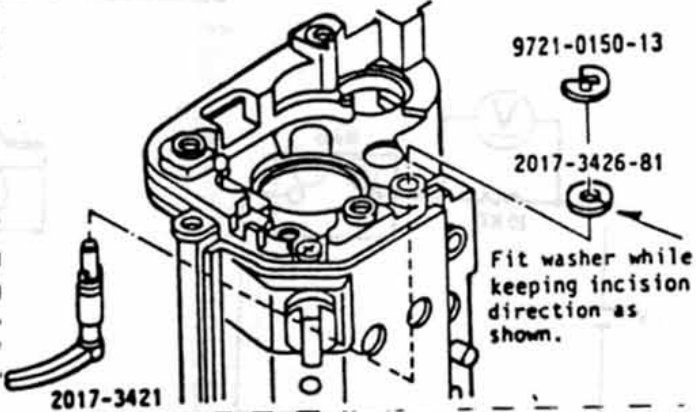
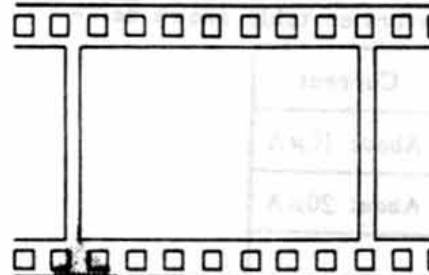
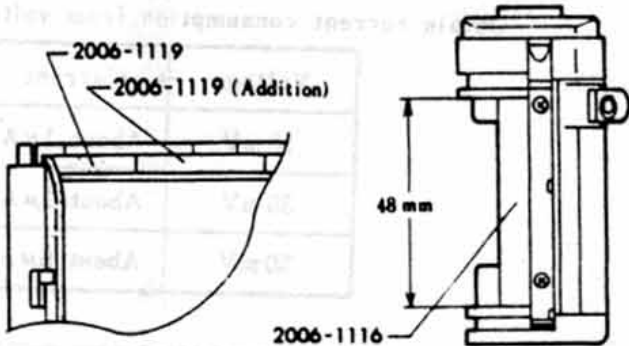
Obtain current consumption from voltage above by conversion table shown below.

| Voltage | → | Current              | Voltage | → | Current               |
|---------|---|----------------------|---------|---|-----------------------|
| 10 mV   |   | About $1\mu\text{A}$ | 100 mV  |   | About $10\mu\text{A}$ |
| 30 mV   |   | About $3\mu\text{A}$ | 200 mV  |   | About $20\mu\text{A}$ |
| 50 mV   |   | About $5\mu\text{A}$ |         |   |                       |

If touch switch is switched ON wrongly, operate main switch ( $S_1$ ) ON→OFF→ON.



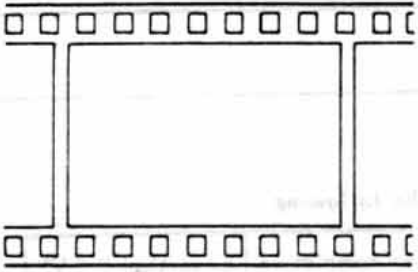
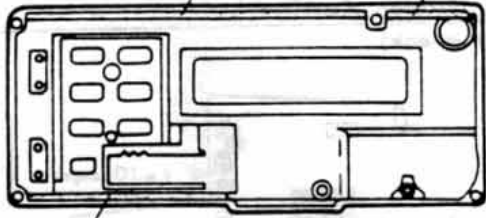
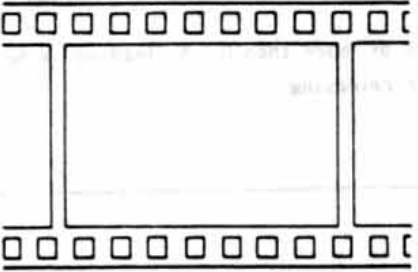
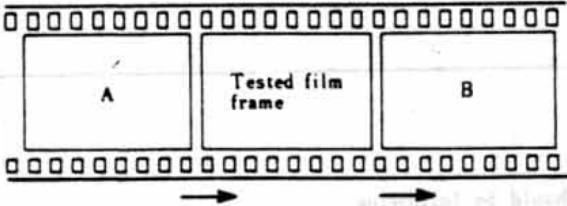
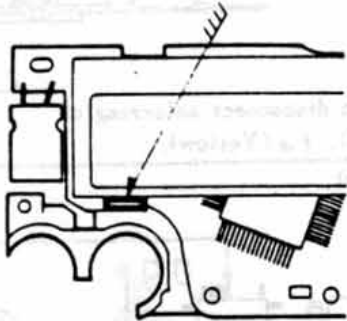
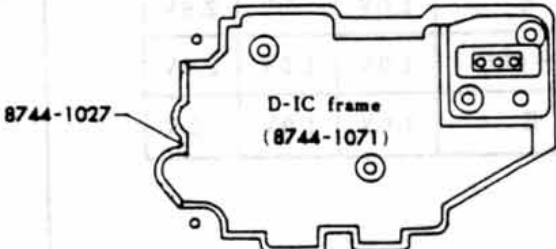

# 14. Light leakage

## A. Light leakage in camera parts.
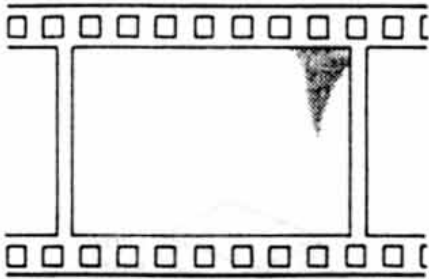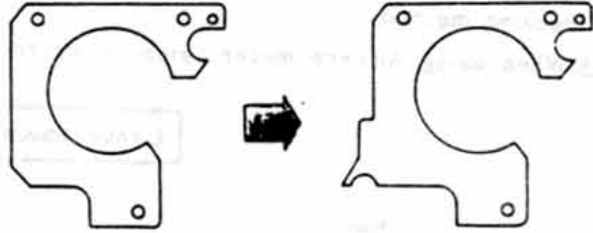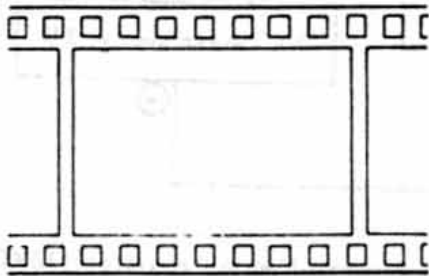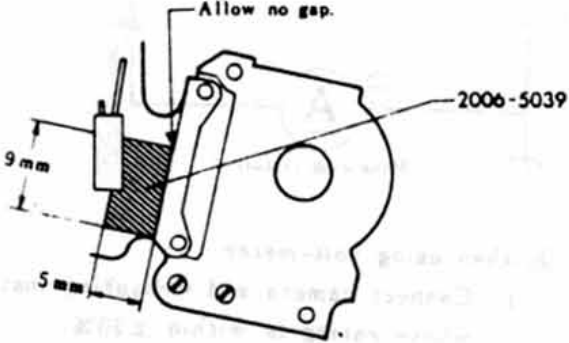
| Symptoms                                                                                                                                                                                                   | Measures                                                                                                                                                                                                                                                                                                                                                                           |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                           | <p>Replace Tv P.C. board holder (2017-4209) with 2017-4209-03.</p>  <p>2017-4209-02                      2017-4209-03</p>                                                                                                                                                                        |
|                                                                                                                           | <p>Remove main switch guide plate set (0412), and stick tape (2006-5039) as illustrated.</p>  <p>Allow no gap.</p> <p>9 mm</p> <p>5 mm</p> <p>2006-5039</p>                                                                                                                                      |
|  <p>About 1 cm</p> <p>• Reddish color on color slide film.<br/>(Light leakage occurrence after 25th picture frame.)</p> | <p>Make an incision with washer (2017-3426-81), and fit it on film indication filler (2017-3421).</p>  <p>9721-0150-13</p> <p>2017-3426-81</p> <p>2017-3421</p> <p>Fit washer while keeping incision direction as shown.</p>                                                                   |
|                                                                                                                         | <ol style="list-style-type: none"> <li>① On back cover...Stick (addition) light-shield-sponge B (2017-1117).</li> <li>② On body...Cut back-cover-light-shield-plate (2006-1116) to 48 mm, and stick it.</li> </ol>  <p>2006-1119</p> <p>2006-1119 (Addition)</p> <p>48 mm</p> <p>2006-1116</p> |



**B. Light leakage in Multi Function Back.**




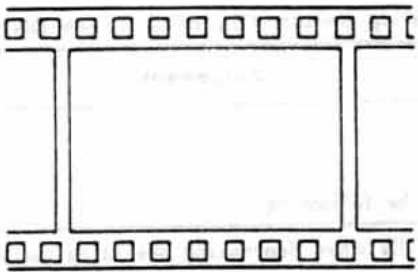
| Symptoms                                                                                                                                                                                                                                                                                               | Measures                                                                                                                                                                                                                                     |
|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                                                                                                                                                       | <p>Check if tape (reverse side of flex P.C. board joint part) on LED P.C. board, is out of position.</p>                                                   |
|                                                                                                                                                                                                                       | <p>Check if light shield sponges (8744-1026, 1027, 1028) of reverse side of outer case set (8744-0121), are out of position.</p>                           |
|                                                                                                                                                                                                                      | <p>Light leakage left occurs without battery chamber cover set (8744-0125) used.</p>                                                                                                                                                         |
| <p>With light leakage test performed, film is exposed on the both frames, previous and next frames to tested frames, as illustrated.<br/>(For actual use, light leakage, A and B, may appear on single frame.)</p>  | <p>Measures against light leakage B ①, ②</p> <p>① Cut light shield sponge (2006-1116) to make 7 mm length, and stick it on the hole shown by arrow.</p>  |
| <p>Measures against light leakage A</p> <p>Cut light shield sponge (8744-1027) to make 28 mm length, and stick it in clearance between D-IC frame and back cover.</p>                                               | <p>② Cut light shield sponge (8744-1027) to make 8 mm length, and stick it between battery chamber cover set claws.</p>                                  |

### 3 Checking procedure of switches, magnets.





#### 1. Switch.

• Conditions to obtain following voltages: → end is connected with GND.

Main switch ( $S_1$ ) and metering switch ( $S_2$  or  $S_3$ ) are ON position.
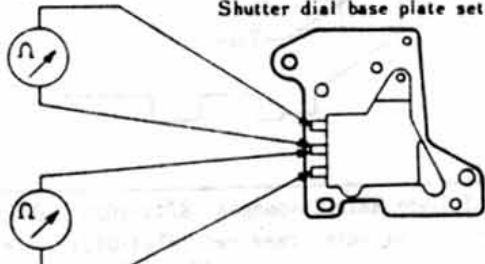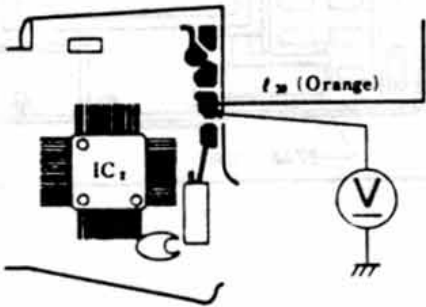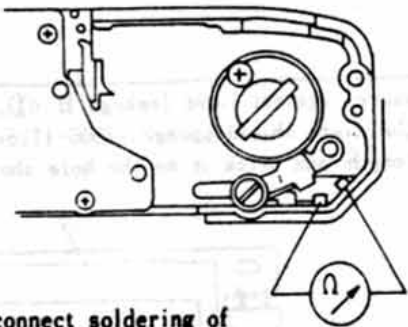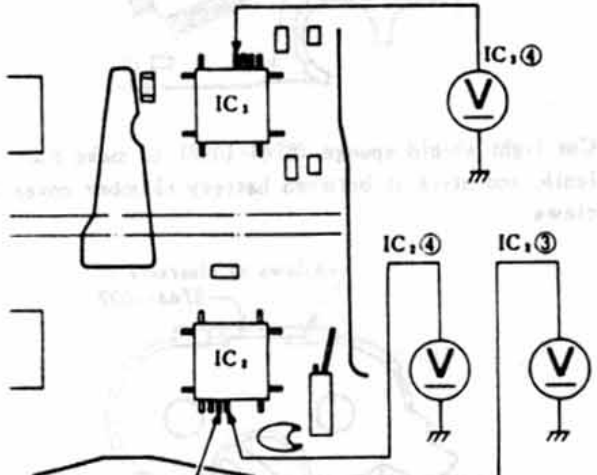
|                             | Checking procedure                                                                                                                                                                                                                                                                     | Judgement                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |                                         |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------|----------------------------------------------|-----------------------------------------|------------------------------------------------------|---|-----|-------|-------|---|-------|-----|-------|--------|-------|-------|-------|---|-------|-------|-----|
| $S_1$<br>$S_2$              | <p>(Conductivity check)</p> <p>Shutter dial base plate set</p>  <p>Note: Be sure to disconnect soldering of <math>P_{35}</math> (Brown), <math>P_{41}</math> (Green), <math>P_{49}</math> (Grey).</p> | <p>Should be following</p> <table border="1"> <tr> <td><math>S_1</math></td> <td>ON when depressing operating button slightly</td> </tr> <tr> <td><math>S_2</math></td> <td>ON when depressing operating button all the way down</td> </tr> </table>                                                                                                                                                                                                                                                                                                       | $S_1$                                   | ON when depressing operating button slightly | $S_2$                                   | ON when depressing operating button all the way down |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| $S_1$                       | ON when depressing operating button slightly                                                                                                                                                                                                                                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                         |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| $S_2$                       | ON when depressing operating button all the way down                                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                         |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| $S_3$                       | <p>(Voltage check)</p>  <p>Note: <math>P_{39}</math> (Orange) should be free from disconnection, cold soldering.</p>                                                                                  | <p>Should be following</p> <table border="1"> <tr> <td>Winding completion</td> <td>Less than 0.5 V*</td> </tr> <tr> <td>Shutter released</td> <td>About 2.9 V</td> </tr> </table> <p>*In case of more than 0.5 V, leading to no shutter releasing.</p>                                                                                                                                                                                                                                                                                                     | Winding completion                      | Less than 0.5 V*                             | Shutter released                        | About 2.9 V                                          |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| Winding completion          | Less than 0.5 V*                                                                                                                                                                                                                                                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                         |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| Shutter released            | About 2.9 V                                                                                                                                                                                                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                         |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| $S_4$                       | <p>(Conductivity check)</p>  <p>Note: Be sure to disconnect soldering of <math>P_{31}</math> (Black), <math>P_{40}</math> (Yellow).</p>                                                             | <p>Should be following</p> <table border="1"> <tr> <td>Winding completion</td> <td>OFF</td> </tr> <tr> <td>Shutter released</td> <td>ON</td> </tr> </table>                                                                                                                                                                                                                                                                                                                                                                                                | Winding completion                      | OFF                                          | Shutter released                        | ON                                                   |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| Winding completion          | OFF                                                                                                                                                                                                                                                                                    |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                         |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| Shutter released            | ON                                                                                                                                                                                                                                                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |                                         |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| $S_5$                       | <p>(Voltage check)</p>                                                                                                                                                                              | <p>Should be following</p> <table border="1"> <thead> <tr> <th>Mode/shutter speed selector</th> <th>IC<sub>1</sub>(3) (S<sub>5-2</sub>)</th> <th>IC<sub>2</sub>(4) (S<sub>5-1</sub>)</th> <th>IC<sub>3</sub>(4) (S<sub>5-1</sub>)</th> </tr> </thead> <tbody> <tr> <td>P</td> <td>0 V</td> <td>1.0 V</td> <td>2.9 V</td> </tr> <tr> <td>A</td> <td>1.0 V</td> <td>0 V</td> <td>2.9 V</td> </tr> <tr> <td>1~1000</td> <td>1.0 V</td> <td>1.0 V</td> <td>2.9 V</td> </tr> <tr> <td>B</td> <td>1.0 V</td> <td>1.0 V</td> <td>0 V</td> </tr> </tbody> </table> | Mode/shutter speed selector             | IC <sub>1</sub> (3) (S <sub>5-2</sub> )      | IC <sub>2</sub> (4) (S <sub>5-1</sub> ) | IC <sub>3</sub> (4) (S <sub>5-1</sub> )              | P | 0 V | 1.0 V | 2.9 V | A | 1.0 V | 0 V | 2.9 V | 1~1000 | 1.0 V | 1.0 V | 2.9 V | B | 1.0 V | 1.0 V | 0 V |
| Mode/shutter speed selector | IC <sub>1</sub> (3) (S <sub>5-2</sub> )                                                                                                                                                                                                                                                | IC <sub>2</sub> (4) (S <sub>5-1</sub> )                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | IC <sub>3</sub> (4) (S <sub>5-1</sub> ) |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| P                           | 0 V                                                                                                                                                                                                                                                                                    | 1.0 V                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 2.9 V                                   |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| A                           | 1.0 V                                                                                                                                                                                                                                                                                  | 0 V                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        | 2.9 V                                   |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| 1~1000                      | 1.0 V                                                                                                                                                                                                                                                                                  | 1.0 V                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 2.9 V                                   |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |
| B                           | 1.0 V                                                                                                                                                                                                                                                                                  | 1.0 V                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | 0 V                                     |                                              |                                         |                                                      |   |     |       |       |   |       |     |       |        |       |       |       |   |       |       |     |

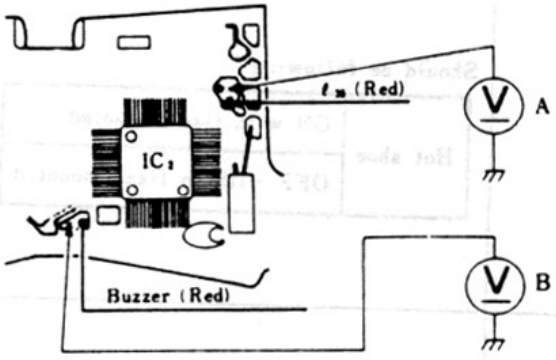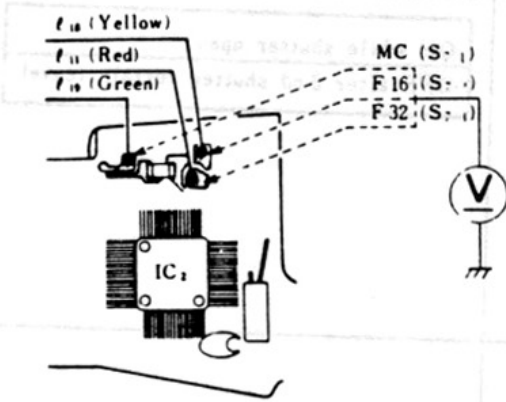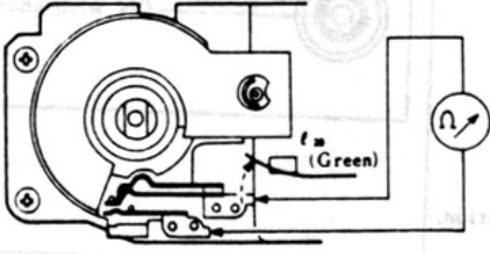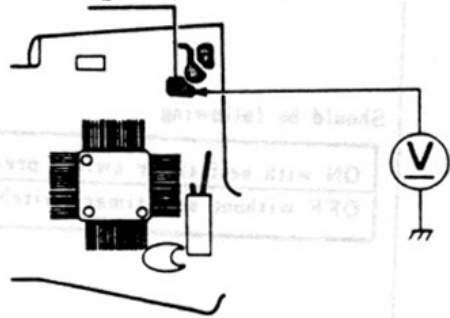

|                             | Checking procedure                                                                                                                                                                                                                              | Judgement                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|--------------------------|-------------------------------|---------------------------|----|-----|-----|--------------|-----|-----|-----|--------------|-----|---|-----|--------------|-----|----|--------------|-----|-----|---|
| S <sub>1</sub>              | <p>(Voltage check)</p>  <p>Note: Make sure that flex P.W.. joint part ①, ②, ③ are normal.</p>                                                                  | <p>Should be following</p> <table border="1" data-bbox="950 273 1437 472"> <thead> <tr> <th></th> <th>S<sub>n-1</sub><br/>(ON)</th> <th>S<sub>n-2</sub><br/>(OFF)</th> <th>S<sub>n-1</sub><br/>(ON))</th> </tr> </thead> <tbody> <tr> <td>A</td> <td>3 V</td> <td>0 V</td> <td>3 V</td> </tr> <tr> <td>B</td> <td>0 V</td> <td>0 V</td> <td>3 V</td> </tr> </tbody> </table>                                                                                                                                                                                                                                                                   |                             | S <sub>n-1</sub><br>(ON) | S <sub>n-2</sub><br>(OFF)     | S <sub>n-1</sub><br>(ON)) | A  | 3 V | 0 V | 3 V          | B   | 0 V | 0 V | 3 V          |     |   |     |              |     |    |              |     |     |   |
|                             | S <sub>n-1</sub><br>(ON)                                                                                                                                                                                                                        | S <sub>n-2</sub><br>(OFF)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | S <sub>n-1</sub><br>(ON))   |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
| A                           | 3 V                                                                                                                                                                                                                                             | 0 V                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | 3 V                         |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
| B                           | 0 V                                                                                                                                                                                                                                             | 0 V                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | 3 V                         |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
| S <sub>2</sub>              | <p>(Voltage check)</p>  <p>Note: P<sub>18</sub> (Yellow), P<sub>11</sub> (Red), P<sub>19</sub> (Green) should be free from disconnection, cold soldering.</p> | <p>Should be following</p> <table border="1" data-bbox="950 714 1469 1186"> <thead> <tr> <th>Aperture set</th> <th colspan="2">Voltage</th> </tr> </thead> <tbody> <tr> <td rowspan="3">Without lens</td> <td>MC</td> <td>0</td> </tr> <tr> <td>F16</td> <td rowspan="2">About 800 mV</td> </tr> <tr> <td>F32</td> </tr> <tr> <td rowspan="3">F16</td> <td>MC</td> <td>About 800 mV</td> </tr> <tr> <td>F16</td> <td>0</td> </tr> <tr> <td>F32</td> <td>About 800 mV</td> </tr> <tr> <td rowspan="3">F32</td> <td>MC</td> <td rowspan="2">About 800 mV</td> </tr> <tr> <td>F16</td> </tr> <tr> <td>F32</td> <td>0</td> </tr> </tbody> </table> | Aperture set                | Voltage                  |                               | Without lens              | MC | 0   | F16 | About 800 mV | F32 | F16 | MC  | About 800 mV | F16 | 0 | F32 | About 800 mV | F32 | MC | About 800 mV | F16 | F32 | 0 |
| Aperture set                | Voltage                                                                                                                                                                                                                                         |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
| Without lens                | MC                                                                                                                                                                                                                                              | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
|                             | F16                                                                                                                                                                                                                                             | About 800 mV                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
|                             | F32                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
| F16                         | MC                                                                                                                                                                                                                                              | About 800 mV                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
|                             | F16                                                                                                                                                                                                                                             | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
|                             | F32                                                                                                                                                                                                                                             | About 800 mV                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
| F32                         | MC                                                                                                                                                                                                                                              | About 800 mV                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
|                             | F16                                                                                                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
|                             | F32                                                                                                                                                                                                                                             | 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
| S <sub>3</sub>              | <p>(Conductivity check)</p>  <p>Note: Be sure to disconnect soldering of P<sub>20</sub> (Green).</p>                                                         | <p>Should be following</p> <table border="1" data-bbox="950 1386 1477 1533"> <tbody> <tr> <td rowspan="2">Exposure-adjustment control</td> <td>OFF at "0"</td> </tr> <tr> <td>ON at other than "0" position</td> </tr> </tbody> </table>                                                                                                                                                                                                                                                                                                                                                                                                       | Exposure-adjustment control | OFF at "0"               | ON at other than "0" position |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
| Exposure-adjustment control | OFF at "0"                                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
|                             | ON at other than "0" position                                                                                                                                                                                                                   |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
| S <sub>4</sub>              | <p>(Voltage check)</p>  <p>Note: P<sub>42</sub> (Blue) should be free from disconnection, cold soldering.</p>                                                | <p>Should be following</p> <table border="1" data-bbox="950 1795 1510 1921"> <tbody> <tr> <td rowspan="2">Self-timer switch</td> <td>About 0 V at ON position</td> </tr> <tr> <td>About 2.9V at OFF position</td> </tr> </tbody> </table>                                                                                                                                                                                                                                                                                                                                                                                                      | Self-timer switch           | About 0 V at ON position | About 2.9V at OFF position    |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
| Self-timer switch           | About 0 V at ON position                                                                                                                                                                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |
|                             | About 2.9V at OFF position                                                                                                                                                                                                                      |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |                             |                          |                               |                           |    |     |     |              |     |     |     |              |     |   |     |              |     |    |              |     |     |   |

S<sub>11</sub> (Conductivity check)

Reverse side of hot shoe

Should be following

|          |                           |
|----------|---------------------------|
| Hot shoe | ON with flash mounted     |
|          | OFF with no flash mounted |

S<sub>12</sub> (Conductivity check)

Note: f<sub>43</sub>. f<sub>44</sub> (Purple) should be free from disconnection, cold soldering.

Should be following

|                                      |
|--------------------------------------|
| ON while shutter open                |
| OFF after 2nd shutter curtain travel |

S<sub>13</sub> (Conductivity check)

Note: Be sure to disconnect soldering of f<sub>47</sub> (Grey).  
: f<sub>47</sub> (Grey). f<sub>4</sub> (Black) should be free from disconnection, cold soldering.

Should be following

Remote control terminal

ON with short-circuited

S<sub>14</sub> (Conductivity check)

Note: Be sure to disconnect soldering of f<sub>55</sub> (Yellow).  
: f<sub>55</sub> (Yellow) should be free from disconnection, cold soldering.

Should be following





|                                        |
|----------------------------------------|
| ON with self-timer switch pressed down |
| OFF without self-timer switch pressing |





## 2. Magnet.


- Replace magnet with new one in case that state of camera is out of description in Judgement column even though lead wires, magnet coil, attraction surface have no problem.
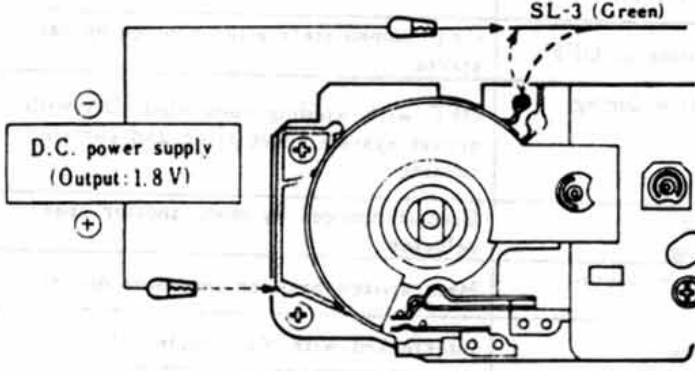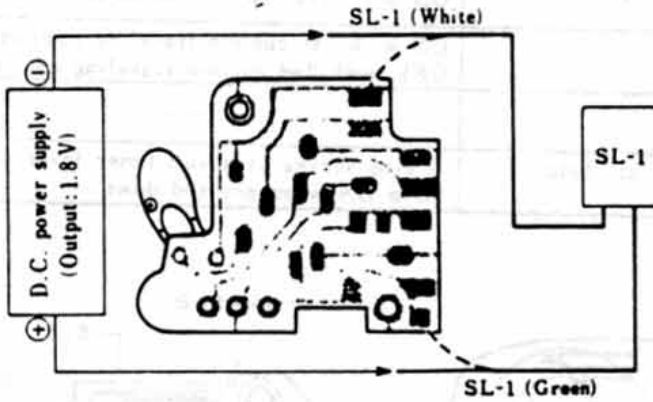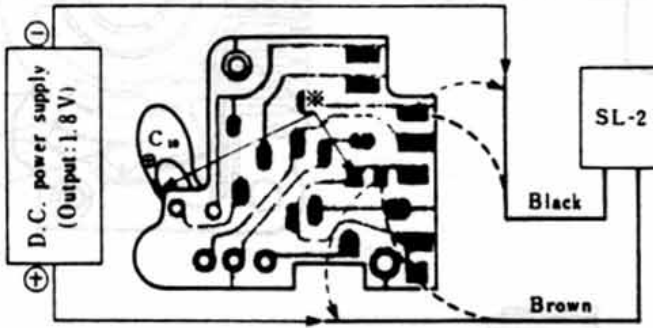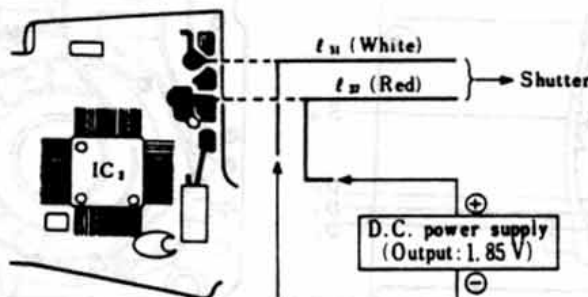
|      | Checking procedure                                                                                                                                                                                                                                | Judgement                                                                                                                                                                                                                                                                                               |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SL-3 | <p>Disconnect SL-3 lead wire (Green), connect it to <math>-</math> end of D.C. power supply (output: 1.8 V).</p>                                                 | <p>Shutter releasing, when contacting <math>+</math> end of D.C power supply to GND as shown in left figure after winding completion, means O.K.</p>                                                                                                                                                    |
| SL-1 | <p>Be sure to disconnect soldering of SL-1 lead wire (White, Green), connect it to D.C. power supply (output: 1.8 V) with power supply switched OFF.</p>        | <p>Preset lever should operate with D.C. power supply switched ON after winding completion.</p>                                                                                                                                                                                                         |
| SL-2 | <p>Be sure to disconnect soldering of SL-2 lead wire (Black, Brown), connect it to D.C. power supply (output: 1.8 V) with power supply switched OFF.</p>       | <ol style="list-style-type: none"> <li>1. After winding completion, make short-circuit at marked (*) position as shown in left figure using tweezers so that SL-1 is separated.</li> <li>2. When you could hear clicking sound with D.C. power supply switched ON, SL-2 should be separated.</li> </ol> |
| SL-4 | <p>Be sure to disconnect solderings of <math>\ell_{37}</math> (Red), <math>\ell_{51}</math> (White), connect those to D.C. power supply (output: 1.85 V).</p>  | <ol style="list-style-type: none"> <li>1. Release shutter after D.C. power supply switched ON.</li> <li>2. Shutter should remain open until D.C. power supply switched OFF.</li> </ol>                                                                                                                  |



## 4 Switches function

| Symbol          | Name of switch                   | Function                                                                                                                                                   | Operating condition                                                                |
|-----------------|----------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| S <sub>0</sub>  | Sensor switch (Touch switch)     | Turns on the metering calculation circuit and indicates the shutter speed in viewfinder.                                                                   | ON when shutter button is touched with finger.                                     |
| S <sub>1</sub>  | Metering switch                  | Same as S <sub>0</sub> .                                                                                                                                   | ON when shutter button is depressed.                                               |
| S <sub>2</sub>  | Release switch                   | Starts the operation of each circuit.                                                                                                                      |                                                                                    |
| S <sub>3</sub>  | Trigger switch                   | Starts counting of exposure time at OFF.                                                                                                                   | OFF immediately after shutter operation starts.                                    |
| S <sub>4</sub>  | Reset switch                     | <ul style="list-style-type: none"> <li>Prevention of faulty operation during winding.</li> <li>Circuit resetting.</li> <li>Motor drive control.</li> </ul> | OFF with winding completed; ON with preset system reset after 2nd curtain running. |
| S <sub>5</sub>  | Mode switch                      | <ul style="list-style-type: none"> <li>A, M, P, B mode selecting.</li> <li>M, A, P LED ON selecting.</li> </ul>                                            | Circuit changes by mode/shutter speed selector.                                    |
| S <sub>6</sub>  | Main switch                      | Circuit power ON/OFF; ON + piezo-beeper power supply.                                                                                                      | Main switch position indicator operation.                                          |
| S <sub>7</sub>  | MD switch                        | Delivers MD signal to camera.                                                                                                                              | Interlocked with MD coupler of MD lens.                                            |
| S <sub>8</sub>  | +/- indication switch            | Delivers exposure adjustment signal.                                                                                                                       | ON with exposure adjustment control.                                               |
| S <sub>10</sub> | Self switch                      | Makes self-timer circuit ready for operation.                                                                                                              | ON with self lever raised.                                                         |
| S <sub>11</sub> | Electric shock prevention switch | Electric shock prevention during use of synchro terminal.                                                                                                  | ON with flash unit fitted on acc. shoe.                                            |
| S <sub>12</sub> | X contact                        | Flash operation.                                                                                                                                           | ON with 1st curtain traveling completed; OFF with 2nd curtain traveling completed. |
| S <sub>13</sub> | Remote control switch            | Same as S <sub>2</sub> .                                                                                                                                   | —                                                                                  |
| S <sub>14</sub> | AE lock switch                   | Aperture level and indication are held in A and P modes.                                                                                                   | It also serves as a self-timer lever and turns ON when pressed down.               |

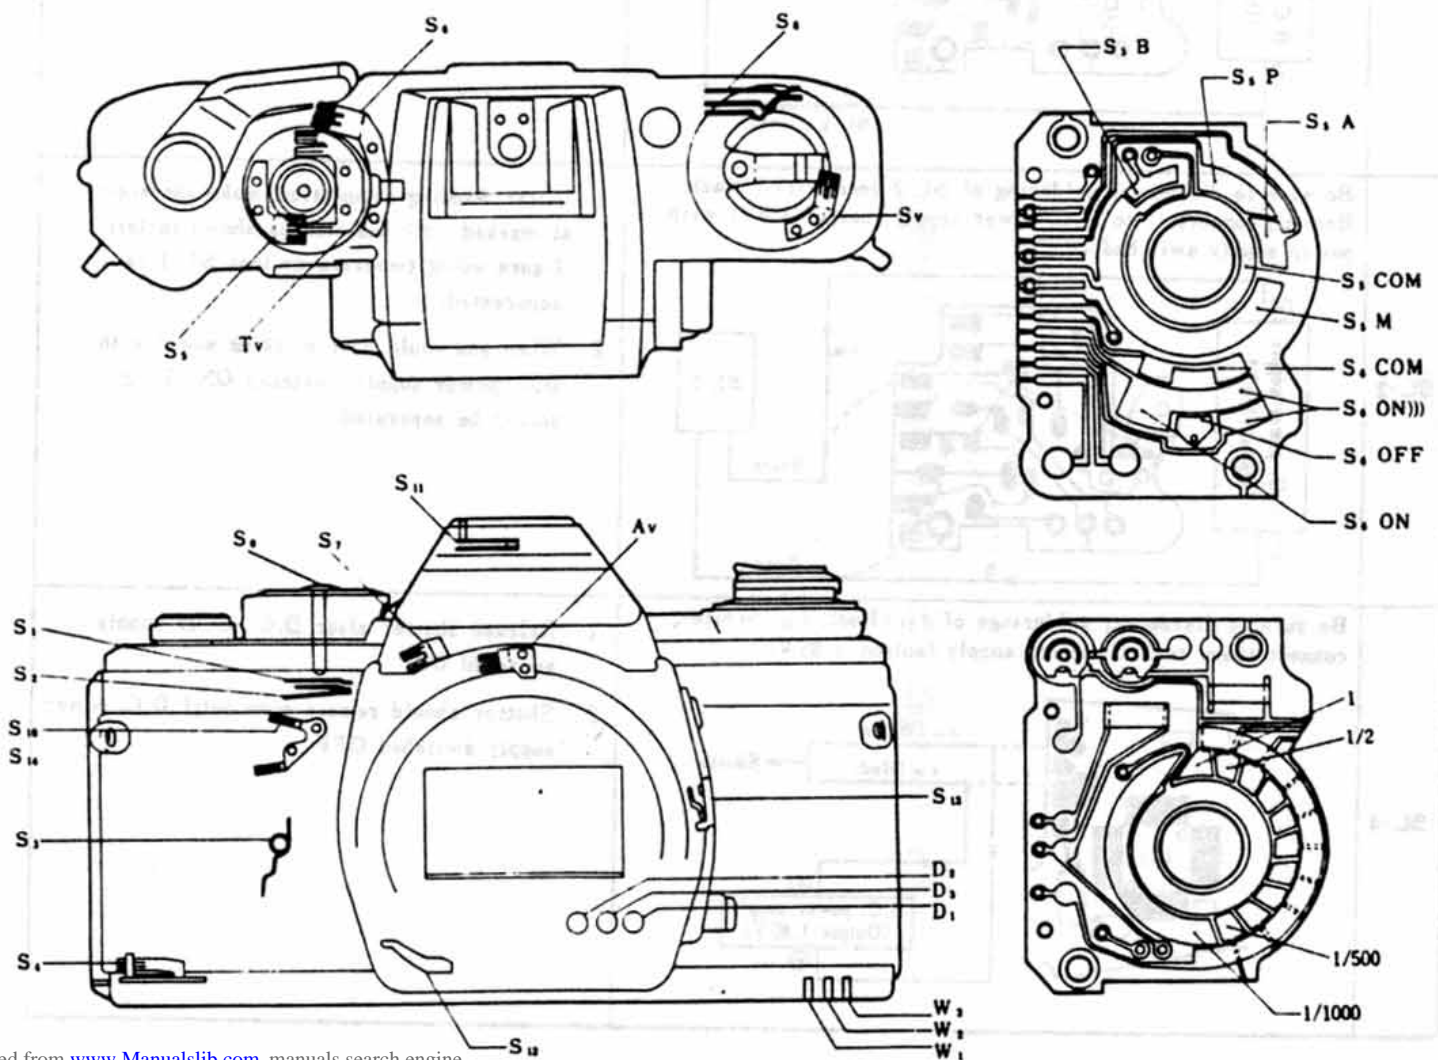

# 5 IC Pin Voltages (Measured value)

Measuring conditions: Value in bellow shows actual measured Voltage(V), with 3V power supply, at f:5.6 with 50/F 1.4 lens used, under the normal room condition.  
(Digital multi-meter (Type 2508) used.)

F means no voltage that can't be measured. (Indicated values flucturate.)

|        | Winding completed | During metering | Shutter released |
|--------|-------------------|-----------------|------------------|
| IC-1 1 | 0                 | 0.05            | 0.05             |
| 2      | 0                 | 0.06            | 0.06             |
| 3      | F                 | 1.1             | 1.1              |
| 4      | F                 | 1.2             | 1.2              |
| 5      | F                 | 1.25            | 1.25             |
| 6      | F                 | 0.9             | 0.9              |
| 7      | F                 | 0.9             | 0.9              |
| 8      | 0                 | 0.16            | 0.16             |
| 9      | F                 | 1.1             | 1.1              |
| 10     | F                 | 2.9             | 2.9              |
| 11     | 2.8               | 2.8             | 2.8              |
| 12     | 0                 | 0.01            | 2.9              |
| 13     | F                 | 0.07            | 0.07             |
| 14     | 0                 | 0.01            | 0                |

|         | Winding completed | During metering | Shutter released |
|---------|-------------------|-----------------|------------------|
| IC-1 15 | F                 | 2.9             | 2.9              |
| 16      | 0                 | 0.01            | 0.01             |
| 17      | F                 | 1.26            | 1.26             |
| 18      | 3.0               | 3.0             | 3.0              |
| 19      | 0                 | 2.9             | 2.9              |
| 20      | 0                 | 0.02            | 0.02             |
| 21      | 0                 | 0.02            | 0.02             |
| 22      | 3.0               | 3.0             | 3.0              |
| 23      | 3.0               | 2.9             | 2.9              |
| 24      | 1.7               | 1.6             | 1.6              |
| 25      | 0                 | 0.01            | 0.01             |
| 26      | F                 | 0.65            | 0.65             |
| 27      | F                 | 0.8             | 0.8              |
| 28      | F                 | 0.6             | 0.6              |

|         | Winding completed | During metering | Shutter released |
|---------|-------------------|-----------------|------------------|
| IC-1 29 | 0                 | 0.1             | 0.1              |
| 30      | F                 | 0.9             | 0.9              |
| 31      | F                 | 1.38            | 1.38             |
| 32      | 0                 | 0.16            | 0.16             |
| 33      | 0                 | 0.19            | 0.19             |
| 34      | F                 | 0.7             | 0.7              |
| 35      | F                 | 1.0             | 1.0              |
| 36      | 0                 | 2.9             | 2.9              |
| 37      | 0                 | 0.01            | 0.01             |
| 38      | 0                 | 0.03            | 0.03             |
| 39      | 0                 | 0.07            | 0.07             |
| 40      | 0                 | 0.07            | 0.07             |
| 41      | 0                 | 0.07            | 0.07             |
| 42      | 0                 | 0.93            | 0.93             |

|        | Winding completed | During metering | Shutter released |
|--------|-------------------|-----------------|------------------|
| IC-2 1 | F                 | F               | F                |
| 2      | F                 | 1.1             | 0.9              |
| 3      | F                 | 1.0             | 0.9              |
| 4      | 0                 | 0.01            | 0                |
| 5      | 3.0               | 2.9             | 3.0              |
| 6      | F                 | 1.4             | 1.4              |
| 7      | F                 | 1.4             | 1.4              |
| 8      | F                 | 1.25            | 1.25             |
| 9      | 0                 | 2.9             | 2.9              |
| 10     | 0                 | 2.9             | 2.9              |
| 11     | F                 | 1.4             | 1.4              |
| 12     | F                 | F               | F                |
| 13     | F                 | F               | F                |
| 14     | F                 | 1.1             | 1.2              |

|         | Winding completed | During metering | Shutter released |
|---------|-------------------|-----------------|------------------|
| IC-2 15 | F                 | 1.1             | 1.25             |
| 16      | 0                 | 0               | 0                |
| 17      | F                 | 1.2             | 1.25             |
| 18      | F                 | 1.3             | 1.3              |
| 19      | F                 | 1.25            | 1.25             |
| 20      | F                 | 1.0             | 1.0              |
| 21      | F                 | 1.0             | 1.0              |
| 22      | F                 | 1.4             | 1.4              |
| 23      | F                 | 1.4             | 1.4              |
| 24      | 0                 | 2.9             | 2.9              |
| 25      | 0                 | 0               | 0                |
| 26      | 0.8               | 0.8             | 0.8              |
| 27      | 0.8               | 0.8             | 0.8              |
| 28      | F                 | 0.6             | 0.6              |

|         | Winding completed | During metering                                    | Shutter released |
|---------|-------------------|----------------------------------------------------|------------------|
| IC-2 29 | F                 | 0.6                                                | 0.6              |
| 30      | 1.2               | 1.2                                                | 1.2              |
| 31      | 0                 | 0                                                  | 0                |
| 32      | F                 | 0.6                                                | 0.6              |
| 33      | 1.1               | 1.1                                                | 1.1              |
| 34      | F                 | 0.6<br><small>0.6<br/>0 with<br/>AE locked</small> | 0.6              |
| 35      | 0                 | 0.02                                               | 0.02             |
| 36      | F                 | 0.6                                                | 0.6              |
| 37      | 0.01              | 0.01                                               | 0.01             |
| 38      | F                 | 2.9                                                | 2.9              |
| 39      | 0                 | 0.01                                               | 0                |
| 40      | F                 | 0.07                                               | 0.05             |
| 41      | F                 | 0.65                                               | 0.65             |
| 42      | 2.7               | 2.7                                                | 2.7              |

Winding completed...S<sub>1</sub> OFF During metering...S<sub>1</sub> or S<sub>2</sub> ON Shutter released...S<sub>1</sub>, S<sub>2</sub> and S<sub>3</sub> ON



|        | Winding completed | During metering             | Shutter released |
|--------|-------------------|-----------------------------|------------------|
| IC-3 1 | 2.85              | 2.85                        | 3.0              |
| 2      | 2.7               | 2.7                         | 0                |
| 3      | 2.2               | 2.2                         | 0                |
| 4      | 0                 | 2.94                        | 2.94             |
| 5      | 0                 | 2.94                        | 2.94             |
| 6      | 0                 | 2.93                        | 2.93             |
| 7      | 0                 | 0                           | 2.7              |
| 8      | F                 | F                           | F                |
| 9      | F                 | F                           | F                |
| 10     | 0                 | 0.6<br>0 with<br>AF locked  | 0.6              |
| 11     | F                 | 2.93<br>0 with<br>AF locked | 0                |
| 12     | 0.1               | 0.1                         | 0.1              |
| 13     | 0                 | 0.6                         | 0.6              |
| 14     | 0                 | F                           | F                |

|         | Winding completed | During metering | Shutter released |
|---------|-------------------|-----------------|------------------|
| IC-3 15 | 0                 | 0               | 0                |
| 16      | 3.0               | 3.0             | 3.0              |
| 17      | 0                 | 3.0             | 3.0              |
| 18      | 2.9               | 2.9             | 2.9              |
| 19      | 3.0               | 3.0             | 3.0              |
| 20      | 0                 | 0.6             | 0.6              |
| 21      | 0                 | 0               | 0                |
| 22      | 2.9               | 2.9             | 2.9              |
| 23      | 2.9               | 2.9             | 2.9              |
| 24      | 0                 | 0               | 0                |
| 25      | 0                 | 0.02            | 0.02             |
| 26      | 0.8               | 0.8             | 0.8              |
| 27      | 0.8               | 0.8             | 0.8              |
| 28      | 1.0               | 1.0             | 1.0              |

|         | Winding completed | During metering | Shutter released |
|---------|-------------------|-----------------|------------------|
| IC-3 29 | 0.7               | 0.7             | 0.7              |
| 30      | F                 | 1.3             | 1.3              |
| 31      | F                 | 1.3             | 1.3              |
| 32      | F                 | F               | F                |
| 33      | 0                 | 0               | 0                |
| 34      | 2.93              | 2.93            | 2.93             |
| 35      | 0                 | 0               | 0                |
| 36      | 0                 | 0               | 0                |
| 37      | 3.0               | 3.0             | 3.0              |
| 38      | 1.0               | 1.0             | 1.0              |
| 39      | 1.3               | 1.3             | 1.3              |
| 40      | 3.0               | 3.0             | 3.0              |
| 41      | 0.2               | 0.2             | 0.2              |
| 42      | 0.45              | 0.45            | 0.45             |

|        | Winding completed | During metering              | Shutter released             |                |                |
|--------|-------------------|------------------------------|------------------------------|----------------|----------------|
| IC-4 1 | F                 | LED ON<br>0.05               | LED ON<br>0.05               |                |                |
| 2      | F                 |                              |                              |                |                |
| 3      | F                 |                              |                              |                |                |
| 4      | F                 |                              |                              |                |                |
| 5      | F                 |                              |                              | LED OFF<br>1.5 | LED OFF<br>1.5 |
| 6      | F                 |                              |                              |                |                |
| 7      | F                 |                              |                              |                |                |
| 8      | F                 | LED OFF 1.5<br>LED blink 1.3 | LED OFF 1.5<br>LED blink 1.3 |                |                |
| 9      | 0                 | 2.9                          | 2.9                          |                |                |
| 10     | 0                 | 0                            | 0                            |                |                |
| 11     | F                 | F                            | F                            |                |                |
| 12     | F                 | F                            | F                            |                |                |
| 13     | F                 | 1.1                          | 1.25                         |                |                |
| 14     | F                 | 1.3                          | 1.4                          |                |                |
| 15     | 0                 | 1.0                          | 1.0                          |                |                |

|         | Winding completed | During metering | Shutter released |
|---------|-------------------|-----------------|------------------|
| IC-4 16 | 0                 | 0               | 0                |
| 17      | F                 | F               | F                |
| 18      | F                 | F               | F                |
| 19      | 0                 | 0               | 0.04             |
| 20      | F                 | 1.0             | 1.0              |
| 21      | F                 | 1.0             | 1.0              |
| 22      | F                 | 0               | 0                |
| 23      | F                 | 0.2             | 0.2              |
| 24      | 0                 | 0               | 0                |
| 25      | 0                 | 0               | 0                |
| 26      | 0                 | F               | F                |
| 27      | 0.8               | 0.8             | 0.8              |
| 28      | 0                 | 0               | 0                |
| 29      | F                 | 0.6             | 0.6              |
| 30      | F                 | F               | F                |

|         | Winding completed | During metering              | Shutter released             |                |
|---------|-------------------|------------------------------|------------------------------|----------------|
| IC-4 31 | 0                 | 0.6                          | 0.6                          |                |
| 32      | F                 | 0.7                          | 0.7                          |                |
| 33      | 0                 | 0                            | 0.6                          |                |
| 34      | 3.0               | 2.93                         | 3.0                          |                |
| 35      | LED OFF<br>1.5    | LED OFF<br>1.5               | LED OFF<br>1.5               |                |
| 36      | F                 | 1.5                          | 1.5                          |                |
| 37      | F                 | 0.05                         | 0.05                         |                |
| 38      | F                 | 1.5                          | 1.5                          |                |
| 39      | F                 | LED OFF 1.5<br>LED blink 1.3 | LED OFF 1.5<br>LED blink 1.3 |                |
| 40      | F                 | LED ON<br>0.05               | 1.5                          |                |
| 41      | F                 |                              |                              |                |
| 42      | F                 |                              |                              |                |
| 43      | F                 |                              | LED OFF<br>1.5               | LED OFF<br>1.5 |
| 44      | F                 |                              |                              |                |

Winding completed...S<sub>1</sub>, OFF During metering...S<sub>2</sub> or S<sub>1</sub>, ON Shutter released...S<sub>1</sub>, S<sub>2</sub> and S<sub>3</sub>, ON





• NOs. in the table below denote lead wire soldered points (1 to 49).


| No. | Connected to                          | Lead color | IC pin's No.           | No. | Connected to                                                   | Lead color   | IC pin's No.           | No. | Connected to                    | Lead color    | IC pin's No.                |
|-----|---------------------------------------|------------|------------------------|-----|----------------------------------------------------------------|--------------|------------------------|-----|---------------------------------|---------------|-----------------------------|
| ①   | SL-4 +, R <sub>20</sub>               | Red        | 3 - ①                  | ⑩   | F <sub>1</sub> terminal                                        | Purple       |                        | ⑲   | C <sub>2</sub> +                | Gray          | 2 - ⑬                       |
| ②   | Q <sub>1</sub> Collector              | Gray       | ③ - ②                  | ⑪   | C <sub>10</sub> → SL-1 -                                       | Purple       | 5 - ⑩                  | ⑳   | SPC P.C board -                 | Black         | GND                         |
| ③   | Q <sub>1</sub> emitter S <sub>7</sub> | Gray       | Q <sub>1</sub> → 3 - ② | ⑫   | SL-3 -                                                         | Green        | C <sub>1</sub> → 5 - ⑩ | ㉑   | C <sub>2</sub> +                | Orange        | 2 - ⑭                       |
| ④   | S <sub>1</sub> +                      | Orange     | 1 - ⑩, 3 - ⑦           | ⑬   | S <sub>11</sub>                                                | Black        | GND                    | ㉒   | R <sub>2</sub> (TV memory)      | Green         | 1 - ⑩, 2 - ⑭                |
| ⑤   | S <sub>1</sub> +                      | Brown      | 3 - ④                  | ⑭   | SL-2 -                                                         | Orange Black | C <sub>1</sub> → 5 - ⑩ | ㉓   | R <sub>1</sub> SPC A, B cathode | Shielded wire | 1 - ⑮                       |
| ⑥   | SL-4 -, C <sub>11</sub>               | White      | 1 - ⑩                  | ⑮   | Battery +                                                      | Red          | ⑤ - ⑩                  | ㉔   | F <sub>2</sub> terminal         | white         | 1 - ⑬, 2 - ⑰                |
| ⑦   | Self-timer LED +                      | Red        | 3 - ⑦                  | ⑯   | SI-1, SI-2, S <sub>11</sub> , S <sub>12</sub> , D <sub>1</sub> | Black        | 5 - ⑩ IC GND           | ㉕   | F <sub>3</sub> terminal         | Gray          | 2 - ⑰                       |
| ⑧   | S <sub>10</sub> +                     | Blue       | 3 - ⑦                  | ⑰   | S <sub>1</sub> +                                               | Green        | 4 - ⑩                  | ㉖   | BZ -                            | Black         | 3 - ⑧                       |
| ⑨   | Self-timer LED -                      | Black      | R <sub>2</sub> → 1 - ⑩ | ⑱   | D <sub>1</sub> terminal                                        | White        | 3 - ⑩                  | ㉗   | BZ +                            | Red           | S <sub>1</sub> Power source |
| ⑩   | S <sub>1</sub> , S <sub>2</sub> GND   | Green      | 2 - ⑰                  | ⑳   | W <sub>1</sub> , D <sub>2</sub> terminal                       | Blue         | 3 - ⑩                  | ㉘   | SL-1 -                          | White         | C <sub>10</sub> → 5 - ⑩     |
| ⑪   | S <sub>7</sub> (MC)                   | Green      | 4 - ④                  | ㉑   | VR <sub>1</sub> (SV) +                                         | Brown        | 1 - ⑥, 2 - ⑰           | ㉙   | S <sub>11</sub> +               | Yellow        | 3 - ⑰                       |
| ⑫   | S <sub>7</sub> (F32)                  | Red        | 2 - ⑩                  | ㉒   | VR <sub>1</sub> (SV) common                                    | Red          | 1 - ⑤                  |     |                                 |               |                             |
| ⑬   | S <sub>7</sub> (F16)                  | Yellow     | 2 - ⑩                  | ㉓   | VR <sub>4</sub> common                                         | Purple       | 1 - ⑨                  |     |                                 |               |                             |
| ⑭   | VR <sub>2</sub> (AV) +                | Brown      | 1 - ⑥, 2 - ⑰           | ㉔   | VR <sub>1</sub> (SV) -                                         | Orange       | 1 - ⑦                  |     |                                 |               |                             |
| ⑮   | VR <sub>2</sub> (AV) common           | Blue       | 2 - ⑩                  | ㉕   | W <sub>1</sub> terminal                                        | Brown        | 3 - ①                  |     |                                 |               |                             |
| ⑯   | VR <sub>2</sub> (AV) -                | Orange     | 1 - ⑦                  | ㉖   | S <sub>1</sub> +                                               | Yellow       | 3 - ③                  |     |                                 |               |                             |
| ⑰   | GND                                   | Black      |                        | ㉗   | Q <sub>2</sub> emitter SPC-B anode                             | Purple       | 1 - ⑩                  |     |                                 |               |                             |

• Symbol (A~Y, ①~⑳) in the table below shows joint part (A~Y, ①~⑳).

| Symbol | Connected to                            | IC pin's No.           | Symbol | Connected to           | IC pin's No.   |
|--------|-----------------------------------------|------------------------|--------|------------------------|----------------|
| A      | LED ∇                                   | IC-4 ⑧                 | ①      | S <sub>5</sub> -1      | IC-3 ④         |
| B      | LED 1                                   | IC-4 ⑦                 | ②      | VR-1                   | IC-1 ⑩         |
| C      | LED 2                                   | IC-4 ⑥                 | ③      | S <sub>5</sub> -3      | IC-2 ④, IC-4 ⑳ |
| D      | LED 4                                   | C-4 ⑤                  | ④      | S <sub>5</sub> -2      | IC-2 ③, IC-4 ⑳ |
| E      | LED 8                                   | IC-4 ④                 | ⑤      | GND                    | IC-2 ⑩         |
| F      | LED 15                                  | IC-4 ③                 | ⑥      | F <sub>1</sub>         | IC-2 ⑩         |
| G      | LED 30                                  | IC-4 ②                 | ⑦      | R <sub>1</sub>         | IC-1 ⑩         |
| H      | LED 60                                  | IC-4 ①                 | ⑧      | VR-1                   | IC-2 ⑩         |
| I      | LED 125                                 | IC-4 ④                 | ⑨      | S <sub>6</sub> → Y     | —              |
| J      | LED 250                                 | IC-4 ④                 | ⑩      | S <sub>6</sub> → X     | —              |
| K      | LED 500                                 | IC-4 ④                 | ⑪      | S <sub>6</sub> -3 → BZ | —              |
| L      | LED 1000                                | IC-4 ④                 | ⑫      | VR <sub>5</sub>        | IC-1 ⑩         |
| M      | LED △                                   | IC-4 ④                 | ⑬      | VR <sub>7</sub>        | IC-4 ⑩         |
| N      | LED P                                   | IC-4 ④                 |        |                        |                |
| O      | LED A                                   | IC-4 ④                 |        |                        |                |
| P      | LED M                                   | IC-4 ④                 |        |                        |                |
| Q      | LED +/-                                 | IC-4 ④                 |        |                        |                |
| R      | SL-3                                    | IC-3 ⑩ → IC-5 ②        |        |                        |                |
| S      | SL-1                                    | IC-3 ⑩ → IC-5 ③        |        |                        |                |
| T      | SL-2                                    | IC-2 ⑩ → IC-5 ④        |        |                        |                |
| U      | Q <sub>1</sub> base                     | IC-3 ⑤ → IC-5 ⑧        |        |                        |                |
| V      | GND                                     | —                      |        |                        |                |
| W      | Vcc (from collector of Q <sub>1</sub> ) | IC-1 ⑩, IC-2 ⑩, IC-4 ⑩ |        |                        |                |
| X      | +E (from S <sub>4</sub> )               | IC-3 ⑩                 |        |                        |                |
| Y      | Battery                                 | —                      |        |                        |                |





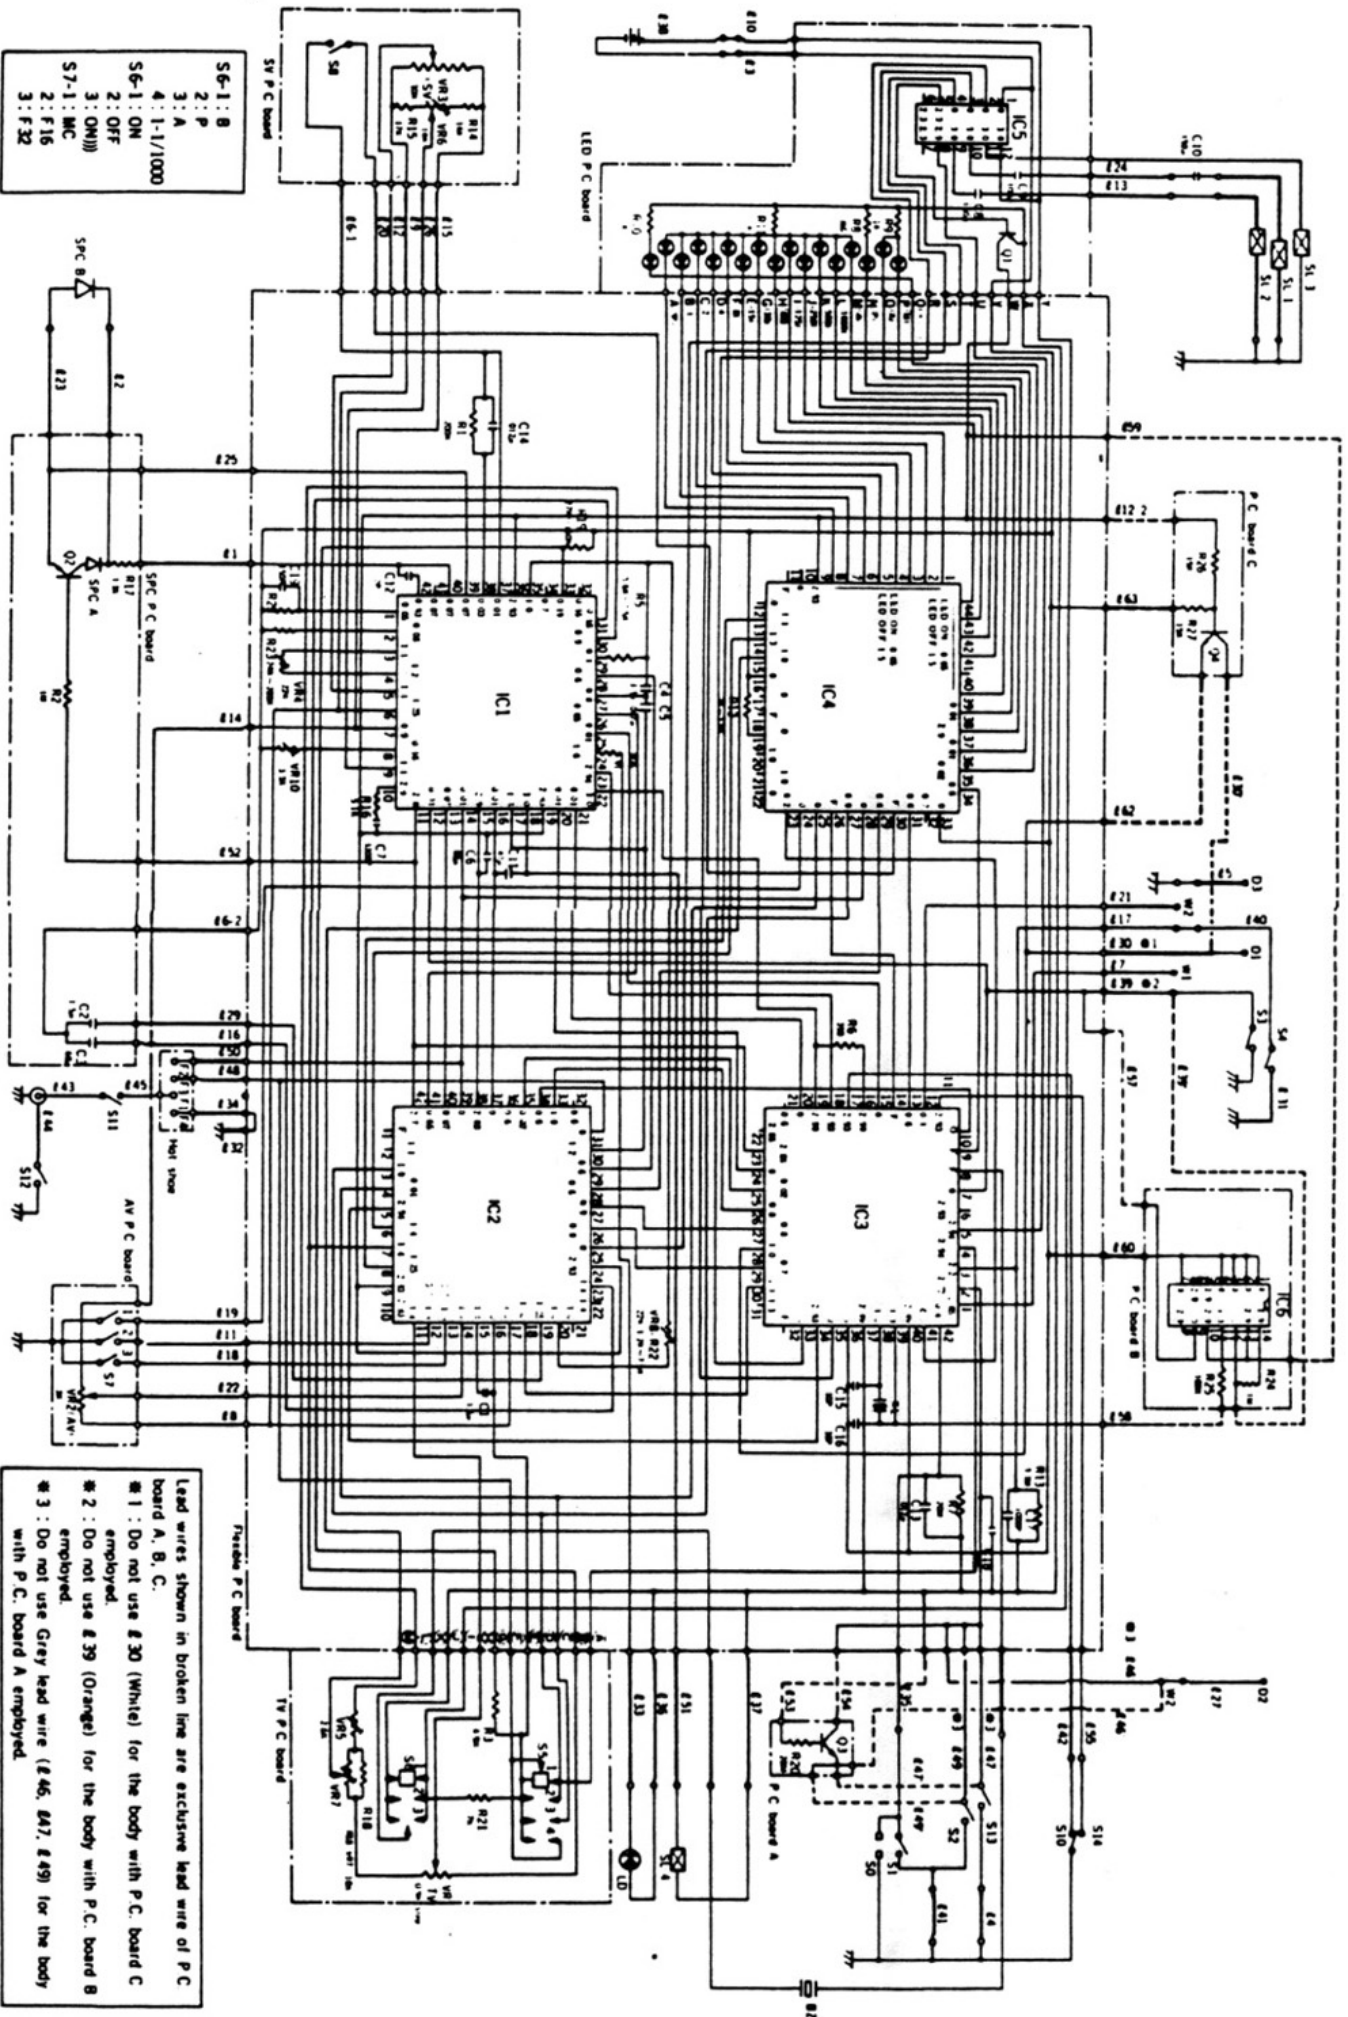

- S6-1: B**  
 2: P  
 3: A  
 4: 1-1/1000
- S6-1: ON**  
 2: OFF  
 3: ON(II)
- S7-1: MC**  
 2: F16  
 3: F32

| Name | Function                                 | Name | Function        | Name | Function                   | Name | Function                   | Name | Function               | Name | Function        | Name | Function        |
|------|------------------------------------------|------|-----------------|------|----------------------------|------|----------------------------|------|------------------------|------|-----------------|------|-----------------|
| IC-1 | Metering calculation control             | SL-1 | Mirror support  | VR-1 | AE level adjustment        | VR-1 | Manual SS level adjustment | VR-1 | Flash level adjustment | VR-1 | 300V adjustment | VR-1 | 300V adjustment |
| IC-2 | Metering calculation program calculation | SL-2 | Mirror support  | VR-2 | Manual SS level adjustment | VR-2 | Flash level adjustment     | VR-2 | 300V adjustment        | VR-2 | 300V adjustment | VR-2 | 300V adjustment |
| IC-3 | Timing control                           | SL-3 | Shutter support | VR-3 | Manual SS level adjustment | VR-3 | Flash level adjustment     | VR-3 | 300V adjustment        | VR-3 | 300V adjustment | VR-3 | 300V adjustment |
| IC-4 | Indicator                                | SL-4 | Shutter support | VR-4 | Manual SS level adjustment | VR-4 | Flash level adjustment     | VR-4 | 300V adjustment        | VR-4 | 300V adjustment | VR-4 | 300V adjustment |
| IC-5 | Support, power control                   | SL-5 | Shutter support | VR-5 | Manual SS level adjustment | VR-5 | Flash level adjustment     | VR-5 | 300V adjustment        | VR-5 | 300V adjustment | VR-5 | 300V adjustment |
| SL-1 | Release support                          | VR-1 | AV setting      | VR-1 | 300V adjustment            | VR-1 | 300V adjustment            | VR-1 | 300V adjustment        | VR-1 | 300V adjustment | VR-1 | 300V adjustment |
| SL-2 | Release support                          | VR-2 | AV setting      | VR-2 | 300V adjustment            | VR-2 | 300V adjustment            | VR-2 | 300V adjustment        | VR-2 | 300V adjustment | VR-2 | 300V adjustment |
| SL-3 | Release support                          | VR-3 | AV setting      | VR-3 | 300V adjustment            | VR-3 | 300V adjustment            | VR-3 | 300V adjustment        | VR-3 | 300V adjustment | VR-3 | 300V adjustment |
| SL-4 | Release support                          | VR-4 | AV setting      | VR-4 | 300V adjustment            | VR-4 | 300V adjustment            | VR-4 | 300V adjustment        | VR-4 | 300V adjustment | VR-4 | 300V adjustment |
| SL-5 | Release support                          | VR-5 | AV setting      | VR-5 | 300V adjustment            | VR-5 | 300V adjustment            | VR-5 | 300V adjustment        | VR-5 | 300V adjustment | VR-5 | 300V adjustment |

Lead wires shown in broken line are exclusive lead wire of P.C. board A, B, C.


※ 1 : Do not use #30 (White) for the body with P.C. board C employed.

※ 2 : Do not use #39 (Orange) for the body with P.C. board B employed.

※ 3 : Do not use Grey lead wire (#46, #47, #49) for the body with P.C. board A employed.

# X-700 (CODE No. 2017) Circuit Diagram

(With AE Lock Circuit)

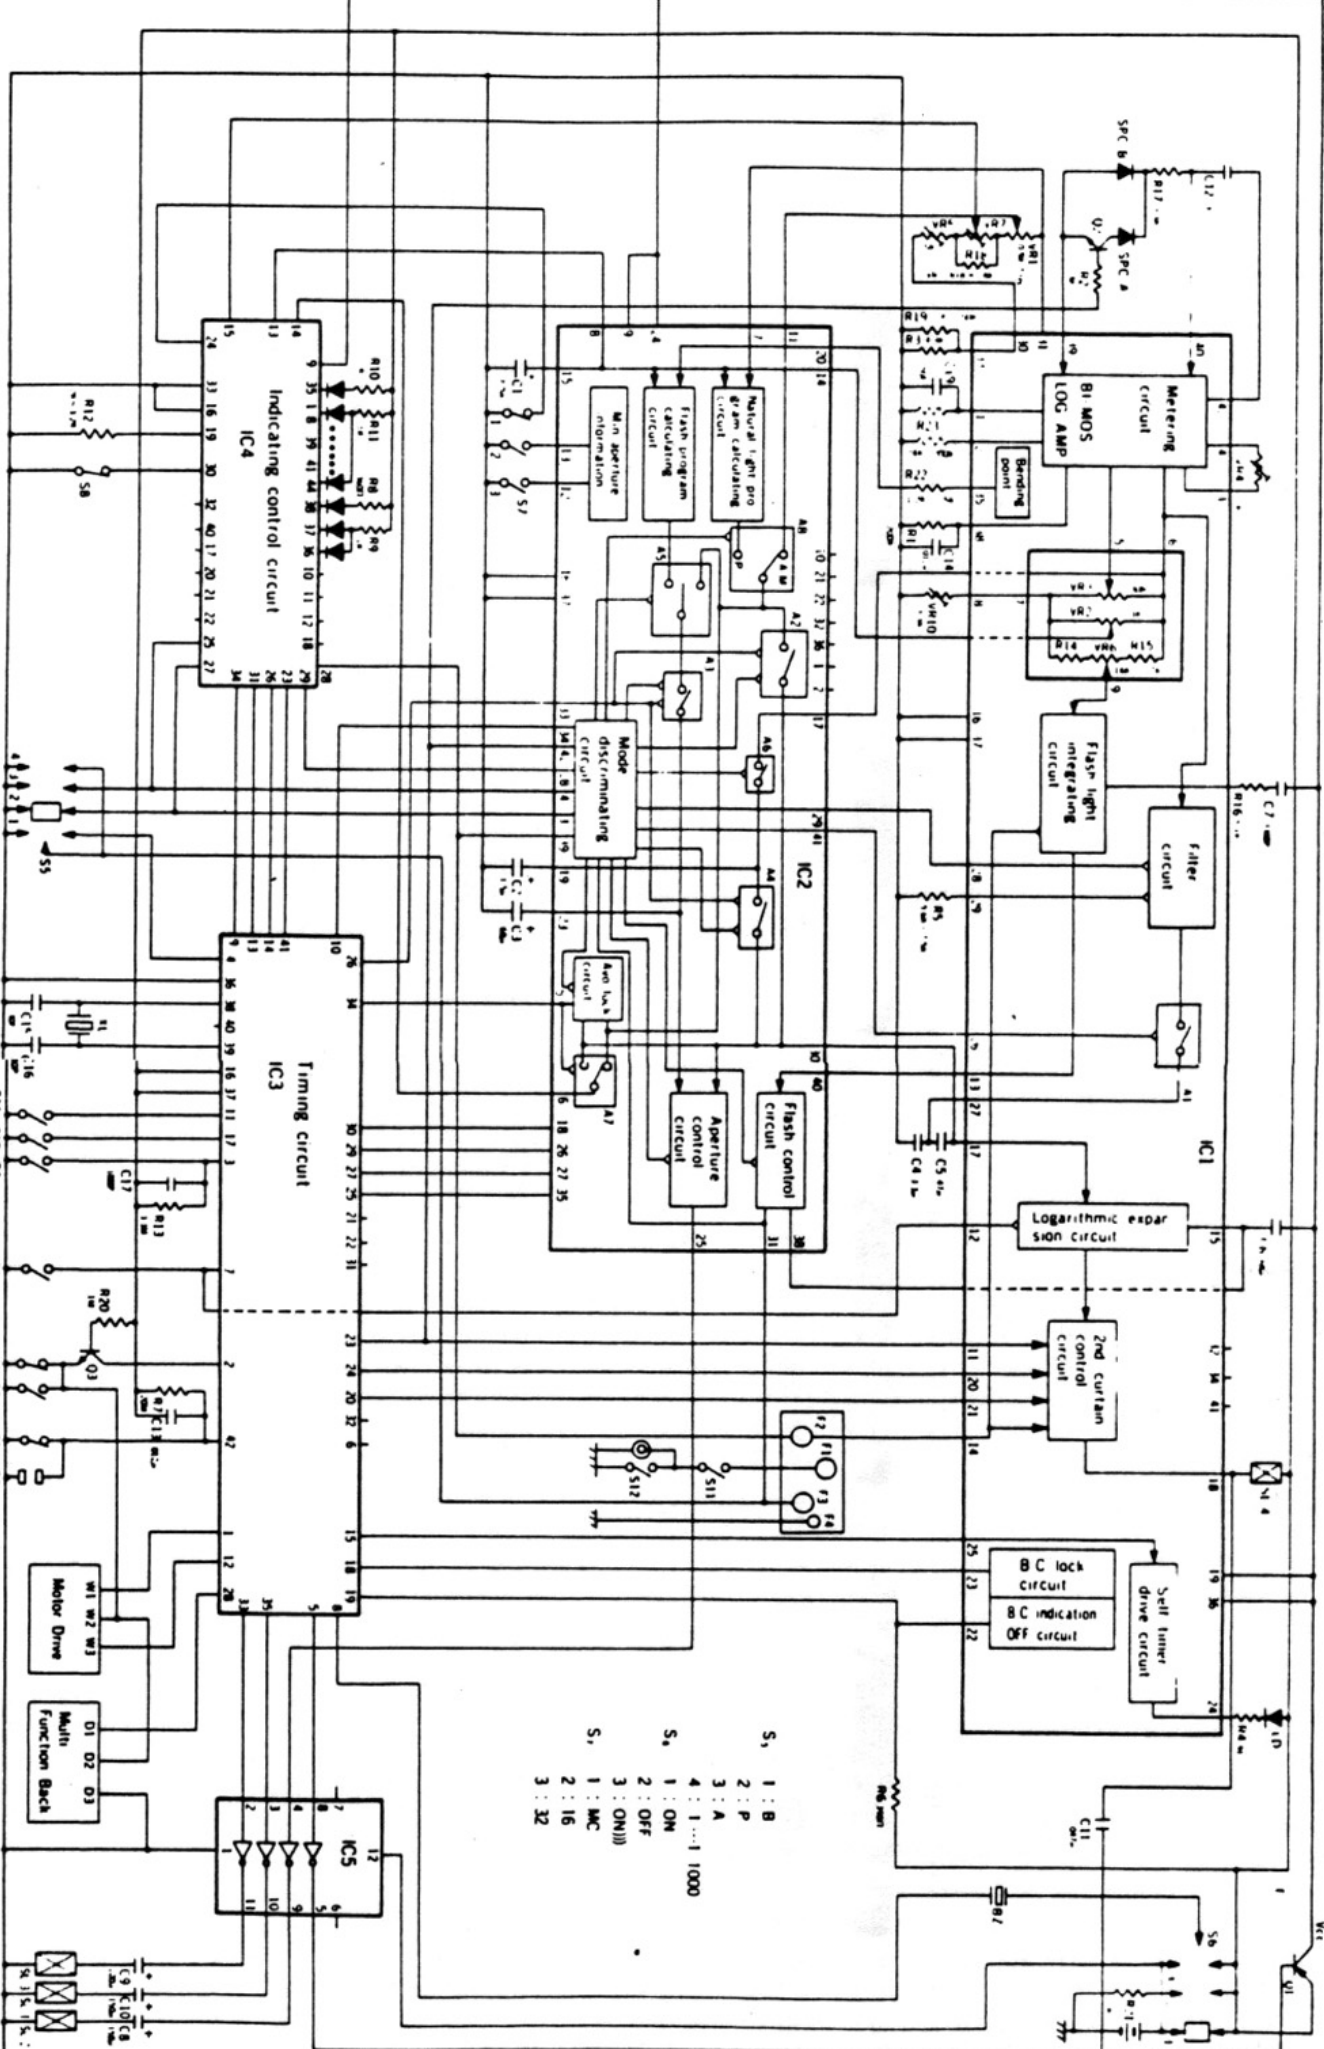

| Value | Function                                | Value | Function        | Value | Function        | Value | Function        | Value | Function        | Value | Function        |
|-------|-----------------------------------------|-------|-----------------|-------|-----------------|-------|-----------------|-------|-----------------|-------|-----------------|
| K1    | Shutter calibration control             | S1    | Shutter release | S1    | Shutter release | S1    | Shutter release | S1    | Shutter release | S1    | Shutter release |
| K2    | Mode discrimination program calibration | S2    | Shutter release | S2    | Shutter release | S2    | Shutter release | S2    | Shutter release | S2    | Shutter release |
| K3    | Timing control                          | S3    | Shutter release | S3    | Shutter release | S3    | Shutter release | S3    | Shutter release | S3    | Shutter release |
| K4    | Indication                              | S4    | Shutter release | S4    | Shutter release | S4    | Shutter release | S4    | Shutter release | S4    | Shutter release |
| K5    | Shutter release control                 | S5    | Shutter release | S5    | Shutter release | S5    | Shutter release | S5    | Shutter release | S5    | Shutter release |
| K6    | Release signal                          | S6    | Shutter release | S6    | Shutter release | S6    | Shutter release | S6    | Shutter release | S6    | Shutter release |
| K7    | Release signal                          | S7    | Shutter release | S7    | Shutter release | S7    | Shutter release | S7    | Shutter release | S7    | Shutter release |
| K8    | Release signal                          | S8    | Shutter release | S8    | Shutter release | S8    | Shutter release | S8    | Shutter release | S8    | Shutter release |
| K9    | Release signal                          | S9    | Shutter release | S9    | Shutter release | S9    | Shutter release | S9    | Shutter release | S9    | Shutter release |
| K10   | Release signal                          | S10   | Shutter release | S10   | Shutter release | S10   | Shutter release | S10   | Shutter release | S10   | Shutter release |
| K11   | Release signal                          | S11   | Shutter release | S11   | Shutter release | S11   | Shutter release | S11   | Shutter release | S11   | Shutter release |
| K12   | Release signal                          | S12   | Shutter release | S12   | Shutter release | S12   | Shutter release | S12   | Shutter release | S12   | Shutter release |